TABITHA BROWN

Wireless Speaker





Included:

- 1. Bluetooth Speaker
- 2. USB-A to USB-C Charging Cable

Pairing:

- 1. Power ON the speaker.
- 2. The indicator light will flash blue when it is ready to pair.
- 3. Use the Bluetooth settings on your device to pair with target TB speaker 01 4. When pairing is successful the blue light will turn solid and there will be a chime.
- 5. The speaker will automatically reconnect to the device it was most recently paired to when you turn the speaker on and it is in Bluetooth mode.

Audio Indicators:

- Ascending tones Powering on
- Single chime Ready to pair
- Echoing chime Paired
- Low tone Max/Min. volume
- Quick descending tone AUX connected
- Descending tones Power off

Charging:

 
- 1. A full charge requires approximately 4-4.5 hours.
- 2. Open the panel on the side of the speaker and plug the USB-C end of the charging cable into the charge port.
- 3. Plug the opposite end of the charging cable into a power supply of at least DC 5V 1A.
- 4. Charging is complete when the red light turns off.
- Warning: Please use UL compliant power supply.

AUX/Line in:

- 1. If the power is turned on, plug in the 3.5mm audio cable to override Bluetooth, the speaker will play automatically.
- 2. If the power is turned off, plug in the 3.5mm audio cable to override Bluetooth, and press the M button to switch to AUX.

Indicator light:

- Solid Red Charging
- No Red Light Fully charged
- Flashing Blue Pairing Solid Blue - Paired



Hold: On/Off (2 seconds)

Press:

Answer/end calls Switch modes: Bluetooth, AUX

AUX in port

Charge input/ **USB-C** port

4 Press: Vol. up Hold: Next track Press: Play/Pause (Bluetooth mode only) Press: Vol. down Hold: Prev. track (Bluetooth mode only) Hold: Reject call Power level **Indicator lights O**

.

.......

0

Side

TWS (True Wireless Stereo) pairing

- 1. You can pair two of this model of speaker together.
- 2. Turn Bluetooth off on your device, place two matching speakers together, power them on.
- 3. Press "+-" at the same time on one speaker and they will pair automatically. 4. On your device turn Bluetooth on, and pair to one of the speakers.
- 5. When no music is being played the indicator will flash blue on the speaker that is the left channel and will be solid blue on the speaker that is the right channel.
- 6. To maintain TWS pairing turn Bluetooth off on your device before powering the speakers back on, the speakers will pair automatically, then repair with your device.

Troubleshooting:

- 1. If the speaker is not working correctly, turn it on/off to restart.
- 2. If the speaker won't turn on, recharge the battery and try again.
- 3. If the speaker won't charge, make sure the supply works, is 5V>1A, and not damaged.
- 4. If the speaker makes no sound or does not show as an available device, make sure it is not paired, if so unpair the device and repair the desired device. 5. If the speaker cannot be
- operated despite being turned on, hold the power button for 8 seconds to reset.

Safety:

- 1. Do not expose the product to fire, high temperature, direct sunlight, etc.
- 2. Do not modify or repair this device.
- 3. Do not allow small particles to get into the product.
- 4. Do not use chemical detergents to clean, use a soft dry cloth.

⚠ WARNING: CHOKING HAZARD—Small parts. Not for children under 3 years.



© 2022 Target. The Bullseye Design is a registered trademark of Target Brands, Inc. All rights reserved.

9.92in

.........