Z2321A User Manual

About This Manual

Thank you for choosing this ZTE mobile device. In order to keep your device in its best condition, please read this manual and keep it for future reference.

Copyright

Copyright © 2018 ZTE CORPORATION

All rights reserved.

No part of this publication may be quoted, reproduced, translated or used in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

Notice

ZTE Corporation reserves the right to make modifications on print errors or update specifications in this guide without prior notice. This manual has been designed with the utmost care to ensure the accuracy of its content. However, all statements, information and recommendations contained therein of not constitute a warranty of any kind, either expressed or implied. Please refer to For Your Safety to be sure to use your phone properly and safely. We offer self-service for our smart terminal device users. Please visit the ZTE official website (at www.zteusa.com) for more information on self-service and supported product models. Information on the website takes precedence.

Disclaimer

ZTE Corporation expressly disclaims any liability for faults and

damages caused by unauthorized modifications of the software.

Images and screenshots used in this manual may differ from the actual product. Content in this manual may differ from the actual product or software.

Trademarks

ZTE and the ZTE logos are trademarks of ZTE Corporation.

Android is a trademark of Google LLC; Oreo is a trademark of Mondelez International, Inc. group.

The *Bluetooth*® trademark and logos are owned by the Bluetooth SIG, Inc. and any use of such trademarks by ZTE Corporation is under license.



microSDHC Logo is a trademark of SD-3C, LLC.

Qualcomm snapdragon

Qualcomm[®] Snapdragon™ processors are products of Qualcomm Technologies, Inc.

Qualcomm and Snapdragon are trademarks of Qualcomm Incorporated, registered in the United States and other countries. Used with permission.

LTE is a trademark of ETSI.

Other trademarks and trade names are the property of their respective owners.

Version No.: R1.0

Edition Time: December 27, 2017

Contents

Getting Started	10
Getting to Know Your Phone	
Knowing the Keys	12
Installing the micro-SIM Card and microSDHC Card (No	
Included)	13
Removing the micro-SIM Card and microSDHC Card	15
Charging the Battery	16
Extending the Battery Life	
Powering On/Off	
Setting Up for the First Time	
Getting to Know the Home Screen	18
Knowing the Basics	.19
Entering Text	
Opening and Switching Apps	
Connecting to Networks and Devices	.22
Connecting to Mobile Networks	22
Connecting to Bluetooth Devices	23
Connecting to Your Computer via USB	26
Phone Calls	.28
Placing and Ending Calls	28
Answering or Rejecting Calls	29
Working With the Call History	30

	Calling Your Contacts	. 31
	Checking Voicemail	. 31
	Using Options During a Call	. 32
	Managing Multi-party Calls	. 32
Со	ntacts	.35
	Checking Contact Details	. 35
	Searching for a Contact	
	Adding a New Contact	
	Setting Up Your Own Profile	
	Importing, Exporting, and Sharing Contacts	
	Editing Contacts	
	Working With Groups	
Me	essages	.43
	Opening the Messages Screen	
	Sending a Message	
	Replying to a Message	
	Forwarding a Message	
	Copying a Message	. 45
	Changing Message Settings	. 45
Са	lendar	
Са	lendar Viewing Your Calendars and Events	.46
Са	Viewing Your Calendars and Events	.46
Са	Viewing Your Calendars and Events Creating an Event	. 46 . 46
Са	Viewing Your Calendars and Events	.46 46 47

Web Browser	48
Opening the Browser	48
Setting the Homepage	48
Adding a Website to Bookmarks	49
Viewing the Browsing History	49
Changing Browser Settings	50
Camera	51
Capturing a Photo	
Recording a Video	
Gallery	53
Opening Gallery	
Working With Albums	
Working With Pictures	
Playing Videos	
Music	56
Viewing Your Music Library	
Playing Music	
Managing Playlists	
Video Player	59
Opening the Video Library	
Playing and Controlling Videos	
Managing Video Files	
FM Radio	61

Scanning and Saving Channels	61
Listening to FM Radio	61
Deleting a Saved Channel	62
Other Options	62
Sound Recorder	63
Recording a Voice Memo	63
Playing a Voice Memo	
More Apps	64
Clock	
Calculator	
Downloads	
File Manager	
Settings	67
•	
Troubleshooting	68
For Your Safety	73
General Safety	73
Radio Frequency (RF) Energy	74
FCC Regulations	
Hearing Aid Compatibility (HAC) Regulations for Mobile	
Phones	77
CTIA Requirements	79
Distraction	81

Electrical Safety	85
Radio Frequency Interference	86
Explosive Environments	8

Getting Started

Getting to Know Your Phone





Knowing the Keys

Key	Function	
Power/end key	 Press and hold to turn on or off airplane mode, power off or restart the phone. Press to end a call, reject an incoming call or cancel dialing. Press to return to the home screen. 	
Left soft key / Right soft key	Press to select the options at the left/right corner of the bottom line of the display. The options change depending on the application/function being used.	
Navigation keys (Up/Down/Left/ Right key)	 Press in the home screen to access designated functions. Press to navigate options on the display or move the cursor in a text field. 	
OK key	Press to make selections or perform the command displayed at the bottom center of the display.	
Send key	 Press in the home screen to view recent calls. Press to place or answer a call. 	
Recent apps key	Press to see recently used applications.	

Key	Function	
Camera key	Press in the home screen or app list screen to activate the camera.	
Clear key	Press or hold to delete characters on the left of the cursor when entering text or numbers.	
Vibration mode key (# key)	Press and hold in the home screen to activate/deactivate vibration mode. In a text editing screen: press or hold to change input mode.	
* key	 Press and hold in the home screen to enter +. In a text editing screen: press and hold to change the input language. 	
Volume key	Press or hold either end of the key to turn the volume up or down.	

Installing the micro-SIM Card and microSDHC Card (Not Included)

Power off your phone before installing or removing the micro-SIM card and microSDHC card.



WARNING!


To avoid damage to the phone, do not use any other kind of SIM

cards, or any non-standard micro-SIM card cut from a SIM card. You can get a standard micro-SIM card from your service provider.

 Insert your fingernail into the slot at the bottom left of the back cover and lift it up gently.



Install the micro-SIM card and the microSDHC card with the cut corner oriented as shown.

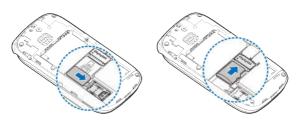

Insert the battery by aligning the metal contacts on the battery with the metal contacts in the battery compartment. Gently push down on the battery until it clicks into place.




4. Replace the back cover.

Removing the micro-SIM Card and microSDHC Card

Power off your phone before installing or removing the micro-SIM card and microSDHC card.

- 1. Open the back cover and remove the battery.
- A soft block beside the card slot keeps the card in place. Press the soft block down and slide the micro-SIM card or microSDHC card out.

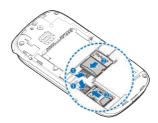

Charging the Battery

Your phone's battery should have enough power for the phone to turn on, find a signal, and make a few calls. You should fully charge the battery as soon as possible.

WARNING!

Use only ZTE-approved chargers and cables. The use of unapproved accessories could damage your phone or cause the battery to explode.

1. Connect the adapter to the charging jack.



- Connect the charger to a standard AC power outlet. If the phone is on, you'll see a charging icon, such as appear on the status bar.
- 3. Disconnect the charger when the battery is fully charged.

NOTE:

If the battery is extremely low, you may be unable to power on the phone even when it is being charged. In this case, try again after charging the phone for at least 20 minutes. Contact the customer service if you still cannot power on the phone after prolonged charging.

Extending the Battery Life

Active applications, screen brightness levels, Bluetooth usage and GPS functionality can drain your battery. You can follow the helpful tips below to conserve your battery power:

- · Reduce the screen backlight time.
- Lower the screen brightness.
- Turn Bluetooth off when not in use.
- Disable the GPS function when not in use. Most applications
 using this function will periodically query the GPS satellites
 for your current location, and each query drains your battery.

Powering On/Off

- Press and hold the Power/end key to turn on your phone.
- To turn it off, press and hold the Power/end key to open the options menu and then select Power off > OK.

Setting Up for the First Time

When you first power on your phone after you purchase it or reset it to factory settings (see <u>Reset</u>), you need to do some settings before using it.

Select the language and then follow the prompts to set up your phone.

Getting to Know the Home Screen

The home screen is the starting point for your phone's applications, functions, and menus.

Knowing the Basics

Entering Text

Change Input Mode or Language

When you are in a field that allows characters to be entered, the text input mode indicator is shown on the right side of the status bar

You can enter text using the following input modes: T12 abc, T12 Abc, T12 ABC, abc, Abc, ABC, and number input.

To change input mode, press and hold the **Vibration mode** key and select one mode.

To switch the input language, press and hold the * key.

Use Predictive Text Mode (T12 abc / T12 Abc / T12 ABC)

The predictive text mode (T12 abc / T12 Abc / T12 ABC) is based on a built-in dictionary and generates words from the combination of letters pressed.

 Press each key once that corresponds to the letter you want to enter. The letters are shown on the display as they are entered. The list of candidate words changes as each key is pressed. When the candidate words are displayed, use the Navigation keys to highlight a candidate word and then press the Center key.

- Press the 0 key to insert a space or press the * key to select symbols.
- Press the Clear key to delete the letter to the left of the cursor.
 Hold the Clear key to delete all entered text to the left of the cursor.

Enter Letters (abc / Abc / ABC)

- Press a number key (2 ~ 9) multiple times until the preferred letter is shown on the screen. Press once to enter the first letter on the keypad; press twice quickly to enter the second letter, and so on.
- Press the 0 key to insert a space or press the * key to select symbols.

NOTE:

When using "Abc" mode, only the first letter will be capitalized. After entering the first capital letter, "Abc" mode will be changed to "abc" mode automatically.

Enter Numbers

In numeric mode (123), you can enter numbers directly using the number keys.

Enter Symbols

- 1. Press the * key.
- Use the Navigation keys to select a symbol.
- 3. Press the Center key.

Opening and Switching Apps

Open an App

- Press the Power/end key if the current screen is not the home screen.
- 2. Select by pressing the Center key.
- Use the Navigation keys and the Center key to select and open an app.

Switch Between Recently Opened Apps

- Press the Recent apps key. The apps you've used recently are displayed in a series of tabs. Use the Navigation keys to scroll up and down to see all the tabs.
- 2. Select a tab and press the Center key to open that app.
- NOTE:

Select Clear all to remove all tabs.

Connecting to Networks and Devices

Connecting to Mobile Networks

Control Mobile Data Use

To enable or disable data access:

- From the home screen, select > Settings > Wireless & networks > Mobile network.
- Select Mobile Data and press the Center key to turn on or off the switch.

To get data services when roaming:

- From the home screen, select > Settings > Wireless & networks > Mobile networks.
- Select Data roaming and press the Center key to turn on the switch if it is turned off.

NOTE:

Data roaming may incur significant roaming charges.

Set Access Point Names

To connect to the Internet you can use the default Access Point Names (APN). And if you want to add a new APN, please contact the service provider to get the necessary information.

- From the home screen, select > Settings > Wireless & networks > Mobile network > Access Point Names.
- Select > New APN.
- Select each item to enter the information you get from your service provider.
- 4. Select : > Save to complete.
- NOTE:

To set the APN to default settings, select : > Reset to default.

Connecting to Bluetooth Devices

Bluetooth is a short-range wireless communication technology. Phones or other devices with Bluetooth capabilities can exchange information wirelessly within a distance of about 30 feet. The Bluetooth devices must be paired before the communication is performed.

Turn Bluetooth On/Off

- From the home screen, select > Settings > Wireless & networks > Bluetooth.
- Select the Bluetooth switch and press the Center key to turn it on or off.

When Bluetooth is on, the * icon appears in the status bar.

Change the Device Name

- From the home screen, select > Settings > Wireless & networks > Bluetooth.
- 2. Turn on the Bluetooth switch if Bluetooth is off.
- 3. Select : > Rename this device.
- 4. Edit the name and press the Center key.

Pair With Another Bluetooth Device

- From the home screen, select > Settings > Wireless & networks > Bluetooth.
- Turn on the Bluetooth switch if Bluetooth is off.
 Your phone automatically scans for and displays the IDs of all available Bluetooth devices in range. You could select
 Refresh if you want to scan again.
- Select the device you want to pair with and press the Center key.
- 4. Confirm that the Bluetooth passkeys are the same between the two devices and press the **Center** key. Alternately, enter a Bluetooth passkey and press the **Center** key. Pairing is successfully completed when the other device accepts the connection or the same passkey is entered.

NOTE:

The Bluetooth passkey may be fixed for certain devices, such as headsets and hands-free car kits. You can try entering 0000 or 1234 (the most common passkeys), or refer to the documents for

that device.

Forget (Unpair With) a Bluetooth Device

You can make your phone forget its pairing connection with another Bluetooth device. To connect to the device again, you need to search it and enter or confirm a passkey again.

- From the home screen, select > Settings > Wireless & networks > Bluetooth and ensure that Bluetooth is turned on.
- In the list of paired devices, select the icon beside the Bluetooth device you want to forget, and then press the Center key.
- Press the Right soft key.

Send Data via Bluetooth

- Open the appropriate application and select the file or item you want to share.
- Select the option for sharing via Bluetooth. The method may vary by application and data type.
- Select a Bluetooth device the phone has paired with or wait for it to search for new devices and select one of them.
- 4. Press the Center key to send the data.

Receive Data via Bluetooth

- 1. Turn Bluetooth on before trying to receive data via Bluetooth.
- When the phone prompts there is an incoming file, press the Center key to start receiving the data.

Depending on your storage setting and whether a microSDHC card is installed, received files are stored automatically in a dedicated folder (Bluetooth, for instance). You can access them with the **File Manager** app.

Connecting to Your Computer via USB

You can connect your phone to a computer with a USB cable and transfer music, pictures, and other files in both directions. Your phone stores these files in the phone storage or on a removable microSDHC card.

Connect Your Phone to a Computer via USB

- Connect your phone to the PC with a USB cable.
- 2. Choose one of the following options:
 - Charge only: Charge your phone via USB.
 - Install driver: Install the driver needed for some USB connection modes (such as MTP). You only need to install the driver on the same PC once.
 - NOTE:

You can also install the driver on PC by running the executable file in the new CD-ROM drive.

- Media device (MTP): Transfer files on Windows[®] or Mac[®].
 - NOTE:

For Windows XP, please install the drivers and Media Player 11 (or later version) when you use Media device (MTP) for the first time.

NOTE:

To make your phone connect to the computer automatically using the selected connection type, select **Don't ask me again** and press the **Center** key to check it.

Disconnect Your Phone From the Computer

To disconnect the phone from the computer, simply unplug the USB cable when you're finished.

Phone Calls

You can place calls from the Recent Calls app, the Contacts app, or other apps that display contact information.

Placing and Ending Calls

Place a Call by Dialing

- 1. Press the Power/end key to access the home screen.
- Enter the phone number with the dialpad. The phone will display matching information from your contact list and call history. Press the Clear key to delete any incorrect digits.
- Press the **Send** key to call the number you entered. Or select the matching record and press the **Send** key to call the contact or history number.

NOTES:

- To make an international call, press and hold the * key to enter the plus (+) symbol. Next, enter the country code, followed by the city/area code and then the phone number.
- To call an extension, enter the phone number first, and then select * > Add 2-sec pause or * > Add wait before entering the extension number.

End a Call

During a call, press the Power/end key.

Answering or Rejecting Calls

When you receive a phone call, you can answer or reject the call, or reject it with a text message.

Answer a Call

When you receive a phone call, press the **Send** key or the **Center** key to answer the call.

NOTE:

You can also answer a call by opening the phone flip.

NOTE:

To silence the ringer before answering the call, you can press either end of the **Volume** key.

Reject a Call

When you receive a phone call, press the **Power/end** key or the **Right soft** key to reject the call.

Select *** > Message reject** to reject the call and send a text message to the caller.

NOTE:

You can also reject a call by closing the phone flip.

NOTE:

To edit the preset text response, select (> Settings > Device > Call settings > Quick responses from the home screen.

Working With the Call History

The call history is a list of all the calls you've placed, received, or missed. It provides a convenient way to redial a number, return a call, or add a number to your contacts.

To open the call history, select > Recent Calls or press the Send key from the home screen.

Place a Call From the Call History

- 1. Open the call history.
- Select a listing and press the Send key to call back.
- NOTE:

You can use the **Navigation** keys to select (missed), (outgoing), or (incoming) to filter the records by call type.

Add a Number From Call History as a Contact

- Open the call history.
- Select a phone number and press the Center key.
- To add the number to an existing contact, select >
 Update existing contact and choose a contact in the list.
 To add a new contact, select > Create new contact.

Take Other Actions on a Call History Entry

Open the call history, select a listing and then press the **Center** key to view more call information. While viewing the call details, you can:

- Select > Remove from call log to delete the entry.
- Select > Edit number before call to edit the number in the dialer before calling it.
- Select * > Send Message to send a message to the contact or number.



Select * > Clear call log in the call history screen to delete all history records.

Calling Your Contacts

- 1. From the home screen, select
 -> Contacts.
- Select the tab to view all your contacts.
- 3. Select a contact and press the Center key.
- Select the contact number and press the Send key to make a call.

Checking Voicemail

If you have set the phone to divert calls to voicemail, callers can leave voicemail messages when they cannot reach you. Here's how to check the messages they left.

- 1. Press the Power/end key to access the home screen.
- Press and hold the 1 key. If prompted, enter your voicemail password.
- 3. Follow the voice prompts to listen to and manage your

voicemail messages.



See <u>Set Voicemail</u> for how to set your voicemail service. For detailed information, please contact the service provider.

Using Options During a Call

During a call, the following options are available.

- Press the Center key to turn on or off the speaker.
- Press the Right soft key to mute or unmute your microphone.
- Select > Add call to make another call separately from the first call, which is put on hold.
- Select > Swap to put the caller you are speaking to on hold, and switch to the other call that has been put on hold.
- Select > Merge calls to merge the separate calls into a single conference call.
- Select > End Call or press the Power/end key to end the current call.

WARNING!

Because of higher volume levels, do not place the phone near your ear during speakerphone use.

Managing Multi-party Calls

When the call waiting and three-way call features are available,

you can switch between two calls or set up a conference call.



The call waiting and three-way call features need network support and may result in additional charges. Please contact your service provider for more information.

Switch Between Current Calls

When you're on a call and another call comes in, your phone screen informs you and displays the caller ID.

To respond to an incoming call while you're on a call:

- Press the Send key or the Center key to answer the call. (This puts the first caller on hold and answers the second call.)
- Press the Power/end key or the Right soft key to reject the second call.
- Select > Message reject to reject the second call and send a text message to the caller.

To switch between two calls:

Select * > Swap to switch back to the other call.

Set Up a Conference Call

With this feature, you can talk to two people at the same time.

- Place the first call.
- Once you have established the connection, select * > Add call and dial the second number. (This puts the first caller on

hold.)

When you're connected to the second party, select > Merge calls.

If one of the people you called hangs up during your call, you and the remaining caller stay connected. If you initiated the call and are the first to hang up, all callers are disconnected.

To end the conference call, press the Power/end key.

Contacts

To see your contacts, select > Contacts from the home screen. From there, you can select the tabs on the top of the screen to quickly switch to contact groups.

Checking Contact Details

- From the home screen, select > Contacts and select the tab to access your contact list.
- 2. Scroll through the list to view all your contacts.
- Select a contact and press the Center key to view its details

Searching for a Contact

- From the home screen, select > Contacts and select the tab to access your contact list.
- In the search field below, input the contact name, phone number or any information the contact has to search for it. The contacts matched will be listed.

Adding a New Contact

 From the home screen, select > Contacts and select the tab to access your contact list.

- Select * > New contact to add a new contact. If the contacts list is empty, select CREATE A NEW CONTACT.
- Enter the contact name, phone number and other information.
 - NOTE:

You can select ▼ below **RINGTONE** or **NOTIFICATION RIGNTONE** to set a special ringtone or notification ringtone to the contact.

- Select ADD ANOTHER FIELD at the bottom and press the Center key to enter more information.
- 5. Select : > Done to save the contact.

Setting Up Your Own Profile

You can create your own name card in your phone.

- From the home screen, select > Contacts and select the tab to access your contact list.
- 2. Select Set up my profile and press the Center key.
- 3. Edit your profile information.
- 4. Select > Done.

Importing, Exporting, and Sharing Contacts

You can import/export contacts from/to the phone storage or the microSDHC card. This is especially useful when you need to transfer contacts between different devices. You can also quickly share contacts using messages or Bluetooth.

Import Contacts From the Phone Storage or the microSDHC Card

- From the home screen, select > Contacts.
- 2. Select : > Import/Export > Import from storage.
- If prompted, choose to import one, multiple, or all vCard files in the microSDHC card or the phone storage.
- 4. If prompted, press the Center key to import the contacts.

Export Contacts to the Phone Storage or the microSDHC Card

- From the home screen, select => Contacts.
- 2. Select : > Import/Export > Export to storage.
- The phone will prompt you with the name of the vCard file and the directory in which the file will be saved. Press the Center key to create the file.

Share Contacts

- 1. From the home screen, select -> Contacts.
- Select > Import/Export > Share visible contacts.
- Choose to share the contacts via messages or Bluetooth. The phone will export all your visible contacts into a vCard file.
- 4. Follow the onscreen prompts to send the vCard file.

Editing Contacts

Edit Contact Details

- From the home screen, select > Contacts.
- 2. Select a contact you need to edit and press the Center key.
- Press the Center key.
- 4. Edit the contact and select : > Done.

Delete Contacts

- From the home screen, select > Contacts and select the tab to access your contact list.
- 2. Select : > Multi-Select.
- Check the contact you want to remove and then select > Delete.
- 4. Press the Center key to confirm.

Join Contacts

You can merge all the separate information of a contact into one entry in the contacts list.

- From the home screen, select > Contacts.
- 2. Select a contact you need to edit and press the Center key.
- 3. Press the Center key.
- 4. Select > Join.
- Select the contact whose information you want to join with the first entry and press the **Center** key.
- 6. Select > Done.

The information from the second contact is added to the first contact, and the second contact is no longer displayed in the contacts list.

You can repeat these steps to join another contact to the main contact.

Separate Contact Information

If contact information from different sources was joined in error, you can separate the information back into individual contacts on your phone.

- 1. From the home screen, select -> Contacts.
- Select a contact you have merged and want to separate, and then press the Center key.
- 3. Press the Center key.

- 4. Select > Separate.
- 5. Press the Center key to confirm.

Working With Groups

View Your Contact Groups

- From the home screen, select > Contacts and select the tab.
- Scroll through the list to view the preset groups and any groups you have created.
- Select a group and press the Center key to view its members.

NOTE:

To send a message to all or some of the group members, you can select * > Send Group message after you open the group.

Set Up a New Group

- From the home screen, select > Contacts and select the tab.
- Select > Create group to create a new group.
- 3. Select the Group's name field and enter the group name.
- 4. Select ▼ below MEMBER and press the Center key, and

- then check the contacts you wish to be the group members.
- Select > Add member to group.
- Select ▼ below RINGTONE and press the Center key.
- Select the ringtone for incoming calls from the group members and press the Left soft key.
- 8. Select : > Save to save the group.

Delete a Group

- From the home screen, select > Contacts and select the tab
- 2. Select a group and press the Center key.
- 3. Select : > Delete Group.
- Press the Center key to disband the group. The contacts in the group will not be deleted.

Edit a Group

- From the home screen, select > Contacts and select the tab.
- 2. Select a group and press the Center key.
- Select > Edit group.
- Select the group name to edit it, or select ▼ below MEMBER or RINGTONE to add more members or change

the ringtone.

5. Select : > Save.



To remove group members, open a group in the tab and select > Multi-Select to choose members. Then select > Delete member > OK.

Messages

You can use Messages to exchange text messages (SMS) and multimedia messages (MMS).

Opening the Messages Screen

From the home screen, select -> Messages.



The **Messages** screen opens, where you can create a new message or open an ongoing message thread.

- Select : > New message to write a new text or multimedia message.
- Open an existing message thread to view the conversation you've had with a certain number.

Sending a Message

- On the Messages screen, select > New message.
- Add recipients by one of the following ways.
 - Select the To field and manually enter the recipient's number or the contact name. If the phone presents a few suggestions, select the one you want to add.
 - Select the To field and press the Center key to select recipients from your contacts, call history, or contact groups.
 - NOTF:

To remove a recipient, press the Clear key.

- Select the text box at the bottom and enter the content of your text message.
- If you want to send a multimedia message, select >
 Insert attach or > Add subject to attach a file or subject to the message.
- Press the Center key or select SEND and then press the Center key to send the message.

NOTE:

Do not add any attachment if you want to send a text message. Otherwise you may be charged for a multimedia message.

Replying to a Message

Messages you receive are appended to existing threads of the same number. If the new message comes from a new number, a new thread is created.

- On the Messages screen, open the thread that has the message you want to reply to.
- Type your reply in the text box at the bottom. You can select
 Insert attach or
 Add subject if you want to reply with an MMS.
- Press the Center key or select SEND and then press the Center key.

Forwarding a Message

- On the Messages screen, open the thread that has the message you want to forward.
- 2. Select the message and press the Center key.
- Select Forward in the menu that opens and press the Center key.
- Enter a recipient for the message and edit the content if you want
- Press the Center key or select SEND and then press the Center key.

Copying a Message

You can copy text messages from the micro-SIM card to the phone storage.

- On the Messages screen, select > Settings > Text message(SMS) > Manage SIM card messages.
- Select a message and select > Copy to phone memory.

Changing Message Settings

Select > Settings in the Messages screen to change the message settings.

Calendar

To open Calendar, select > Calendar from the home screen. You can use the calendar, set appointments, and view events.

Viewing Your Calendars and Events

Change Calendar Views

You can view your calendars in different forms. The app offers three view types: Month, Week and Agenda.

To change calendar views, select **> View by** and select the view you prefer. You can also select a day block in Month view and press the **Center** key to switch to Agenda view.

- In Month view, scroll up and down to see previous and future months.
- In Week or Agenda view, scroll left and right to see previous and future weeks/days.
- When you are viewing past or future days, weeks, or months, select > Today to quickly switch to today.

View Event Details

In Agenda or Week view, select an event and press the **Center** key to view its details.

In Month view, select a day block and press the Center key to

switch to Agenda view. Then open an event to view its details.

Creating an Event

- In any Calendar view, select * > New event.
- 2. Enter the event details and press the Left soft key.

Editing, Deleting or Sharing an Event

- 1. Find the event you want to edit, delete or share.
- Open its details screen (see <u>View Event Details</u> in this chapter).
- 3. Do one of the following as you need.
 - To edit the event, select > Edit. Press the Left soft key to save your changes.
 - To delete the event, select > Delete and press the Center key.
 - To share the event, select > Share and choose how to share.

Changing Calendar Settings

To change the calendar settings, open a calendar view (Week, Month or Agenda), and select * > Settings > General settings.

Web Browser

Use Browser to view web pages and search for information.

Opening the Browser

From the home screen, select > **Browser** to launch the web browser

The browser also opens when you open a web link - for example, in a text message.

To visit a website:

- 1. Open the Browser app.
- 2. Select : > Type URL to highlight the address box.
- Enter the address (URL) of a web page or enter terms you want to search for.
- Press the Center key to open the web page or search results.

NOTE:

Press the **Right soft** key if you want to stop opening the page. You can also press the **Right soft** key to go back to the previous opened web page.

Setting the Homepage

Your home page opens when you start **Browser** after restarting your phone. You can also open the home page by selecting

- > Homepage in the Browser screen.
- Open the Browser app.
- 2. Select : > Settings > Set homepage.
- Enter the URL and press the Center key to set it as the homepage.

Adding a Website to Bookmarks

- Open the Browser app.
- 2. Open the website you want to add to bookmarks.
- Select > Add to bookmarks.
- Edit the title and URL if needed.
- 5. Select Ok and press the Center key.

NOTE:

To view the bookmarks, select * > Bookmarks in the Browser screen.

Viewing the Browsing History

- Open the Browser app.
- Select > History to view all the websites you have visited. You can select one and press the Center key to open it.

Changing Browser Settings

You can configure a number of settings to customize the way you browse the web.

To open the Browser settings screen, select * > Settings in the browser screen.

Camera

You can use your phone to take photos and record videos. Photos and videos are stored on the microSDHC card you have installed or in the phone storage. You can copy them to your computer or access them in the **Gallery** app.

Capturing a Photo

- From the home screen, press the Camera key or select
 Camera
- Aim the camera at the subject and make any necessary adjustment.





You can press the **Volume** key to zoom in or out before taking pictures.

3. Press the Center key or the Camera key to take a picture.

Recording a Video

- From the home screen, press the Camera key or select
 Camera.
- Press the Left key to switch to the camcorder. The shutter button at the bottom of the display turns red.
- 3. Aim the camera at the subject.
 - MOTE:

You can press the **Volume** key to zoom in or out before and during recording.

- Press the Center key or the Camera key to start recording. You can also press the Left soft key to pause or resume recording.
- Press the Center key or the Camera key again to stop recording.

Gallery

Opening Gallery

From the home screen, select = > Gallery to view albums of your pictures and videos.

Working With Albums

When you open the Gallery, all pictures and videos on your phone are displayed in a number of albums by default. Scroll up and down to see them all.

To view album contents:

Select an album and press the **Center** key to view the pictures and videos it contains.

To share pictures or videos:

- Open an album.
- 2. Select > Multi-select.
- Select the pictures or videos you want to share and press the Center key to highlight them.
- 4. Select : > Share and select how you want to share them.

To delete albums, pictures, or videos:

1. Open the Gallery to view the albums or open an album.

- 2. Select : > Multi-select.
- Select the items you want to delete and press the Center key to highlight them.
- 4. Select > Delete.
- 5. Press the Center key to confirm.

Working With Pictures

Select a picture in an album and press the **Center** key to view it.

When viewing a picture, the following features are available.

- Press the Center key to view the picture in full screen.
- Press the Left key or the Right key to see more pictures or videos.
- Select : > Delete to delete the picture.
- Select : > Share to share the picture.
- Select : > Details to check file details.
- Select * > Slideshow to browse the album contents in a slideshow.

Playing Videos

1. Open an album in the Gallery.

- 2. Select the thumbnail of a video and press the Center key.
- 3. Press the Center key again to start playing.

Music

From the home screen, select

> Multimedia > Music to play audio files stored on your phone.

Viewing Your Music Library

From the home screen, select > Multimedia > Music and your music library is displayed. All your audio files are cataloged according to the information stored in the files.

- Now Playing: If an audio file is being played, select this
 option to open the playback screen.
- All Songs: View all music files on your phone.
- Playlists: View all music playlists you have created.
- Albums: Browse music files on your phone organized by the album name

Playing Music

Select a song in the music library and press the **Center** key to open the playback screen and listen to it.



The playback screen shows the track information and album artwork (if available). The following options are available.

- · To pause or resume the playback, press the Center key.
- To skip songs, press the Left key or the Right key.
- To rewind or fast forward, press and hold the Left key or the Right key.
- To toggle repeat mode, select > Repeat and choose one mode.
- To turn on or off shuffle, select > Shuffle and select On or Off
- To see the current playlist, select : > Now Playing List.

- To check the track information, select : > Track Info.
- To return to the music screen, press the Right soft key.
- To close the Music app, select : > Exit.

Managing Playlists

Create playlists to organize your music files into sets of songs, so that you can play the songs you like in the order you prefer.

- Select a song and then select > Add to playlist to add the song to a playlist or create a new playlist.
- Select a playlist and then select > Delete to delete it.
- Select a playlist and then select * > Rename to rename it.
- Open a playlist to view its content. You can select > Add Songs to add more songs to the playlist, or select a song and select > Remove to delete it from the playlist.

Video Player

Use the **Video** app to manage your video library and watch videos.

Opening the Video Library

From the home screen, select > Multimedia > Video to view your video library, where your video files are displayed in a list. Scroll up or down to find the video you want.

Playing and Controlling Videos

Select a video in the video library and press the **Center** key to play it. You can control the video or carry out other operations.

- To pause or resume the playback, press the Center key.
- To skip to the previous or the next video, press the Left key or the Right key.
- To rewind or fast forward, press and hold the Left key or the Right key.
- To adjust the screen brightness, select > Brightness and then press the Up key or the Down key.
- To delete the video, select > Delete and press the Center key.
- To share the video, select : > Share and choose a method.

• To view the file details, select : > Details.

Managing Video Files

Delete Video Clips

- 1. Select : > Multi-Select in the video library.
- 2. Check the videos you want to delete.
- 3. Select : > Delete and press the Center key to confirm.

Share Video Clips

- 1. Select : > Multi-Select in the video library.
- 2. Check the videos you want to share.
- 3. Select : > Share and choose how you want to share them.

FM Radio

With the FM radio, you can search for radio channels, listen to them, and save them on your phone. Note that the quality of the radio broadcast depends on the coverage of the radio station in your area. The wired headset works as an antenna, so always connect the headset when using the radio. When you receive an incoming call while listening to the radio, the radio will be turned off.

Scanning and Saving Channels

- Plug in a wired headset and select > Multimedia > FM Radio from the home screen.
- Select > Scan. Your phone scans for all available channels and saves them to the All channels list.
- NOTE:

When you open the **FM Radio** app for the first time, it will automatically scan for channels and show the **All channels** list. You can also select * > **All channels** to view the list.

Listening to FM Radio

- Select > Multimedia > FM Radio from the home screen while the headset is connected
- Select > All channels.

3. Select a channel and press the Center key to listen to it.

In the main FM radio screen, you can press the **Up** key or the **Down** key to adjust the channel frequency, or press the **Left** key or the **Right** key to switch to other channels.

Deleting a Saved Channel

- Open the FM Radio app and select : > All channels.
- Select a channel and select > Delete.
- 3. Press the Center key to delete it from the list.

Other Options

To set your radio region:

FM radio frequency ranges differ in different regions.

Select : > FM frequency range to select the range you need.

NOTE:

If you change the frequency range, previously saved channels are not shown until you switch back to the original frequency range.

To turn off FM radio:

Select > Exit.

Sound Recorder

Sound Recorder enables you to record voice memos and listen to them whenever you like.

Recording a Voice Memo

- From the home screen, select > Multimedia > Sound Recorder
- Press the Center key to start recording. During recording, press the Center key to pause or continue the recording.
- Press the Left soft key to stop recording. The memo is automatically saved.

Playing a Voice Memo

- Select * > All Recordings from the Sound Recorder screen to see all recordings.
- 2. Select a memo and press the Center key to play it.

NOTE:

Choose a memo and select > Share/Delete/Rename/Details to share, delete or rename it, or check its file information.

More Apps

Clock

From the home screen, select > Clock. The Clock app allows you to check local time in places around the world, set alarms, and use timers.

Set a New Alarm

- Select the tab in the Clock app.
- Select an existing alarm and select > Edit to configure it, or select > New alarm to create a new alarm.
- Set up the alarm options, such as time, alarm days, repeat, snooze, and alarm ringtone.
- Press the Left soft key to save and exit.

NOTE:

To enable or disable an existing alarm directly, select the alarm and press the **Center** key to turn on or off the switch on the right side.

Check World Time

Select the tab in the **Clock** app to check local time around the world.

Select : > Add City to add a new city or country.

Use the Stopwatch and Countdown

Select the \bigcirc or \boxtimes tab in the **Clock** app to use the stopwatch or the countdown timer.

Stopwatch allows you to record lap times, while countdown allows you to set a time and count down to zero.

Calculator

From the home screen, select > Tools > Calculator for simple calculation. You can enter the operation for your calculation by pressing the Navigation keys and view the result by pressing the Center key.

NOTES:

- Press the Clear key to clear inputs and results.
- · Press the Left soft key to reset all inputs and results.
- · Press the * key to enter a decimal point.
- Press the Vibration mode (#) key to toggle the number between positive and negative.

Downloads

The **Downloads** app keeps a record of the files you have downloaded

From the home screen, select > Tools > Downloads to check the record

File Manager

Quickly access all of your images, videos, audio clips, and other types of files on your phone storage and the microSDHC card.

From the home screen, select File Manager. You can select the file tab to browse folders and files on the phone storage and the microSDHC card.

- Select folders and files and press the Center key to access stored items.
- Select an item and select is to access more options.
- Select > New folder to create a new folder in the current directory.

Settings

Troubleshooting

If you encounter problems while using the phone, or if it performs abnormally, you can refer to the chart below. If your particular problem cannot be resolved using the information in the chart, contact the dealer where you purchased the phone.

Problem	Possible causes	Possible solution
Poor reception	The network signal is too weak at your current location, for example, in a basement or near a tall building, because wireless transmissions cannot effectively reach it.	Move to a location where the network signal can be properly received.
	The network is busy at the current time (for example, during peak times, there may be too much network traffic to handle additional calls).	Avoid using the phone at such times, or try again after waiting a short time.
	You are too far away from a base station for your service provider.	You can request a service area map from your service provider.

Problem	Possible causes	Possible solution
Echo or noise	The network link quality is poor on the part of your service provider.	End the call and dial again. You may be switched to a better-quality network link or phone line.
	The quality of the phone line that you are calling is poor	End the call and dial again. You may be switched to a better-quality network link or phone line.
Unable to select certain features	Your service provider does not support these features, or you have not applied for services that provide these features.	Contact your service provider.
Cannot charge the battery	The battery or battery charger is damaged.	Contact the dealer.
	The phone's temperature is below 0 °C or higher than 45 °C.	Adjust the battery charging environment to avoid extremes of temperature.
	The contact between the battery and charger is poor.	Check all connectors to ensure that all connections have been properly made.

Problem	Possible causes	Possible solution
Shortened standby time	The standby time is related to your service provider system configuration. The same phone used with different service providers' systems will not provide exactly the same length of standby time.	If you are located in an area where signaling is weak, temporarily power off the phone.
	The battery is depleted. In high temperature environments, battery life will be shortened.	Contact the dealer to change a new battery.
	If you are not able to connect to the network, the phone will continue to send out signals as it attempts to locate a base station. Doing so consumes battery power and will consequently shorten standby time.	Change your location to one where the network is accessible, or temporarily turn off your phone.

Problem	Possible causes	Possible solution
Cannot turn your phone on	Battery power has been depleted.	Recharge the phone's battery.
micro-SIM card error	The micro-SIM card malfunctions or is damaged.	Take the micro-SIM card to your service provider for testing.
	The micro-SIM card is inserted improperly.	Insert the micro-SIM card properly.
	There is debris on the micro-SIM card contacts.	Use a soft dry cloth to clean the micro-SIM card contacts.
Unable to connect to the network	The micro-SIM card is invalid.	Contact your service provider.
	You are not within the network's service area.	Check the service area with your service provider.
	The signal is poor.	Move to an open space, or if you are inside a building, move closer to a window.

Problem	Possible causes	Possible solution
PIN Code	You have entered an incorrect PIN code three consecutive times.	Contact your service provider. If the service provider provides the micro-SIM card's PUK code, use the PUK code to unlock the micro-SIM card.

For Your Safety

General Safety

	Don't make or receive handheld calls while driving. Never text while driving.	A	Don't use at gas stations.
İ -	Keep your phone at least 15 mm away from your body while making calls.		Your phone may produce a bright or flashing light.
	Small parts may cause choking.	A.	Don't dispose of your phone in fire.
	Your phone can produce a loud sound.	9	To prevent possible hearing damage, do not listen at high volume levels for long periods.
C.	Avoid contact with anything magnetic.		Avoid extreme temperatures.

	Keep away from pacemakers and other electronic medical devices.		Avoid contact with liquids. Keep your phone dry.
A	Turn off when asked to in hospitals and medical facilities.	≥ =0	Do not attempt to disassemble your phone.
4	Turn off when told to in aircrafts and airports.	₩ W	Only use approved accessories.
**	Turn off when near explosive materials or liquids.	•	Don't rely on your phone as a primary device for emergency communications.

Radio Frequency (RF) Energy

This phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the United States

During SAR testing, this device was set to transmit at its highest certified power level in all tested frequency bands, and placed in positions that simulate RF exposure in usage against the head with no separation, and near the body with the separation

of 15 mm. Although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

The exposure standard for wireless devices employing a unit of measurement is known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg.

This device is complied with SAR for general population /uncontrolled exposure limits in ANSI/IEEE C95.1-1992 and had been tested in accordance with the measurement methods and procedures specified in IEEE1528.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of www.fcc.gov/oet/ea/fccid after searching on FCC ID: SRQ-Z2321A.

For this device, the highest reported SAR value for usage against the head is 0.77 W/kg, and for usage near the body is 1.04 W/kg.

While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirements.

SAR compliance for body-worn operation is based on a separation distance of 15 mm between the unit and the human body. Carry this device at least 15 mm away from your body to ensure RF exposure level compliant or lower to the reported level. To support body-worn operation, choose the belt clips or holsters, which do not contain metallic components, to maintain a separation of 15 mm between this device and your body.

RF exposure compliance with any body-worn accessory, which contains metal, was not tested and certified, and using such body-worn accessory should be avoided.

FCC Regulations

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION:

Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter



NOTE:

This equipment has been tested and found to comply with the

limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Hearing Aid Compatibility (HAC) Regulations for Mobile Phones

In 2003, the FCC adopted rules to make digital wireless telephones compatible with hearing aids and cochlear implants. Although analog wireless phones do not usually cause

interference with hearing aids or cochlear implants, digital wireless phones sometimes do because of electromagnetic energy emitted by the phone's antenna, backlight, or other components. Your phone is compliant with FCC HAC regulations (ANSI C63.19- 2011). While some wireless phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise and phones also vary in the amount of interference they generate. The wireless telephone industry has developed a rating system for wireless phones to assist hearing device users in finding phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label located on the box. The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference. you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

This phone has been tested and rated for use with hearing aids for some of the wireless technologies that it uses. However, there may be some newer wireless technologies used in this phone that have not been tested yet for use with hearing aids. It is important to try the different features of this phone thoroughly and in different locations, using your hearing aid or cochlear implant, to determine if you hear any interfering noise. Consult your service provider or the manufacturer of this phone for information on hearing aid compatibility. If you have questions

about return or exchange policies, consult your service provider or phone retailer.

M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

T-Ratings: Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing device's telecoil ("T Switch" or "Telephone Switch") than unrated phones. T4 is the better/ higher of the two ratings. (Note that not all hearing devices have telecoils in them.)

Your phone meets the M4 /T4 level rating.

Hearing devices may also be rated. Your hearing device manufacturer or hearing health professional may help you find this rating. For more information about FCC Hearing Aid Compatibility, please go to http://www.fcc.gov/cgb/dro.

CTIA Requirements

- Do not disassemble or open, crush, bend or deform, puncture or shred the battery.
- Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, expose to fire, explosion or other hazard.
- Only use the battery for the system for which it is specified.
- · Only use the battery with a charging system that has been

qualified with the system per CTIA Certification Requirements for Battery System Compliance to IEEE 1725. Use of an unqualified battery or charger may present a risk of fire, explosion, leakage, or other hazard.

- Do not short circuit a battery or allow metallic conductive objects to contact the battery terminals.
- Replace the battery only with another battery that has been qualified with the system per this standard, IEEE-Std-1725.
 Use of an unqualified battery may present a risk of fire, explosion, leakage or other hazard.
- Promptly dispose of used batteries in accordance with local regulations.
- Battery usage by children should be supervised.
- Avoid dropping the phone or battery. If the phone or battery is dropped, especially on a hard surface, and the user suspects damage, take it to a service center for inspection.
- Improper battery use may result in a fire, explosion or other hazard.
- The phone shall only be connected to CTIA certified adapters, products that bear the USB-IF logo or products that have completed the USB-IF compliance program.

Distraction

Driving

Full attention must be given to driving at all times in order to reduce the risk of an accident. Using a phone while driving (even with a hands free kit) can cause distraction and lead to an accident. You must comply with local laws and regulations restricting the use of wireless devices while driving.

Operating Machinery

Full attention must be given to operating the machinery in order to reduce the risk of an accident.

Product Handling

General Statement on Handling and Use

You alone are responsible for how you use your phone and any consequences of the use.

You must always switch off your phone wherever the use of a phone is prohibited. Use of your phone is subject to safety measures designed to protect users and their environment.

- Always treat your phone and its accessories with care and keep them in a clean place.
- Keep the screen and camera lens clean. Unclean screen or camera lens may slow down the phone's reaction to your

- operations or lower image quality.
- Clean your phone and its accessories with a soft material such as cleaning cloth for eyeglass lenses. Do not use alcohol or other corrosive substances for cleaning or allow them to get inside.
- Do not expose your phone or its accessories to open flames or lit tobacco products.
- Do not expose your phone or its accessories to liquid, moisture or high humidity.
- Do not drop, throw or try to bend your phone or its accessories
- Do not use harsh chemicals, cleaning solvents, or aerosols to clean the device or its accessories
- · Do not paint your phone or its accessories.
- Do not attempt to disassemble your phone or its accessories, only authorized personnel can do so.
- Do not expose or use your phone or its accessories in an environment with or that can reach extreme temperatures, minimum 23 °F and maximum 122 °F (minimum 5 °C and maximum + 50 °C).
- Do not place your phone inside or near heating equipments or high pressure containers, such as water heaters, microwave ovens, or hot cooking utensils. Otherwise, your phone may be damaged.

- Please check local regulations for disposal of electronic products.
- Do not carry your phone in your back pocket as it could break when you sit down.

Small Children

Do not leave your phone and its accessories within the reach of small children or allow them to play with it.

They could hurt themselves or others, or could accidentally damage the phone.

Your phone contains small parts with sharp edges that may cause an injury or may become detached and create a choking hazard.

Demagnetization

To avoid the risk of demagnetization, do not allow electronic devices or magnetic media close to your phone for a long time.

Electrostatic Discharge (ESD)

Do not touch the metallic connectors of the micro-SIM card.

Antenna

Do not touch the antenna unnecessarily.

Normal Use Position

When placing or receiving a phone call, hold your phone to your ear, with the bottom toward your mouth.

Air Bags

Do not place your phone in the area over an air bag or in the air bag deployment area as an airbag inflates with great force and serious injury could occur.

Place your phone safely before driving your vehicle.

Seizures/Blackouts

Your phone can produce a bright or flashing light. A small percentage of people may be susceptible to blackouts or seizures (even if they have never had one before) when exposed to flashing lights or light patterns such as when playing games or watching videos. If you have experienced seizures or blackouts or have a family history of such occurrences, please consult a physician. To reduce the risk of blackouts or seizures, you can use your phone in a well-lit room and take frequent breaks.

Repetitive Strain Injuries

To minimize the risk of Repetitive Strain Injury (RSI) when texting or playing games with your phone:

- · Do not grip the phone too tightly.
- · Press the buttons lightly.

- Use the special features which are designed to minimize the times of pressing buttons, such as Message Templates and Predictive Text.
- · Take frequent breaks to stretch and relax.

Emergency Calls

This phone, like any other wireless phone, operates using radio signals, which cannot guarantee connection in all conditions. Therefore, you should not rely solely on any wireless phone for emergency communications.

Loud Noise

This phone is capable of producing loud noises, which may damage your hearing. Turn down the volume before using headphones, Bluetooth headsets or other audio devices.

Phone Heating

Your phone may become warm during charging and normal use.

Electrical Safety

Accessories

Use only approved accessories.

Do not connect with incompatible products or accessories.

Take care not to touch metallic objects, such as coins or key

rings, or allow them to contact or short-circuit the charging jack terminals.

Never puncture the surface of the phone with sharp objects.

Connection to a Car

Seek professional advice when connecting a phone interface to the vehicle electrical system.

Faulty and Damaged Products

Do not attempt to disassemble the phone or its accessories.

Only qualified personnel can service or repair the phone or its accessories.

If your phone (or its accessories) has been submerged in water, punctured, or subjected to a severe fall, do not use it until you have taken it to be checked at an authorized service center.

Radio Frequency Interference

General Statement on Interference

Care must be taken when using your phone in close proximity to personal medical devices, such as pacemakers and hearing aids.

Please consult your doctor and the device manufacturers to determine if the operation of your phone may interfere with the operation of your medical devices.

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 15 cm be maintained between a mobile phone and a pacemaker to avoid potential interference with the pacemaker. To achieve this, use the phone on the opposite ear to your pacemaker and do not carry it in a breast pocket.

Hearing Aids

People with hearing aids or other cochlear implants may experience interfering noises when using wireless devices or when one is nearby.

The level of interference will depend on the type of hearing device and the distance from the interference source, increasing the separation between them may reduce the interference. You may also consult your hearing aid manufacturer to discuss alternatives.

Medical Equipment

Switch off your wireless device when you are requested to do so in hospitals, clinics or health care facilities. These requests are designed to prevent possible interference with sensitive medical equipment.

Aircraft

Switch off your wireless device whenever you are instructed to do so by airport or airline staff.

Consult the airline staff about the use of wireless devices on board the aircraft and enable airplane mode of your phone when boarding an aircraft.

Interference in Vehicles

Please note that because of possible interference to electronic equipment, some vehicle manufacturers forbid the use of mobile phones in their vehicles unless a hands-free kit with an external antenna is included in the installation.

Explosive Environments

Gas Stations and Explosive Atmospheres

In locations with potentially explosive atmospheres, obey all posted signs to turn off wireless devices such as your phone or other radio equipment.

Areas with potentially explosive atmospheres include fuelling areas, below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

Blasting Caps and Areas

Power off your mobile phone or wireless device when in a blasting area or in areas where signs are posted to power off "two-way radios" or "electronic devices" to avoid interfering with blasting operations.