

### W4G Stick Datalogger Quick Installation Manual Version: 1.0



Delivery Content

- 1 W4G stick
- 1 Quick Installation Manual



# 1 Install the datalogger

Connect the datalogger to the corresponding 4-pin COM port of the inverter. A Solis 5K inverter is used here as an example.

Please follow the instructions below:



Match the joint

Install the datalogger:

Step 1: Match the joint, and then insert the datalogger to the inverter COM port. Step 2:Rotate the black ring in clockwise.







 


#### 

Only rotate the black ring at the connection end, not rotate the main body.

#### 1.2 Install with multiple inverters

If you need to collect data from multiple inverters, please follow the inverter user manual to establish a communication connection with the inverter using the RS485 communication cable in a "daisy chain" manner.



After the datalogger is installed on the inverter, if the inverter is powered on, you need to set the inverter slave address, the default slave address of the inverter is 01, and each inverter on the communication circuit needs to be assigned with different slave address(like 01,02,03,04...).

#### 

The device must be installed away from the strong magnetic field produced by large electrical appliances such as microwave oven, refrigerator, telephone, metal walls, etc. Otherwise, the communication quality may be affected. It may also be affected by lighting storm.

## 2 LED and Button

LED Lights Status:

LED indicators	Description	LED Status	Meanings
	Shows the connection status between the datalogger and the server.	Flashing	Trying to connect with server
Internet Indicators • (NET)		ON	Successfully connected
		OFF	Abnormal connection
	Shows the connection status between datalogger and the inverter.	Flashing	Trying to connect with inverter
Inverter COM Indicators •(COM)		ON	Successfully connected
		OFF	Abnormal connection
Power Indicator	Shows the power supply status of the datalogger.	ON	Datalogger is powered up normally
●(PWR)		OFF	Datalogger is powered up abnormally

**Button Instruction:** 

The [RESET] button on the back is used for connection.

·Short press will send the data immediately.

·Long press for 5 seconds will enter into config mode for connection router.

·Long press for 10 seconds will reset the connection.

Internet Indicators color: green means wifi mode, blue means 4G mode.

The three constantly ON LED lights indicate the datalogger is working normally.

### 3 Select Mode

If you only want to use 4G, please refer to the 4G operation steps.

If you only want to use WiFi, please refer to the WIFI operation steps.

If you want to use 4G+ WiFi, please perform the 4G operation steps first, and then perform the WiFi connection operation steps.


(Priority is given to WIFI. When there is no WIFI or weak WIFI signal, the 4G communication will be automatically switched (if the 4G signal is weak, it will be reduced to 2G for communication). When the WIFI network is restored, the WiFi communication will be automatically switched back.)

#### 3.1 4G Configuration

1. SIM card provided by Ginlong, SIM card has been built in, No other settings are required.

SIM card not provided by Ginlong, The SIM card needs to be installed manually, Some SIM cards will automatically recognize APN, if cannot be connected normally, please follow the following steps to set the APN.


2. Log in to SolisCloud, Click Me then click Tool.

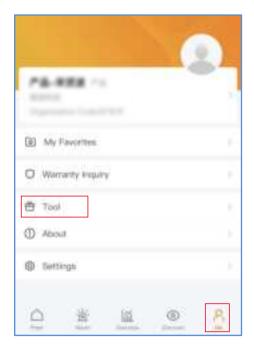

3. Click Local Operation.



4. Click Connect With Bluetooth.

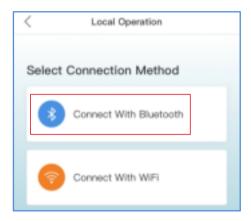

5. Select the Device.

<	Nearby Device	8
And a local division of the	to well in the last present that the "South	-
0.01.3	A12251943D00FE3	83
Other Dev	ice	
0 (E-H	>	
LE-Fazier TWS		20
	Search Develo	


6. Choose "Set current APN".

16:25		nt. 🕈 🗰		
<	3A12251943D00F	3A12251943D00FE2		
Data	Angger	Paintip		
Model Nurth		325		
Host Type				
Set the max devices core		10		
Current War	h Made			
integer.				
Liptowd Deter	Once immediately			
Notet the	halalogger			
Set the loser the currently	name and pasaword of connected WIFi			
Set current of	NPN	8		
Set the max devices core				
Clats Upload	Cycle			
Cieor dataka	ager data			
Set the cum sconection t				

7. Enter the APN, User Name and Password (If APN is no User Name and Password, unnecessary to fill in).

<	Set current APN	See
* APN		
User Name		
Passworil		

 8. If the prompt is OK, Configuration Complete.



#### 


Please check APN, User Name and Password carefully. The wrong APN, User Name and Password will also prompt OK.

#### 3.2 WiFi Configuration

Step 1: Use you phone to scan the QR code to download and register the Solis Cloud APP. Or directly download from APP Store or Google Play Store by searching "Solis Cloud".




2. Log in to SolisCloud, Click Me then click Tool.

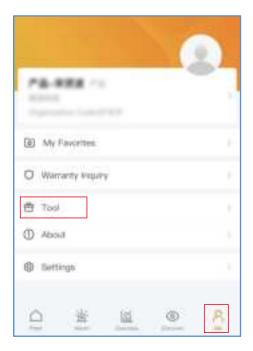


3. Click Local Operation.



4. Click Connect With Bluetooth.

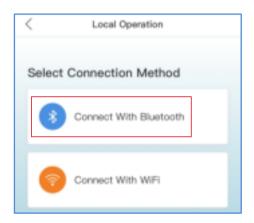

5. Select the Device.

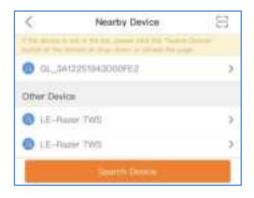

6. Choose "Set the username and password of the currently connected WiFi".

10:25	ni. 🗢 🗰
< 3Ats	251943D00FE2
Dataloguer	it user top-
Model Number	325
Host Type	¥
Set the max, number a devices prevented	6 i i i i i i i i i i i i i i i i i i i
Current Work Mode	
Integral.	
Upland Data Once Imm	white:
Restart the datalogger	
Set the username and the currently connector	a work
Sist current APN	۶.
Bet the max, number a devices corrected	e )
Elata Upload Cycle	
Dev datakigger data	
Set the current platfor somection type	m )

7. Enter the WiFi name and WiFi password.

<	Set current APN	See
* APN		
liter Name		
Password		

8. If the prompt is OK, Configuration Complete.




#### 


Please check WiFi name and WiFi password carefully. The wrong name and password will also prompt OK.

### 4 Create the Solis Cloud Account

Step 1: Click the "Register".

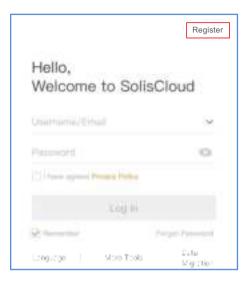

Step2: Select Owner or Organization for email address registration.

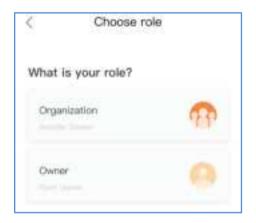

Step3: Enter the email to get the verification code, than enter your account and password, last click the "Register".

Ś	Owner
	* Registration Method
	Sectorements and
	* User Name
	tupot 2 to 300 Figure attact, not para $\kappa$ .
	* Pataword
	is put if in 3d inverse symmetry and $\hfill \equal \equa$
	* Time Zone
	(UTC+08.00) PRC 3
	T. The second Press Pales
	Register

Owner Register

	Organization	
Notes 1	and adjustication that required	
Property 1	Chend, you do not many in regime strength the addressionality to add	and the same
-	man at mental to systemice	and special states
* Orga	midation (Company) Name	
• Repl	stration Method	
		Terri .
+ Line	Name	
+ Pass	oward	
		. 0
r Orga	initiation Code	
100	14	
1.Time	Zone	
0,000	C+08.001 PBC	
0/4)	Change Party	
	Checkberry 1	

Organization Register

### 5 Create Plant


Step1: Enter the main page of Solis Cloud APP, click "+"at the top right corner and select "Add plant".

Plane Q team	9
145100 77921	Add plant
Order by De Par	S Scar
	Plant Location
© CN-1155133010090	SANIH
Control Control Control	Jam.
TR. Via Writebore inc	Number (Statute)
O Vicedgraven	
	Auss
0	Participante (Contante)
O Borst	
Com Con	4m 4/6
O De Mailingman Batt	tery
hose that there rough	time and the second
	<u>s</u>


Step 2: Input the information of the plant as required. Then click "Done".

ζ Create Plant Done \* Flant Name Transf plant marve 2-40.... Samet Plant Type 3 \* Flant Tebe + Trefated Pigest The formal Linguage Vy ..... Capacity(kWg) · Area Constitute @ HeplyColoria/Ind Inddonesis \* Address \* Time Zone Currentoy. USD > . Earning per Indust Earning par kilds #Wh(UED/9Wh) Organization EFIETF Code flat Owner @ Add Guest @ Initiality Empli Paul Installer proof. Installer Phone trpat extent Proce. Input-number of modules Module Ond Consection 
Entire Energy Exported Type Phant Contract Phone Tip.4 share Phieti Plumeter Mestience @ 0+ Azimuth 110" inclimation . Farmark 1 Implet remark Famels 2 Ingel Personal Bernark 3 Input tenam.

Step 3: Confirm the plant information. Click "Create plant".

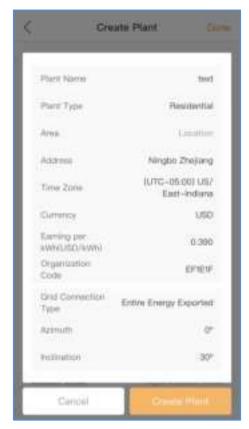

Step 4: Click "View plant" to enter the plant homepage, then add the datalogger.

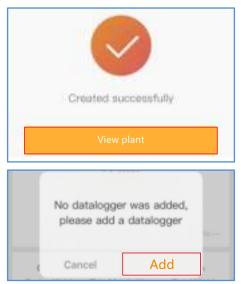


Step 5: Scan the SN number of the datalogger or manually input it.



Note: Scan the datalogger SN, NOT the inverter SN.



Step 6: Plant creation succeeds. Click "Continue to bind" to check the monitoring data. If the plant has multiple dataloggers, please click "View Plant".

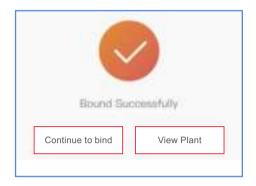

### 6 FCC Certification

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

#### FCC warning:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

#### Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

#### Contact

Please contact us if you have any technical problems in terms of the product. Please provide the following information as well:

- ♦ Inverter SN
- Datalogger SN
- Problem Description

#### Ginlong Technologies Co., Ltd.

No. 57 Jintong Road, Binhai Industrial Park, Xiangshan, Ningbo, Zhejiang, 315712, P.R.China.

Tel: +86 (0)574 6578 1806 Fax: +86 (0)574 6578 1606 Email : info@ginlong.com Web : www.ginlong.com