

ADJUSTING VOLUME:

- Volume button on Teacher Mic has three settings (Low, Med, High). It adjusts Teacher Mic volume only. It does not adjust MASTER or AUX AUDIO volume.
- CH. A and CH. B dials adjust individual wireless microphone volume.
- AUX AUDIO dial adjusts the Bluetooth and AUX IN volume.
- MASTER dial adjusts all audio together.
- MIC dial adjusts the plug-in microphone volume.

CHARGING TIPS:

- To maximize battery life, recharge after every use and fully charge every 3 months when not in use.



Scan for User Guide

UHF Wireless Portable Sound System
Model: 6400-00101
FCC ID: 2AM2V6400-00101
IC: 22997-640000101
CAN RSS-Gen / CNR-Gen
CAN ICES-3(B) / NMB-3(B)
Freq.: 520-544 MHz



 
1000-00216-L000001





Made in Taiwan



POWER

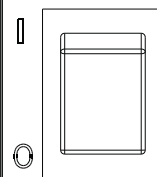

DC IN
20V

  

UHF Wireless Portable Sound System
Model: 6400-00101
FCC ID: 2AM2V6400-00101
IC: 22997-640000101
CAN RSS-Gen / CNR-Gen
CAN ICES-3(B) / NMB-3(B)
Freq.: 520-544 MHz



1000-00216-L000001



Made in Taiwan



40 mm

25 mm