

# Hisense H50 Lite (HLTE233E)

## User Manual

Before using your phone, read the User Manual thoroughly.

Manufactured by Hisense Communications Co., Ltd.

# Contents

## Phone Basics

Your phone at a glance	5
Carrying out basic operations	6
Using the notification center	11
Using SIM and MicroSD cards	12
Battery charging	14
Other hardware features	16

## Troubleshooting

I can't turn my phone on	17
My phone keeps turning off automatically	17
I can't use an application on my phone	17
My phone's standby time is too short	18
My phone isn't charging properly	18
Touchscreen error when charging	19
I've forgotten my password	19
My PIN is locked	19
I can't use the Internet or make calls	19
My calls don't connect	20
Phone doesn't make a sound when it rings	20

## Phone

Making calls	21
Making calls from contacts	21
Making calls from recents	21

## Contacts

Importing contacts	22
Creating contacts	22
Searching for contacts	22

## Messages

Sending messages	23
Viewing messages	23
Searching messages	23

## Camera

Taking photos	24
Taking panorama	24
Recording videos	25

## Photos

Viewing photos or videos	25
Deleting photos or videos	25
Sharing photos or videos	25
<b>Chrome</b>	
Using Chrome	26
<b>Clock</b>	
Alarms	26
Clock	27
Timer	27
Stopwatch	28
<b>Recorder</b>	
Recording sound	28
Playing a recording	28
Managing recordings	29
<b>Calculator</b>	
Making calculation	29
<b>FM Radio</b>	
Listening to radio	29
<b>Security and Privacy</b>	
Fingerprint unlock	30
Face unlock	31
<b>Safety</b>	
Safety precautions	32
Safe battery charging	36
Protecting your hearing	37
Protecting the environment	37
Reducing your radiation exposure	37
Other important information	38
Disclaimer	39
ONLY FOR MEXICO	39
FCC Compliance	40
Specification	43

## Safety symbols in this document

The following symbols are used throughout this document:



**Warning:** situations that could cause injury to yourself or others.



**Caution:** situations that could cause damage to your device or other equipment.



 
**Notice:** notes, usage tips, or additional information.

# Phone Basics

Use the information in this section to get to know your phone better.

## Your phone at a glance

Get to know your phone with the following figure and legend.

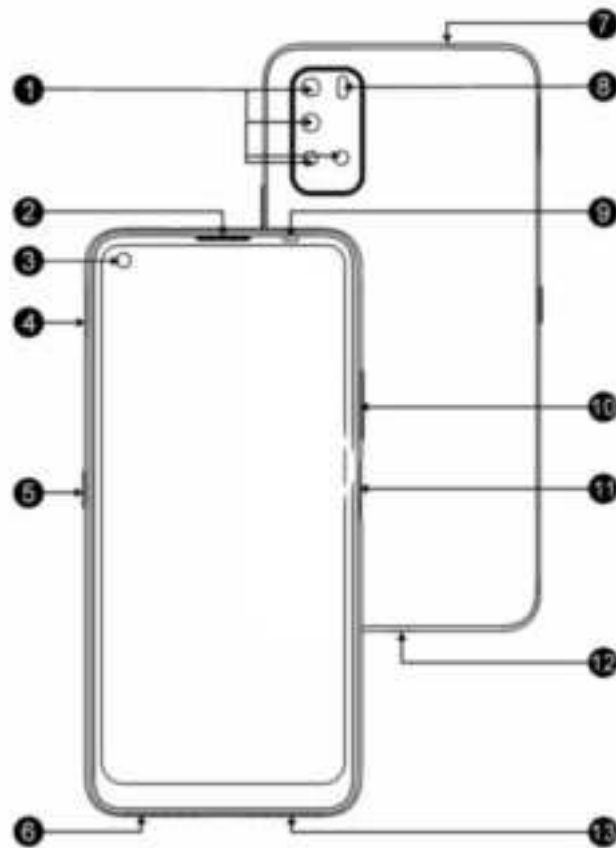

1. Rear cameras	8. Flash lamp
2. Receiver	9. Ambient light
3. Front camera	10. Volume button
4. Card slot	11. Power button / Fingerprint
5. AI button	12. USB port
6. Microphone	13. Loudspeaker
7. Headset socket	



The figures and descriptions are for reference only, please refer to the descriptions of actual product.

## Carrying out basic operations

This section describes how to carry out basic functions on your phone.




Before using your phone for the first time, fully charge your battery. For more information on charging your battery, see

### **Battery charging.**

### **Turning your phone on**

- To turn your phone on, press and hold the power button until the screen turns on.
- When turning your phone on for the first time, or after performing data reset, follow the onscreen instructions to set up you phone.
- To force restart your phone, press and hold the power button until your phone vibrates.

### **Turning your phone off**

 
To power off your phone, press and hold the power button, and then tap the  icon.

### **Using touchscreen gestures**

This section describes how to use touchscreen gestures to help control your phone.


## **Tapping**

To open an app, to choose a menu item, to press an on-screen button, or to enter a character using the keyboard on the screen, tap it with your finger.

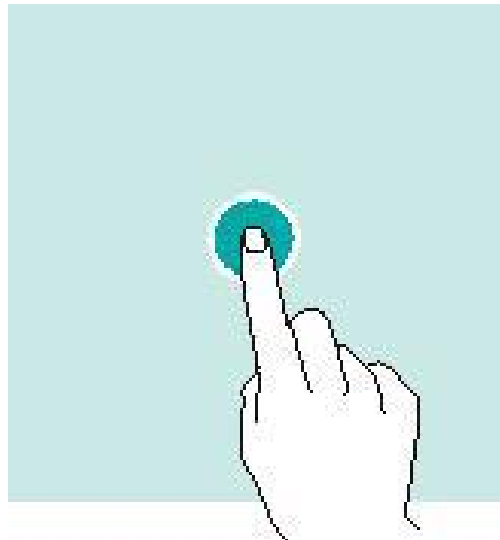



## **Tapping and holding**

 Tap and hold an item on the screen for more than 2 seconds to access available options.


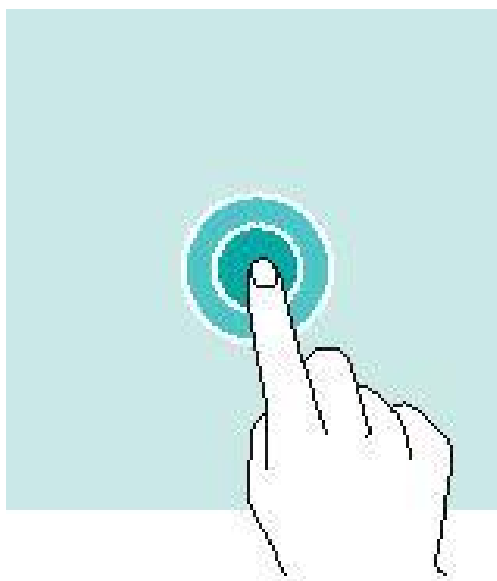


## Swiping

  Swipe to the left or right on the home screen or the Apps screen to view other panels.

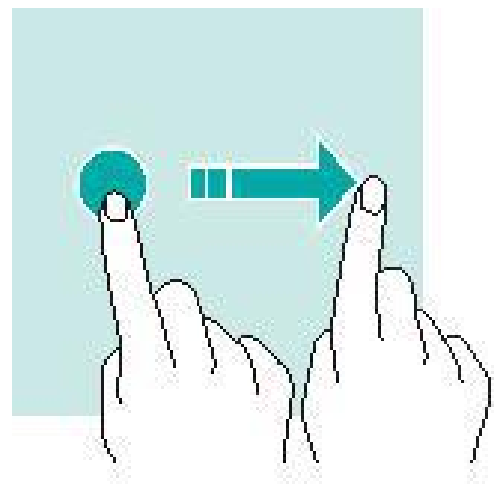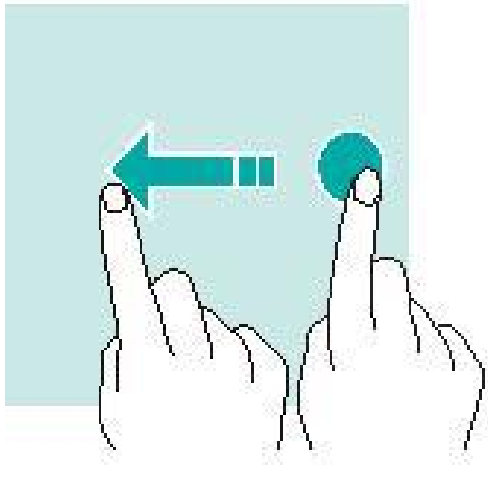

  
Swipe upwards or downwards to scroll through a web page or a list of items.

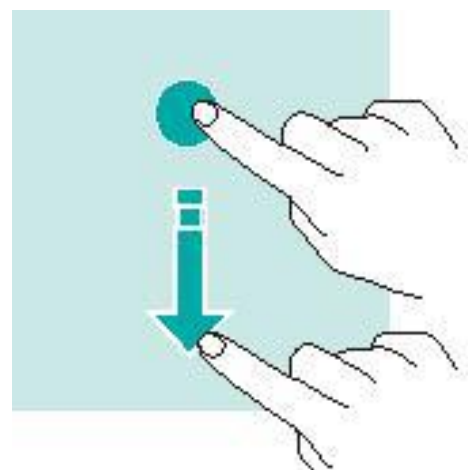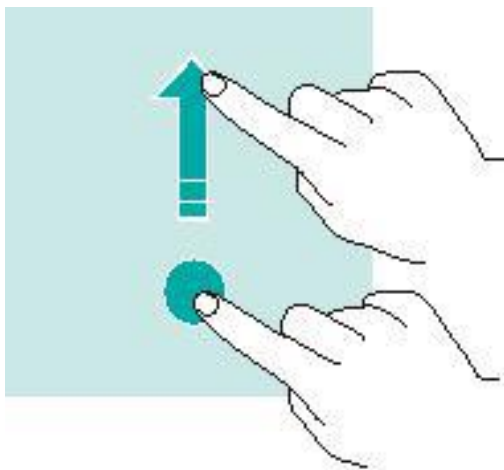




## Spreading and pinching

 Spread two fingers apart on a web page, map or image to zoom in a part.

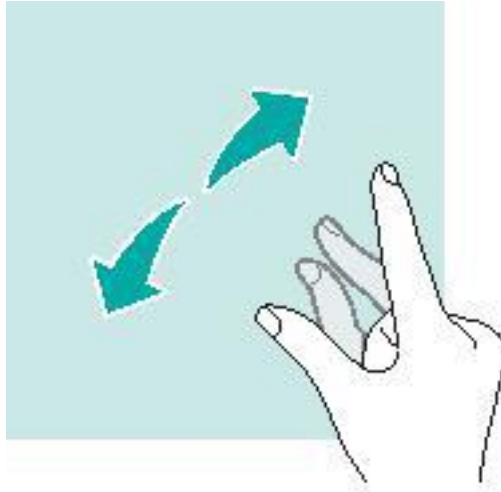


Pinch to zoom out.

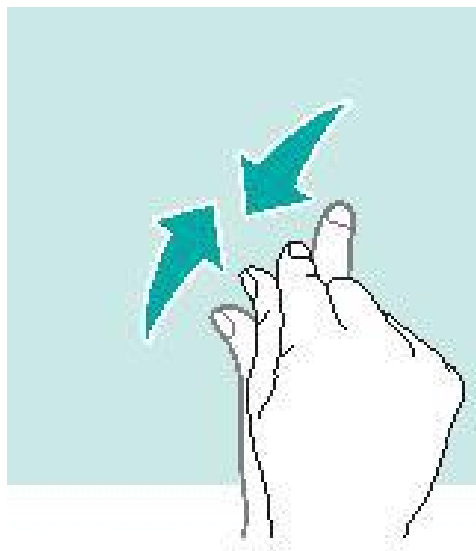 




## Dragging

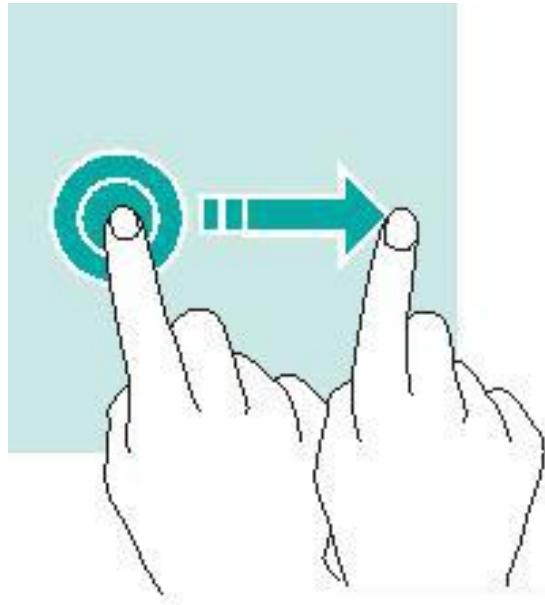 To move an item, tap and hold it and drag it to the target position.



## Using the navigation bar

You can find your navigation bar control at the bottom of your screen.

- To go back to the home screen, tap .
- To open the list of recent apps, tap .
- To go back to the previous screen, tap .

## Locking and unlocking screen

### Locking the screen

- To lock the screen, press the power button.
- Go to **Settings > Display > Screen timeout** to change how

quickly your screen goes to sleep. The screen locks and goes into sleep mode when you don't use your phone for a while. This is to save power and stop accidental phone use.

## Unlocking the screen

To unlock the screen, press the power button and swipe up.

## Using the notification center

 
The notification center is where you can view the latest notifications relating to the operation of your phone.

### Opening the notification center


To open and view the notification center:

**1** Swipe down from the top of the screen to see the notification center.

**2** Swipe down again from the top of the screen to see the shortcuts tab.

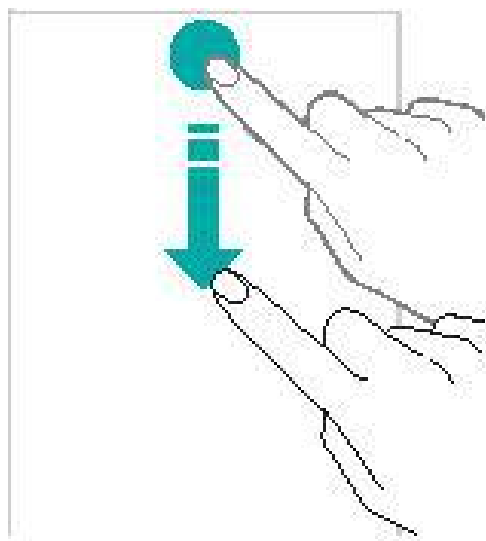

## Closing the notification center

Swipe up or tap  to close the notification center.

## Setting notification options

To set notification options, go to **Settings > Apps & notifications > Notifications**.

## Using SIM and MicroSD cards

### Inserting SIM and MicroSD cards

Always ensure that SIM and MicroSD cards are inserted correctly into your phone.

The following figure shows the correct way to insert SIM and MicroSD cards into your phone.



When inserting your card tray, make sure that the card is level and that the card is aligned correctly.

 


Do not use cut or modified SIM or MicroSD cards with your phone, as these may not be recognized and could damage the card tray.

### **Ejecting SIM and MicroSD cards**

Always make sure that the SIM and MicroSD card are ejected correctly from the phone.

The following figure shows the correct way to eject SIM and MicroSD cards from your phone.

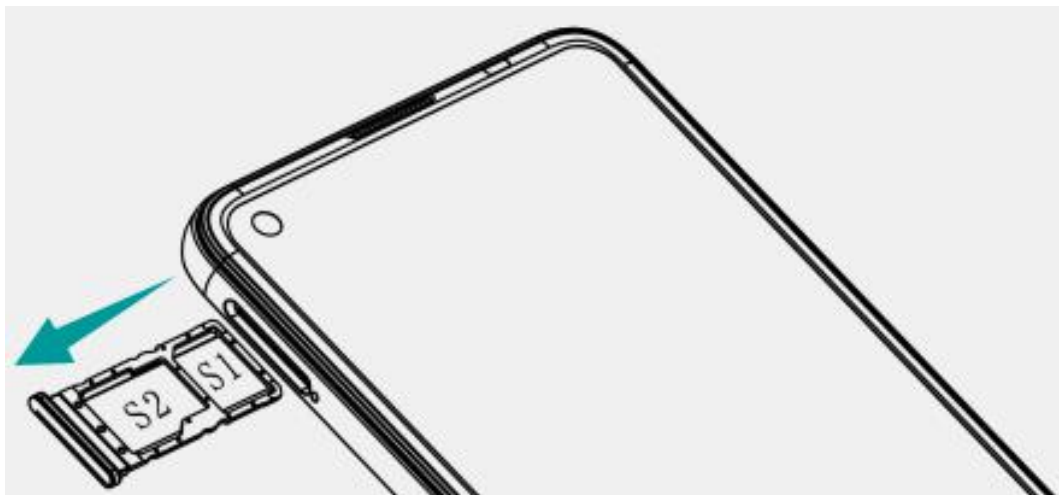

To eject SIM or MicroSD card, insert your SIM eject pin into the small hole next to the card tray.



Be careful not to scratch your phone or hurt yourself when using your SIM eject pin. Store your SIM eject pin out of the reach of children to prevent accidental swallowing or injury.

## Battery charging

Follow instructions in this section to charge your battery safely and preserve battery life.

### Charging your battery

Fully charge the battery before using it for the first time, or when the phone has not been used for a long time, or when the battery is low.

To charge your battery, do the following:

- 1 Connect your USB charging cable to your USB power adapter.

Plug the end of the USB cable into the USB port, and the USB power adapter into a power socket.

- 2 Once your battery is fully charged, disconnect your phone from your USB charging cable.

### Important safety precautions

The following precautions are extremely important and must be followed at all times:



The battery is built into the phone and is not removable.

Do not try to remove the battery by yourself.



Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

To charge your phone safely, it is also important to pay attention to the following points:

- Use only approved chargers, batteries, and cables. Using an unapproved or incompatible power adapter, charger, or battery may damage your phone, shorten its lifespan, or cause a fire, explosion or other hazards.
- Avoid using your phone when it is charging. Do not cover your phone or power adapter.
- Connect your charger properly. Not connecting your charger properly can cause serious damage to your phone. Any damage caused by misuse is not covered by the warranty.
- Your phone can be safely charged at temperatures between 0°C and 40°C. Charging in environment where the temperature is below 0°C or higher than 40°C will harm battery. Performance and shorten battery life. Regular, long-term charging in extreme temperatures will damage your battery.
- Unplug your charger from the electric socket when not charging your phone.

### **Protecting your battery**

For safe and effective charging that also protects your battery, you must also pay attention to the following points:

- If your AC power supply is lower voltage, or you charge from

computer or other non-standard sources, you may need to charge your phone for longer.

- Your phone might not start straight away if the battery is low. Your phone will start normally once it has charged for a short while.
- The time your phone needs to charge may depend on room temperature and your battery level.
- The phone and charger may heat while charging. This is normal and shouldn't affect your phone's lifespan or performance. If your battery becomes much hotter than usual, stop charging your phone and put it in a cool place. If your phone surface is hot, avoid touching your phone for too long.

## Other hardware features

### USB on-the-go (OTG)

Your phone is USB on-the-go (OTG) compatible. This means your phone can host other USB devices, such as mice, or keyboards.

Use a standard OTG data cable when using this function.

## Troubleshooting

This section lists common problems you may have when using your phone. Check to see whether your issue is listed here before contacting the service center.



## **I can't turn my phone on**

If you can't turn your phone on, try the following:

- Press and hold power key for two seconds or longer.
- Check that the battery is fully charged before turning your phone on.
- Press and hold the power button until your phone vibrates.
- Check that your battery is properly connected to your phone, and that the connecting points are clean. If your phone has a built-in battery, contact the service center.

## **My phone keeps turning off automatically**

If your phone keeps turning off automatically, try the following:

- Check your battery power. If the power is low, charge your phone.
- Check softwares or applications to see if they are normal. If not, restart your phone.

## **I can't use an application on my phone**

If you can't use an application on your phone, try the following:

- Check if your phone has sufficient storage. Delete some messages from your phone.
- Check if the application is damaged. Uninstall and reinstall the application. If cannot be fixed, try resetting system.
- Chances are that the application is not compatible. Uninstall the

application and choose a compatible version.

- Check and enable applications management permissions.

## **My phone's standby time is too short**

If your phone's standby time is too short, try the following:

- Chances are that the battery performance decreases. Contact service center to change the battery.
- If you play games or listen to music for a long period of time, shorten the time.
- If the screen is too bright, adjust the brightness of the screen.
- If the phone is used in weak signal environment, the standby time will be short. Please move to strong signal locations.
- Turn off cellular data, GPS, Bluetooth, Wi-Fi switch when not using them.
- Close the application not used.
- Uninstall the applications not used for a long period of time.

## **My phone isn't charging properly**

If your phone isn't charging properly, try the following:

- Ensure that your phone is charging at a normal temperature.
- Plug the charger into a different socket.
- Recharge your phone for about half an hour.
- Chances are that the battery has a problem. If the battery has

been built-in, contact service center.

- Ensure that the charger is not defective. If the charger is defective, replace it.
- If the charger fails to charge, please change or repair it.

## **Touchscreen error when charging**

If there is touchscreen error when charging, try the following:

- If the charging equipment is incompatible with your phone, it may cause some problems. Use charger supplied and stable charging equipment.
- Check whether softwares or applications are normal or not. Restart your phone.

## **I've forgotten my password**

If you forget your password, contact service provider.

## **My PIN is locked**

If you enter wrong PIN three times in a row, contact service provider.

## **I can't use the Internet or make calls**

If you can't use the Internet or make calls, try the following:

- Chances are that signal is too weak. Move to an open area and try

again.

- Chances are that the phone is out of service area. Check if the Internet is available.
- Chances are that airplane mode is on. Turn off airplane mode.
- Check if software is abnormal. If so, restart the phone.
- Check if SIM card has failure. If so, check or change SIM card.
- Ensure that the dialing is right.
- Check if cellular data setting has failure. If so, go to Settings to set up cellular data.
- Check if pre-paid charge has reached its limit. If so, contact service provider.

## **My calls don't connect**

If your calls don't connect, try the following:

- Check if phone number is too long.
- Ensure international roaming service and international call service are enabled. If not, contact service provider.

 


## **Phone doesn't make a sound when it rings**

If your phone doesn't make a sound when it rings, check if silent or vibrate mode is enabled.

# Phone



## Making calls

To make calls:

- 1 Tap .
- 2 Tap  to enter a phone number.
- 3 Tap  to make a call.




## Making calls from contacts

To make calls from contacts:

- 1 Tap .
- 2 Tap  to choose a contact.
- 3 Tap the contact number.

## Making calls from recents



To make calls from call logs:

- 1 Tap .
- 2 Tap  to view all calls. Tap the name or number of the person  
You want to call.
- 3 Tap .

# Contacts



## Importing contacts

To import contacts to your phone:

- 1 Tap  .
- 2 Tap  , then tap **Settings > Import**.
- 3 Select an import option.


## Creating contacts

To create a new contact:

- 1 Tap  .
- 2 Tap  .
- 3 Enter the contact's name, phone number and other contact information, and then tap **Save**.

## Searching for contacts

To search for contacts:




- 1 Tap  .
- 2 Use one of the following search methods:
  - Scroll up or down the contacts list.
  - Tap **Search contacts** at the top of the screen to search for a contact.
- 3 Select a contact. You can now call them, send them a text

message, or edit their contact information.

## Messages


### Sending messages

To send messages:

- 1 Tap  .
- 2 Tap  to create a message.
- 3 Add recipients and enter a message.
- 4 Tap  to send the message.

### Viewing messages

To view messages:

- 1 Tap  .
- 2 Select a contact on the message list.
- 3 View your conversation.

### Searching messages




To search messages

- 1 Tap  .
- 2 Tap  to enter keywords to search messages.

# Camera





## Taking photos

To take photos:

- 1 Tap .
- 2 Swipe to **Capture** on the screen. Spread two fingers apart on the screen to zoom in, and pinch to zoom out.
- 3 Tap  to take a photo. Your picture will be automatically saved to .

## Taking panorama




To capture a panorama shot:

- 1 Tap .
- 2 Swipe to **Panorama** on the screen. Hold your phone steady and then tap  to start shooting. Slowly move your phone in the direction indicated, holding the phone steady and ensuring the arrow stays levels with the center line.
- 3 Tap  when you are finished. Your picture will be automatically saved to .



## Recording videos

To record videos:

- 1 Tap  .
- 2 Swipe to **Video** on the screen. Tap  to start recording the video. Spread two fingers apart on the screen to zoom in, and pinch to zoom out.
- 3 Tap  to finish recording.

## Photos



### Viewing photos or videos

To view photos or videos:

- 1 Tap  .
- 2 Select a photo or a video.

### Deleting photos or videos

To delete photos or videos:


- 1 Tap  .
- 2 Tap and hold the photo or video that you want to delete, tap  .

### Sharing photos or videos

To share photos or videos:

- 1 Tap  .

2 Select the photo or video that you want to share.

3 Tap  .Select your sharing method.

## Chrome

### Using Chrome

Connect the web to search for information and bookmark your favorite web pages to access them conveniently.


1 Tap  .

2 Enter the address field in the search bar. You will have access to web pages; moreover, bookmarks, multiple window switching and other functions are supported.


## Clock

This app includes the following functions:

### Alarms

Tap  . From the **Alarms** tab, you can do the following steps to set your alarms:


#### Adding an alarm

Tap  and set the alarm time, repeat times, alarm sound, and others.

## Enabling or disabling an alarm

Turn on or turn off the switch next to an alarm.

## Configuring the alarm settings


Tap  > **Settings** to configure the alarms.

## Deleting an alarm


Tap and hold a alarm, select the alarm that you want to delete.

Then tap  .

## Clock

Tap . From the **Clock** tab, you can do the following steps to set your clock:

### Adding a city

Tap  . Enter a city name in the search bar or select a city from the list.

### Deleting a city

Tap and hold a city, select the city that you want to delete. Then tap



## Timer


**1** Tap .

**2** Tap **Timer**.

**3** Set the countdown time and tap **Start** to start the timer. Tap

**Pause** to pause the countdown.





## Stopwatch

- 1 Tap .
- 2 Go to the **Stopwatch** tab.
- 3 Tap **Start** to start the stopwatch. Tap **Count** to count laps. Tap **Pause** to pause the stopwatch. Tap **Reset** to reset the stopwatch.




## Recorder

The device supports long periods of recording. Make sure your device has available storage before recording.



### Recorder

- 1 Tap .
- 2 Tap  to start recording.
- 3 Tap  to stop recording. Tap , input name, then tap **Save** to save the recording file in the phone. Tap **Delete**, the recording file is deleted.

### Playing a recording

- 1 Tap .
- 2 Tap to  find your recording.
- 3 Tap  to play the recording.


## Managing recordings

- 1 Tap .
- 2 Tap .
- 3 Tap and hold a recording. You can rename, share or delete the recording file.

## Calculator

Use calculator to do simple or complicated calculations.

### Making calculation


Tap , you can do simple calculations:

- Tap the number and calculate sign to do simple calculations.
- Go to advanced calculator tab by swiping your screen left.

## FM Radio

### Listening to radio

To use the FM Radio, first you need to connect your headphones.

 
- 1 Tap  to activate.
- 2 Select the frequency following the app instructions and set the volume to a comfortable level.

# Security and Privacy

## Fingerprint unlock

Fingerprint unlock helps you unlock your phone faster and can improve security.

Fingerprint sensor is on the right of your phone. See the following figure.

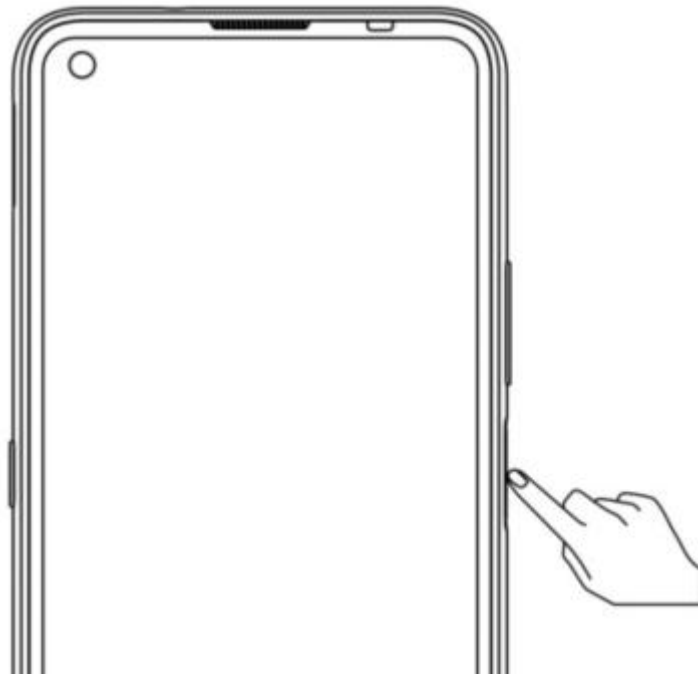

### Adding a fingerprint

To add fingerprints:


- 1 Tap **Settings > Security > Fingerprint**.
- 2 To set a screen lock password, PIN or pattern along with your fingerprint, follow onscreen instructions.
- 3 To set your fingerprint, follow onscreen instructions and put your fingertip on the fingerprint sensor. Press the sensor

lightly until your phone vibrates. Repeat using different parts of your fingertip.

- 4 Tap **Done**. You can now tap the sensor with your fingertip to unlock the screen.

### Deleting fingerprint

To delete fingerprints:

- 1 Tap **Settings > Security > Fingerprint**.
- 2 Enter your password, PIN or pattern.
- 3 Tap  icon beside the fingerprint you want to delete.

### Adding another fingerprint

To add another fingerprint:

- 1 Tap **Settings > Security > Fingerprint**.
- 2 Enter your password, PIN or pattern.
- 3 Tap **Add fingerprint**.

## Face unlock

Face unlock can be used to unlock your phone.

### Adding a face

To add your face:

- 1 Tap **Settings > Security > Face unlock**.
- 2 To set a screen lock password, PIN or pattern along with your face, follow the onscreen instructions.

- 3 Read the instructions carefully.
- 4 Register your face. You can now use your face to unlock the screen.

### Deleting a face

To delete your face:

- 1 Tap **Settings > Security > Face unlock**.
- 2 Enter your password, PIN or pattern.
- 3 Tap **DELETE FACE DATA**, and then tap **DELETE**.

## Safety

This section contains information on the secure and safe operation of your phone.

### Safety precautions

For your safety and that of others, ensure you read, understand, and follow all of the information in this section.



Failure to obey the following safety information could result in fire, electric shock, injuries, or damage to your device or other property. Read all the safety information below before using your phone.

- Using unapproved or incompatible power adapters, chargers, or batteries may damage your phone, shorten its lifespan, or cause a



fire, explosion, or other hazards.

- Your phone's ideal operating temperature is 0°C to 35°C. Your phone's ideal storage temperature is -20°C to 45°C. Your phone's ideal charging temperature is 0°C to 40°C
- Pacemaker manufacturers recommend keeping a minimum distance of 15 cm between phone and pacemaker to prevent potential interference with the pacemaker. If you use a pacemaker, hold your phone on the side opposite to your pacemaker and do not carry your phone in your front pocket.
- Keep your phone and battery away from excessive heat and direct sunlight. Do not place your phone or battery on or in heating devices, such as microwave ovens, stoves, or radiators.
- Do not use your phone in a moist environment, such as bathroom. Prevent your phone from being soaked or washed in liquid.
- Follow local laws and regulations while using your phone. To reduce the risk of accidents, do not use your wireless phone while driving.
- While flying in an aircraft or immediately before boarding, only use your phone according to instructions provided. Use of a wireless phone in an aircraft may disrupt wireless networks, can cause danger to aircraft operation, and may be illegal.
- To prevent damage to your phone's parts or internal circuits, do

not use it in dusty, smoky, damp, or dirty environments or near magnetic fields.

- When charging your phone, plug the adapter into a socket which is near your phone and which is easy to reach.
- When not in use, unplug the charger from outlets and from the phone.
- Do not use, store or transport your phone in areas where flammables or explosives are stored (in a gas station, oil depot, or chemical plant, for example). Using your phone in these environments increases the risk of explosion or fire.
- Dispose of your phone, battery, and accessories according to local regulations. Do not throw phones or batteries away in your household trash bin or other non-recycling trash bin. Improper battery use or disposal may lead to fire, explosion, or other hazards.
- Consult your doctor and the device manufacturer to determine if operation of your phone may interfere with the operation of your medical device.
- Obey any rules or regulations set by hospitals and health care facilities.
- Do not crash, throw, puncture, drop, squeeze, or bend your phone.

- Do not try to take apart your phone or its accessories. Only authorized personnel are allowed to service or repair the phone.
- Use a dry soft cloth to clean your phone. Do not use water, alcohol, detergent or any chemicals.
- Keep your phone and charger out of the reach of children. Do not let children use the phone or charger without supervision.
- Phone accessories and phone accessory parts, especially small parts, must also be kept away from children to prevent choking.
- Power off your phone in any area where there is a risk of explosions. Do not charge your phone or use your phone in areas where there are chemicals or particles in the air. Obey all signs and instructions.
- Strictly obey relevant instructions in this guide while using USB cable. Failure to follow instructions may result in your phone or PC being damaged.
- Only use USB version 2.0. USB equipment with your phone.

### **Safe cleaning and maintenance**

To ensure your safety and that of others, you must pay attention to the following safety tips when cleaning and maintaining your phone:

- Turn off your phone before cleaning and maintenance. Your charger should be unplugged from socket. Your phone and

charger should be disconnected to prevent electric shocks or short circuiting.

- Do not wipe your phone or charger with benzyl alcohol, chemical substances, chemical agents or abrasive cleaning agents. This is to avoid damaging phone parts or the functioning of your phone. You may clean your phone with a slightly damp anti-static cloth.
- Do not scrape or alter the phone case, or the paint on the phone, as it may cause allergic reaction. If such reaction occurs, stop using your phone immediately and seek medical help.
- Wipe dust off power plug and keep it dry to avoid risk of fire.
- If your phone or accessories do not work properly, contact your local vendor.
- Do not disassemble device or its accessories by yourself.

## **Safe battery charging**

Follow the information on safe battery charging in the Battery charging, Safety precautions, and Protecting your battery sections of this user manual.

## Protecting your hearing



- To prevent possible hearing damage, do not listen at high volume levels for long periods.
- Fully understand user manual before use.
- Ensure your player at low volume levels or power off before you leaving.

## Protecting the environment



- Obey the local regulations on device packaging, battery and used device disposal and bring them to the collection point for proper recycling.
- Take your used, unwanted lithium batteries to a designated place. Do not dispose of used devices or batteries in a household rubbish bin.
- Proper collection and recycling of your device help ensure electrical and electronic equipment waste is recycled in a manner that conserves valuable materials and protects human health and the environment.

## Reducing your radiation exposure

You can reduce your exposure to radiation from your phone by doing the following:

- Use your phone in areas with good reception. Be especially careful in underground car parks and on train and car journeys.
- Use your phone when all the signal strength bars are displayed.
- Use a hands-free kit.
- During calls, keep your phone away from your abdomen (for pregnant women) and your lower abdomen (for teenagers).

## Other important information

### **Important data usage and billing information**

Your phone regularly connects to mail and Internet servers to improve your experience. This creates data exchanges that may be charged along with your existing package, or which may use prepaid credit.

To avoid billing problems related to Internet services, it is strongly recommended to use a suitable package or plan which includes unlimited Internet and emails and to avoid changing the default settings.

You can connect to Wi-Fi for faster, more streamlined service. If you can, use Wi-Fi for streaming, and for downloading games, videos and films.

## Disclaimer

Unofficial headsets, chargers, and other accessories are not compatible with your phone. Using unofficial accessories can affect performance. The factory is in no way responsible for any damage that occurs as a result of using unofficial accessories.

This user manual is intended to provide a general overview. Actual specifications and functions of your phone may be different from those contained in the user manual.

Your phone was fully tested after production. If there are any damages or defects due to manufacturing, follow the terms and conditions in the warranty card.

If there are issues with your phones related to operator features and services, follow the operator terms and conditions.

Note that your phone has specification and function limitations.

These limitations cannot be considered manufacturer damage or as damage or defect of any kind.

Only use your phone for the purposes or functions for which it was designed.

## ONLY FOR MEXICO

“For use in Mexico, the operation of this product is subject to the following two conditions: (1) this equipment or device may not cause detrimental interference and (2) this equipment or device

must accept any interference, including interference that may cause unwanted operation.”

## **FCC Compliance**

This phone complies with section 15 of FCC Regulations. Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.



- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End user must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be colocated or operating in conjunction with any other antenna or transmitter.

The portable device is designed to meet the requirements for exposure to radio waves established by the Federal Communications Commission(USA) .

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC - The highest SAR value reported to the FCC for this type of devices is 1.06 W/kg when used over the ear, 0.98 W/kg when used at 10 mm away from the body and 0.98 W/kg when used at a wireless access point (HOTSPOT) 10mm.

FCC ID:2ADOBHLTE233E

**Importador:** Hisense México S. de R.L. de C.V. Blvd. Miguel de Cervantes Saavedra, No. 301 Torre Norte, Piso 2, Col. Ampliación Granada, Municipio o Demarcación Territorial Miguel Hidalgo, C.P. 11520, Ciudad de México.

R.F.C. HME110512IY3 **Tel: +52 55 55313515**

MARCA: HISENSE

MODEL: HLTE233E

ELECTRICAL CHARACTERISTICS

ADAPTADOR:

BRAND: HISENSE

MODEL: TPA—46050200VU

INPUT: 100-240V~50/60Hz,0.3A

OUTPUT: 5.0 V  $\approx$  2 000mA


RECHARGEABLE BATTERY:

BRAND: HISENSE

MODEL: LPN385500

MADE IN CHINA

## Specification

<b>Brand</b>	Hisense
<b>Market</b>	Hisense H50 Lite
<b>Model</b>	HLTE233E
<b>Dimensiones</b>	165.75×76.55×8.95mm
<b>OS</b>	Android 11.0
<b>CPU</b>	UMS512(T610), Octa Core, 2*A75 1.8G+6*A55 1.6GHz
<b>Internal Memory</b>	4GB RAM + 64GB ROM
<b>Camera</b>	Rear:48MP+2M+5MP+2MP Front:16MP
<b>Size</b>	6.55 inch
<b>Resolution</b>	HD+ (1600×720)
<b>Color</b>	16.7M
<b>3G</b>	3G: B1/2/4/5
<b>4G</b>	4G:B1/2/4/5/7/12/26/28
<b>2G</b>	2G:Quad band
<b>No surport band</b>	Band 10/38/66
<b>Data Speed</b>	Download:150 Mbps Upload: 50 Mbps
<b>WLAN</b>	802.11a/b/g/n/ac
<b>Bluetooth</b>	BT v5.0
<b>GPS</b>	GPS/Galileo/GLONASS/Beidou(B1C)
<b>FM</b>	Yes
<b>Interface</b>	Micro USB 2.0
<b>Battery</b>	3.8 V  5 100 mAh