
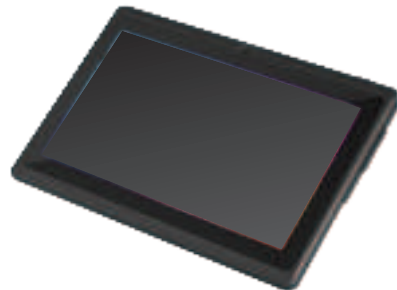 
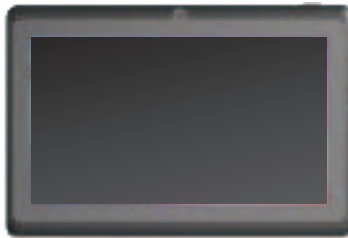 

 


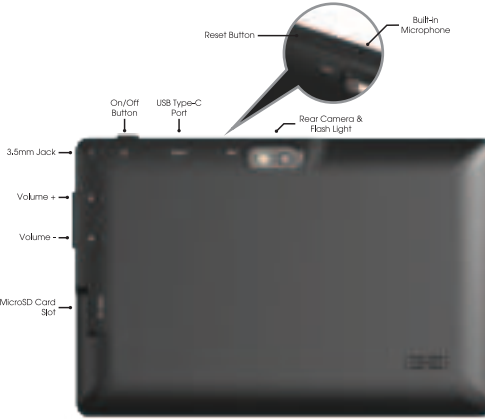 
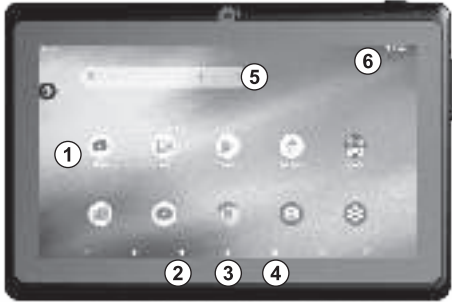 


Size: 371(W) x 105(H)mm

FRONT SIDE

<div><h1>7in. Tablet</h1><p>with Android™</p><h2>INSTRUCTION MANUAL</h2><p>Thank you for purchasing the 7in. Tablet. This manual provides more information about the product, please read the instructions before using.</p></div>	<div><h3>Product Overview</h3><p>7in. Tablet x 1</p><p>USB Type-C Charging Cable x 1</p><p>Instruction Manual x 1</p><h3>Package Contents</h3><p>1(One) Tablet 7.2in. x 4.8in. x 0.47in. (18.3cm x 12.2cm x 1.2cm) 1(One) USB Type-C Charging Cable 39.4in. (100cm) 1(One) Instruction Manual</p></div>	<div><h3>Specifications</h3><table><tr><td>Operation System</td><td>Google Android 13</td></tr><tr><td>CPU</td><td>A133, 64 bits Quad-core 1.6GHz</td></tr><tr><td>Screen Size</td><td>7inch, 1024 x 600 Pixels, IPS G+P Screen, 5 Points Touch Screen</td></tr><tr><td>RAM</td><td>3GB</td></tr><tr><td>ROM</td><td>32GB</td></tr><tr><td>Storage Extend</td><td>Support up to 256GB MicroSD card</td></tr><tr><td>WiFi</td><td>2.4GHz</td></tr><tr><td>Bluetooth</td><td>Version 5.2</td></tr><tr><td>OTG</td><td>Support</td></tr><tr><td>Gravity Sensor</td><td>Support</td></tr><tr><td>Front Camera</td><td>2.0MP</td></tr><tr><td>Rear Camera</td><td>2.0MP</td></tr><tr><td>Interface and Button</td><td>1*USB Type-C Port, 1*MicroSD Card Slot, 1*Built-in Microphone 1*3.5mm Jack, 1*On/Off Button, 1*Volume +/-, 1*Reset Button</td></tr><tr><td>Picture</td><td>JPEG/BMP/GIF/PNG</td></tr><tr><td>Video</td><td>MPEG4-SP, H.264/AVC, H.263, 3GP, 3G2, MP4, MKV, AVI</td></tr><tr><td>Audio</td><td>MP3, MP2, AMR, AWB, APE, M4A, MIDI, OGG</td></tr><tr><td>Languages</td><td>Multi-language</td></tr><tr><td>Speaker</td><td>1 speaker</td></tr><tr><td>Microphone</td><td>Support</td></tr><tr><td>Battery Capacity</td><td>3500mAh 3.7V</td></tr><tr><td>USB Type-C Charging Cable Included</td><td></td></tr><tr><td>USB Type-C Charging Cable Rating</td><td>5V/2A Max.</td></tr></table><h3>Charging the battery</h3><p>⚠ For your safety, please always use appropriate 5V output charger/Adapter to charge the product. <b>DO NOT USE</b> Quick Charging USB Adapter to charge the product, as it might damage the product.</p><ol style="list-style-type: none"><li>Use the USB Type-C charging cable provided with the packaging.</li><li>Connect the USB plug to a USB port on a wall adapter, then connect the USB Type-C plug to the USB Type-C charging port on the device to begin charging.</li></ol><p><b>NOTE:</b></p><ul style="list-style-type: none"><li>You must select a qualified charger from a regular manufacturer.</li><li>You must charge the device if it has been not used for more than 6 months.</li></ul><div><p>⚠ <b>CAUTION:</b> The USB Type-C charging cable included with this item is intended for use with this product. Only use the included USB Type-C charging cable to charge this product.</p></div></div>	Operation System	Google Android 13	CPU	A133, 64 bits Quad-core 1.6GHz	Screen Size	7inch, 1024 x 600 Pixels, IPS G+P Screen, 5 Points Touch Screen	RAM	3GB	ROM	32GB	Storage Extend	Support up to 256GB MicroSD card	WiFi	2.4GHz	Bluetooth	Version 5.2	OTG	Support	Gravity Sensor	Support	Front Camera	2.0MP	Rear Camera	2.0MP	Interface and Button	1*USB Type-C Port, 1*MicroSD Card Slot, 1*Built-in Microphone 1*3.5mm Jack, 1*On/Off Button, 1*Volume +/-, 1*Reset Button	Picture	JPEG/BMP/GIF/PNG	Video	MPEG4-SP, H.264/AVC, H.263, 3GP, 3G2, MP4, MKV, AVI	Audio	MP3, MP2, AMR, AWB, APE, M4A, MIDI, OGG	Languages	Multi-language	Speaker	1 speaker	Microphone	Support	Battery Capacity	3500mAh 3.7V	USB Type-C Charging Cable Included		USB Type-C Charging Cable Rating	5V/2A Max.	<div><h3>Diagrams</h3></div>	<div><h3>Power On/Off</h3><p><b>Power On</b> Press and hold the On/Off Button for 3 seconds.</p><p><b>Power Off</b> Press and hold the On/Off Button for 3 seconds and select power off on pop up menu.</p><h3>Expand The Storage</h3><p>Inserting the microSD card to the microSD card slot Your tablet only supports microSD card up to 256GB</p><h3>Getting Started</h3><p>Before you switch on for the first time, ensure that: Your tablet is fully charged You have a good WiFi connection (ideally your usual WiFi zone) You have your WiFi name and password to hand.</p><h3>Startup Wizard</h3><p>The first time you start up your device, the startup wizard will help you set up your device: Language Date &amp; time WiFi connection Location service options Third-party applications</p><h3>Connecting to a WiFi network</h3><p>Make sure that you are in a WiFi zone. Touch 'Settings' to open the WiFi settings menu. If the WiFi is off, slide the WiFi switch to the 'ON' position. Once the WiFi is ON, the device will scan for WiFi networks in range. Touch the name of network you want to connect to, Private networks are shown with a lock icon and will require you to enter your password.</p><p>To get the correct WiFi password (or settings) for the network, contact the WiFi network provider. If your WiFi is on and you are in range of a network that you previously connected to, your device will automatically attempt to connect to it.</p></div>
Operation System	Google Android 13																																															
CPU	A133, 64 bits Quad-core 1.6GHz																																															
Screen Size	7inch, 1024 x 600 Pixels, IPS G+P Screen, 5 Points Touch Screen																																															
RAM	3GB																																															
ROM	32GB																																															
Storage Extend	Support up to 256GB MicroSD card																																															
WiFi	2.4GHz																																															
Bluetooth	Version 5.2																																															
OTG	Support																																															
Gravity Sensor	Support																																															
Front Camera	2.0MP																																															
Rear Camera	2.0MP																																															
Interface and Button	1*USB Type-C Port, 1*MicroSD Card Slot, 1*Built-in Microphone 1*3.5mm Jack, 1*On/Off Button, 1*Volume +/-, 1*Reset Button																																															
Picture	JPEG/BMP/GIF/PNG																																															
Video	MPEG4-SP, H.264/AVC, H.263, 3GP, 3G2, MP4, MKV, AVI																																															
Audio	MP3, MP2, AMR, AWB, APE, M4A, MIDI, OGG																																															
Languages	Multi-language																																															
Speaker	1 speaker																																															
Microphone	Support																																															
Battery Capacity	3500mAh 3.7V																																															
USB Type-C Charging Cable Included																																																
USB Type-C Charging Cable Rating	5V/2A Max.																																															

BACK SIDE

<div><h3>The Android™ Interface</h3><ol style="list-style-type: none"><li><b>Android™ apps shortcuts</b> Opens an application.</li><li><b>Back button</b> Goes back through the previous actions in an application (in reverse order) or out of any open application (app) if opening was the last action. ( If the button is not showed, swipe from the lower edge to the top edge.)</li><li><b>Home button</b> akes you to the home screen (where you can pin shortcuts to your favourite apps).</li><li><b>Recent apps button</b> Takes you to a screen that shows thumbnail images of the apps you have open, you can then touch one to reopen it.</li><li><b>Google™ Search widget: shortcut for web search</b> Touch 'Google' for text search or touch the microphone icon for voice search.</li><li><b>The status bar</b> Displays notifications (emails, apps updates...). Swipe down to display quick settings.</li></ol></div>	<div><h3>Getting familiar with Android™</h3><p><b>The quick settings</b> Touch the battery symbol and date at the top of the screen and pull down to open the Quick settings menu —Settings: To access all your settings. —WiFi: To turn on/off your WiFi connection. —Auto-rotate screen: To activate/deactivate automatic screen orientation as you turn your tablet. —Airplane mode: To turn on/off all the wireless connections. —Brightness: To adjust the screen brightness.</p><p><b>The recent apps</b> Opens a list of thumbnail images of apps you've worked with recently: —To open an app, touch it. —To close an app, swipe it left or right, or long press until 'Remove from list' appears. —To show app details, long press until 'app info' appears.</p><p><b>Moving a home screen icon</b> Touch and hold your finger onto it until the positioning gridlines appear, then slide it to the desired location, and release your finger.</p><p><b>Removing a home screen icon</b> Touch and hold it, slide your finger towards the top of the screen and drop it over the 'Remove' icon.</p><p><b>Uninstalling an application</b> You can only uninstall downloaded third-party applications, applications built into the firmware such as some Google apps (e.g. dock, calculator, settings etc.) cannot be deleted but some may be disabled in 'Settings'. Apps downloaded during the initial set up or afterwards may be deleted to free up memory space. From the 'All apps' screens, touch and hold the app icon, slide your finger towards the top of the screen and drop it over 'Uninstall' bin. To check which applications are downloaded or built-in, go to 'Settings' then 'Apps'. You can also uninstall apps in 'Settings' and move them from internal memory to SD card etc..</p></div>	<div><h3>Getting familiar with Android™</h3><p><b>Creating application folders</b> To organise your apps, drop one app icon over another on the home screen and the two icons will create a folder. You can add many more apps in it. To remove one app from a folder, touch, hold, and drag it to 'Remove' (appearing on the top of the screen).</p><p><b>Widgets</b> Hold your finger on the home screen at an empty location, then touch 'Widgets' and choose from the list.</p><p><b>Changing your wallpaper</b> Hold your finger on the home screen at an empty location, then touch 'Wallpapers' and choose from the list.</p><p><b>Locking the touchscreen</b> From the quick settings dashboard in the status bar, touch 'Settings'. In 'Settings', scroll down and touch 'Security', Touch 'Screen lock'. Touch the type of lock you would like to use. After you set a lock, a lock screen is displayed whenever your screen wakes up, requesting the pattern, pin or other specified key.</p><p><b>Downloading new apps</b> To download new apps for your tablet touch the Google Play Store icon. There you will find over 1 million apps including many which are free. Even if you only use free apps you will still need to create a Google account but you don't need to enter your credit card details to do this.</p><p><b>Transferring files to your tablet</b> To transfer files to your tablet, you can follow these steps: Connect your tablet to your computer using a USB cable. On your tablet, swipe down from the top of the screen to access the notification panel. Tap on the USB connection notification and select 'File Transfer' or "MTP" mode. On your computer, open File Explorer (Windows) or Finder (Mac). Locate the files you want to transfer on your computer. Drag and drop or copy the files from your computer to the appropriate folder on your tablet. Once the transfer is complete, safely eject your tablet from the computer. On your tablet, disconnect the USB cable.</p><p>Alternatively, you can also transfer files wirelessly using methods such as Bluetooth, cloud storage services, or file-sharing apps. Ensure that both your tablet and the device you are transferring files from are connected to the same Wi-Fi network or paired via Bluetooth if using those methods.</p></div>	<div><h3>Troubleshooting</h3><p><b>If your device is frozen:</b> Press the ON/OFF button for at least 10 seconds to turn it off. Or, press the reset button with a paper clip to restart the tablet.</p><p><b>If your device doesn't turn on:</b> Charge your device then switch on normally. If this does not work, press the ON/OFF button for at least 10 seconds</p><p><b>If you want to extend the life of your battery:</b> Decrease the screen brightness and turn off the wireless connections if not in use.</p><p><b>If your device is functioning too slowly:</b> Close all apps which are not currently being used.</p><p><b>If your WiFi reception is poor:</b> Make sure you are not far from the WiFi hotspot. Update the firmware of the device. Reset and redefine your connection parameters. Contact your WiFi connection provider.</p><h3>IMPORTANT: BATTERY INFORMATION</h3><p>⚠ Safety instructions for the lithium battery and charging the product</p><p>-The input voltage to the product is 5V 2A. -In order to charge the product in safe manner and reliable conditions, please only adopt certified appropriate charger/ adapter for charging the product. -Only charge the product at ambient temperatures between 10°C/ 50°F and 40°C/104°F. - Do not heat above 70°C/158°F, eg. Do not expose to sunlight or throw into fire. -Switch off the product after use. -Please note that we won't take any responsibility for any wrong operation (eg. Voltage higher than 5V) as this may result in severe injury or loss of property, and we cannot control the operating process during the time the user using this product. -In extreme cases, abuse or misuse of Lithium battery pack can lead to explosion, heat generation, fire development or smoke development.</p></div>	<div><h3>FCC Statement</h3><p>This device complies with the part 15 of the FCC rules. Operation is subject to the following two conditions:(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.</p><p>NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with instructions may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on. The user is encouraged to try to correct the interference by one or more of the following measures:</p><ul style="list-style-type: none"><li>• Reorient or relocate the receiving antenna.</li><li>• Increase the separation between the equipment and receiver.</li><li>• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.</li><li>• Consult the dealer or experienced radio/ TV technician for help.</li></ul><p>RF warning statement: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.</p><p>Android™ is a trademarks of Google LLC.</p><p>The Android robot is reproduced or modified from work created and shared by Google and used according to terms described in the Creative Commons 3.0 Attribution License. Other marks are the property of their respective owners.</p><p>The Bluetooth® word mark and Logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by 1616 Holdings, Inc. is under license. Other trademarks and trade names are those of their respective owners.</p><p>Item# TL-0001 Distributed by 1616 Holdings, Inc. 701 Market Street, Suite 200 Philadelphia, PA 19106 Made in China</p></div>
---	---	--	--	---