

 
“Phone (Phone)” SCREEN

Call or send a text message to a registered favorite

P.84,92

Call or send a text message to a recent contact

P.84,92

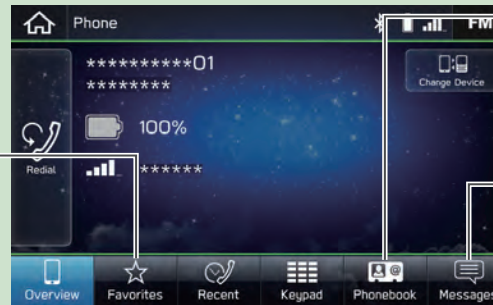

Call or send a text message to a contact in the phonebook on the Bluetooth connected phone

P.85,92

Check or reply to messages/place calls from received message list

 
P.91,93

Directly input a number to place a call

P.85


- Operation Flow: Pairing the System with a Bluetooth Phone/Device -

» Display the “Phone (Phone)” screen.

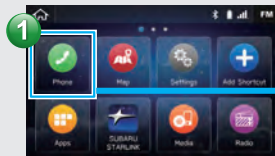

 Prepare the Bluetooth phone/device to be paired.

 
» Operate the Bluetooth phone/device.



Turn the Bluetooth phone/device Bluetooth function ON and select “Subaru BT”. Hold NFC* compatible devices near the audio system.

*: 7-inch with Navi system/7-inch system only

 » Register the Bluetooth phone/device.



If unable to pair, check whether your Bluetooth phone/device is compatible with the system.

- Operation Flow: Placing Calls/Sending Messages from the Phonebook -

» Select call recipient from phonebook.



If unable to select the button, the setting for downloading the phonebook for the Bluetooth phone may be OFF. P.60

 
» Select number for making call/sending message.




Place call

Send message


» Select message.

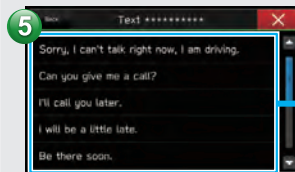

» Send message.

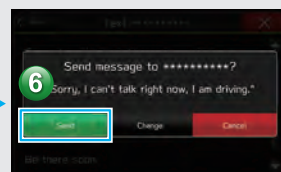 



» In-call screen is displayed.

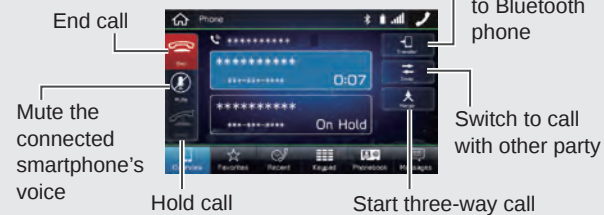 

In-call screen display and operation may differ, or may not be possible depending on the Bluetooth phone used.

BASIC FUNCTION

  “Map (Map)” SCREEN (7-inch with Navi system only)

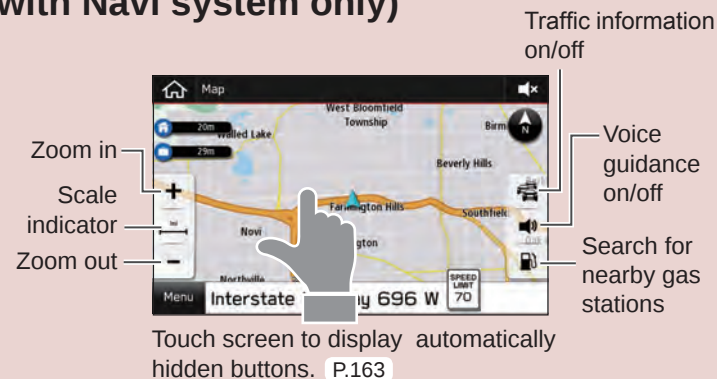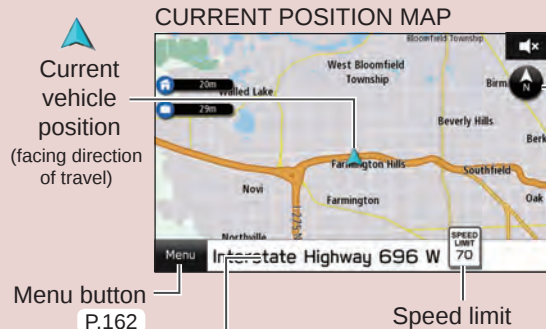

Current street
Touch the current street name to display details of the current location, allowing that location to be registered.



The orientation of the map can be changed between 2D north-up, 2D heading-up and 3D. P.165



2D North-up screen



2D Heading-up screen



3D screen

ROUTE GUIDANCE SCREEN



Distance to the next turn and an arrow indicating the turning direction

Remaining time/remaining distance/estimated arrival time

Destination search P.172

Route guidance P.180

 
- Operation Flow: Route Guidance -

» Display the destination search menu.



Destinations can also be set directly from the Map screen. **P.173**

» Search for your destination.

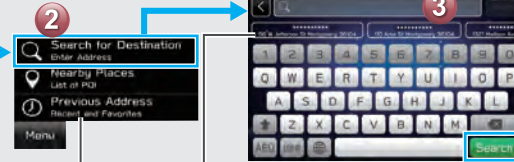

Start a search with a variety of words such as addresses, facility names, or latitude/longitude, etc.

 
Predicted search results will automatically appear as you type.

» Select your destination.



Destinations matching the search words are displayed in a list.

» Select the route.

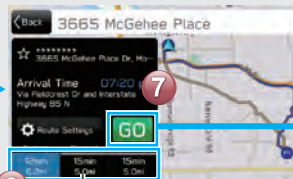

A search is performed and results displayed for the fastest, shortest, and most economic routes. **P.178**

» Route guidance starts.



The travel route is displayed, and voice guidance starts.



JUNCTION SCREEN

The screen display automatically changes to display travel lanes at expressway junctions, etc. **P.181**

RETURNING HOME

If you register an address as Home, it can be quickly set as a destination.

Register an address as Home **P.31**

Setting Home as the destination **P.172**

BASIC FUNCTION

"Radio (Radio)" SCREEN



PAUSE AND PLAYBACK LIVE RADIO



Previous Pause/play Next Current program

Radio programs can be temporarily saved and played back later. **P.128**

- Operation Flow: Presetting a Radio Station -

» Select the radio band.



1

A valid subscription to SiriusXM® Satellite Radio is required to receive satellite radio service.

» Select the radio station.



2

 
Scan

OR

3

Select to seek for a station/channel.

» Register the radio station.

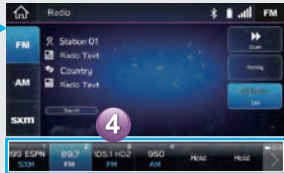


4

Mix preset function
Multiple stations can be registered as presets. (AM, FM or SiriusXM® Satellite Radio) **P.125,134**

Select and hold one of the screen buttons.

 “Media (Media)” SCREEN

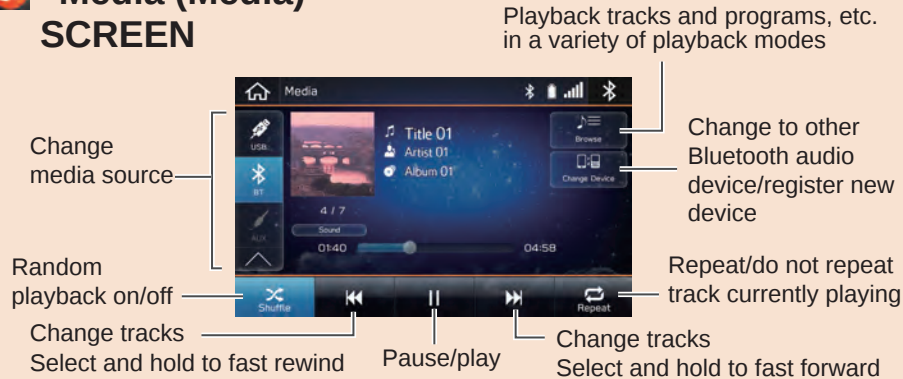

SUPPORTED MEDIA

CD P.155

USB/iPod P.158

 
Bluetooth audio P.53

1


Quick Guide

- Operation Flow: Using Playback Modes -

» Display the playback mode list.

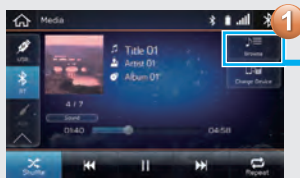


» Select the playback mode.

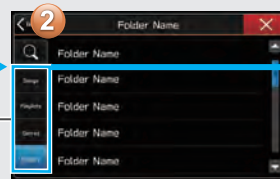 

Depending on the audio source, several
items from these categories are displayed
in a list.

 » Play a track.

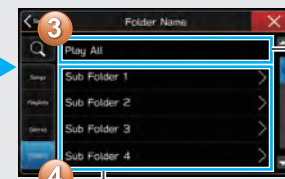


Play all tracks from
the selected
category.

Play the selected track.

“Apps (Apps)” SCREEN

 List of usable applications

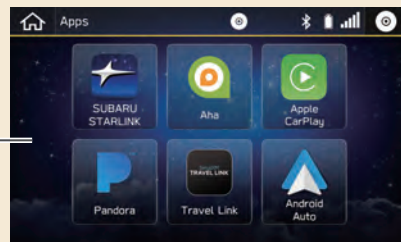


ABOUT USING APPLICATIONS

In order to use an application on this system, the corresponding application must be installed on your smartphone. **P.96**

Apple CarPlay does not require an application to be installed.



 Pandora*

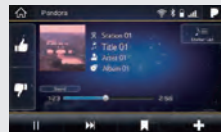


Pandora is free personalized radio that offers effortless and endless music enjoyment and discovery. **P.108**

*: Pandora is only available in certain countries. Please visit pandora.com/legal for more information.



 
aha™

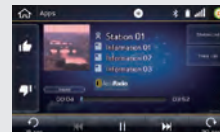

aha™ is a cloud-based application that connects to the system and gives you access to your favorite web content safely and easily. **P.104**



 
SUBARU STARLINK

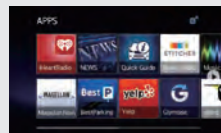

The SUBARU STARLINK function allows the system to link with a smartphone. **P.99**



 Apple CarPlay

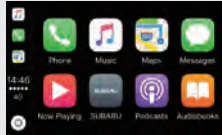


CarPlay can be used to view iPhone maps, play music, and place calls by connecting your iPhone to the system. Supported applications can also be run.

P.111



 Android Auto

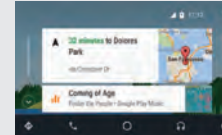


Android Auto can be used to view Android maps, play music, and place calls by connecting your Android device to the system. Supported applications can also be run. P.113




SiriusXM Travel Link

 
SiriusXM Travel Link is a service provided by SiriusXM® Satellite Radio, and can be used to view information on fuel information, sports, stocks, and weather.

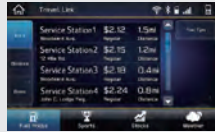


Fuel information

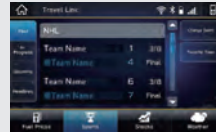 

Sports

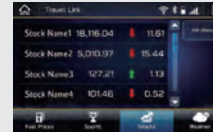 

Stocks

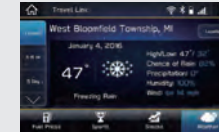 

Weather

P.115

7-inch with Navi system: Weather information can be viewed by linking with the navigation function.



Weather information

 
Current weather information for your destination can be viewed at the route calculation screen. P.178



Weather information broadcast by weather stations en route to your destination can be viewed during route guidance. P.186


SiriusXM Travel Link subscription is required.

“Settings (Settings)” SCREEN

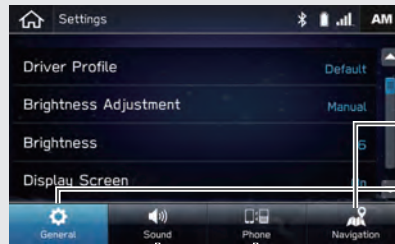


Phone

 P.55



Sound

 
P.71

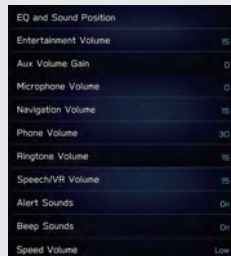

SCROLL


General

 P.62

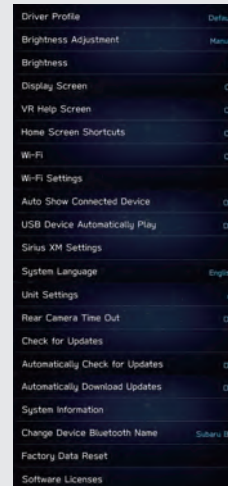

SCROLL

 Navigation* P.187

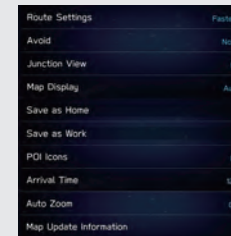

SCROLL

 
 
*: 7-inch with Navi system only

- Operation Flow: Create a driver profile -


CREATE A DRIVER PROFILE

Create a driver profile and register your cellular phone, address, etc. You can store and call registered information at any time.


» Add a new profile.

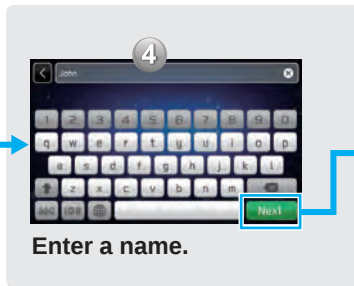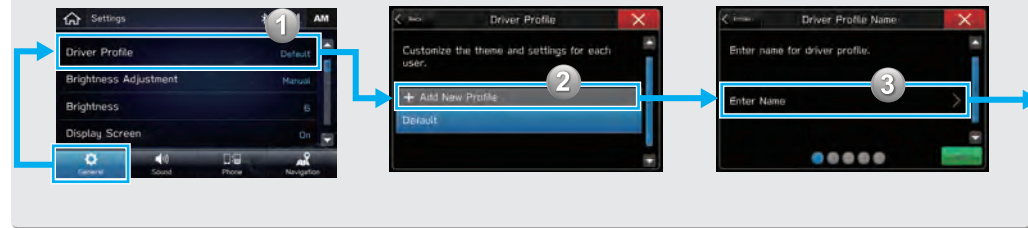


» Registering a Bluetooth phone

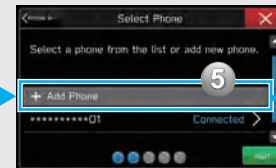 

 6. Pair the system and Bluetooth phone. P.22

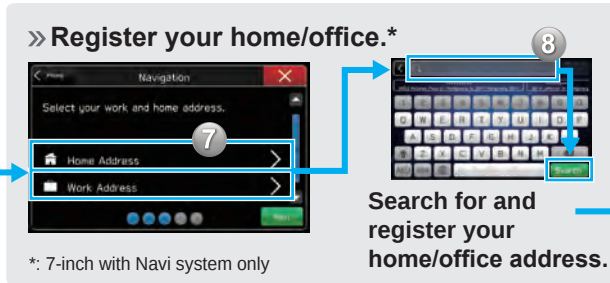

» Register wallpaper.

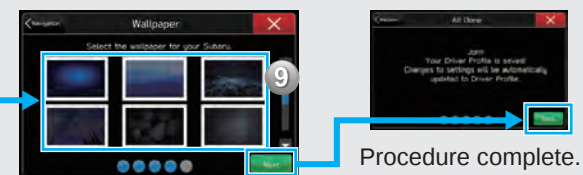 

STEERING WHEEL CONTROLS

STEERING WHEEL CONTROLS

Some parts of the audio system can be controlled using the steering wheel controls.

P.149

RADIO

Press: Preset station/channel up/down

Press and hold: Seek up/down continuously

MEDIA

Press: Change a track/file

Press and hold: Fast forward/rewind

Press: Volume up/down

Press and hold: Volume up/down continuously

Press the switch to change audio modes.

Press the switch

to mute audio

press again to unmute audio

Press: Start the voice recognition system

 
 
P.195

Press and hold: Start Siri*

P.192

*: If connected to iPhone

Press the switch to receive/end a call without taking your hands off the steering wheel. P.78

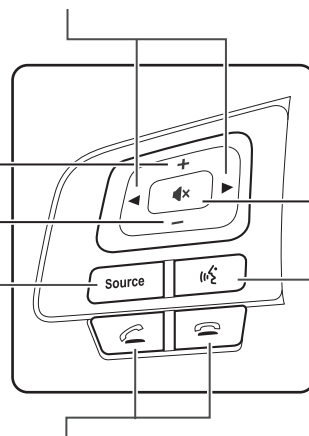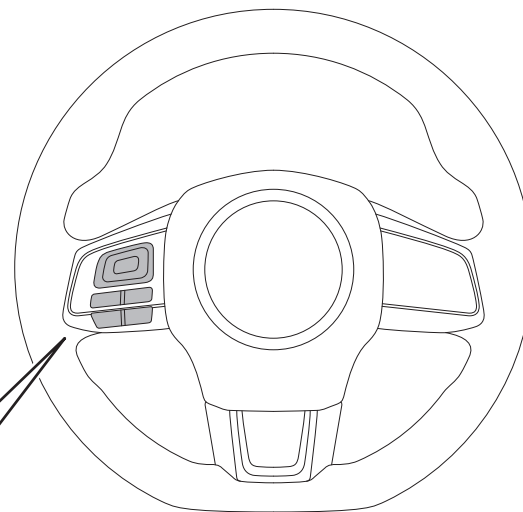

MEMO

This image shows a blank sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

BASIC INFORMATION BEFORE OPERATION

INITIAL SCREEN

INITIAL SCREEN

WARNING

When the vehicle is stopped with the engine running, always apply the parking brake for safety.

1. When the ignition switch is in the “ACC” or “ON” position, the initial screen will be displayed and the system will begin operating.



- After a few seconds, the “CAUTION (CAUTION)” screen will be displayed.

2. Select **I Agree** (I Agree).



 
LOADING AND UNLOADING A DISC

LOADING A DISC

CAUTION

Never try to disassemble or oil any part of the CD player. Do not insert anything other than a disc into the slot.

1. Insert a disc into the disc slot.

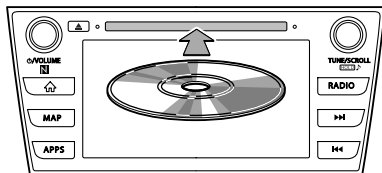

- After insertion, the disc is automatically loaded.

 
NOTE

Compatible Disc: →P.72

When inserting a disc, gently insert the disc with the label facing up.

UNLOADING A DISC

1. Press  and remove the disc.

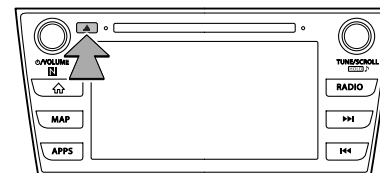


NOTE

Discs can be unloaded even when the ignition switch is turned off.

CONNECTING AND DISCONNECTING A USB MEMORY DEVICE/PORTABLE DEVICE

CONNECTING A DEVICE

 1. Connect a device.

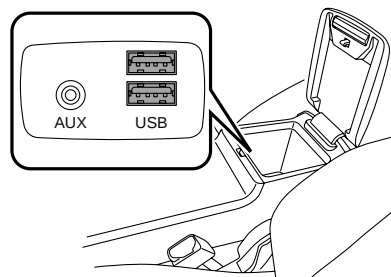

- Turn on the power of the device if it is not turned on.

NOTE

Compatible USB memory device: →P.75

 
 
 
Compatible iPod: →P.75




This unit does not support commercially available USB hubs.

By connecting a device such as a cellular phone, charging starts depending on the device.

TOUCH SCREEN GESTURES

Operations are performed by touching the touch screen directly with your finger.

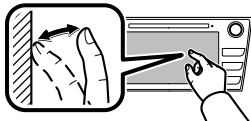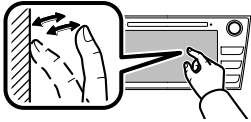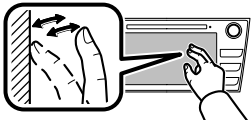Operation method	Outline	Main use
	Touch Quickly touch and release once.	Changing and selecting various settings
	Double Touch with one finger*1 Quickly touch and release twice with one finger.	Enlarging the scale of the map screen
	Double Touch with two fingers*1 Quickly touch and release twice with two fingers.	Reducing the scale of the map screen

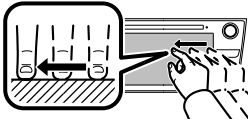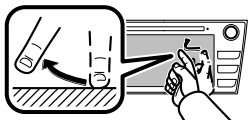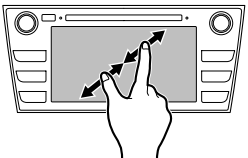   Operation method	Outline	Main use
	Drag ^{*2} Touch the screen with your finger, and move the screen to the desired position.	• Scrolling the lists • Scrolling the map screen^{*1}
	Swipe ^{*2} Quickly move the screen by swiping with your finger.	• Scrolling the lists • Scrolling the map screen^{*1}
	Pinch ^{*1} Move your two fingers further apart (pinch-out) to zoom in the map. Move your two fingers closer together (pinch-in) to zoom out the map.	Changing the scale of the map screen

*1: 7-inch with Navi system only

*2: The above operations may not be performed on all screens.

NOTE

Swipe operations may not be performed smoothly in high altitudes.

TOUCH SCREEN OPERATION

This system is operated mainly by the buttons on the screen. (Referred to as screen buttons in this manual.)

- When a screen button is touched, a beep sounds.
The beep sound can be turned on/off. (→P.71)

CAUTION

To prevent damaging the screen, lightly touch the screen buttons with your finger.

Do not use objects other than your finger to touch the screen.

Wipe off fingerprints using a glass cleaning cloth. Do not use chemical cleaners to clean the screen, as they may damage the touch screen.

NOTE

If the system does not respond to touching a screen button, move your finger away from the screen and then touch it again.
Dimmed screen buttons cannot be operated.

The displayed image may become darker and moving images may be slightly distorted when the screen is cold.

In extremely cold conditions, the map may not be displayed and the data input by a user may be deleted. Also, the screen buttons may be harder than usual to depress.

 
NOTE

When  is displayed on the screen, select  to close a pop-up screen.

ENTERING LETTERS AND NUMBERS/LIST SCREEN OPERATION

ENTERING LETTERS AND NUMBERS

When searching by an address, name, etc., or entering data, letters and numbers can be entered via the screen.

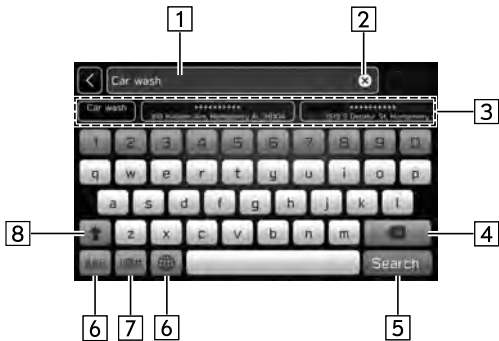

No.	Information/Function
1	Input field • The input field contains text to assist the user in completing tasks. • The position of the cursor can be moved by selecting the desired location in the input field.
2	Select to clear the input field.
3	Displays candidate items based on the input letters. The desired item can be selected.
4	Select to erase one character.
5	Select to enter the item.
6	Select to change keyboard types.
7	Select to enter symbols.
8	Select to enter characters in lower case or in upper case.

NOTE

The appearance of the keyboard may change or the input method may be limited depending on the circumstances where the software keyboard is displayed.

LIST SCREEN OPERATION

The list screen can be scrolled by a swipe gesture.

For details on the operation: →P. 36

The list screen can also be scrolled by the “TUNE/ SCROLL” knob and pressing the knob will enter it.



No.	Information/Function
1	Select to skip to the next or previous page.
2	This indicates the displayed screen's position. Faster scrolling is possible by dragging the position indicator.

No.	Information/Function
3	Some lists contain character screen buttons which allow users to jump directly to list entries that begin with the same letter as the character screen button. Every time the same character screen button is selected, the list starting with the subsequent character is displayed.