

ALCATEL

ONE TOUCH 155 a
156 a

English - 3DS10828AAAA 01

Alcatel logo and Alcatel name are trademarks of Alcatel
and used under license by TCL & Alcatel Mobile Phones Limited.

All rights reserved © Copyright 2004 TCL & Alcatel Mobile Phones Limited.

TCL & Alcatel Mobile Phones Limited reserves the right, in customer's interest,
to alter material or technical specifications without prior notice.

www.tcl-alcatel-mp.com

English

2nd cover

Table of contents

Safety and use4

General information.....8

1. Your cellphone10

1.1 Keys11

1.2 Main screen icons12

2. Getting started14

2.1 Set-up.....14

2.2 Switching your telephone ON.....16

2.3 Switching your telephone OFF16

3. Calls17

3.1 Making a call.....17

3.2 Calling your voicemail18

3.3 Receiving a call19

3.4 During the call20

3.5 Conference calls22

4. Call memory23

5. Menu.....24

5.1 Accessing the menu24

5.2 Organization of functions24

6. Directory29

6.1 Consulting your directory29

6.2 Creating a file.....30

6.3 Available options in the SIM directory32

6.4 Available options in the phone directory33

6.5 My numbers33

7. Messages	34
7.1 Create an SMS.....	35
7.2 Inbox	36
7.3 Outbox	37
7.4 Predefined messages	37
7.5 Archives.....	38
7.6 Parameters	38
7.7 SMS CB (Cell Broadcast)	39
8. Customize	40
8.1 Sound settings	40
8.2 Main screen	41
8.3 Graphic settings	41
8.4 Other settings	41
8.5 Battery saving.....	43
8.6 Keys setup	43
8.7 Security	44
9. Tools	46
9.1 Calculator	46
9.2 Alarm	46
9.3 Diary	47
9.4 Converter	50
10. Call services.....	51
10.1 Voicemail.....	51
10.2 Call memory	51
10.3 Call settings	52
10.4 Network	54
10.5 Call forward	55
10.6 Call barring.....	56

11. Media album	57
11.1 Image album	57
11.2 Melody album	58
11.3 Available memory.....	58
12. WAP	59
12.1 Accessing WAP services	59
12.2 List of options	60
12.3 My bookmarks.....	62
12.4 Settings	62
13. Games	63
13.1 Snake	63
13.2 Bricks	63
13.3 Brain Activity	64
14. Characters table	65
15. Telephone warranty	68
16. Accessories	70
17. Troubleshooting	71

Safety and use

We recommend that you read this chapter carefully before using your phone. The manufacturer disclaims any liability for damage, which may result as a consequence of improper use or use contrary to the instructions contained in this manual.

• TRAFFIC SAFETY:

Given that studies, which show that using a cellphone while driving a vehicle constitutes a real risk, even when the hands-free kit is used (headset...), drivers are requested to refrain from using their cellphone when the vehicle is not parked

When switched on, your cellphone emits electromagnetic waves that can interfere with the vehicle's electronic systems such as ABS anti-lock brakes or airbags. To ensure that there is no problem:

- do not place your phone on top of the dashboard or within an airbag deployment area.
- check with your dealer or car manufacturer to make sure that the car's electronics devices are well shielded.

• CONDITIONS OF USE:

You are advised to switch off your cellphone from time to time to optimise performance.

Switch the phone off before boarding an aircraft to avoid prosecution.

Switch the phone off when you are in health care facilities, except in designated areas. As with many other types of equipment now in regular use, cellphones can interfere with other electrical or electronic devices, or equipment using radio frequency.

Switch the phone off when you are near gas or flammable liquids. Strictly obey all signs and instructions posted in a fuel depot, gas station, or chemical plant, or in any potentially explosive atmosphere.

When the phone is switched on, it should be kept at least 15 cm from any medical device such as a pacemaker, a hearing aid or insulin pump. When using the phone you should hold it against the ear on the opposite side to the device, if any.

To avoid hearing impairment, pick up the call before holding your phone to your ear. Also move the handset away from your ear while using the "hands-free" option because the amplified volume might cause hearing damage.

Do not let small children use the phone without supervision.

When replacing the cover please note that your phone may contain substances that could create an allergic reaction.

Always handle your phone with care and keep it in a clean and dust-free place.

Do not allow your phone to be exposed to unfavourable environmental conditions (moisture, humidity, rain, infiltration of liquids, dust, sea air, etc). The manufacturer's recommended operating temperature range is -20°C to +55°C. Over 55°C the legibility of the phone's display may be impaired, though this is temporary and not serious.

Do not open or attempt to repair your cellphone yourself.

Do not drop, throw or try to bend your cellphone.

Do not paint it.

Use only Alcatel batteries, battery chargers, and accessories that are compatible with your phone model (see page 70). TCL & Alcatel Mobile Phones Limited or its affiliates disclaim any liability for damage caused by the use of other batteries.

Your phone should not be disposed of in a municipal dump. Please check local regulations for disposal of electronic products.

Remember to make back-up copies or keep a written record of all important information stored in your phone.

Some people may suffer epileptic seizures or blackouts when exposed to flashing lights, or when playing video games. These seizures or blackouts may occur even if a person never had a previous seizure or blackout. If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult your doctor before playing video games on your phone or enabling a flashing-lights feature on your phone. Parents should monitor their children's use of video games or other features that incorporate flashing lights on the phones. All persons should discontinue use and consult a doctor if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation. To limit the likelihood of such symptoms, please take the following safety precautions:

- Do not play or use a flashing-lights feature if you are tired or need sleep.
- Take a minimum of a 15-minute break hourly.
- Play in a room in which all lights are on.
- Play at the farthest distance possible from the screen.

When you play games on your phone, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. Follow these instructions to avoid problems such as tendinitis, carpal tunnel syndrome, or other musculoskeletal disorders:

- Take a minimum of a 15 minute-break every hour of game playing.
- If your hands, wrists, or arms become tired or sore while playing, stop and rest for several hours before playing again.
- If you continue to have sore hands, wrists, or arms during or after playing, stop the game and see a doctor.

BATTERY:

Before removing the battery from your phone, please make sure that the phone is switched off. Take precautions with the battery and do not attempt to open the battery (chemical substances may cause burns).

Do not pierce, disassemble nor cause a short-circuit in a battery.

Do not burn or dispose of a used battery in household waste or store it at temperatures above 60 °C.

Batteries must be disposed of in accordance with locally applicable environmental legislation.

Batteries should not be used for any other purpose than the one intended.

Never use damaged batteries or not recommended by TCL & Alcatel Mobile Phone Limited and/or its affiliates.

CHARGERS:

Mains powered chargers will operate within the temperature range: 0°C to 40°C.

The chargers designed for your cellphone meet with the standard for safety of information technology equipment and office equipment use. They should be used for this purpose only.

Electrical characteristic of power supply (depending on the country):

110 V charger (used in Mexico):

Input: 100-127 V, 50/60 Hz, 0.30 A

Output: 4.5 V, 350 mA

220 V charger:

Input: 220-240 V, 50/60 Hz, 0.30 A

Output: 4.5 V, 350 mA

Battery: Lithium 720 mAh

RADIO WAVES:

THIS MOBILE PHONE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

Your cellphone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio-frequency (RF) energy. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. These guidelines include a substantial safety margin designed to ensure the safety of all persons, regardless of age and health.

The exposure standard for cellphones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by public authorities such as the Federal Communications Commission of the US Government (FCC), the Australian Communications Authority (ACA) or by Industry Canada, is 1.6 W/kg averaged over 1 gram of body tissue. Tests for SAR are conducted using standard operating positions with the phone transmitting at its highest certified power level in all tested frequency bands.

Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output of the phone. Before a phone model is available for sale to the public, compliance with national regulations and standards must be shown.

The highest SAR value for this model phone when tested for use at the ear is 0.843 W/Kg for One Touch 155a - 0.699 W/kg for One Touch 156a and for use close to the body is 0.659 W/Kg for One Touch 155a - 0.743 W/kg for One Touch 156a. While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement for RF exposure. For body-worn operation, the phone meets FCC RF exposure guidelines provided that it is used with a non-metallic accessory with the handset at least 1.5 cm from the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

The World Health Organization (WHO) considers that present scientific information does not indicate the need for any special precautions for use of cellphones. If individuals are concerned, they might choose to limit their own or their children's RF exposure by limiting the length of calls, or using "hands-free" devices to keep cellphones away from the head and body (fact sheet n°193). Additional WHO information about electromagnetic fields and public health are available on the following website: <http://www.who.int/peh-emf>.

Your telephone is equipped with a built-in antenna. For optimal operation, you should avoid touching it or degrading it.

General information

- **Website:** www.tcl-alcatel-mp.com
- **WAP address:** WAP.tcl-alcatel-mp.com
- **Hot Line Number:** see "TCL & Alcatel Mobile Phones Services" leaflet (calls charged at applicable local rates in your country)

An electronic version of this user guide is available in English and other languages according to availability on our server: www.tcl-alcatel-mp.com

Your telephone operates on GSM networks within bandwidths of 850/1900MHz.

Protection against theft

Your cellphone has an identification number called IMEI (phone serial number) shown on the packaging label and in the product's memory. We recommend that you note this number the first time you use your telephone by entering *, #, 0, 6, # and keep it in a safe place. It may be requested by the police or your operator if your telephone is stolen. This number allows your cellphone to be blocked, preventing a third person from using it, even with a different SIM card.



T9® and all T9® based trademarks and logos are trademarks or registered trademarks of Tegic Inc in the U.S and other countries.

Your cellphone



1.1 Keys

-  Switch on the phone (long keypress) from the main screen
Switch off the phone (long keypress) from the main screen
Hang up
Reject an incoming call
Return to the main screen (long or short keypress)
-  Call / Pick up
Access the call memory (short keypress)
-  **Navigation key:**
Scroll to select an option
▲: Previous item/Access to Messages (from the main screen)
▼: Next item/Access to Directory (from the main screen)
▲, ▼, ◀, ▶ Move
-  Adjust the volume during a call
-  Menu / Confirm
Display a message received
-  Delete a character (short keypress)
Delete all characters (long keypress)
Return to the previous screen (short keypress)
Mute the ringtone of an incoming call

-  Consult your voicemail (long keypress)
-  Activate/Deactivate the vibrator (long keypress)
Upper case/Lower case/Automatic capitals in edition mode
-  Automatic keypad lock/unlock (long keypress)
Predictive mode/Normal mode/Digits in edition mode
-  Access the symbols in edition mode

1.2 Main screen icons ⁽¹⁾

-  **Battery charge level.**
-  **Vibrator mode:** your phone vibrates.
-  **Silence mode:** your phone neither rings, beeps nor vibrates except for the alarms.
-  **Unread message.**
-  **Message list is full:** your terminal cannot accept any new messages. You must access the message list and delete at least one message on your SIM card (see page 36).

⁽¹⁾ The icons and illustrations in this guide are provided for informational purposes only.

-  Voicemail message arrived.
-  WAP message alert (OT156 only).
-  **Call forwarding activated:** your calls are forwarded (see page 55).
-  **Alarm programmed** (see page 46).
-  **Signal strength indicator.**
-  **Preferred tariff areas ⁽¹⁾.**
-  **Keypad lock.**
-  **Roaming out of your country of subscription.**

 
⁽¹⁾ Contact your network operator to check service availability.

2 Getting started

2.1 Set-up

Inserting the SIM Card ⁽¹⁾


You must insert your SIM card in order to use your phone. To insert your SIM card, turn off your phone with a long keypress on the  key.

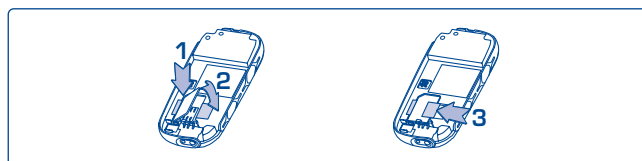

Before inserting the SIM card into the slot, push the SIM card catch to release it as shown (1-2). Place the SIM card into the slot with care. Make sure the cardnotch is on the upper left hand side. Press and hold down the catch and push it until it is locked.


⁽¹⁾ Check with your network operator to make sure that your SIM card is 3V compatible. The old 5Volts cards can no longer be used. Please contact your operator.

 Inserting the battery

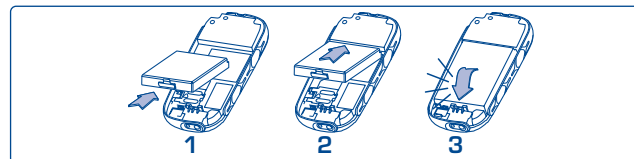

Align the tab on top of the battery with the slot in the battery compartment of your phone. Press down the battery until the latch is completely locked.

 Charging the battery

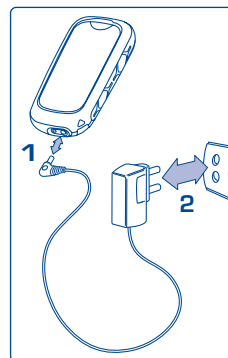

Connect the charger

- An animation will be on while charging.
- It may take several minutes before the charging starts.
- Do not force the plug into the socket.
- The battery icon will take several minutes before the level is shown.
- Before connecting to the charger, make sure the battery is inserted correctly.
- The mains socket must be near to the phone and easily accessible (avoid power extension cables).



Before using your phone for the first time, completely charge your battery (approximately 3 hours). Only use Alcatel chargers. We recommend charging the battery once a day so that the phone operates at an optimum level.

2.2 Switching your telephone ON

Press the  key (long keypress). A welcome animation is displayed for 2 seconds. Type your PIN code if necessary, then confirm with the  key.



If you do not know your PIN code or if you have forgotten it, contact your network operator. Do not leave your PIN code near your telephone. It should be stored in a safe place when not needed.

2.3 Switching your telephone OFF

From the main screen, press the  key (long keypress).

3 Calls

3.1 Making a call

Dial the desired number then press the  key to place the call. To hang up, press the  key.

If you make a mistake, press the  key once to remove the last digit. Press and hold the key to delete all the digits.



To enter “+” use the  key (long keypress). To enter “W” (pause) use the  key (long keypress). A second long keypress displays a “P”.

Making an emergency call

In case of emergency, dial **112** or any other number provided by your network operator. Press the  key.

Emergency calls can be performed at any time without your SIM card or PIN code. Once the call is made, the screen displays: “**SOS call only**”.

Making an international call

Make a long keypress on the  key, when “+” is displayed, enter the country and area codes, complete the number and send the call.

Call a number from the directory

Press the ▼ key to access the directory. Select the desired phone number and press  (see “Directory” on page 29).

Automatic Redial

If this feature is activated, the person you are unable to reach will be called back automatically.

Speed dial (Keys setup)

From the main screen, make a long keypress on any key from  to  to dial one telephone number stored in your directory, or access to a function, providing you have already programmed the key (see page 43).

3.2 Calling your voicemail ⁽¹⁾

Your voicemail is provided by your network so that you do not miss any calls: it works like an answering machine that you can consult at any time.

To access your voicemail from the main screen, make a long keypress on the  key.

If the access number for your operator's voicemail service does not appear, dial the number that you were given. To program or change this number at a later date, refer to “Call services/Voicemail/Enter number:” (see page 51).



To use your voicemail service from abroad, contact your network operator before leaving.

3.3 Receiving a call

When you have an incoming call, your phone rings and/or vibrates depending on the parameters chosen, and displays an animation.

- To pick up a call, press the  key.
- To reject a call, press the  key.
- To mute the ring, press the  key.



The number of the calling party is displayed if transmitted by your network and if the service is subscribed. However, if the number has been stored in your directory, the caller's name will be displayed.

⁽¹⁾ Contact your network operator to check service availability.

3.4 During the call

Available functions

You can access the following options during a call by pressing the  key:

- Notepad**
 - Enter a number given to you by phone to save it.
- Activate mute**
 - Activate/deactivate the microphone.
- Directory**
 - Access the directory.
- Messages**
 - Access the messages.
- Call memory**
 - Access your call memory.
- Diary ⁽¹⁾**
 - Access your diary.



You can adjust the sound level during a call using the navigation  key.

Handling two calls

- **Call waiting ⁽¹⁾**
If a second call comes in while you are on line, you will be notified by a tone and the backlight. You can then accept the call by pressing the  key. Your current call will be automatically put on hold. You can then swap between your two correspondents by pressing the  key and by selecting the “**Swap**” option in the menu.
- **Making a second call**
To call a second party during a call, dial the number or select it from the directory by accessing the menu, then press the  key to send the call.

⁽¹⁾ OT156 only.

⁽¹⁾ Contact your network operator to check service availability.

3.5 Conference calls ⁽¹⁾

Your phone allows you to talk to 5 people at the same time. When on a double call: press the **OK** key to access the menu and select **"Conference"**. The conference tone is heard.

If a third call comes in, answer it by pressing the **OK** key and speak with your new correspondent.

Press the **OK** key to access the options menu, select **"Add conf."**, and then confirm by pressing **OK**. The new correspondent becomes a member of the conference.

The **"Conf. members"** option allows you to disconnect a member of the conference by selecting **"End conference"**, or select **"Private call"** to have a private call with this member only (other members are put on hold).

⁽¹⁾ Depending on your operator's network.

4 Call memory

From the main screen, press the **OK** key and your phone displays a call list. Each call is displayed with an icon indicating the type of the call (Outgoing calls, Answered calls, Missed calls).

Select a telephone number in the list and press the **OK** key to redial it or press the **OK** key to access the **"Call memory"**:

Create SMS

- Create an SMS.

Details

- Display the information of the call selected.

Save number

- Store the number in your directory.

Delete

- Delete the number selected.

Delete all

- Delete the entire list.



 
You can also access the call memory via the **"Call Services/Call memory"** menu.

5 Menu

5.1 Accessing the menu

From the main screen, press the **OK** key, the menu is displayed as a list with small icons beside each function.

Select the item you require using the navigation keys (**▲**, **▼**), then press again **OK** to confirm.

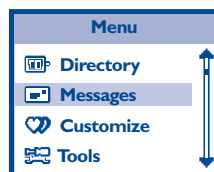

5.2 Organization of functions

For each of the listed functions, refer to the appropriate chapter in this User Guide.



Directory:

Access/create directory files and make calls from your directory.



Messages:

Read, write and send your SMS. View your messages in your inbox, outbox, adjust the settings and activate/deactivate CB broadcast message reception.



Customize:

Customize your graphical and audio environment. Set the time, date, language, keypad lock, security mode and network.



Tools:

Set your telephone's alarms for appointments, birthdays, etc to remind you or to wake you up. Access the functions such as Diary⁽¹⁾, Calculator, Alarm and Currency converter.

⁽¹⁾ OT156 only.

**Call services:**

Access functions such as: Voicemail number, Call memory, Call settings, Network, Call Forward and call Barring.

**Media album ⁽¹⁾:**

All your visual and sound items in your telephone.

**WAP ⁽¹⁾:**

Access the Internet services with your phone.

**Games:**

Play with the 2 or 3 ⁽¹⁾ games embedded in your telephone.

**Operator's services:**

Access the Operator services ⁽²⁾.

DIRECTORY

- Create
- Name list
- My numbers

MESSAGES

- Predefined
- Create SMS
- Inbox
- Outbox
- Archives ⁽¹⁾
- Parameters
- SMS CB

CUSTOMIZE

- Sound settings
 - Ring tones
 - Volume
 - Vibrator
 - Message alert
 - Key beeps
 - Battery alert
- Main screen ⁽²⁾
- Graphic.Settings ⁽¹⁾
 - Download new
 - Main screen
 - Atmospheres
 - Slide show
- Other settings
 - Contrast
 - Set time
 - Set date
 - Language
 - Keypad lock
 - Answer mode
- Battery saving ⁽¹⁾
- Keys setup
- Security

⁽¹⁾ OT156 only.

⁽²⁾ Depending on your operator's network.

⁽¹⁾ OT156 only.

⁽²⁾ OT155 only.

• TOOLS

- Calculator
- Alarm
- Diary ⁽¹⁾
- €->currency
- Currency->€

• CALL SERVICES

- Voicemail
- Call memory
- Call settings
 - Beep duration
 - Call waiting
 - Auto redial
 - Billing
 - Conceal ID
- Network
 - Preferred list
 - Search mode
 - Parameters ⁽¹⁾
- Call forward
 - Voice calls
 - Fax calls
 - Data calls

- Call barring ⁽²⁾
 - Outgoing calls
 - Incoming calls
 - Settings

• MEDIA ALBUM ⁽¹⁾

- Image album
- Melody album
- Avail. memory

• WAP ⁽¹⁾

- Launch WAP
- My bookmarks
- Settings

• GAMES

 
• OPERATOR'S SERV. ⁽²⁾

6 Directory.....

The directory allows you to store phone numbers and names (or files) either in the SIM memory and/or the phone memory ⁽¹⁾. You may store up to 100 entries in the phone memory ⁽¹⁾.

6.1 Consulting your directory ⁽²⁾

From the main screen, press the ▼ key to access the directory. The phone displays:

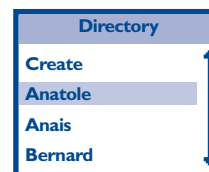

⁽¹⁾ OT156 only.

⁽²⁾ Depending on your operator's network.

⁽¹⁾ OT156 only.

⁽²⁾ By default, the SIM directory is selected. To select a different directory, access from the main menu "**Directory/Select director./SIM directory**" or "**Phone dir.**" (OT156 only).

6.1.1 Searching for a name by its first letter

You can search for the person's name by pressing the key associated with the first letter of his/her name.

6.1.2 Read a contact file

Select a name from your directory, press  and select **"Details"**. The information stored will be displayed:

- Name and phone number (SIM Directory),
- Details: cellphone, home, e-mail... (Phone Directory) ⁽¹⁾.

6.1.3 Making the call

Press the  key when the name is selected to make a call.

If several numbers are associated with the name to be called, you must first choose the number from the list ⁽¹⁾ (Mobile, Home, Office, etc.) using the navigation key.

6.2 Creating a file

You can only create a file in the directory (either **"SIM directory"** or **"Phone dir."**) ⁽¹⁾ that you have selected.

⁽¹⁾ OT156 only.

6.2.1 SIM Directory

When you are in the **"SIM directory"**, select **"Create"**, enter the name and the phone number, then press the  to confirm.

The created files will be displayed in alphabetical order.



If you make a mistake, press the  key to erase the last character. Press and hold the key to erase the whole entry.

6.2.2 Phone directory (OT156 only)

Select **"Create"** and enter the name. The telephone prompts you to choose the type of number (cellphone, office, ...). Make your choice and enter the number. You may also assign that number to a group if you wish.

If you want to modify or add a number to the file, select **"Details"** and the number to edit, or **"Create"** the number.



The fax number and e-mail address will be saved, but you can neither send a mail nor a fax.

When you have filled in the desired fields, press  to save the file.

6.3 Available options in the SIM directory

The following options will be displayed when the contacts have been created in the SIM directory:

- Details**
 - Display the name and phone number.
- Speed dial**
 - Assign a key (2 to 9) to the selected contact.
- Create SMS**
 - Create a message to send to the selected contact.
- Modify**
 - Modify the data of the selected contact.
- Delete**
 - Delete the selected contact.
- Copy to phone** ⁽¹⁾
 - Copy the file to the telephone directory.
- All SIM->phone** ⁽¹⁾
 - Copy all files from SIM to Phone memory ⁽¹⁾.
- Select director.**
 - Select the “**SIM directory**” or “**Phone dir.**” ⁽¹⁾.

⁽¹⁾ OT156 only.

6.4 Available options in the phone directory

(OT156 only)

The following options will be displayed when the contacts have been created in the phone directory:

- Details**
 - Display the details of the selected contact (name, phone number, office phone or cellphone number, etc).
Assign a key (2 to 9) to the selected contact.
Copy the file to the SIM directory
- Create SMS**
 - Create a message to send to the selected contact.
- Modify**
 - Modify the data of the selected contact.
- Select group**
 - Include this contact to a Contact Group.
- Delete**
 - Delete the selected contact.
- Delete all**
 - Delete all the contacts in Phone memory.
- All SIM->phone** ⁽¹⁾
 - Copy all files from SIM to Phone memory.
- Avail. memory** ⁽¹⁾
 - Display the phone memory space available in terms of contacts.
- Group settings**
 - Assign ring tones & pictures for each Contacts Groups.
- Select director.**
 - Select the “**SIM directory**” or “**Phone dir.**” ⁽¹⁾.

6.5 My numbers

 
Save your own telephone numbers.

⁽¹⁾ OT156 only.

7 Messages

From your telephone, you can read, write, send and receive “**SMS messages**” and share them with other cellphones.


To access the messages from the main screen, press the top of the ▲ key or press the  key and select the  (“**Messages**”) icon.

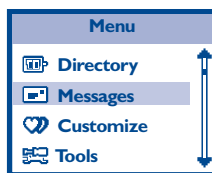

7.1 Create an SMS

You can customize your message by adding pictures and sounds.

 In the “**Messages**” menu, select “**Create SMS**” and enter your message.

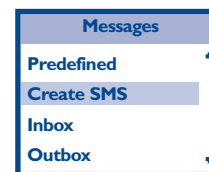

Press the  key to access the following options.

Several recpt.

- Send the message to a group of people you have defined.

Send

- Send the message to a recipient.

Save

- Save the message and send it later.

Add image

- Liven up your message by adding images or animations.

Add sound

- Liven up your message by adding sounds.

7.2 Inbox

Select the message you want to read and then press **OK**. You now have access to the following options:

- | | |
|--|--|
| Reply | • Reply to the sender of the message by SMS. |
| Forward | • Forward the message received to other people. |
| Delete | • Delete the message. |
| Save number | • Save the sender's number. |
| Extract number | • Save or use the number contained in the message. |
| Move->archive ⁽¹⁾ | • Archive your messages in the telephone memory. |
| Delete all | • Delete all messages in the inbox. |

⁽¹⁾ OT156 only.

7.3 Outbox

The last written message saved is displayed on top of the list. Select the message you want to view and press the **OK** key.

Press again the **OK** key to access the following options:

- | | |
|--|---|
| Delete | • Delete the message. |
| Forward | • Forward the message. |
| Save number | • Save the recipient's number. |
| Extract number | • Save or use the number contained in the message. |
| Move->archive ⁽¹⁾ | • Archive your messages in the telephone memory. |
| Avail. memory | • Display the storage capacity of your SIM card or your telephone ⁽¹⁾ in terms of SMS. |
| Delete all | • Delete all messages in the outbox. |

7.4 Predefined messages

A list of predefined messages are available. Select one, edit it if required, and then send it.

⁽¹⁾ OT156 only.

7.5 Archives (OTI56 only)

The “**Archives**” menu allows you to access messages you have archived. Archived messages are stored in the telephone memory to save memory space in the SIM card.

7.6 Parameters

You can change the message parameters:

- | | |
|------------------------|--|
| Delivery report | <ul style="list-style-type: none">• Request for acknowledgement of receipt for each message sent. |
| Validity | <ul style="list-style-type: none">• Set the time period during which attempts to send the message to the recipient will be repeated in case of failure. |
| Service center | <ul style="list-style-type: none">• The phone number of your operator's service center (it may be provided automatically). |
| Auto. saving | <ul style="list-style-type: none">• Messages sent will be automatically saved, but you can choose to not keep them (“Activ./Deact.”). |
| Quick reply | <ul style="list-style-type: none">• Activate /deactivate the “Quick reply” option, if activated, received SMS are automatically displayed and a keypress on OK allows to reply directly. |

7.7 SMS CB (Cell Broadcast)

These are messages broadcast over the network (weather forecast, traffic conditions, etc.).

- | | |
|------------------------|--|
| Auto. reception | <ul style="list-style-type: none">• Activate /deactivate the automatic display of the programmed SMS CB. |
| CB code list | <ul style="list-style-type: none">• List of SMS CB codes for messages you want to view (“Create” or “CB code list”). |

8 Customize.....

From the main screen, press the  to access the menu then select the  icon and select one of the following options in order to customize your telephone.

8.1 Sounds settings

Ring tones: Select a melody to assign to an incoming call. You can download new melodies  **“Download new”** (OT156 only).

Volume: The volume can be adjusted to one of the levels proposed (**“Silent”**, **“Low”**, **“Medium”**, **“High”**, **“Increasing”**).

Vibrator: Activate/deactivate the vibrator.

Message alert: Activate/deactivate the sound alert for incoming messages (a specific melody can be selected).

Key beeps: Activate/deactivate the beep played with each keypress.

Battery alert: Activate/deactivate the sound emitted when the battery level is low.

8.2 Main screen (OT155 only)

Select the image you wish to be displayed as the main screen ⁽¹⁾.

8.3 Graphic settings (OT156 only)

Customize your telephone to suit your own taste via the **“Graphic. Settings”**.

- Choice of main screen ⁽¹⁾,
- Atmospheres (colors),
- Slide show ⁽¹⁾.

When slideshow is activated, select the pictures with the  key to view them as a slide show. The slide show starts automatically 30 seconds after the main screen is displayed and if there is no message to read ⁽¹⁾.

8.4 Other settings

Available options

Contrast: Set the contrast of your telephone by choosing one of the 5 levels proposed.

Set time: Enter the time and press the  key to save it.

Set date: Enter the date and press the  key to save it.

⁽¹⁾ If format compliant (JPEG).

Language

This feature allows to choose the language in which the messages will be displayed. You may, however, choose another language if available.

Keypad lock

If this option is activated, the keypad will be automatically locked if no keys are pressed for a certain period of time. The keypad will automatically unlock when you receive a call and will lock again when you hang up. To unlock, make a long keypress on the  key.

Answer mode

You have two options to answer a call:

- **Call key:** answer the incoming call by pressing the  key.
- **Any key:** answer the call by pressing any key.

8.5 Battery saving (OTI56 only)

 
Adjust the settings to save your battery energy using this menu.

By default, the “**Battery saving**” mode is activated to save your battery.

You can also set the duration of the backlighting.

8.6 Keys setup

You can assign a function or a number that you use frequently, to keys  to  on the keypad.

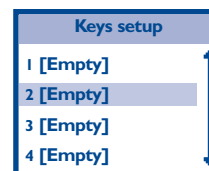

When they have been programmed, make a long keypress on the appropriate key from the main screen to go directly to the number or function desired.

8.7 Security

This function allows you to display and manage the security settings of your telephone. By selecting the function, you will access the following options:

PIN code

Activate/deactivate the PIN code (Personal Identification Number). It will be requested each time you switch on your telephone.

The PIN2 code allows you to activate or deactivate certain functions, such as Billing etc..



If you enter an incorrect PIN code three times in a row, your SIM card will be disabled and your phone will display “**SIM blocked**”. You will then have to enter a PUK (PIN Unblocking Key) code, which you can obtain from your network operator.

Change PIN

To change the PIN code, enter the old code then the new one when prompted (“**Enter PIN:**” and “**Enter new PIN:**”). The new PIN code is a number consisting of 4 to 8 digits. You must confirm it by entering it again (“**Again please:**”).

Change PIN2

This option allows you to change your PIN2 code. Process as for the PIN code change.

FDN

Enter your PIN2 code to activate your list of Fixed Dialed Numbers (authorized numbers).

FDN numbers

Create a directory of up to 10 numbers that you can delete or modify.

9 Tools

9.1 Calculator

Enter a number and select the type of operation to be performed using the navigation key. Confirm with the  key.



To enter decimals ("."), use the  key (long keypress). To return to the main screen, press the  key (long keypress).

9.2 Alarm ⁽¹⁾

You can program an alarm with your telephone.

Activated/ Deactivated

- Activate or deactivate the alarm.

Set time

- Set the alarm time :
 - every day
 - once ⁽²⁾
 - every day except Saturday and Sunday ⁽²⁾.

Alarm mode

- Select the alarm mode from the following:
 - Melody: select the desired ring tone for this alarm.
 - Buzzer

Snooze ⁽²⁾

- If you choose this option, the alarm will go off in regular intervals of 7 minutes. When the alarm goes off, press the  key to stop it completely and then confirm by pressing again the  key, otherwise, the alarm will repeat every 7 minutes during one hour.

⁽¹⁾ 3 alarms on OT156.

⁽²⁾ OT156 only.

9.3 Diary (OT156 only)

Your telephone has a diary so that you can create and record events such as holidays, meetings or tasks to do. From the “Tools” menu, select “Diary”, press  then select “Events”. The following options will be displayed:

Create

- Select the type of event to be created (Holidays, Meeting, To Do).

Events

- View the events ⁽¹⁾ created and recorded in your diary. They can be edited, deleted, etc.

You can also delete all expired events with the “Delete old evts” option. Enter the date, press  twice and all events before this date will be deleted. For example: to delete all events in your diary, enter a date a long time in the future (for example: 31/12/2010).



The Diary shares memory space with other menus such as the Directory, Image Album, Sound Album etc. The more events you record, the less memory will remain for new contacts, etc.

⁽¹⁾ Events are listed with the start date and time.

Create a new event

You can program an event (Holidays, Meeting, To Do etc.) at a certain date and time.

Select **“Create”** and press **ok**. Then select **“Holidays”**, **“Meeting”** or **“To do”** and confirm by pressing **ok**. Enter a start and an end date for the event, enter the subject and define whether the event is a one-off or repeated (everyday/week/month/year).

You can program an alarm as a reminder using the **“Set reminder”** function.

Modify an event

Select the event and press **ok**.

When the details of the event are displayed, press **ok** and choose **“Modify”**. Confirm by pressing **ok** once you have made the change.

Delete a one-off or repeated event

To delete a one-off event, select the event and press **ok** twice, choose **“Delete”** and then confirm once more.

To delete a **repeated** event that has **expired**, select the event. When the data (date, time, subject etc.) of the event is displayed, press **ok** then select **“Delete”** and confirm by pressing **ok** once more. Only the past occurrences of the selected event are deleted.

To delete a **repeated event** that has **not expired**, select the event and press **ok**. When the data (date, time, subject etc.) of an event is displayed, select **“Delete”** and press **ok** to confirm. All repetitions of the event will be deleted.

9.4 Converter ⁽¹⁾

The “**Currency->€**” menu allows you to convert an old local currency into Euros by entering the amount then pressing **OK** to display the converted amount.

The “**€->currency**” menu allows you to convert an amount in Euros into an old local currency by entering this amount then pressing **OK** to display the converted amount.

The currency used for conversion will be the one in your country of subscription.

⁽¹⁾ Euro zone countries only.

10 Call services

10.1 Voicemail

Modify the number of your voicemail.

10.2 Call memory

Access the following number lists:

- | | |
|-----------------------|--|
| Outgoing calls | • List of the last calls made. |
| Answered calls | • List of calls received and answered. |
| Missed calls | • List of unanswered calls received. |

If you select a number from the call memory list and press **OK**, you can access the following options:

- Create SMS**
 - Send a message to the selected number.
- Details**
 - View the details of the call (number, date, time etc.).
- Save number**
 - Store the selected number in your directory.
- Delete**
 - Delete the selected number.
- Delete all**
 - Delete the entire list.

10.3 Call settings

Beep duration

Activate/cancel the sounding of a beep during a call.

Call waiting ⁽¹⁾

Activate/cancel/check the tone that notifies a second incoming call.

Auto redial ⁽¹⁾

This option enables automatic callback of the last dialed busy number, if it is activated.

⁽¹⁾ Contact your network operator to check service availability.

Billing ⁽¹⁾

- Total duration
 - Display the duration of All incoming calls or All outgoing calls.
- Reset duration
 - Reset the cumulative duration for all calls.
- Total cost
 - Display the cost of the last call or all calls made. The available credit function shows the amount remaining as a proportion of the “**Max. credit**”.
- Reset costs
 - Reset the total call cost.
- Unit cost
 - - Choice of currency, enter the currency.
 - Choice of unit, enter the Telecom unit.
- Max. credit
 - Set a maximum credit beyond which all charged calls will be barred.

Conceal ID (CLIR) ⁽¹⁾

You can choose to hide your identity (or your telephone number) from the person you are calling.

- Hide identity
 - Hide your telephone number.
- Show identity
 - Show your telephone number
- Status
 - Check the current Anonymous status.

⁽¹⁾ Contact your network operator to check service availability.

10.4 Network

Preferred list

Create a list of networks to which you wish to be connected as a priority. A list will be displayed. Press **OK** to add a network to the list.

Search mode

- Automatic
 - The network sought is the last one used.
- Manual
 - The choice of network is left up to the user.

Parameters

You can set or modify your WAP access settings.

10.5 Call forward

This function enables you to activate/cancel or check the call forwarding of voice/fax/data calls to the voicemail or any specified number (enter the number or select the name and confirm with the **OK** key) according to the following options:

Unconditional

- Systematic forwarding of all your calls. The **5** icon is displayed on the idle screen.

If no reply

- Only if you do not answer.

If unreachable

- Only if you are outside the range of the network.

If busy

- Only if your line is busy.

Conditional

- If your line is busy, if you do not answer, if you are outside the network range.

Status

- See the actual setting.

10.6 Call barring

Outgoing calls

- Activate/deactivate or display the call barring of outgoing calls. This option is applied as follows:
- All ⁽¹⁾
 - All outgoing calls are barred.
- International ⁽¹⁾
 - Outgoing international calls are barred.
- Except->home
 - Outgoing international calls except those to your country of subscription are barred.

Incoming calls

- Activate/deactivate or display the call barring of incoming calls. This option is applied as follows:
- All ⁽¹⁾
 - All incoming calls are barred.
- If abroad ⁽¹⁾
 - Incoming calls are barred when you are abroad.

Settings

- Deactivate all call barring options you have setup.
- Cancel outgng.
 - Cancel all outgoing call barring.
- Cancel incomg.
 - Cancel all incoming call barring.
- Change passwd
 - Change the password.

⁽¹⁾ Contact your network operator to check service availability.

Media album (OT156 only)

To access the “**Media album**” menu from the main screen, press  and select “**Media album**”. The Multimedia Album groups together all visual and sound items in your phone, whether they be imbedded, downloaded or recorded. The options of this menu are: “**Image album**”, “**Melody album**” and “**Avail. memory**”.

11.1 Image album

This menu allows you to manage and display the images that are embedded or downloaded in your cellphone.

Select an image and press  to access the following options:

- >Main screen ⁽¹⁾
 - Display the image as the main screen.
- Rename ⁽²⁾
 - Change the name of the image.
- Delete ⁽²⁾
 - Delete the image.
- Delete all ⁽²⁾
 - Delete all images.

When you are browsing images in fullscreen mode, you can switch to the images list by going . When in list, you can go back to fullscreen by going .

⁽¹⁾ If format compliant (JPEG).

⁽²⁾ For downloaded images only.

11.2 Melody album

You can download sounds from your service providers via WAP.

The melody album allows you to manage and listen to sounds saved in your telephone. When the melody has been selected, press **OK** to access the following functions:

- Set as ringtone** ⁽¹⁾ • Assign this melody to the incoming calls.
- Rename** ⁽²⁾ • You can change the name of the melody.
- Delete** ⁽²⁾ • Delete the melody.
- Delete all** ⁽²⁾ • Delete all melodies.

11.3 Available memory

You can at any time check the available memory in your cellphone.

⁽¹⁾ If format compliant.

⁽²⁾ Except for embedded melodies.

12 WAP (OT156 only)

12.1 Accessing WAP services ⁽¹⁾

WAP (Wireless Application Protocol) is a service that allows you to access cellphone Internet. Thanks to WAP, you can obtain information such as weather conditions, stock market information, traffic information, etc.

The “**Launch Browser**” option launches the WAP browser on the homepage of the default profile if it has been defined.

The “**My Bookmarks**” option allows you to access the list of your favorite sites and add to them.

The “**Settings**” option allows you to program the connection parameters for your WAP services access provider. In most cases, the connection parameters for your browser will have already been filled in ⁽²⁾.

In WAP mode you can:

- 1) Confirm your choice by pressing **OK**.
- 2) Scroll the lines using the **▲** and **▼** keys.
- 3) Access the options with the **⏏** key.

⁽¹⁾ Contact your network operator to check service availability.

⁽²⁾ Contact your operator for details to fill in the fields.

12.2 List of options

Back

- Back to the last page (option available if at least two pages have been viewed).

Homepage

- Access the homepage of your current profile.

Next

- Back to the next page when you have previously used the “**Back**” option.

Refresh

- Refresh the current page.

Bookmarks

- Bookmark by saving your favorite page.

URL

- You may enter the URL for a WAP website that you want to visit.

Save

- When you access a WAP page, you can save the images on that page using this option. Select the image with the ▲ and ▼ keys. When the image is highlighted, press **(f)** to access the options. Select “**Save**” and press **(ok)**. Rename the image if you wish and press **(ok)** to save it in your album.

As homepage

Exit

Settings

- Save the current page as home page launcher. You can give a name to this page.
- End your WAP connection. Press **(ok)** to confirm and exit the WAP mode.
- Choose your WAP access settings.

12.3 My bookmarks

The option allows you to add your favorite or frequently accessed websites to “**My Bookmarks**” menu. The next time you enter the browser, you will be able to access sites in “**My Bookmarks**” directly without entering any URL. Web pages can be added to “**My Bookmarks**”.

Select a URL from the list. Press **OK** to launch WAP or to modify the URL. Select “**Create**” if you want to enter a new URL, then type the name and address of the page you want.

12.4 Settings

From the “**Settings**” option, you can:

- Select a pre-stored profile ⁽¹⁾,
- Select the connection parameters ⁽¹⁾,
- Choose the display options for WAP images,
- Rename your profile,
- Set the WAP download options.

⁽¹⁾ Contact your operator to obtain the necessary information for the WAP connection parameters.

3 Games.....

13.1 Snake

The aim of this game is to move a snake so that it eats the largest possible number of eggs. The player should avoid hitting the snake body or the edges of the play zone.

Each time an egg is eaten, the snake's tail gets longer.

Move the snake using key **2abc** (up), **4q1** (left), **8uv** (down) and **6m** (right).

13.2 Bricks

The aim of this game is to break the bricks with a ball and a racket.

When the ball hits a brick, the brick disappears. When all the bricks have been destroyed, the game moves up a level. Move the racket using keys **6m** (right) and **4q1** (left). Throw the ball using key ***B** or **0#P**.

To pause, press the **0.+** key.

13.3 Brain Activity ⁽¹⁾

The aim of "Brain Activity" is to guess the combination of various geometric forms.

The player guesses a combination of shapes using the scroll keys and number keys and confirm by pressing the **OK** key.

Pawns are displayed on the left of the screen after each guess:

- no pawn: the form is not in the final combination,
- red pawn: the form is in the final combination but at a different location,
- green pawn: the form is in the final combination and at the same location.

The game is over when the player has guessed the combination or no other attempts are allowed.

There are 3 levels (select using **QW**):

- easy: 6 possible forms + location of correction pawns matching the pawn's location.
- average: 6 possible forms + location of correction pawns not matching the pawn's location.
- difficult: 7 possible forms + location of correction pawns not matching the pawn's location.

⁽¹⁾ OT156 only.

4 Characters table

To enter a word in normal mode, press the key corresponding to the desired letter several times until the letter appears.

Key	Upper case	Lower case
1	! . , @ / : ; ' ' ! i ? i # + - * = % < > () & £ \$ ¥ _	! . , @ / : ; ' ' ! i ? i # + - * = % < > () & £ \$ ¥ _
2	A B C 2 Å Ä Æ C	a b c 2 ä å æ ç
3	D E F 3 É Ê Æ Δ Φ	d e f 3 é ê æ Δ Φ
4	G H I 4 Γ I	g h i 4 Γ i
5	J K L 5 Λ	j k l 5 Λ
6	M N O 6 Ñ Ò Ö	m n o 6 ñ ò ö
7	P Q R S 7 B Π Θ Σ	p q r s 7 B Π Θ Σ
8	T U V 8 Û U	t u v 8 ü ù
9	W X Y Z 9 Ø Æ Ψ	w x y z 9 ø æ Ψ
0 +	Access the symbol tables or 0 (see below)	
* B	Predictive/Normal/Digits in edition mode	
QW	Upper case/Lower case/Automatic capitals in edition mode	

	Predictive input	Normal input	Numeric input
0 +	Access the symbol tables	Short keypress: Access the symbol tables Long keypress: 0	Short keypress: 0 Long keypress: Access the symbol tables

The predictive mode allows you to type your messages more quickly without the need to press the same key several times.

Simply press the key required and the phone will suggest the most common words from the dictionary.

Confirm the suggested word by pressing the  or  key (confirm and insert a space at the end of the word),  key (confirm and add a punctuation mark at the end of the word) or  key (confirm without space adding).

Press the  key to exit the predictive mode anytime.

Symbols tables

You have 3 symbols tables. Press the  key to display the symbols table. Use the  and  keys to move from one table to the other. To display a character, access the desired table and press the key corresponding to the character.

For example, select Table 1 and press the  key to display "?".

Symbol table 1			Symbol table 2			Symbol table 3		
1 .	2 ,	3 ?	1 +	2 -	3 =	1 \$	2 £	3 ¥
4 :	5 ;	6 !	4 *	5 /	6 %	4 &	5 ¡	6 ¿
7 "	8 '	9 @	7 <	8 >	9 #	7 (	8)	9 _

15 Telephone warranty

Congratulations on choosing this cellphone - we hope that you will be totally satisfied with it. Notwithstanding any other applicable statutory warranties, this cellphone is guaranteed against any manufacturing defect for a period of ONE (1) year from the date of purchase shown on your invoice. Nevertheless if the statutory warranty in force in your country exceeds one (1) year, the statutory warranty is not affected by the manufacturer's warranty. The present warranty terms also apply to the battery and accessories but for a period of SIX (6) months from the date of purchase shown on your invoice.

Under the terms of this warranty, you must inform your dealer or any maintenance center (see list of maintenance centers on our website - www.tcl-alcatel-mp.com) without delay, of any defect and present the invoice given to you at the time of purchase. The dealer or maintenance center will decide whether to replace or repair, as appropriate, all or any part of the equipment (telephone or accessory) found to be defective. This warranty covers the cost of parts and labor but excludes any other costs. Repair or replacement may be carried out using reconditioned components offering equivalent functionality.

Servicing under the terms of this warranty, especially repair, modification or replacement of parts shall entitle to a three (3) month warranty unless there are statutory provisions to the contrary. This warranty shall not apply to damage or defects (to your telephone and/or accessory) caused by:

 
- 1) use not conforming with the instructions for use or installation,
- 2) non observation of the technical and safety standards applicable in the country where the equipment is used,
- 3) improper maintenance of batteries and other sources of energy, and of the overall electric installation,
- 4) accidents or the consequences of theft, (of the vehicle), acts of vandalism, lightning, fire, humidity, infiltration of liquids, atmospheric influences,
- 5) combination or integration of the equipment in hardware not supplied or not recommended by TCL & Alcatel Mobile Phones Limited or its affiliates, without express written consent for such,

- 6) modifications, alterations, or repairs carried out by parties not authorized by TCL & Alcatel Mobile Phones Limited or its affiliates, the dealer or the approved maintenance center,
- 7) use of the equipment for a purpose other than that for which it was designed,
- 8) normal wear,
- 9) deterioration caused by external causes (RF interference produced by other equipment, fluctuations in mains voltage and/or voltages on telephone lines, etc),
- 10) modifications made to the equipment even if they are unavoidable due to changes in regulations and/or modification of network parameters,
- 11) connection faults resulting from unsatisfactory radio transmission or caused by the absence of radio relay coverage.


Equipment on which markings or serial numbers have been removed or altered, and handsets on which labels have been removed or deteriorated shall be excluded from the warranty. The above provisions constitute the only claims which can be made against the manufacturer and dealer on the grounds of equipment defects, this warranty excludes any other explicit or implied warranty except the statutory warranty in force in the user's country.

There are no express warranties, whether written or oral, other than this printed limited warranty. All implied warranties, including without limitation the implied warranties of merchantability or fitness for a particular purpose, are limited to the duration of this limited warranty. In no event shall TCL & Alcatel Mobile Phones Limited or its affiliates be liable for incidental or consequential damages of any nature whatsoever, including but not limited to loss of profits, commercial loss, to the full extent those damages can be disclaimed by law. Some countries/states do not allow the exclusion or limitation of incidental or consequential damages, or limitation of the duration of implied warranties, so the preceding limitations or exclusions may not apply to you.


6 Accessories ⁽¹⁾

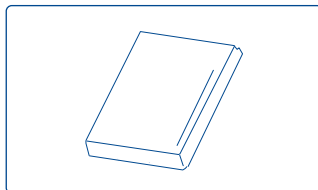


Battery
BB 10475

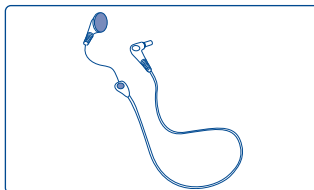 

Headset
M13

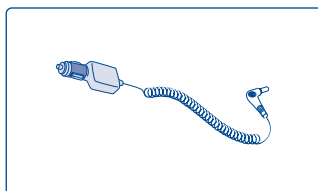 

Cigar lighter charger
C56

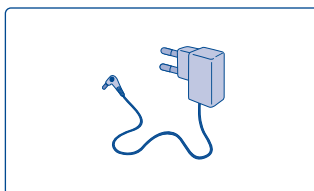 

Charger
C55



Only use your telephone with Alcatel batteries, chargers and accessories compatible with your model.

⁽¹⁾ Depending on availability.

7 Troubleshooting

Before contacting the after-sales service, we advise you to perform the following checks:

My cellphone does not switch on

- Press  until the screen comes on
- Check the battery charge level
- Check the battery contacts, remove and reinstall your battery, then turn your telephone back on

My phone does not respond since several minutes

- Press the  key
- Remove the battery and re-insert it, then switch the phone back on

My screen is difficult to read

- Clean your screen
- Use your cellphone in accordance with the recommended conditions of use

My cellphone turns off by itself

- Check that your keypad is locked when you are not using your cellphone
- Check the battery charge level

My cellphone does not charge properly

- Make sure that your battery is not completely discharged; the battery charge indicator can take several minutes and may be accompanied by a quiet hissing sound.
- Make sure charging is carried out under normal conditions (0°C +40°C)
- Make sure your battery is inserted. It must be inserted before plugging in the charger
- Make sure you are using an Alcatel battery and charger
- When abroad, check that the electrical current is compatible

My cellphone does not connect to a network

- Try connecting in another location
- Verify the network coverage with your operator
- Check with your operator that your SIM card is valid
- Try selecting the available network(s) manually (see page 54)
- Try connecting at a later time if the network is overloaded

SIM card error

- Make sure the SIM card was correctly inserted (see page 14)
- Verify with your operator that your SIM card is 3V compatible; the old 5V SIM cards cannot be used
- Make sure the chip on your SIM card is not damaged or scratched

Unable to make outgoing calls

- Make sure you have dialed a valid number and pressed the  key
- For international calls, make sure you have entered the country and area codes
- Make sure your cellphone is connected to a network, and that the network is not overloaded or unavailable
- Check your subscription with your operator (credit, SIM card valid, etc.)
- Make sure you have not barred outgoing calls (see page 56)

Unable to receive incoming calls

- Make sure your cellphone is switched on and connected to a network (check for overloaded or unavailable network)
- Check your subscription with your operator (credit, SIM card valid, etc.)
- Make sure you have not forwarded incoming calls (see page 55)
- Make sure that you have not barred certain calls

The caller's name does not appear when a call is received

- Check that you have subscribed to this service with your operator
- Your caller has concealed his/her number

The sound quality of the calls is not optimal

- You can adjust the volume during a call by means of the  key
- Check the radio reception icon 

I am unable to use the features described in the manual

- Check with your operator to make sure that your subscription includes this service
- Check to be sure this feature does not require an Alcatel accessory.

When I select a number from my directory, the number is not dialed

- Make sure that you have correctly recorded the number in your file
- Make sure that you have selected the country prefix when calling a foreign country

I am unable to create a file in my directory

- Make sure that your directory is not full; delete some files or save the files in the product directory ⁽¹⁾

My callers are unable to leave messages on my voicemail

- Contact your network operator to check service availability

I can't access my voicemail

- Make sure your operator's voicemail number is correctly entered in "Call Services/Voicemail"
- Try later if the network is busy

I am unable to send and receive messages

- Check your phone memory as it might be full, if necessary, delete some messages (see page 36)
- Contact your network operator to check service availability, see parameters (see page 38)
- Verify the server center number with your operator
- The server center may be saturated; try again later

The << - >> icon is displayed

- You are outside the network coverage area

 
I have already entered 3 incorrect PIN codes

- Contact your network operator to obtain the PUK code (Personal Unblocking Key)

⁽¹⁾ OT156 only.

Creative pocket

Your phone comes with a pocket in which you can insert a picture to customize your phone.

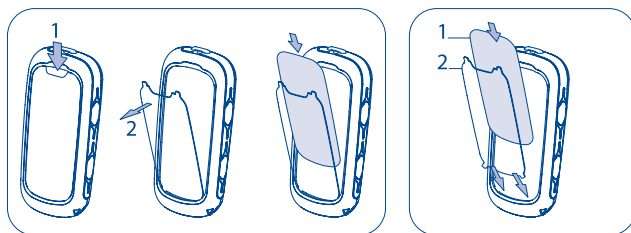

3rd cover