



Finished size 540x130mm
Cover Folded size 90x130mm

Battery Camera

Quick Start Guide

Appearance introduction

Please learn the camera interface and buttons before you use it.

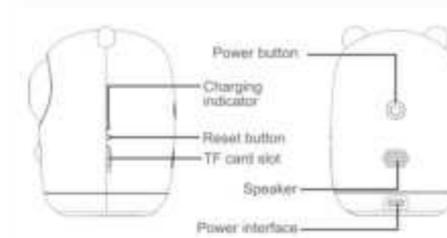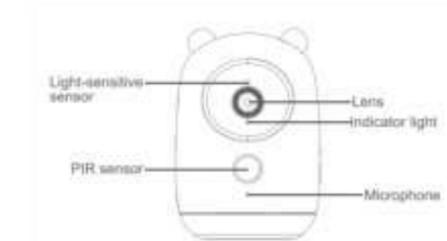

Note:
Long press the reset button to restore factory settings.

1

Download The "iCSee" APP

- Scan the QR code to download.
- iPhone: Search "iCSee" in the Apple App Store and download.
- Android phone: Search "iCSee" in the Google Play Store and download.



- Open the "iCSee" and complete user registration as prompted.



2

Quick Configuration

- Powered on camera, it will make a voice "wait be configured" after several seconds, you can make the camera pair network.
- Connect your phone to Wi-Fi network and turn on Bluetooth.



- Login to "iCSee" and click "+" in the upper right corner, and select "Add Device".
- Wait for the device to be added to be found, and click "OK".



3

- Enter the Wi-Fi password and click OK.
- Wait for the camera to complete the network configuration.



After the configuration is completed, set the device list to click "Completed".

- Click the sleep icon in the device list to wake up the camera and preview the monitoring screen in real time.



4

***If Bluetooth pairing fails, perform the following steps to configure the network.**

- Connect your phone to Wi-Fi network.



- Login to "iCSee" and click "+" in the upper right corner, and select "Add Device".
- Select "Wi-Fi Camera".



5

- Follow the guidance of the APP interface to enter the Wi-Fi password.
- Point the QR code at the camera, maintain a distance of 25-35cm.



- Wait for the camera to scan the QR code successfully, set the camera name, and click "Completed".
- Click the sleep icon in the device list to wake up the camera and preview the monitoring screen in real time.



6

Function introduction



*Motion tracking needs to be switched to smart power-saving mode for it to be displayed

- | | |
|---------------------------|---------------------------------|
| ①: TF card display | ⑳: Battery level display |
| ②: WiFi signal | ㉑: Device settings |
| ③: Device sharing | ㉒: Strobe light and audio alarm |
| ④: Play the alarm bell | ㉓: Landscape display |
| ⑤: Voice talk | ㉔: Speaker on/off |
| ⑥: Screen recording | ㉕: Screenshot |
| ⑦: Picture quality switch | ㉖: Playback |
| ⑧: Message | ㉗: Cloud storage |
| ⑨: PTZ | ㉘: Motion tracking |
| ⑩: PTZ reverse | ㉙: Favorites |
| ⑪: SD card album | |

7

Statement

- This manual is only used as a guide for related products, and may be different from the actual product, please refer to the actual product. It is recommended that you use this manual under the guidance of a professional.
- This product is an Internet product, the mobile phone client and device firmware will be updated from time to time, if there is an update, please update and upgrade online.

Description of Hazardous Material Contents

Component	Hazardous substances and elements				
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (Cr(VI))	Polychlorinated biphenyls (PCB)
Metal elements	×	○	○	○	○
Plastic elements	○	○	○	○	○
Glass elements	×	○	○	○	○
Circuit board	×	○	○	○	○
Power cable	×	○	○	○	○
Annex	×	○	○	○	○

This form is prepared in accordance with SJ/T 11364-2014
 X It means that the content of the hazardous substance in the component of the part is below the limit requirements specified in GB/T 26572-2011.
 ○ It means that the content of the hazardous substance in the component of the part does not exceed the limit requirements specified in GB/T 26572-2011. At present, there is no mature alternative in the industry, which meets the environmental protection requirements of the EU RoHS directive.

8

Product Warranty Statement

Thank you for purchasing our products, in order to protect the rights and interests of the buyer, please fill in this card carefully and read the following warranty terms carefully.

- Please keep this warranty card properly. If the warranty service card is lost, it will not be reissued. Please be sure to keep the invoice or a copy or relevant valid proof of purchase, if you are unable to provide a valid proof of purchase, the date of the product warranty period will be based on the date of the camera's manufacture.
- This warranty card must be provided at the same time as the warranty.
- The information filled in this warranty card is true, otherwise it will be invalid.
- Within 12 months from the sale of this product, if the hardware failure occurs under normal use, free after-sales maintenance service can be obtained, and the accessories are guaranteed for six months (if it exceeds six months or is damaged by itself, it must be purchased separately).

The Company shall have the right to charge for the maintenance service if the following factors are applied:

- Due to natural disasters (floods, fires, earthquakes, lightning strikes, typhoons, etc.), irresistible external forces or careless use of man-made operations Damages caused.
- Disassemble, repair or send the product to a non-certified maintenance point for inspection and maintenance.
- The company's warranty identification label is torn or unrecognizable, the warranty service card is altered or does not match the product.
- Other problems and failures caused by abnormal use.

9

Warranty Card

Product name		Model	
Purchase date		Dealer	
Issues			
Issues fixing Explanation			
Customer name		Gender	
Contact mobile		Post code	
Contact address			

Warranty period: One year, this warranty card is applicable to the series of products you purchased from our company.

10

§ 15.19 Labelling requirements.
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

§ 15.21 Information to user.
Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

§ 15.105 Information to the user.
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/ TV technician for help.

* RF warning for Portable device:
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.