

Contacts

Contact list

This menu allows you to save and manage contact address information. The Contact List allows you to add a new address or search saved contact addresses by name.

To access Contact list, from the standby screen, press the **Left Selection Key**  **Menu, Contacts**  and **1**  **Contact List.**

New contact

This menu allows you to add a new contact to the Contact List. You can enter contact address information including name, phone numbers, group information items, memos, ringtones, and a contact Picture ID.

To access New contact, from the standby screen, press the **Left Selection Key**  **Menu, Contacts**  and **2**  **New contact.**

Groups

This menu allows you to manage group information. You can also configure a ringtone for a group so that the group ringtone sounds when a call from a specific contact address within that group is received and there is no ringtone configured for the specific contact address.

To access Groups, from the standby screen, press the **Left Selection Key**  **Menu, Contacts**  and **3**  **Groups.**

Speed dial

This menu allows you to assign a frequently-called contact to the Speed Dial List. You can select a number from 2 to 9 as a speed dial.

To access Speed dial list, from the standby screen, press the **Left Selection Key**

 **Menu, Contacts**  and  **Speed dial.**

SIM management

This menu allows you to copy information from your SIM card to your phone and vice versa. If a name is duplicated during the copying operation, the information is also duplicated. You can also delete information from the SIM card.

To access SIM management, from the standby screen, press the **Left Selection Key**

 **Menu, Contacts**  and  **SIM management.**

Own number

This displays your personal phone number.

To access Own number, from the standby screen, press the **Left Selection Key** 

Menu, Contacts  and  **Own Number.**

My business card

This displays your business card stored in the phone. You can also edit it.

To access My business card, from the standby screen, press the **Left Selection Key**

 **Menu, Contacts**  and  **My Business Card.**

Messages

This menu includes functions related to SMS (Short Message Service), MMS (Multimedia Message Service), Voicemail as well as the network's service messages.

Create message

- 1 From the standby screen, press the **Left Selection Key**  **Menu**.
- 2 Select **Messages** .
- 3 Press  **Create message**.

NOTE: If you insert a picture, audio, or video file while writing a multimedia message, the file loading time will take about 5 seconds. You will not be able to activate any key during the file loading time. When the file loading is complete, you will be able to continue writing your multimedia message.

Editing a message

The following options are available when editing a message.

Using Insert

While entering text, press the **Right Selection Key**  **Insert**. The following options are available.

- **Symbol:** You can insert various symbols into your message. Pressing the **Left Selection Key**  and **Right Selection Key**  scrolls through the pages.
- **Picture:** You can select a picture to insert by using the Navigation Keys. You can preview the selected picture by pressing the **Right Selection Key**  **View**.
- **Audio:** You can insert an audio file from your saved audio files.
- **Video:** You can insert a video clip from your saved video clips.

- **Record new audio:** You can record a new audio clip by pressing the **OK Key**  **Record**. Press the **Left Selection Key**  **Options** before you begin recording to set the options (below). After recording a new audio clip, you can delete it by pressing the **Left Selection Key**  **Discard**.

Quality: Set the audio's quality to **Fine**, **Normal**, or **Economy**.

- **Template**

Text: Allows you to easily insert frequently used sentences in the text message.

Multimedia: Preset multimedia templates can be created ( **Menu** >

Messages  >  **Message settings** >  **Multimedia message** >

 **Multimedia templates** >  **New**).

Signature: Allows you to insert your own created signature.

- **More:** Allows you to insert vCard, vCalendar, vNote, vTask or Contact.

NOTE: vCard, vCalendar, vNote and vTask are created by the Contacts, Calendar, Notepad, and Tasks functions, respectively.

Using Options

While entering text, press the **Left Selection Key**  **Options**.

- **Text entry mode:** Sets the text input mode.
- **Text entry settings**

Text entry language: Allows you to set the text entry language to English or Spanish.

T9 word candidate list: Displays the word candidates as you type.

T9 next word prediction: Allows the phone to predict the next word when typing in T9 mode.

T9 dictionary: Allows you to add, delete, reset, and modify words.

Save to drafts: Saves the message to Drafts.

Cancel message: Allows you to exit the text input mode without saving your message.

Sending a Message

After completing a message, press the **OK Key**  **Send To** to select a recipient.

- Enter the recipient(s). For more options, press the **Left Selection Key** 

Options. In this menu, you can choose from the following options:

Enter number: Allows you to enter the phone number using the keypad.

Enter email : Allows you to enter an email address instead of a phone number.

Insert symbol: Allows you to enter symbols.

Caller groups: Displays Contacts Groups.

Recent messages: Choose a Contact from Recent Messages.

Recent calls: Choose a Contact from Recent Calls.

Delivery options: Allows you to set the options for Add Cc and Add Bcc.

Save to drafts: Saves the selected message to Drafts.

Text entry mode: Allows you to change the text entry mode.

Text entry settings: Allows you to set the options for Text entry language, T9 Word candidate list, T9 next word prediction, and T9 dictionary.

Cancel message: Allows you to cancel the message.

Inbox

You will be alerted when you receive a message. New messages are stored in the Inbox. In the Inbox, you can identify each message by icons. If you are notified that you have received a multimedia message, you can download the whole multimedia message by selecting it in the Inbox menu. To reach the Inbox, from the standby screen, press the **Left Selection Key**  **Menu > Messages**  >  **Inbox**. You can reply to the sender of the message by pressing the **Right Selection Key**  **Reply**.

While viewing the Inbox, press the **Left Selection Key**  **Options** for the following options:

- **Add to contact:** You can save the sender's phone number in the Contact List.
- **Delete:** You can delete the selected message.
- **Forward:** You can forward the selected message to another person.
- **Copy to SIM/Copy to phone:** You can copy the message to the phone or SIM card depending on where the text message is stored.
- **Move to SIM/Move to phone:** You can move the message to the phone or SIM card depending on where the text message is stored.
- **Select multiple:** You can select multiple messages to delete.
- **Sort by:** Allows you to sort the messages by date, sender, read/unread, or subject.
- **Message details:** You can view the following information about received messages: Type, Subject, From, and Time.
- **Delete all read msg:** You can delete all read messages.

Drafts

Allows you to view and edit the messages saved as drafts. To access drafts, from the standby screen, press the **Left Selection Key**  **Menu, Messages** , and  **Drafts**. You can delete the message by pressing the **Right Selection Key**  **Delete**.

While viewing the Drafts, press the **Left Selection Key**  **Options** for the following options:

- **Select multiple:** Allows you to select multiple messages to delete.
- **Message details:** Allows you to view the details of the message.

Outbox

Outbox is the storage place for recently sent messages. When you press the **Send Key** , you can call the recipient of the selected message.

If the message is not sent from the Outbox, you will receive a sound alert along with a Message Sending Failure notice on the screen.

To access the Outbox, from the standby screen, press the **Left Selection Key**  **Menu, Messages** , and  **Outbox**.

The following options are available for the Outbox folder by pressing the **Left Selection Key**  **Options**:

- **View status:** Display the status of message.
- **Delete:** Deletes the selected message.
- **Edit:** Allows you to edit the selected message.
- **Select multiple:** Allows you to select multiple messages to delete.
- **Sort by:** Allows you to sort the messages by date and recipient.
- **Message detail:** Allows you to view the details of the message.

Press the **Right Selection Key**  **Forward** to send the selected message to another.

Message settings

To access and configure your Message Settings, from the standby screen, press the **Left Selection Key**  **Menu**, **Messages** , and  **Message settings**.

Message alert

Allows you to set the Sounds, Volume, Alert Type, and Alert Interval.

Save to

Allows you to choose whether to save messages to the SIM card or the Phone.

Signature

Allows you to create, edit, and delete your signature, which can be configured to be sent out with your outgoing messages.

Text message

Allows you to set preferences for text messages.

The following options are available:

- **Text templates:** Predefined messages that can quickly be sent. Press the **Left Selection Key**  **Options** to access the following available options:
 - Send:** Allows you to send the selected template via Message.
 - Delete:** Allows you to delete the selected template message.
 - Edit:** Allows you to edit the selected template message.
 - Delete all:** Deletes all messages in the folder.
 - Cancel:** Returns to Text Message menu.
- **Msg center no.:** Allows you to view the phone number for the Message center.
- **Insert signature:** Allows you to insert your signature in outgoing messages.

Multimedia message

Allows you to set your preferences for multimedia messages.

The following options are available:

- **Multimedia templates:** Allows you to add, edit, and delete multimedia templates. Press the **Right Selection Key**  **New** to create a new multimedia template. Press the **Left Selection Key**  **Options** while creating a message to access the following available options:
- **Text entry mode:** Sets the text input mode.
- **Text entry settings**
 - Text entry language:** Allows you to set the text entry language to English or Spanish.
 - T9 word candidate list:** Displays the word candidates as you type.
 - T9 next word prediction:** Allows the phone to predict the next word when typing in T9 mode.
 - T9 dictionary:** Allows you to add, delete, reset, and modify words.
- **Cancel:** Allows you to exit the text input mode without saving your message.

Voicemail

Displays the voicemail number used for your voicemail service. Please do not modify unless instructed by your service provider.

Recent calls

This menu allows you to see the list of recent calls. To access Recent Calls, from the standby screen, press the **Left Selection Key**  **Menu** and select **Recent calls**



You can access the following menus:

All calls, Missed calls, Dialed calls, and Received calls.

Accessibility

This menu allows you to easily control various accessibility options.

Press the **Left Selection Key**  **Menu**,  **Accessibility**.

Menu readout

This option allows the phone to read out menus that are accessed.

Keypad tone

- **Sounds:** Allows you to select a tone that the phone sounds when a key is pressed on the dialpad. You can select an option from **Beep** and **Voice**.
- **Volume:** Allows you to control your Keypad tone volume.

Large text

Allows you to set a large size for text. Select from **On** or **Off**.

Invert color

Allows you to set the color contrast for better screen viewing. Select from **On** or **Off**.

Mono sound

Allows you to enable or disable the Mono sound function.

Senior mode

Allows you to turn the senior mode on or off. Senior mode enhances high frequencies to reduce the effects of hearing loss.

TTY

Allows you to enable TTY Mode in order to contact other TTY devices. Select from **TTY full**, **TTY talk**, **TTY hear**, or **TTY off**.

Hearing aid

Allows you to enable or disable the Hearing aid function.

Voice command

Allows you to set the Voice command options.

Notepad

You can create up to a maximum of 30 memos.

To access Notepad, from the standby screen, press the **Left Selection Key**  **Menu**,  **Notepad**.

- 1 Press the **Left Selection Key**  **New** to create a new memo.
- 2 Input the memo and press the **OK Key**  **Save** to save.

My Folder

Audio

To access Audio, from the standby screen, press the **Left Selection Key**  **Menu, My folder**  and **1^{Audio}** **Audio**.

- **Buy ringtones:** Allows you to buy ringtones.
- **Record voice:** Allows you to record voice notes.
- Saved audio files are displayed in the list.

Pictures

To access Pictures, from the standby screen, press the **Left Selection Key**  **Menu, My folder**  and **2^{ABC}** **Pictures**.

- **Buy graphics:** Allows you to buy images.
- The picture files saved on your phone are displayed.

Video

To access Video, from the standby screen, press the **Left Selection Key**  **Menu, My folder**  and **3^{DEF}** **Video**.

- The video files saved on your phone are displayed.

NOTE: Please note that DRM can restrict some functions, such as sending and editing.

Other files

When you receive files of an undefined format (such as .vcs, .vcf, etc.) the files are saved in this folder.

To access Other files, from the standby screen, press the **Left Selection Key**  **Menu, My folder** , and  **Other files**.

The following options are available by pressing the **Left Selection Key** 

Options:

- **Send via:** Send the selected file via Message.
- **Delete:** Allows you to delete the selected file.
- **Move:** Allows you to move the selected file to another folder.
- **Copy:** Allows you to copy the selected file to another folder.
- **Rename:** Allows you to edit the name of the selected file.
- **Select multiple:** Allows you to select multiple files at once to perform various functions.
- **Sort By:** Allows you to sort the files by Name, Date, and Type.
- **File information:** Allows you to view information about the selected file or used memory space on your phone.

File manager

This function allows you to view the content in your internal phone memory.

To access File manager, from the standby screen, press the **Left Selection Key**  **Menu, My folder** , and  **File manager**.