Monitor Stand with Wireless Charging back indicator light power input port top wireless charger right - USB-A ports Before you get started: • Be careful when placing the monitor stand, avoid edges of surfaces so it does not fall. • When wireless charging placement matters, be sure to place your wireless compatible device in the • Thicker cases as well as some materials may interfere with the ability to wirelessly charge. • Not all phones can wirelessly charge. If you are unsure if your phone has this capability refer to the manufactures user manual. • If you are using a case that doubles as a wallet be sure to remove credit cards, ids, and anything with a

magnetic strip before charging as they may become damaged.

What's included:

- Monitor Stand
- Power Supply. Input: 100-240v~ 50/60Hz 1.2A Max Output: DC 12V 2.5A.

Indicator:

- No Light Charger is in stand-by mode.
- Solid Blue Charging your device.
- Solid Green Device is fully charged (Samsung phones only).
- Flashing Green Foreign object detection. Pieces of metal or other materials may cause overheating and damage your charger or device. Remove object immediately.
- Flashing Green Over Temperature Protection. The charger has become too warm and is no longer receiving power to ensure the charger does not become damaged.

- Place the monitor stand on a sturdy flat surface.
- Connect the power supply to the monitor stand and plug it into a grounded wall outlet.
- Using the USB-A charging cable specific to your device plug the USB-A end into the monitor stand
- Plug the charging tip specific to your device into your device, the device will indicate that it is charging.

Wireless charging:

- Place the monitor stand on a sturdy flat surface.
- Connect the power supply to the monitor stand and plug it into a grounded wall outlet.
- If you are using a wallet case or wallet pocket remove credit cards or any card with a magnetic strip before charging to prevent damage.
- Place your Qi-enabled device onto the wireless charger and align the device with the center of the charging surface or the device may not charge.
- · Charge time will vary by device.

- Do not use near any water source.
- Remove the credit cards and other cards with magnetic strips to prevent damage while wireless charging.
- Keep the charger away from extreme heat and direct sunlight.
- Do not modify or repair this device.
- Do not use in high temperatures or extreme weather.
- Do not use chemical detergents to clean your device, use a soft dry cloth. Immediately unplug it from its power source if it gets wet.

Troubleshooting:

- If the charger is not working double check that the power supply is plugged into the monitor stand and a grounded wall outlet.
- Certain phone cases may interfere with wireless charging. Remove phone case for best results.
- Double check the placement of the device on the wireless charger. For best results, the center of the device should be on the center of the charger.
- Wireless charging is compatible with iPhone® 8 and newer phones as well as other Qi-enabled devices. Please consult your devices user manual if you are unsure if your device is compatible. Note: Apple Watch® is not compatible with this device.

THRESHOLD.

10003 MEE H YOU THE LEEK

FCC ID: 2AO23-DO7P Model: DO7P Input: DC12V/2.5A Output: Wireless Charger: 12W Max USB 1: DC 5V/2.4A USB 2: DC 5V/2.4A

USB1+USB2: DC 5V/2.4A Total Made in Vietnam
This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation. Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and cradiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 Increase the separation between the equipment and receiver.
 Connect the equipment into a ordet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other

Target Corp. Mpls. MN, 55403 Phone: 612-304-6073

For qualified repair specialists requesting repair information and parts please contact the original manufacturer at customersupport@gemsfindyours.cor

FRONT BACK

7.5 inches