

 
S8000sfc-Front.fm Page 1 Monday, March 8, 1999 4:04 PM

SANYO

INSTRUCTION MANUAL AND COOKING GUIDE

EM-S8000

Microwave Oven

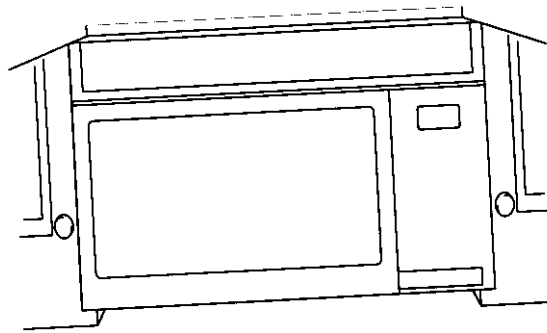

Read these instructions carefully before using your microwave oven.
If you follow the instructions, your oven will provide you with many years of
good service.

SAVE THESE INSTRUCTIONS

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- (a) **Do not** attempt to operate this oven with the door open since open-door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks.
- (b) **Do not** place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- (c) **Do not** operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the:
 - (1) DOOR (bent)
 - (2) HINGES AND LATCHES (broken or loosened)
 - (3) DOOR SEALS AND SEALING SURFACES
- (d) **The oven** should not be adjusted or repaired by anyone except properly qualified service personnel.

SPECIFICATIONS

Model:	EM-S8000
Power Source:	AC 120V, 60 Hz
Power Consumption:	1680W
Maximum Output:	1000W*
Oven Capacity:	1.5 cu. ft.
Turntable Diameter:	10- ¹³ / ₁₆ "
Dimensions: (w x h x d)	29- ⁷ / ₈ " x 17" x 14- ¹ / ₄ "
Weight: Approx.	68 lbs.

Specifications subject to change without notice.

*According to IEC-705 test procedure. The IEC-705 test procedure is an internationally recognized method of rating microwave wattage output.

Please record your product's information

When you call to request service, you need to know your complete Model number and Serial number. Please fill in the information below. Please also record purchase date, price and where purchased.

Model Number: _____ (Located on the front of the oven)

Serial Number: _____ (Located on the front of the oven)

Date of Purchase: _____

Purchase Price: _____

Where Purchased: _____

 
IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should be followed, including the following:


WARNING - To reduce the risk of burns, electric shock, fire, injury to persons or exposure to excessive microwave energy:


1. Read all instructions before using the appliance.
2. Read and follow the specific "PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY" on page 2.
3. As with most cooking appliances, close supervision is necessary to reduce the risk of a fire in the oven cavity.
4. **If a fire should start:**
 - Keep the oven door closed
 - Turn the oven off, and
 - Disconnect the power cord or shut off power at the fuse or circuit breaker panel.
5. **Keep in mind the following rules at all times:**
 - a. Do not overcook food. Carefully attend the appliance if paper, plastic, or other combustible materials are placed inside the oven to facilitate cooking.
 - b. Do not use the oven cavity for storage purposes. Do not store combustible items such as bread, cookies, paper products, etc. inside the oven. If lightning strikes the power line, the oven may turn on by itself.
 - c. Remove wire twist-ties and metal handles from paper or plastic containers/bags before placing them in the oven.
6. Some products such as whole eggs, water with oil or fat, sealed containers and closed glass jars may explode and therefore should not be heated in this oven.
7. Use this appliance only for its intended uses as described in the manual. Do not use corrosive chemicals or vapors in this appliance. This oven is specifically designed to heat or cook food. It is not designed for industrial or laboratory use.
8. As with any appliance, close supervision is necessary when used by children.
9. Do not operate this oven if it has a damaged cord or plug, if it is not working properly or if it has been damaged or dropped.
10. This appliance should be serviced only by qualified service technicians. Contact the nearest authorized service facility for examination, repair or adjustment.
11. Do not cover or block any vents on the oven.
12. Do not store or use this appliance outdoors.
13. Do not use this oven near water, near a kitchen sink, in a wet basement or near a swimming pool, and the like.
14. Do not immerse cord or plug in water.
15. Keep cord away from heated surfaces.
16. Do not let cord hang over edge of table or counter.
17. When cleaning door and oven surfaces that meet when door is closed, use only mild, nonabrasive soaps or detergents applied with a sponge or soft cloth. (See "Cleaning" instructions on page 30.)

SAFETY





  S8000sfc-safety.fm Page 6 Wednesday, April 21, 1999 9:12 AM



- 
18. Do not mount over a sink.
 19. Suitable for use above both gas and electric cooking equipment.
 20. Intended to be used above ranges with maximum width 36 inches.
 21. Clean ventilation hoods frequently. Grease should not be allowed to accumulate on hood or filter.
 22. When flaming foods under the hood, turn the fan on. The fan, if operating, may spread the flame.
 23. Use care when cleaning the vent-hood filter. Corrosive cleaning agents, such as lye-based oven cleaners, may damage the filter.
- 

  SAVE THESE INSTRUCTIONS



GROUNDING INSTRUCTIONS



DANGER

Electric Shock Hazard

- Touching some of the internal components can cause serious personal injury or death. Do not disassemble this appliance.



WARNING

Electric Shock Hazard

 
- Improper use of the grounding plug can result in electric shock. Do not plug into an outlet until appliance is properly installed and grounded.

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord that has a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

Consult a qualified electrician or serviceman if the grounding instructions are not completely understood or if doubt exists as to whether the appliance is properly grounded.

Do not use an extension cord. If the power supply cord is too short, have a qualified electrician or serviceman install an outlet near the appliance.

Properly polarized and grounded outlet

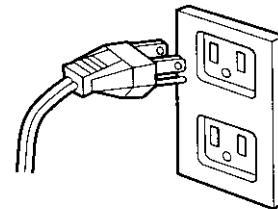

Three-pronged (grounding) plug

NOTE: If your electric power line or outlet voltage is less than 110 volts, cooking times may be longer. Have a qualified electrician check your electrical system.

SAFETY

S8000sfc-assembly.fm Page 8 Monday, March 8, 1999 4:05 PM


SET UP

NAMES OF OVEN PARTS AND ACCESSORIES

Remove the oven and all materials from the carton.

Your oven comes with the following materials and accessories:


Turntable	1
Turntable roller rest	1
Instruction Manual	1
Installation Instructions	1
Grease filter	2
Damper assembly	1
Hardware package	1
Upper cabinet template	1
Wall template	1

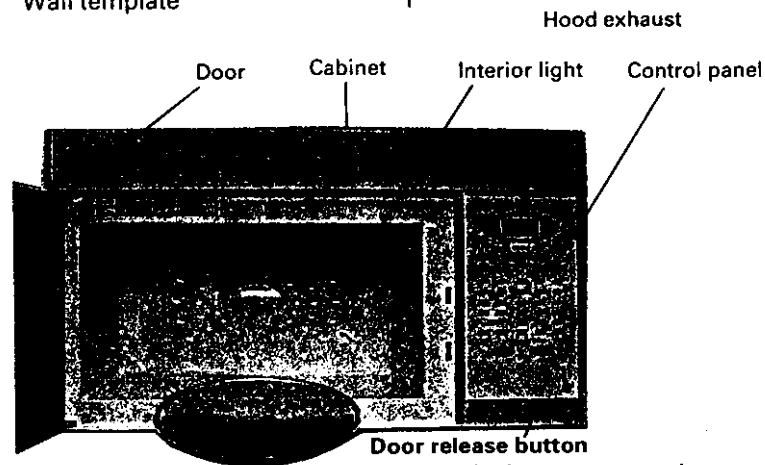 

Safety interlock system


Shuts off oven power if door is opened during operation.

 - Press the button to open door.
- When you open the door during cooking process, the cooking stops but the program will not be canceled. Touch **START** to resume cooking.

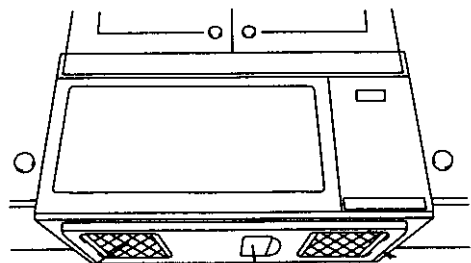

Grease filter
Do not run the fan without grease filters.

 TURNTABLE INSTALLATION

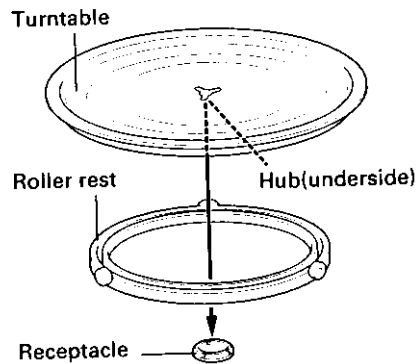

1. Place the roller rest on the cavity bottom.
2. Place the turntable on top of the roller rest as shown in the diagram. Make sure the turntable hub is securely locked in the receptacle.

- **Never place the turntable upside down.** The turntable should never be restricted.
- Both turntable and roller rest must always be used during cooking.
- All food and containers of food are always placed on the turntable for cooking.
- **The turntable returns to its original starting position** when cooking is finished. The light and fan will remain on but microwave power is turned off.
- The turntable rotates clockwise and counterclockwise; this is normal.
- If turntable or roller rest cracks or breaks, contact your nearest authorized service center.

SET UP