

Contents

1 For your safety	2
2 Start to use.....	4
3 Operation manual.....	6
4 Call historoy.....	7
5 File manager.....	7
6 Contacts.....	7
7 Message.....	7
8 Multimedia.....	8
9 Settings.....	9
10 Internet	10
11 Game	10
12.Tools.....	10
13:Appendix.....	11
14.FCCWarning.....	14

1 For your safety

 Be careful when you are driving.

Please abide by the relative local laws and regulations. Use both of your hands to drive! Put the handset in its seat to avoid falling down. The ballonet will charge quickly when it is in danger, please don't put anything in its security scope, including fixed phone and handset equipment. Otherwise it may cause serious body injuries.

 The handset must be turned off when you are on the plane.

The interference of mobile will influence the flight. It is illegal to use mobile on phone, please power it off.

 The handset must be turned off when you are in blowing-up area.

When you are at a blowing-up area or near it, please abide by the relevant laws and power your mobile off.

 The handset must be turned off when you are near a danger product.

Please do not use mobile when you are near gas station or chemical plant.

 The handset must be turned off when you are in a hospital.

You have to abide by the relevant regulations of hospital and turn your handset off when you are near medical equipment. Any wireless transmission device, including mobile, will interfere those equipment not fully-protected.

Interference

All the mobile handset may be interfered by the radio and reduce the performance of the handset.

Professional service

Only the professional can setup or maintain the handset. Improper installation or maintenance would bring out great danger, it also disobey regulations of maintenance guarantee.

Accessory and battery

Only the appointed accessory and battery can be used. It is suggested that you return the used battery to the factory or put it in the appointed recycle zone. Do not put it together with other rubbish or discard it.

Reasonable use

Please use the handset in reasonable way. It is prohibited to put your handset in high temperature (over 60°C), such as beside the window where there is sunshine. Please use wet or antistatic cloth to clean the handset. Do not use dry or static cloth to clean it. Your handset is not waterproof, please keep it dry.

Emergency call

Please make sure the handset is powered on so that it can dial the emergency call. In idle mode, the handset can dial emergency numbers, such as 112, 911 and 110. Press dial key to dial it, report your location and the situation briefly. Do not end the call without permission.

2 Start to use

2.1 Battery installation

Please charge the battery after it has been completely used up, and use it after it has been completely charged. Three times later, the battery will be in best status.

2.1.1 Installing and discharging of the battery

Pull the cover to take out the battery, and put it inside then close the cover to install it.

2.1.2 Charge of the battery

connect the charger with power supply

connect the charge with handset

The battery indication on LCD will bicker. If the handset is powered off when charging, LCD will display charging picture. If you overuse the handset when it is out of battery, LCD will display charging picture a while after you begin to charge it.

When the battery indication is full and stops bickering, it means the handset has been completely charged. If the handset is charged when power off, the indication will also be displayed on LCD. It will take about 3 hours to charge, the battery, the handset and the charger will get warm during the charging time.

Please disconnect the jacket and charger after finishing charging.

The handset can be normally used when it is charging.

2.1.3 Use of the battery

When the handset is powered off automatically or when there is low battery indication, you should charge it in time. If the battery is not run out of energy before charging, the handset will adjust and reduce the time of charging.

The idle time and talk time of the handset specified by the factory is based on the perfect working environment. Actually, the working time of the battery will vary with the network status, work environment and the way of usage.

2.2 Connecting to network

2.2.1 SIM card

The phone supports two SIM cards which can be in use at the same time when power on. Your network provider will supply you two inserted SIM cards. SIM card is the key for you to enter the digital GSM network. Please insert the useful SIM card before using the phone. Two SIM cards can be inserted into the phone at one time and switched to your wanted one at power-on such as dual SIM open, only one SIM open.

2.2.2 Insert and take out the SIM card

Normally, SIM card is put in SIM card slot, please take it out carefully before installing.

Power off the handset, discharge the battery or other power supply.

Insert the card, the metal face being downward.

When you need to take out the card, please turn off the handset and discharge the battery first.

2.2.3 Connecting to network

After unlocking the SIM card, the handset will search the registered network or other available network. Once connected, the name of network supplier will show in the middle of the LCD. At this time, your handset is in idle mode.

3 Operation manual

3.1 Power on/off

3.1.1 Power on

Long press the power key to turn on the handset.

If there is prompt “insert SIM card”, please power it off and check the SIM card.

When the handset is powered on and indicate you to input the handset password or the PIN code, you have to input it correctly. If you do not know the PIN code yet, please contact with the network supplier. The default handset password is 1234.

Long press the power key to turn off the handset. The handset is power off after displaying the flash on LCD.

3.1 . 2 Shutdown

If you want to turn your phone off, press the hang-up button long. When the screen shows off animation, the phone closes.

4 Call historoy

4.1 SIM1call history

4.1.1Missed calls: you can view SIM missed calls.

4.1.2Dialled calls: you can view SIM dialed calls.

4.1.3Received calls: you can view received SIM received calls.

4.1.4Delete call logs: You can either delete all call records or separated delete the missed, the dialed , received ,rejected and the all call..

5 File manager

You can view the file from phone and memory card.

Open: open an appointed file

New folder: add a new file folder

Format: format the file

Note : you will lose all the information after formatting.

6 Contacts

In the phonebook, you can quick search、 search contact、 add number、 copy all, delete、 caller grou

7 Message

7.1 Write message

You can write Text message .

7.2 Inbox

There are SIM. Text message and inbox. If the inbox has no message, there will be a prompt “No message”.

7.3 Outbox

You can check the messages which one is unsent.

7.4 SMS settings

You can set profile setting ,common settings, memory status, preferred storage.

8 Multimedia

8.1 Image viewer

8.2 Audio player

Play audio files, MP3 songs; to play audio files, MP3 songs, press the Up and Down keys to adjust the volume, press the left and right keys to select the present, the next song, press the OK button for the on / off Music

[Music list]: Into playlist interface. Can be added to the play list editing and other operations

8.3 Video player

Use the function of video player

8.4 FM radio

8.5 Sound recorder

8.6 Camera

The phone supports photo, so you can capture your favorite scenes anywhere. Photos will be saved in the phone comes with a file system, photographs as JPG format, you can phone provides photographs sent to a

computer via USB connection to view, can also be set Image for the standby

Note: This function can work without driver under Windows XP by directly connecting your mobile to the computer

8.7 Video recorder

9 Settings

9.1 Call settings

9.1.SIM1/SIM2 Call settings.

9.2 Phone settings

9.3 Flight mode

Turn on flight mode on the airplane

9.4 Security

9.5 User profiles

9.5.1 General mode

9.5.2 Meeting mode

9.5.3 Outdoor mode

9.5.4 Indoor mode

9.5.5 Headset mode

9.5.6 Bluetooth mode

9.6 Network settings

9.7 Restore factory settings

10 Internet

Set the local Internet parameters can access the Internet

11 Game

Monkey: Use key 2 or up-arrow key to move upward , key 4 or left-arrow key to move leftward b,key 8 or down-arrow key to move downward key 6 or right-arrow key to move rightward , and key 5 to attack enemies.

12.Tools

12.1 Alarm

12.2 Torchlight

12.3.Bluetooth

[Open Bluetooth]: Choose to activate the Bluetooth

[Bluetooth visibility]:Bluetooth visibility set

[Paired device]; Search and paired Bluetooth devices

[Device name]; Local Bluetooth name

[Bluetooth file storage]; Storage location

[Help]: Help Documentation

12.4 Calculator

Can be continuously mixed arithmetic, the operation is simple, practical, convenient.

12.5 Calendar

Press the left soft key to access the calendar display interface, the first line shows the year, month, and the third line shows the week, the middle section shows the specific date of a month, the last line shows the right and left soft key in the message. Interface in the calendar, press the arrow keys on the date forward one week, press the arrow keys to move one week after the date, press the left arrow key date forward one day, press the right arrow keys to move the day after the date, select the date to a dark display

Add task log

You can view the date. Press the left function key,

Jump to date: skip to the appointed date .

12.6 World clock

Know the clock around the world

12.7 Ebook

E-book is a new portable tool for reading, You can read a variety of books on your phone.

12.8 Tasks

Add edit reminder task

13:Appendix

Appendix 1: Troubleshooting

If you find exceptions when operating the mobile phone, restore the factory settings and then refer to the following table to solve the problem.

If the problem persists, contact the distributor or service provider.

Fault	Cause	Solution
SIM card error	The SIM card is damaged.	Contact your network service provider
	The SIM card is not in position.	Check the SIM card
	The metal face of the SIM card is polluted.	Clean the SIM card with a clean cloth
Poor received signal quality	Signals are obstructed. For instance, radio waves cannot be effectively transmitted nearby a high building or in a basement.	Move to a place where signals can be effectively transmitted
	Line congestions occur when you use the mobile phone in high-traffic hours	Avoid using the mobile phone in high-traffic hours

The mobile phone cannot be powered on	The battery energy is exhausted.	Charge the battery
Calls cannot be dialed	Call barring is activated	Cancel call barring
The mobile phone cannot connect the network	The SIM card is invalid	Contact your network service provider
	The mobile phone is not in a service area of the GSM network	Move to the network operator's service area
	The signal is weak	Move to a place where the signal quality is high
The battery cannot be charged	The charging voltage does not match the voltage range indicated on the charger	Ensure the charging voltage matches the voltage range indicated on the charger
	An improper charger is used	Use the charger specially designed for the mobile phone

	Poor contact	Ensure the charger plug is in good contact with the mobile phone
--	--------------	--

14.FCC Warning

Specific Absorption Rate (SAR) information SAR tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value, in general, the closer you are to a wireless base station antenna, the lower the power output.

Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC, Tests for each phone are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC.

For body worn operation, this mobile phone has been tested and meets the FCC RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that contains no metal and that positions the handset a minimum of 0.5cm from the body.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a

residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.