













■五秒闪烁-次白灯:

1、来电2、通话中3、低电量

(1))) 音量调节


音量加:三击右声道加音量


音量减:三击左声道减音量


13参数展示 ■ 耳机参数 配对名称 YJ-33 产品类型 开放式耳机 芯片版本 V5.4 播放时长 喇叭尺寸 ф16 频率响应 耳机电池规格 80mAh/3.7V 充电时间 充电方式 顶针接触 待机时间 ■ 智能屏参数 屏幕尺寸 2.01寸 屏幕分辨率 240*296 电池规格 600mAh/3.7V 充电方式

14耳机注意事项

产生高温的地方。

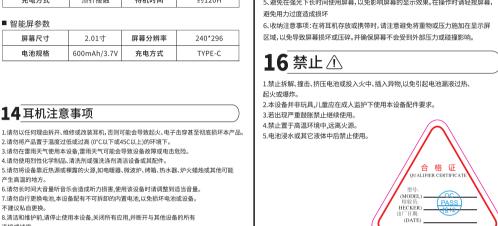

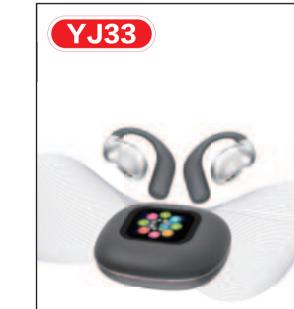

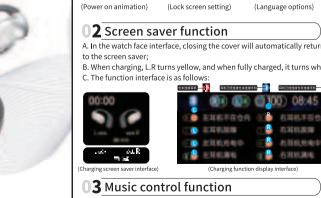

. Lyrics synchronization display function;

1 Boot animation













6 空间音频功能

■ 注· 耳机连上了仓才能选择

(空间音频未开启)

7 控制界面风格选择

点击选择,项即可切换;

8 查找耳机功能

■耳机连上了仓才能选择

A、可以查找 L 左耳, R 右耳;

功能,避免不适感觉):

A、看剧模式; B、音乐模式; C、游戏模式;



option to switch.













wer on: long press the touch button for 1.5 econds Power off: long press the touch button for 3 seconds, mair olume up: triple-click the right channel to increase the volume Volume down: triple-click the left channel to decrease the volume Switch previous/next song

4、播放音乐,暂停音乐

Next song: Double-click the right channel to switch songs evious song: Double-click the left channel to switch songs (Left-ear touch indication II) Play/Pause Click the left/right ear to play or pause the music Switch between Chinese and English

nglish without connecting to the phone Incoming call status Answer/Hang up: Single-click to answer, single-click to hang up during a callReject a call: Long-press the left/right audio channel for 2 seconds to reject a call

'🚉' Calling Voice Assistant Long press the right channel to wake up SIRI

12 LED light flashes

1. Turn on the computer ■ Flashes white light once every five seconds:

1. Incoming call 2. On call 3. Low battery

13 Parameter display

Pairing Name	YJ-33	Product Type	Open Headphones
Chip version	V5.4	Playing time	About 10H
Speaker size	ф16	Frequency Response	20Hz-20kHz
Battery Specifications	80mAh/3.7V	Charging time	1.5H
Charging method	Ejector contact	Standby time	About 120H

■ Smart screen parameters

Headphones precautions					
ry Specifications	600mAh/3.7V	Charging method	TYPE-C		
creen size	2.01寸	Screen resolution	240*296		

Do not disassemble, repair or modify the headset for any reason, otherwise it may cau: re, electronic breakdown or even complete damage to the product. nigh (below 0°C or above 45C)

ock hazards.

its accessories. aters, microwave ovens, ovens, water heaters, stoves, candles or other places that n

Do not listen to music at high volume for a long time, which may cause hearing of ease adjust the volume to an appropriate level when using the device.

Do not replace the battery by yourself. This device is equipped with a non-rem ilt-in battery to avoid damaging the battery or the device. is not recommended to replace it privately.

d disconnect all connections or cables with other devices.

15 屏幕注意事项 . 操作按钮或触摸屈·请按昭说明书中的指示准确操作按钮或触摸屈、避免错误操作。

,显示内容:示屏可以显示各种信息,包括来电通知、音乐播放状态、电池电量等。 请确保了解屏幕上显示的各种信息的含义和操作方法。 3、屏幕保护与维护: 为了保护屏幕免受划伤和损坏,建议避免在尘土或湿润环境中 吏用耳机。请使用柔软的布清洁屏幕,并避免使用含有化学成分的清洁剂。 电源状态指示:显示屏通常会显示电池电量、连接状态等信息。请注意屏幕上显示的 3关指示符号或图标,以便了解耳机的当前状态。

5、避免在强光下长时间使用屏幕,以免影响屏幕的显示效果。在操作时请轻按屏幕,

区域、以免导致屏幕损坏或压碎。并确保屏幕不会受到外部压力或碰撞影响。

1.禁止拆解、撞击、挤压电池或投入火中、插入异物,以免引起电池漏液过热、

B、进入了 L 或者 R 后,进入查找响应界面(图标提醒要在耳机不在耳朵上使用此

call is shown as shown in the figure **7** Control interface style selection

9 Call interface function

■ Green and white flashing
■ No flashing 1 Power off

2. Fully charged 4. Play music, pause music

15 Screen Notes

■ Headphone parameters 1. Operating buttons or touch screen: Please operate the buttons or touch screen accurately according to the instructions in the manual to avoid incorrect operation 2. Display content: The display screen can display various information, including call notifications, music playback status, battery power, etc. Please make sure you understand the meaning and operation methods of the various information displayed on the screen.

3. Screen protection and maintenance: In order to protect the screen from scratches and damage, it is recommended to avoid using headphones in dusty or humid environments. Please use a soft cloth to clean the screen and avoid using detergents containing chemical ingredients.

4. Power status indication: The display screen usually displays information such as battery power and connection status. Please pay attention to the relevant indicator symbols or icons displayed on the screen to understand the current status of the headphones.

. Avoid using the screen for a long time under strong light to avoid affecting the display effect of the screen. Please press the screen lightly during operation to avoid damage caused by excessive force.

6. Storage precautions: When storing or carrying the headphones, please be careful to avoid applying heavy objects or pressure to the display area to avoid damage or crushing the screen. And ensure that the screen is not affected by external

16 prohibit 🗥

preign objects to avoid battery leakage, overheating, fire or explosion. 2. This device is not a toy. Children should use this device under adult supervision

4. Do not place it in a high temperature environment and keep it away from fire. 5. Do not use the battery after it is immersed in water or other liquids.

用户手册 **3** Music control function . Control the next and next songs, play and pause; User manual B. Volume control function (accessed by the speaker interface button at the bottom of the music interface);

is connected to the warehouse A. You can choose to turn the equalizer function on or off; there is a switch in upper right corner; B. You can select 7 different sr

■ Note: This option can only be selected when the headset





5 Camera function Note: The headset needs to be paired with the mobile phone.

4 Equalizer function

and press the icon when the mobile phone camera functio

8 Find Headphones Features

■ The headset can only be selected when it is connected to the warehouse A. You can search for L for the left ear and R for the right ear; B. After entering L or R, enter the search response interface (the icon reminds you to use this function when the earphone is not on your ear to avoid discomfort):

■ There are three control modes: default (slide left and right)







FCC warning:

- 1. This device should be installed and operated with minimum distance 0cm between the radiator&your body.
- 2. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.
- 3. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- 4. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- —Reorient or relocate the receiving antenna.
- —Increase the separation between the equipment and receiver.
- —Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- —Consult the dealer or an experienced radio/TV technician for help.