

## Plus CA-RC7 Remote control Transmitters

The LCD screen on the 2-way remote control displays icons. It indicates and informs you in any of the 31 functions of the system and the present status of the system.



## LCD Remote Icons

|  |                                                                       |  |                                                                           |
|--|-----------------------------------------------------------------------|--|---------------------------------------------------------------------------|
|  | Door Lock<br>Vehicles Doors are Locked                                |  | Warn Away<br>Shocks on horn 7 seconds (table 1)                           |
|  | Door Unlock<br>Vehicles Doors are Unlocked                            |  | Shock Sensor<br>Shocks Sensor triggered (table 4)                         |
|  | Armed Mode<br>Security System is Armed                                |  | Power Save Mode<br>Saves The Battery Power when Transmitter is not in Use |
|  | Valet Mode<br>Security System is in Valet Mode                        |  | Vibrate Mode<br>Vibrates when Security System is triggered                |
|  | Remote Transmission<br>Transmitting a Signal                          |  | Low Battery<br>Replaces the Transmitter Battery                           |
|  | In-Range Indicator<br>You are within Remote Control Range             |  | Ignition<br>Trigger On Ignition Switch (table 1)                          |
|  | Door Triggered<br>Doors are Opened (table 5)                          |  | Driver Paging / Lost and Found<br>Someone is Paging you from the Vehicle  |
|  | Trunk/Head Triggered<br>Trunk/Head are Opened (table 2)               |  | System Triggered<br>Alerts that the System has been Triggered             |
|  | Second Vehicle<br>Communicant with a Second Vehicle's Security System |  |                                                                           |

## Plus 5850 Remote Control Transmitters

| Transmitter Buttons | System Function                          | Remark                                                                  |
|---------------------|------------------------------------------|-------------------------------------------------------------------------|
|                     | Lock Doors & Alarm System                |                                                                         |
|                     | Armed and Chime the 2 Stage Shock Sensor | Chime twice within 3 Seconds                                            |
|                     | Auto System and Hidden Alarm Function    | Press within 3 Seconds For 1-Way Transmitter Press * -                  |
|                     | Start Arming/Disarming                   | Ignition in "OFF" Position                                              |
|                     | Armed Auto Car Locking Mode              | Ignition in "ON" Position, Press and Hold for 2 Seconds                 |
|                     | Unlock Doors & Disarm System             |                                                                         |
|                     | Two Stage Door Shock and Disarm System   | Press twice within 3 Seconds                                            |
|                     | Shock Release - Channel 2                | Press and Hold for 2 Seconds For 1-Way Transmitter Press *              |
|                     | Remote Arming System                     | While the System is "Disarmed" For 1-Way Transmitter Press * *          |
|                     | Channel 3 Timer Central Output           | For 1-Way Transmitter Press  *                                          |
|                     | Car Location                             | For 1-Way Transmitter Press                                             |
|                     | Panic Function                           | Press and Hold for 3 Seconds For 1-Way Transmitter Press  for 3 Seconds |

*Handwritten note:* 5850