



Mouse button


illuminated

- Left button
- Right button
- Scrolling wheel

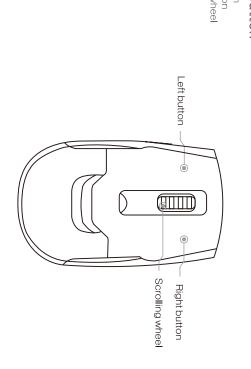

Keyboard

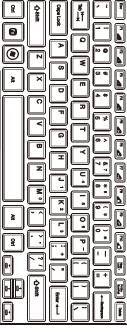

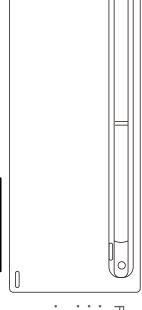

Multimedia Hot Keys

- Fn+Multimedia
- F1: Music
- F2: Volume—
- F3: Volume+
- F5: Previous F4: Mute
- F6: Next

- F7: Play/Pause
- F9: Refresh
- F8: Stop
- F10: E-mail

Features:

- RF 2.4G Wireless technology
- Low power consumption
- Support Windows 2000/XP/Vista/ With 2*AAA battery for Keyboard 2*AAA battery for Mouse

7/8 and Mac 10.0 or higher version

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, (2) this device must accept any interference received, including interference that may cause undesired operation. pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against

interference to radio communications. However, there frequency energy and, if not installed and used in accordance with the instructions, may cause harmful harmful interference in a residential installation. This equipment generates uses and can radiate radio

 Reorient or relocate the receiving antenna. harmful interference to radio or television reception, which can be determined by turning the equipment off is no guarantee that interference will not occur in a particular installation. If this equipment does cause and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Increase the separation between the equipment and receiver.

-Consult the dealer or an experienced radio/TV technician for help -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected

could void the user's authority to operate the equipment. Any Changes or modifications not expressly approved by the party responsible for compliance

Insert the batteries as the show in the battery compartment for mouse and keyboard.

Replace the battery cover.

Take out the micro receiver from mouse, and plug it into the USB Port of your computer.

Step: