

Voice Mode

SYSTEM

 


BG COLOR

POWER SAVINGS

EXIT

BG COLOR: Selects a LCD backlight color

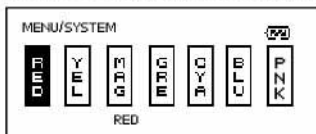

POWER SAVINGS : Sets the time duration when the player is automatically turned off if you don't press any button in stop mode. If you set to DISABLE, the automatic shutdown function will not be activated.



ABOUT

Displays the firmware version and the memory capacity.

INFORMATION	
Version: 1.000	Current firmware version
Free: 100Mbyte	Available memory capacity
Total: 256Mbyte	Total memory capacity

EXIT

Saves all settings and returns to the voice mode.

MP3
PLAYER

FM Mode

Basic Functions

Scanning FM Frequency

Scans the frequency of the broadcasting to listen.

Automatic frequency scanning

Press the ◀◀/▶▶ [->] button and hold it to scan the frequency automatically while you're listening to the radio.

Manual frequency scanning

Press the ◀◀/▶▶ [->] button once shortly while listening to the radio.

Volume Control

Press the +/- [< >] button shortly to increase the volume by 1 step, or hold the button to increase the volume continuously.



Warning

 
- Do not increase the volume too high during playback using an earphone. Your hearing ability can be impaired.
- Turn the volume down first and increase to the one you want.

FM Recording


Records the radio channel that you're currently listening to.

Record: Press the REC/STOP [< >] button once shortly.

Stop: Press the REC/STOP [< >] button once shortly again.



Recording

 

Stop Recording


Note

 
- FM Recording files will be saved and identified by the letter "V" ahead of three digit numbers.
- You can play back the saved channel in a voice mode.

FM Mode

Automatic Preset Saving (AUTO SCAN)

Scans the FM broadcasting service automatically and saves it in a channel number 1 to 20.

1. Press the MENU [] button shortly while you're listening to the radio to enter into the menu mode. Select the AUTO SCAN, then the AUTO SCAN starts.
2. After completing the AUTO SCAN, it switches to the preset reception mode.









Note

- ▶ If you select the Preset Auto Save mode, all the saved station will be cleared.
- ▶ All the available channels may not be detected in the weak FM reception area.

Manual Preset Saving

 Scans the FM broadcasting service manually and saves it in a channel number 1 to 20.

 1. Find the frequency of the radio station to save and press the REC/STOP [] button once for a long time.
2. The MEMORY? and the channel number are displayed at the left upper side of the LCD.
3. Select the channel number to save using the   [] button and press the REC/STOP [] button once for a long time to save the station in the selected channel.




 
 

Note

- ▶ If no channel has been saved, the EMPTY will be displayed.
- ▶ "●" will be marked for the channel saved number, whereas "○" will be marked for the available channel.

FM Mode


 


Tuning to the Saved Channel

Listens to the broadcasting by the channel saved in the Preset mode (Automatic/Manual).

1. Switch to the Preset mode by pressing the PLAY/STOP [] button shortly.
2. Press the   [] button once shortly in the Preset mode to move forward/backward in the channels.
3. The EMPTY will be displayed if no channel has been saved.

Deleting the Saved Channel (Deleting Preset)

 
Deletes the broadcasting channel saved by AUTO SCAN or manually.

1. Select a channel to delete using the   [] button in the Preset mode.
2. Press the REC/STOP [] button once for a long time.
3. The selected channel will be deleted and it will remain as an empty channel.

Reception Mode Switching

You can switch between the Preset reception mode and the FM reception mode.

Press the PLAY/STOP [] button once for a long time.




General FM reception mode



Preset reception mode

Switching MONO and STEREO Mode

 
Press the PLAY/STOP [] button once shortly in the Preset reception mode to switch the Mono and Stereo.

Note

- ▶ The reception mode will be converted with MONO if you turn the power off.

FM Mode

Menu Configuration

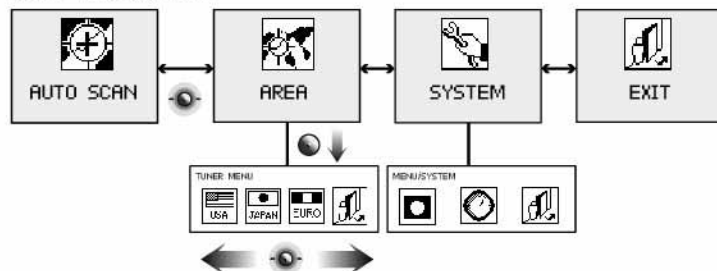

■ AUTO SCAN (Automatic Preset Saving)

Scans the available broadcasting station and saves the found channel in the channel number 1 to 20.

■ AREA (Area Setting)



- USA: North America, Korea
- JAPAN
- EURO: Europe, Asia

Note


► Available frequency band according to area

Area	Frequency Band	Mobile Frequency Unit
N.America/Korea	87.5 MHz ~ 108 MHz	100 KHz
Europe/Asia	87.5 MHz ~ 108 MHz	50 KHz
Japan	76 MHz ~ 108 MHz	76.0 MHz ~ 90.0 MHz : 100 KHz 90.0 MHz ~ 108.1 MHz : 50 KHz


MP3
PLAYER

FM Mode

 ■ SYSTEM

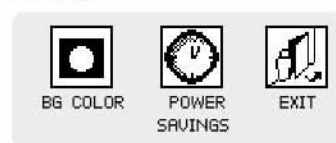

 - BG COLOR: Selects a LCD backlight color.

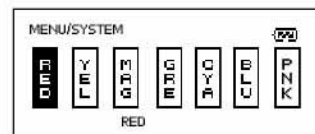

- POWER SAVINGS: Sets the time duration when the player is automatically turned off if you don't press any button in a pause or stop mode. If you set to DISABLE, the automatic shutdown function will not be activated.



■ EXIT

Saves all settings and returns to the FM mode.

MP3
PLAYER