## SAFETY (Red Handled) CONTROL SWITCH:

The control switch allows you to temporarily disable the remote starting function of your Remote Start system. To disable the system, move the red handled control switch to the OFF position.

## REMOTE STARTING THE VEHICLE:

The system WILL NOT start the vehicle if any one of the following situations exist:

- 1. The vehicle's hood is opened.
- 2. The gear shift selector is not in Park.
- 3. The brake pedal is depressed.
- 4. The safety control switch is in the Off position.
- 1. To start the vehicle, press and release the transmitter button two times within 2 seconds. The vehicle will start and remain running for one of the pre-programmed 5, 10, 15, or 20 minute run cycles. As a visual indication, the parking lights will flash or remain on depending on the setting by your installation center.
- 2. When you arrive at the vehicle, turn the ignition key to the RUN position (Do not try to restart the vehicle), then step on the brake pedal to disengage the remote start. The vehicle will continue to run, but now on it's own power.

## SHUTING DOWN THE REMOTE START:

To shutdown the v times within 2 sec	ehicle, press and releas conds.	e the transmitter butto	n two
	s with part 15 of the FCC	rules. Operation is sub	ject to the □
•	not cause harmful interfet accept any interference	•	erference 🗆
	are cautioned that changert responsible for complia		
to operate the equip	pment.□		•