

**Model:RR116-3BW**

**P/N: RR116-BBX**

**All remotes that are expected to work for the vehicle will need to be with you in the vehicle before attempting the programming. Any remotes not present at the time of programming will cease to function until reprogrammed.**

Type 1	For Celica, Echo, Tundra, Sequoia and 1999-2002 4Runner *Tundra models - If Type 1 does not work use Type 2
Type 2	For Scion xA, Scion xB, FJ Cruiser, Highlander, Prius, Rav4, Tacoma, Tundra, Yaris and 2003-2009 4Runner

Note: If your original remote has an LED (green, red) at the top the incorrect remote has been purchased. Please contact customer support.

#### Type 1

- 1.Enter the vehicle, close and unlock all doors using the power lock switch on the driver's door.
- 2.Open the driver's door, then using the key within five (5) seconds, insert and remove the key from the ignition once. The rest of the programming from this point on must be completely within forty-five(45) seconds.

①

3.Using the power lock switch on the driver's door, toggle the switch by pressing LOCK and UNLOCK five (5) times in one (1) second cycles, counting each LOCK and UNLOCK cycle as one (1).

4.Close the driver's door and then open the driver's door.

5.Repeat STEP 3 once, then proceed to STEP 6.

6.Insert the key into the ignition switch. Switch the key to the ON position as far as it will go without starting and back to the OFF position two (2) times and then remove the key.

At this point the vehicle door locks should automatically lock and unlock twice, indicating that the programming mode has been activated. (If door locks do not cycle automatically than the programming procedure has failed and you need to restart the procedure from STEP 1.

7.On the first remote you wish to program (we recommend programming original remotes first if you have one), press and hold the LOCK and UNLOCK buttons at the same time for 1.5 seconds, release, then press and hold LOCK for one (1) second and release. The door locks will automatically cycle one (1) time to indicate the remote has been programmed successfully. **\*NOTE\* If the door locks cycle twice, this means the registration failed. You can repeat STEP 7 until the locks only cycle one (1) time. If the locks do not cycle one (1) time by themselves, or they stop cycling altogether, then you must repeat the entire programming procedure.**

8.If you have additional remotes to program, repeat

②

STEP 7 for all remaining remotes you wish to program (You can program up to 4 remotes total).

9.Once you have programmed all your remotes, exit the programming mode by closing the driver's door, inserting the key into the ignition, start the vehicle, turn it off, and then remove the key.

10.Test all remotes to ensure they are functioning. If any did not program, restart the programming procedure from STEP 1 and switch the order in which you are programming the remotes.

#### Type 2

1.Enter the vehicle, close and unlock all the doors using the power lock switch on the driver's door.

2.Open the driver's door and then using the key within five (5) seconds, insert and remove the key from the ignition two (2) times. The rest of the programming from this point on must be completed within forty-five (45) seconds.

3.Close and open the driver's door two (2) times.

4.Insert and remove the key from the ignition one (1) time.

5.Close and open the driver's door two (2) times.

6.Insert the key into the ignition switch. Without starting the vehicle, switch the key to the ON position and back to the OFF position two (2) times and then remove the key.

At this point the vehicle door locks should automatically lock and unlock twice, indicating that the programming mode has been activated. (If door locks do not cycle automatically then the programming procedure has failed and you need to restart the procedure from STEP 1)

③

7.On the first remote you wish to program (we recommend programming original remotes first if you have one), press and hold the LOCK and UNLOCK buttons at the same time for 1.5 seconds, release, then press and hold LOCK for one (1) second and release. The door locks will automatically cycle one (1) time to indicate the remote has been programmed successfully. **\*NOTE\* If the door locks cycle twice, this means the registration failed. You can repeat STEP 7 until the locks only cycle one (1) time. If the locks do not cycle one (1) time by themselves, or they stop cycling altogether, then you must repeat the entire programming procedure.**

8.If you have additional remotes to program, repeat STEP 7 for all remaining remotes you wish to program (You can program up to 4 remotes total).

9.Once you have programmed all your remotes, exit the programming mode by closing the driver's door, inserting the key into the ignition, start the vehicle, turn it off, and then remove the key.

10.Test all remotes to ensure they are functioning. If any did not program, restart the programming procedure from STEP 1 and switch the order in which you are programming the remotes.

Please take attention that changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

④