INSTRUCTION MANUAL

866- 2401 / 2402 / 2403 / 2404 / 2405 / 2406 / 2407 / 2408 / 2410 / 2411 / 2412/ 2413 / 2415 / 2416 / 2417 / 2418 / 2419 / 2420 / 2421 / 2422 / 2423 / 2424 / 2425 / 2426 / 2427 / 2428 / 2429 / 2805 / 378H2 / 378H2HUT / 378H3 / 378H3T / 2201

WARNING:

- Never recharge non-rechargeable batteries.
- 2.Always remove exhausted batteries from the product.
- 3. Do not mix old and new batteries.
- Do not mix different types of batteries.
- 5. Only use the recommended type of battery.
- 6. Always insert the batteries using the correct polarity.
- 7. Always remove exhausted batteries from the product.
- 8. Do not short circuit terminals.
- 9. Batteries are to be changed by an adult.
- It is advisable to remove batteries from the unit if the. product is not to be used for long periods of time.

CAUTION:

.Do not operate this model in the vicinity of another model using the same frequency.

Otherwise, radio signals may interfere with each other and the model cars may become out of control, causing accidents

.Use alkaline battery and rechargeable battery correctly.

Always turn off power of the model car and the remote controller in sequence after use.

If this model is to be stored for a long time, all batteries in the model car and the remote controller should be removed to avoid battery leakage.


To load battery on controller

(Please use it under guidance of adult)

Open the battery cover on controller in the direction as shown in .



Set 2X1.5V battery in the correct direction.

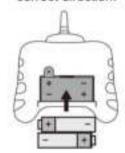


Replace the battery cover on controller in the direction as shown in .




Installation of car body batteries group

(Please use it under guidance of adult)


Unscrew the battery cover with a plus driver, press the buckle and open the cover.

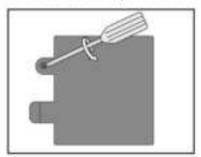

Set 3X1.5V batteries in the correct direction.

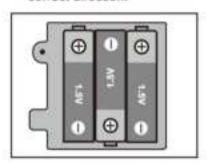

Replace the battery cover and fix with screw.

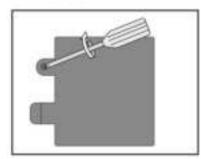

Operating Instruction

FORWARD/ REVERSE RIGHT