Die Line File: IDL RE9000 US CA QIG


Artwork File: QSG_RE9000_8820-02636_RevA01

REV - 0 00

DIE LAYOUT

105 GSM C2S ARTPAPER

FRONT COVER

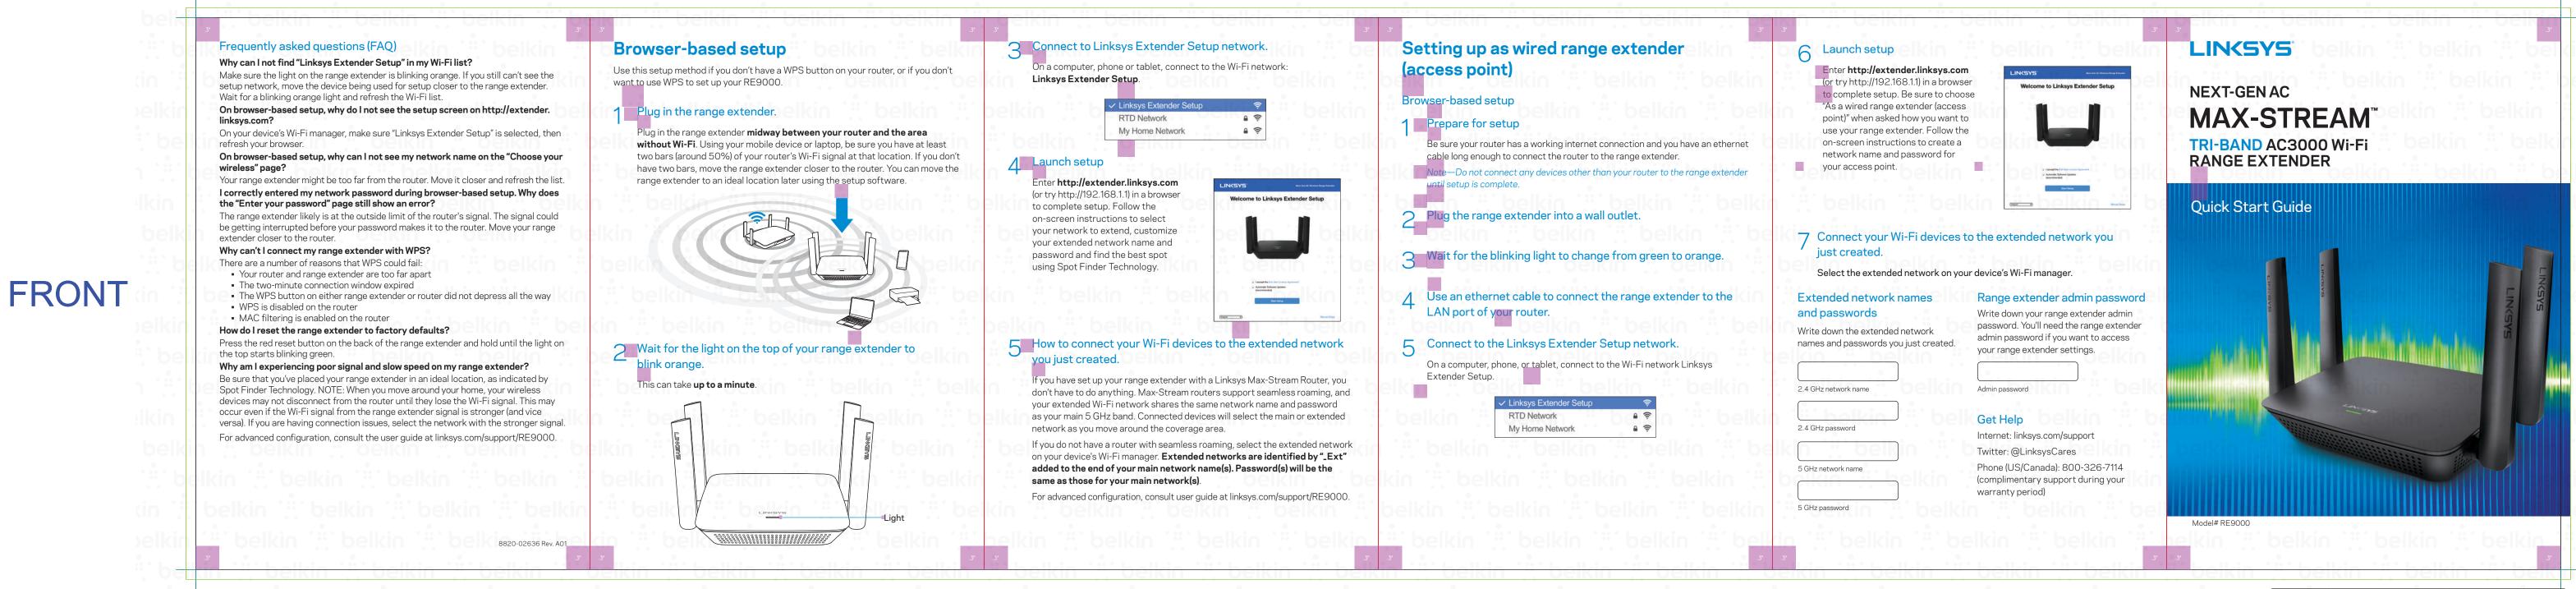

Check light for connection quality. Accessing your range extender settings What's in this Guide It can take up to a minute for the ranger extender to boot up after moving it. a. Press the WPS button on your router. There are two ways to use your Linksys extender: as a wireless range extender or as a wired range extender (access point). Wireless range extenders boost Wi-Fi range for better coverage During this period you will see the blinking green light once again. Within the next two minutes press and increased signal strength. Wired range extender (access points) create new Wi-Fi hotspots Your Linksys extender the WPS button on the side of your Solid green Ready to use. Your range extender's default admin password is "admin". It is highly recommended that when connected to a router with an Ethernet cable. Both scenarios require a router with a you change this after WPS setup. **Solid orange** Weak connection to the router. Find an outlet closer Get started Before starting setup, decide whether you want to use your RE9000 as a wireless range To change or view range extender settings, first connect to an **extended network**. The WPS button will light up and the Setting up as a wireless range extender Blinking orange Not connected to the router. Find an outlet closer extender or as a wired range extender (access point). Instructions for both setups are in this guide. light on the top of your range extender If your extended network has the same network name as your main network: will **blink green**. etting up as a wireless range extender Setting up as a wired range extender (access point) On a computer that is not connected to a wireless network, use an ethernet How to connect your Wi-Fi devices to the extended network Watch the light on the top of your cable to connect directly to the range extender. Open a browser and go to oes your router have a WPS button? range extender to verify whether the you just created. VPS is a simple way to connect Wi-Fi devices with Push Button Connect. Routers that suppor connection was successful. S have a button that might look like one of these symbols: Connect to your range extender wirelessly. Depending on your operating system, If you have set up your range extender with a Linksys Max-Stream Router, you If it turns **solid green** —, one of the following links will get you to the login page. Choose one and enter it in don't have to do anything. Max-Stream routers support seamless roaming, and the connection was successful. your extended Wi-Fi network shares the same network name and password Continue with Wi-Fi Protected • WPS™button—Use Wi-Fi Protected Setup to automatically and securely add compatible Move to step 4. Android and Windows: http://RE9000 as your 5 GHz Wi-Fi band. Connected devices will select the main or extended Setup (WPS) below wireless devices to your network with Push Button Connect. Mac OS X or iOS: http://RE9000.local network as you move around the coverage area. If it starts to**blink orange *******, the connection failed. You may try again by Your Linksys extender No (or not sure) **NOTE** — The WPS button will not work if repeating step 3 or try browser-based setup. If you do not have a router with seamless roaming, select the extended network If your extended network has a different network name than your main network Continue with Browseryou have disabled WPS on your router, or on your device's Wi-Fi manager. **Extended networks are identified by "_Ext"** (for example mywifi_EXT): if you have chosen WEP as your network based setup, also in this Move your range extender to an ideal spot added to the end of your main network name(s). The password will be the security type. In either case, continue with Connect to the extended network. In a browser, go to http://extender.linksys.com and Quick Start Guide same as your main network. browser-based setup below. Unplug your range extender and plug it back in midway between your router and the area without Wi-Fi. Using your mobile device or laptop, be sure you Your range extender is now set up. Enjoy your extended have at least two bars (around 50%) of your router's Wi-Fi signal at that location. Wi-Fi Protected Setup (WPS) Wi-Fi coverage. If you don't have two bars, move the range extender closer to the router. → C ↑ Q extender.linksys.com 1 Plug the range extender into an electrical outlet close to your route You can move the range extender to an ideal location later in step 5. After the range extender is plugged in the indicator light on the top will **blink green** for up to a minute. Reset Button Wait for the light on the top of • The light on the front of the range extender gives you information about power, updating and your range extender to blink • Reset button (2)—Press and hold until the light on the front of the range extender blinks to reset orange before going to step 3 extender to factory default settings. his can take **up to a minute**.

Unit: IN/MM

Side Shown: PRINT SIDE
Flute/Grain: horizontal
Tolerance:+/- 1/32" - 0.8mm

Drawing Scale 1:1

RELEASE DATE: 07/27/2017

Business Unit: NET-Networking

Retail Outside Dimension (Including Hang Tab)

L x W x D (mm):127.00 x 127.00 x 177.80

Material: Please refer to drawing

This dieline works for following skus (if any):

Program Manager:

L x W x D (in): $5 \times 5 \times 7$

DIE/MATERIAL SPECS:

Blank Size (in): 30 x 7

Packaging Engineer: Brian Byrd

Blank Size (mm): 762 x 177.800

DIELINE:

Intermediate

PRINT SPECS:

Color Plates:

C M Y K

BACK

Finish:

Notes:

ACCORDION FOLD ALONG RED LINES
FRONT/OUTSIDE: ALL TEXT AND GRAPHIC ELEMENTS COLOR: CMYK
BACK/INSIDE: ALL TEXT AND GRAPHIC ELEMENTS COLOR: CMYK



177.8

DO NOT PRINT
DIE LINES, PRINTERS NOTES

THIS DOCUMENT & THE INFORMATION

OF BELKIN INTERNATIONAL AND MUST

CONSENT OF BELKIN CORPORATION.

IN IT ARE THE CONFIDENTIAL PROPERTY

NOT BE COPIED, REPRODUCED OR USED

IN ANY MANNER WITHOUT THE WRITTEN

IT MUST BE RETURNED UPON REQUEST