

# QuickStart Guide

## FortiGate\FortiWiFi 80F Series

FG-80F, FG-81F, FWF-80-2R, FWF-81F-2R, FWF-81F-2R-POE

# Product Registration

Thank you for purchasing a FortiGate.

Register to access:

- Cloud Management
- FortiGuard Updates
- Firmware Upgrades
- Technical Support
- Warranty Coverage

Please register your FortiGate:

Vous devez enregistrer le produit:

Debe registrar el producto:

登録のお願い:

请马上注册:

<http://support.fortinet.com>



March 16, 2021

Copyright© 2021 Fortinet, Inc. All rights reserved. Fortinet®, FortiGate®, FortiCare® and FortiGuard®, and certain other marks are registered trademarks of Fortinet, Inc., in the U.S. and other jurisdictions, and other Fortinet names herein may also be registered and/or common law trademarks of Fortinet. All other product or company names may be trademarks of their respective owners. Performance and other metrics contained herein were attained in internal lab tests under ideal conditions, and actual performance and other results may vary. Network variables, different network environments and other conditions may affect performance results. Nothing herein represents any binding commitment by Fortinet, and Fortinet disclaims all warranties, whether express or implied, except to the extent Fortinet enters a binding written contract, signed by Fortinet's General Counsel, with a purchaser that expressly warrants that the identified product will perform according to certain expressly-identified performance metrics and, in such event, only the specific performance metrics expressly identified in such binding written contract shall be binding on Fortinet. For absolute clarity, any such warranty will be limited to performance in the same ideal conditions as in Fortinet's internal lab tests. In no event does Fortinet make any commitment related to future deliverables, features or development, and circumstances may change such that any forward-looking statements herein are not accurate. Fortinet disclaims in full any covenants, representations, and guarantees pursuant hereto, whether express or implied. Fortinet reserves the right to change, modify, transfer, or otherwise revise this publication without notice, and the most current version of the publication shall be applicable.

# Table of Contents

## Product Series

FortiGate 80F Series.....	6
FortiWiFi 81F-2R Series .....	10
FortiWiFi 81F-2R-POE .....	14

## Installation

Basic Connections .....	18
Wall Mount Option.....	19
Desktop Option .....	20
Rack/Rail Mount Option.....	21
SFP Installation.....	22

## Setup

Setup Options.....	23
GUI .....	24
FortiGate Cloud .....	26
FortiExplorer .....	27
Command Line Interface (CLI) .....	28
Resources.....	29

 
## Licensing & Services

Free Licences & Services.....	30
FortiCare Subscriptions .....	32
Bundled Services with FortiCare .....	34

## About Fortinet

Fortinet Security Fabric.....	36
FortiGate Security Fabric Integration .....	38
Solution Spotlight: Secure SD-WAN.....	40
Fortinet Security Processors .....	42
Corporate Overview .....	44
Regulatory Compliance Information.....	46

## Box Includes - FG 80F Series

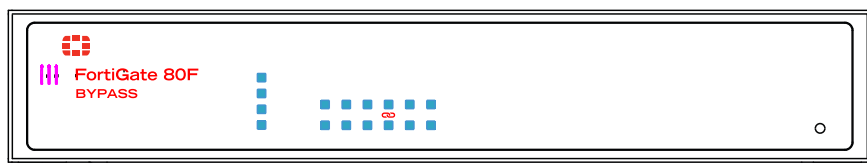

FortiGate 80F/81F/Bypass



QuickStart Guide



 
Power Cable




12V DC Power Adapter



Ethernet Cable

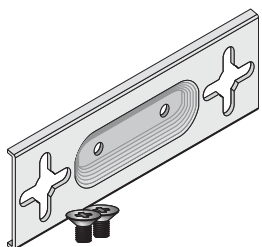


 Wall Mount Kit  
(Not included, sold separately)

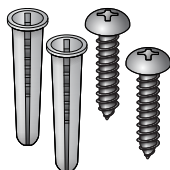


Wall Mount Hardware  
(Not included, sold separately)

## Back Panel - FG 80F Series

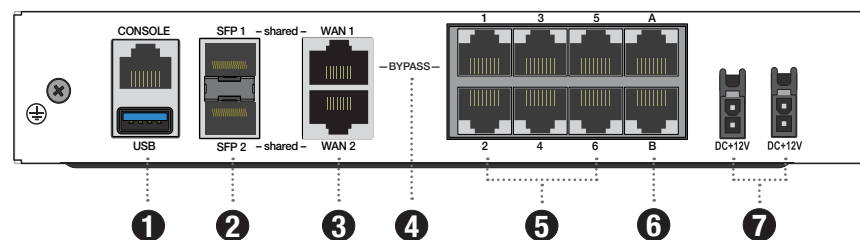 


- 1 Console (RJ-45)** CLI management computer interface  
USB (USB A) USB 3.0 server port
- 2 SFP Shared Ports 1 & 2 (SFP)** 1 Gbps SFP interface
- 3 WAN Shared Ports 1 & 2 (RJ45)** 1 Gbps Ethernet interface
- 4 BYPASS Port Pair (RJ45)** 1 Gbps Ethernet interface  
(FG 80F-Bypass model only. WAN1 & Port1 are the default configuration )
- 5 Ports 1 to 6 (RJ-45)** 1 Gbps Ethernet interface
- 6 FortiLink Ports A & B (RJ-45)** 1 Gbps Ethernet interface
- 7 Power Input** 12V DC 3A, 100-240V AC 50/60Hz  
(optional redundant power adapter and cable available for purchase)

# Front Panel - FG 80F Series

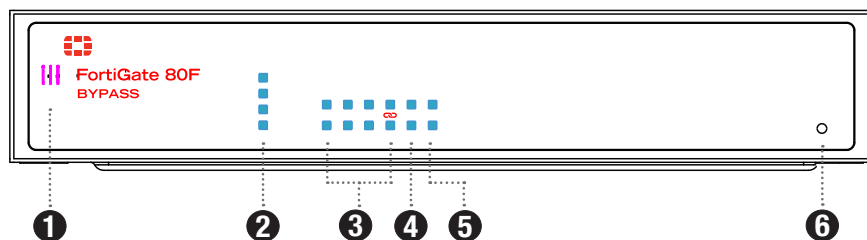 

- 1 LOGO**
- |  |                                |  |                                |
|--|--------------------------------|--|--------------------------------|
|  | <b>FortiGate 80F</b>           |  | <b>FortiGate 80F - BYPASS</b>  |
|  | <b>Green:</b> The device is on |  | <b>Green:</b> The device is on |
|  | <b>Off:</b> The device is off  |  | <b>Off:</b> The device is off  |
- 2 BYPASS**  
(FG 80F-Bypass model only)
- |  |  |
|--|--|
|  | <b>Amber:</b> Bypass Port Pair is active (WAN1 & Port1, default configuration) |
|  | <b>Off:</b> Bypass Port Pair is off  |
- STATUS**
- |  |  |
|--|--|
|  | <b>Green:</b> Operating normally; BLE is off |
|  | <b>Flashing Green:</b> Booting up            |
|  | <b>Flashing Amber:</b> BLE is on             |
- HA**
- |  |  |
|--|--|
|  | <b>Green:</b> Operating in an HA cluster |
|  | <b>Amber:</b> HA failover                |
|  | <b>Off:</b> Not in an HA cluster         |
- POWER**
- |  |   |
|--|---|
|  | <b>Green:</b> Both power supplies are functioning |
|  | <b>Amber:</b> One power supply is functioning     |
|  | <b>Off:</b> Power is off                          |
- 3 PORT LINK/ACT**
- |  |   |
|--|---|
|  | <b>Flashing Green:</b> 1000M/100M/10M data activity |
|  | <b>Off:</b> No link established                     |
- 4 WAN**  
(WAN & SFP are Shared Ports)
- |  |   |
|--|---|
|  | <b>Flashing Green:</b> 1000M/100M/10M data activity |
|  | <b>Off:</b> No link established                     |
- 5 SFP**
- |  |   |
|--|---|
|  | <b>Flashing Green:</b> 1000M/100M/10M data activity |
|  | <b>Off:</b> No link established                     |
- 6 BLE/RESET** Restores factory default and BLE settings

## Box Includes - FWF 80F-2R Series

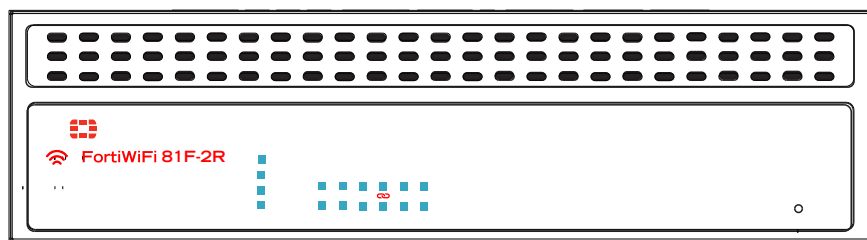 

FortiWiFi-80F/81F/-2R



QuickStart Guide



 
Power Cable




12V DC Power Adapter




Ethernet Cable

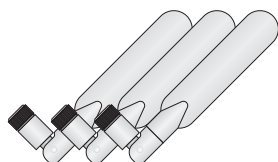

3 WiFi Antennas

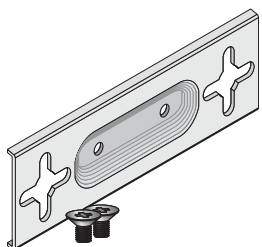 


 Wall Mount Kit  
(Not included, sold separately)

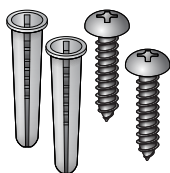


Wall Mount Hardware  
(Not included, sold separately)

## Back Panel - FWF 80F-2R Series

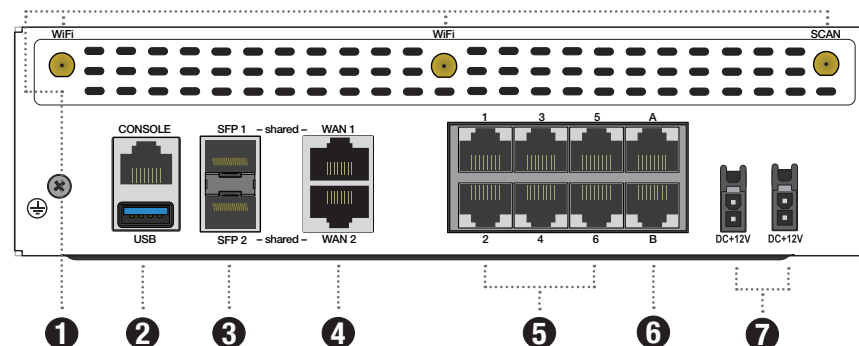 


- 1** Antenna Connection (SMA) passive directional antenna connection
- 2** Console (RJ-45) CLI management computer interface  
USB (USB A) USB 3.0 server port
- 3** SFP Shared Ports 1 & 2 (SFP) 1 Gbps SFP interface
- 4** WAN Shared Ports 1 & 2 (RJ45) 1 Gbps Ethernet interface
- 5** Ports 1 to 6 (RJ-45) 1 Gbps Ethernet interface
- 6** FortiLink Ports A & B (RJ-45) 1 Gbps Ethernet interface
- 7** Power Input 12V DC 5A, 100-240V AC 50/60Hz  
(optional redundant power adapter and cable available for purchase)

# Front Panel - FWF 80F-2R Series

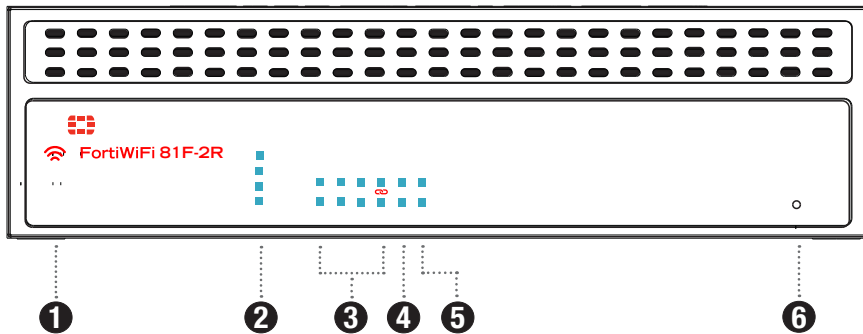 

- 1 LOGO**
- FortiWiFi 81F-2R
- Blue: The device is on
  - Off: The device is off
- 2 STATUS**
- Green: Operating normally; BLE is off
  - Flashing Green: Booting up
  - Flashing Amber: BLE is on
- HA**
- Green: Operating in an HA cluster
  - Amber: HA failover
  - Off: Not in an HA cluster
- POWER**
- Green: Both power supplies are functioning
  - Amber: One power supply is functioning
  - Off: Power is off
- WIFI**
- Green: WiFi connected
  - Flashing Green: WiFi activity
  - Off: WiFi is off
- 3 PORT LINK/ACT**
- Flashing Green: 1000M/100M/10M data activity
  - Off: No link established
- 4 WAN**
- (WAN & SFP are Shared Ports)
- Flashing Green: 1000M/100M/10M data activity
  - Off: No link established
- 5 SFP**
- Flashing Green: 1000M/100M/10M data activity
  - Off: No link established
- 6 BLE/RESET** Restores factory default and BLE settings

## Box Includes - FWF 81F-2R-POE

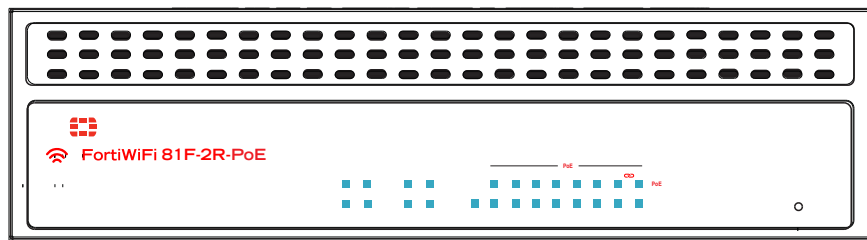 

FortiWiFi-81F-2R-POE



QuickStart Guide



 
Power Cable




54V DC Power Adapter




Ethernet Cable

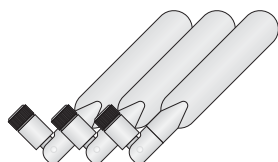

3 WiFi Antennas

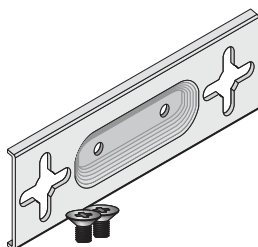 


 Wall Mount Kit  
(Not included, sold separately)

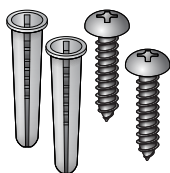

Wall Mount Hardware  
(Not included, sold separately)


## Back Panel - FWF 81F-2R-POE

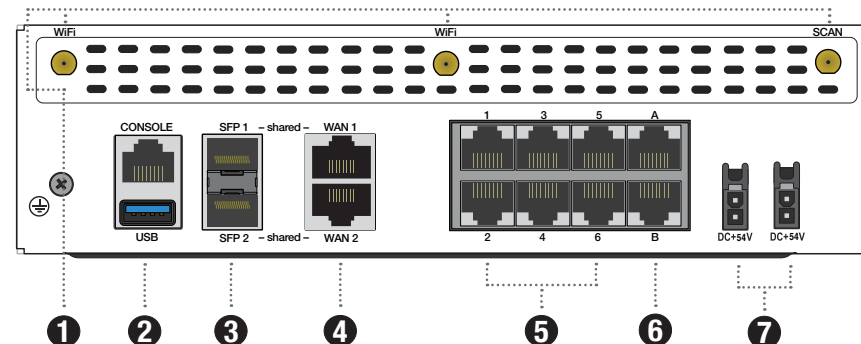 

- 1** Antenna Connection (SMA) passive directional antenna connection
- 2** Console (RJ-45) CLI management computer interface  
USB (USB A) USB 3.0 server port
- 3** SFP Shared Ports 1 & 2 (SFP) 1 Gbps SFP interface
- 4** WAN Shared Ports 1 & 2 (RJ45) 1 Gbps Ethernet interface
- 5** Ports 1 to 6 (RJ-45) 1 Gbps Ethernet interface
- 6** FortiLink Ports A & B (RJ-45) 1 Gbps Ethernet interface
- 7** Power Input 54V DC 2.78A, 100-240V AC 50/60Hz  
(optional redundant power adapter and cable available for purchase)



# Front Panel - FWF 81F-2R-POE

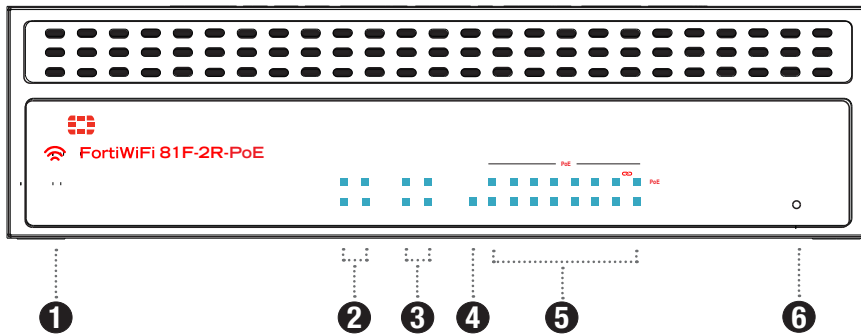 

- 1 LOGO** **FortiWiFi 81F-2R**  
**Blue:** The device is on  
**Off:** The device is off
- 2 WIFI** **Green:** WiFi connected  
**Flashing Green:** WiFi activity  
**Off:** WiFi is off
- STATUS** **Green:** Operating normally; BLE is off  
**Flashing Green:** Booting up  
**Flashing Amber:** BLE is on
- PWR** **Green:** Both power supplies are functioning  
**Amber:** One power supply is functioning  
**Off:** Power is off
- HA** **Green:** Operating in an HA cluster  
**Amber:** HA failover  
**Off:** Not in an HA cluster
- 3 SFP/WAN** **Flashing Green:** 1000M/100M/10M data activity  
*(WAN & SFP are Shared Ports)* **Off:** No link established
- 4 MAX PoE** **Red:** Providing Max PoE Power  
**Off:** PoE power available
- 5 Ports** **Green:** PoE power on  
*PoE* **Off:** PoE power off
- LINK/ACT* **Flashing Green:** 1000M/100M/10M data activity  
**Off:** No link established
- 6 BLE/RESET** Restores factory default and BLE settings