



INSTRUCTION MANUAL

VHF MARINE TRANSCEIVER **IC-M510BB**

This device complies with Part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.

Icom Inc.



Thank you for choosing this Icom product. This product was designed and built with Icom's state of the art technology and craftsmanship. With proper care, this product should provide you with years of trouble-free operation.

■ Important

READ ALL INSTRUCTIONS carefully and completely before using the transceiver.

SAVE THIS INSTRUCTION MANUAL — This instruction manual contains important operating instructions for the IC-M510BB.

This instruction manual includes some functions that are usable only when they are preset by your dealer. Ask your dealer for details.

■ Explicit Definitions

WORD	DEFINITION
⚠ WARNING!	Personal injury, fire hazard or electric shock may occur.
CAUTION	Equipment damage may occur.
NOTE	If disregarded, inconvenience only. No risk of personal injury, fire or electric shock.

Icom is not responsible for the destruction, damage to, or performance of any Icom or non-Icom equipment, if the malfunction is because of:

- Force majeure, including, but not limited to, fires, earthquakes, storms, floods, lightning, other natural disasters, disturbances, riots, war, or radioactive contamination.
- The use of Icom transceivers with any equipment that is not manufactured or approved by Icom.

■ Features

- Up to 3 COMMANDMIC™ capability, VHF Black Box Transceiver
- Built-in Class D DSC, "DISTRESS" key on the back of the COMMANDMIC™
- DSC remote control interface for navigation device or PC console software (EN 300 338-8 compatible)
- Integrated GPS receiver
- Integrated AIS receiver
- NMEA 0183-HS and NMEA 2000™ connectivity
- Internal 15 W Hailer/Fog Horn
- IPX7 waterproof (1 m depth water for 30 minutes)
- 2 minutes last call voice recording
- Active noise cancelling for transmitted and received audio.

Icom and the Icom logo are registered trademarks of Icom Incorporated (Japan) in Japan, the United States, the United Kingdom, Germany, France, Spain, Russia, Australia, New Zealand, and/or other countries. AquaQuake is a trademark of Icom Incorporated. COMMANDMIC is a trademark of Icom Incorporated. NMEA 2000 is a trademark of the National Maritime Electronics Association, Inc. All other products or brands are registered trademarks or trademarks of their respective holders.

■ In Case of Emergency

If your vessel requires assistance, contact other vessels and the Coast Guard by sending a distress call on Channel 16 or transmit your Distress call using Digital Selective Calling (DSC) on Channel 70.


◇ Using Channel 16

1. Push [16/C] to switch to Channel 16.
2. While holding down [PTT], give the appropriate information as follows:

- "MAYDAY MAYDAY MAYDAY."
- "THIS IS [REDACTED]"
(name of vessel).
- Say your call sign or other indication of the vessel (AND your 9 digit DSC ID, if you have one).
- "LOCATED AT [REDACTED]"
(your position).
- State the nature of the distress and assistance required.
- Give any other information which might facilitate the rescue.

◇ Using Digital Selective Calling

1. Lift up the key cover on the back of the command microphone, hold down [DISTRESS] for 3 seconds until the 3 short beeps and then one long beep sound.

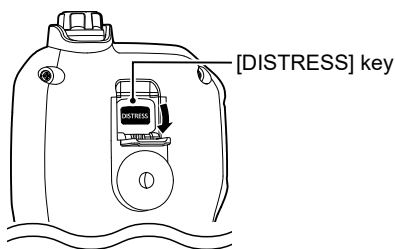

2. Wait for an acknowledgment from another station.
3. After the acknowledgment is received, Channel 16 is automatically selected.
4. Hold down [PTT], then transmit the appropriate information as listed above.

■ Radio Operation Warning



WARNING

Icom requires the radio operator to meet the FCC Requirements for Radio Frequency Exposure. An omnidirectional antenna with gain not greater than 9 dBi must be mounted a minimum of 5 meters (measured from the lowest point of the antenna) vertically above the main deck and all possible personnel. This is the minimum safe separation distance estimated to meet all RF exposure compliance requirements. This 5 meter distance is based

on the FCC Safe Maximum Permissible Exposure (MPE) distance of 3 meters added to the height of an adult (2 meters) and is appropriate for all vessels.

For watercraft without suitable structures, the antenna must be mounted so as to maintain a minimum of 1 meter vertically between the antenna, (measured from the lowest point of the antenna), to the heads of all persons AND all persons must stay outside of the 3 meter MPE radius.

Do not transmit with radio and antenna when persons are within the MPE radius of the antenna, unless such persons (such as driver or radio operator) are shielded from antenna field by a grounded metallic barrier. The MPE Radius is the minimum distance from the antenna axis that person should maintain in order to avoid RF exposure higher than the allowable MPE level set by FCC.

FAILURE TO OBSERVE THESE LIMITS MAY ALLOW THOSE WITHIN THE MPE RADIUS TO EXPERIENCE RF RADIATION ABSORPTION WHICH EXCEEDS THE FCC MAXIMUM PERMISSIBLE EXPOSURE (MPE) LIMIT.

IT IS THE RESPONSIBILITY OF THE RADIO OPERATOR TO ENSURE THAT THE MAXIMUM PERMISSIBLE EXPOSURE LIMITS ARE OBSERVED AT ALL TIMES DURING RADIO TRANSMISSION. THE RADIO OPERATOR IS TO ENSURE THAT NO BYSTANDERS COME WITHIN THE RADIUS OF THE MAXIMUM PERMISSIBLE EXPOSURE LIMITS.

Determining MPE Radius

THE MAXIMUM PERMISSIBLE EXPOSURE (MPE) RADIUS HAS BEEN ESTIMATED TO BE A RADIUS OF ABOUT 3 M PER OET BULLETIN 65 OF THE FCC.

THIS ESTIMATE IS MADE ASSUMING THE MAXIMUM POWER OF THE RADIO AND ANTENNAS WITH A MAXIMUM GAIN OF 9 dBi ARE USED FOR A SHIP MOUNTED SYSTEM.

■ Avertissement Pour Les Opérateurs Radio



AVERTISSEMENT

Icom exige que l'opérateur radio se conforme aux exigences de la FCC en matière d'exposition aux radiofréquences. Une antenne omnidirectionnelle dont le gain ne dépasse pas 9 dBi doit être fixée à une distance minimale de 5 mètres (mesurée depuis le point le plus bas de l'antenne) verticalement au-dessus du pont principal et de tout le personnel qui peut s'y trouver. Il s'agit de la distance de sécurité minimale prévue pour satisfaire aux exigences de conformité en matière d'exposition aux RF. Cette distance de 5 mètres est établie en fonction de l'exposition maximale admissible sécuritaire de 3 mètres établie par la FCC, à laquelle on ajoute la hauteur d'un adulte (2 mètres); cette distance convient pour tous les navires.

Dans le cas des embarcations sans structure convenable, l'antenne doit être fixée de façon à maintenir une distance minimale de 1 mètre verticalement entre cette antenne (mesurée depuis son point le plus bas) et la tête de toute personne présente; toutes les personnes présentes doivent se tenir à l'extérieur d'un rayon d'exposition maximale admissible de 3 mètres.

Ne pas émettre à l'aide de la radio et de l'antenne lorsque des personnes se trouvent à l'intérieur du rayon d'exposition maximale admissible de cette antenne, à moins que ces personnes (comme le conducteur ou l'opérateur radio) ne soient protégées du champ de l'antenne par un écran métallique relié à la masse. Le rayon d'exposition maximale admissible équivaut à la distance minimale que cette personne doit maintenir entre elle et l'axe de l'antenne pour éviter une exposition aux RF supérieure au niveau d'exposition maximale admissible fixé par la FCC.

LE NON-RESPECT DE CES LIMITES PEUT CAUSER, POUR LES PERSONNES SITUÉES DANS LE RAYON D'EXPOSITION MAXIMALE ADMISSIBLE, UNE ABSORPTION DE RAYONNEMENT DE RF SUPÉRIEURE À L'EXPOSITION MAXIMALE ADMISSIBLE FIXÉE PAR LA FCC.

L'OPÉRATEUR RADIO EST RESPONSABLE D'ASSURER QUE LES LIMITES D'EXPOSITION MAXIMALE ADMISSIBLE SOIENT RESPECTÉES EN TOUT TEMPS PENDANT LA TRANSMISSION RADIO. L'OPÉRATEUR RADIO DOIT S'ASSURER QU'AUCUNE PERSONNE PRÉSENTE NE SE SITUE À L'INTÉRIEUR DU RAYON D'EXPOSITION MAXIMALE ADMISSIBLE.

**Établir le rayon d'exposition maximale admissible
ON ESTIME QUE LE RAYON D'EXPOSITION MAXIMALE ADMISSIBLE EST D'ENVIRON 3 M, TEL QUE STIPULÉ DANS LE BULLETIN OET 65 DE LA FCC. CETTE DISTANCE ESTIMÉE TIEN COMPTE D'UN SYSTÈME INSTALLÉ SUR UN NAVIRE UTILISANT LA PUISSANCE MAXIMALE DE LA RADIO ET DES ANTENNES DONT LE GAIN MAXIMAL EST DE 9 dBi.**

■ FCC Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications to this transceiver, not expressly approved by Icom Inc., could void your authority to operate this transceiver under FCC regulations.

■ Information FCC

Cet appareil est conforme à la partie 15 de la réglementation FCC. Son fonctionnement est soumis à la condition que cet appareil ne provoque pas d'interférences nocives. Cet équipement a été testé et reconnu conforme aux limites fixées pour un appareil numérique de classe B, conformément à la partie 15 de la réglementation FCC. Ces limites ont été fixées afin d'assurer une protection raisonnable contre les interférences nocives dans une installation résidentielle. Cet équipement génère, utilise et peut émettre un rayonnement de fréquence radio. S'il n'a pas été installé conformément aux instructions, il peut par ailleurs créer des interférences perturbant les communications radio. Toutefois, il n'y a aucune garantie que les interférences ne se produiront pas dans une installation particulière. Si cet équipement crée des interférences perturbant la réception de la radio ou de la télévision, comme cela peut être déterminé en éteignant et en allumant l'équipement, l'utilisateur est invité à essayer de corriger l'interférence en prenant une ou plusieurs des mesures ci-après :

- Réorienter ou changer de place l'antenne de réception.
- Éloigner l'équipement et le récepteur.
- Connecter l'équipement sur une prise sur un autre circuit que celui sur lequel le récepteur est connecté.
- Faire appel au revendeur ou à un technicien radio/TV expérimenté.

MISE EN GARDE : Tout changement ou modification, non expressément approuvé par Icom Inc., peut annuler l'autorisation de l'utilisateur à utiliser cet appareil conformément à la réglementation FCC.

■ Note

A WARNING STICKER is supplied with the USA version transceiver.

To comply with FCC regulations, this sticker must be affixed in such a location as to be readily seen from the operating controls of the radio. Make sure the chosen location is clean and dry before applying the sticker.

■ Precautions

⚠ **WARNING! NEVER** connect the transceiver directly to an AC outlet. This may cause a fire or an electric shock.

⚠ **WARNING! NEVER** connect the transceiver to a power source of more than 16 V DC such as a 24 V battery. This connection could cause a fire or damage the transceiver.

⚠ **WARNING! NEVER** reverse the DC power cable polarity. This could cause a fire or damage the equipment.

⚠ **WARNING! NEVER** cut the DC power cable between the DC power connector on the transceiver's rear panel and the fuse holder. If an incorrect connection is made after cutting, the transceiver may be damaged.

⚠ **WARNING! NEVER** operate the transceiver during a lightning storm. It may result in an electric shock, cause a fire or damage the transceiver. Always disconnect the power source and antenna before a storm.

⚠ **WARNING! NEVER** place the transceiver where normal operation of the vessel may be hindered, or where it could cause bodily injury.

CAUTION: DO NOT place or leave the transceiver in areas with temperatures below -20°C or above $+60^{\circ}\text{C}$ (-4°F or above $+140^{\circ}\text{F}$), or in areas subject to direct sunlight, such as a dashboard.

CAUTION: DO NOT use harsh solvents such as Benzine or alcohol when cleaning. This could damage the equipment surfaces. If the surface becomes dusty or dirty, wipe it clean with a soft, dry cloth.

NEVER place the transceiver in an insecure place to avoid inadvertent use by unauthorized persons.

BE CAREFUL! The transceiver's rear panel will become hot when transmitting continuously for long periods of time.

BE CAREFUL! The transceiver meets IPX7 requirements for waterproof protection*. However, once the transceiver or microphone has been dropped, or the waterproof seal is cracked or damaged, waterproof protection cannot be guaranteed because of possible damage to the case or the waterproof seal.

* Except for the DC power connector, NMEA In/Out leads and AF Out leads.

NOTE: Install the transceiver and/or microphone more than 1 meter from the vessel's magnetic navigation compass.

■ Précautions

⚠ **AVERTISSEMENT ! NE JAMAIS** relier l'émetteur-récepteur à une prise CA. Cela pourrait provoquer un choc électrique ou un incendie.

⚠ **AVERTISSEMENT ! NE JAMAIS** brancher l'émetteur-récepteur sur une source d'alimentation supérieure à 16 V CC, comme une batterie de 24 V. Cela pourrait endommager l'émetteur-récepteur.

⚠ **AVERTISSEMENT ! NE JAMAIS** inverser la polarité du câble d'alimentation CC lors de la connexion à une source d'alimentation. Cela pourrait endommager l'émetteur-récepteur.

⚠ **AVERTISSEMENT ! NE JAMAIS** couper le câble d'alimentation CC entre la prise CC a l'arrière de l'émetteur-récepteur et le porte-fusible. L'émetteur-récepteur peut être endommagé par la suite en cas de connexion inappropriée.

⚠ **AVERTISSEMENT ! NE JAMAIS** utiliser l'émetteur-récepteur durant un orage. Cela risquerait de provoquer un choc électrique, un incendie ou d'endommager l'émetteur-récepteur. Toujours débrancher la source d'alimentation et l'antenne avant une tempête.

⚠ **AVERTISSEMENT ! NE JAMAIS** installer l'émetteur-récepteur à un emplacement où il pourrait gêner le fonctionnement normal du navire ou provoquer des blessures corporelles.

MISE EN GARDE : NE PAS utiliser ou placer l'émetteur-récepteur dans des zones où la température est inférieure à -20°C (-4°F) ou supérieure à $+60^{\circ}\text{C}$ ($+140^{\circ}\text{F}$) ou dans des zones soumises au rayonnement solaire direct, telles le tableau de bord.

MISE EN GARDE : NE PAS utiliser de dissolvants agressifs tels que du Benzène ou de l'alcool lors du nettoyage, car ils endommageraient les surfaces de l'émetteur-récepteur. Si l'émetteur-récepteur est poussiéreux ou sale, nettoyez-le avec un tissu doux et sec.

MISE EN GARDE : La face arrière de la VHF chauffe en cas d'utilisation continue sur une longue durée.

MISE EN GARDE : L'émetteur-récepteur est étanche conformément à la norme IPX7*. L'étanchéité ne peut plus être garantie après une chute de l'appareil en raison des risques de fissures du boîtier, de dégradation du joint d'étanchéité, etc.

*Les connecteurs sur le panneau arrière ne sont pas étanche IPX7.

REMARQUE: INSTALLER la VHF et le microphone à au moins 1 m du compas de route du navire.

NE placez **JAMAIS** l'appareil dans un endroit non sécurisé pour éviter toute utilisation par des personnes non autorisées.

Si la face avant est exposée à de l'eau de mer, **ASSUREZ-VOUS DE LE NETTOYER ENTIEREMENT AVEC DE L'EAU DOUCE** lorsque la protection étanche sur le panneau avant fonctionne. Dans le cas contraire, les touches et le commutateur risquent de ne plus fonctionner en raison de la cristallisation du sel.

■ Installation Note

Installation:

The installation of this equipment should be made in such a manner as to respect the EC recommended electromagnetic field exposure limits. (1999/519/EC)

The maximum RF power available from this device is 25 watts. The antenna should be installed as high as possible for maximum efficiency and the installation height should be at least 1.76 meters above any accessible position. In the case where an antenna cannot be installed at a reasonable height, then the transmitter should neither be continuously operated for long periods if any person is within a distance of 1.76 meters of the antenna, nor operated at all if any person is touching the antenna.

It is recommended that antenna of a maximum gain of 3 dB is used. If higher gain antenna is required then please contact your Icom distributor for revised installation recommendations.

Operation:

The exposure to RF electromagnetic field is only applicable when this device is transmitting. This exposure is naturally reduced due to the nature of alternating periods of receiving and transmitting. Keep your transmissions to the minimum necessary.

■ Disposal



The crossed-out wheeled-bin symbol on your product, literature, or packaging reminds you that in the European Union, all electrical and electronic products, batteries, and accumulators

(rechargeable batteries) must be taken to designated collection locations at the end of their working life. Do not dispose of these products as unsorted municipal waste. Dispose of them according to the laws in your area.

■ About CE and DOC



Hereby, Icom Inc. declares that the versions of the IC-M510BB which have the "CE" symbol on the product,

comply with the essential requirements of the Radio Equipment Directive, 2014/53/EU, and the restriction of the use of certain hazardous substances in electrical and electronic equipment Directive, 2011/65/EU. The full text of the EU declaration of conformity is available at the following internet address:

<https://www.icomjapan.com/support/>

For the European versions:

The following caution is printed on the labels of the transceiver.



CAUTION

AVOID TOUCHING REAR PANEL DURING PROLONGED USE.

This is because the transceiver's rear panel will become hot when continuously transmitting for long periods of time.

■ Recommendation



CLEAN THE TRANSCEIVER AND MICROPHONE THOROUGHLY WITH FRESH WATER after exposure to saltwater, and dry it before operating. Otherwise, the transceiver's keys and switches may become unusable, due to salt crystallization.

NOTE: If the transceiver's waterproof protection appears defective, carefully clean it with a soft, damp (fresh water) cloth, then, dry it before operating.
The transceiver may lose its waterproof protection if the case or microphone is cracked or broken, the microphone connector is not screwed in completely, or the transceiver has been dropped.
Contact your Icom distributor or your dealer for advice.



■ Key Icon Description

The keys are described in this manual as follows:

The keys that have words or letters on them are described with the characters "[]."
Example: [MENU], [CLEAR]

The software keys are described with the icon such as  or . The function of the keys are shown at the bottom of the display. Push the key below the desired function.

You can use the following keys on the Menu screen.

FUNCTION	ACTION
Select	Push [▼] or [▲], or rotate [DIAL].
Enter	Push [ENT] or [DIAL].
Go to the next tree level	Push [ENT], [▶], or [DIAL].
Go back to the previous tree level	Push [CLEAR], or [◀].
Cancel	Push [CLEAR] or  .
Exit	Push [MENU] or  .

Information:
In this instruction manual, the transceiver model names are described as shown below.
U.S.A.: USA
Europe: EUR
Germany: FRG
Netherlands: NLD
U.K.: UK

■ Table of Contents

TBD

TBD

TBD

◇ Priorities

- Read all rules and regulations pertaining to priorities and keep an up-to-date copy handy. Safety and distress calls take priority over all others.
- You must monitor Channel 16 when you are not operating on another channel.
- False or fraudulent distress calls are prohibited under law.

◇ Privacy

- Information overheard but not intended for you cannot lawfully be used in any way.
- Indecent or profane language is prohibited.

◇ Radio licenses

(1) SHIP STATION LICENSE

You must have a current radio station license before using the transceiver. It is unlawful to operate a ship station which is not licensed.

Inquire through your dealer or the appropriate government agency for a Ship-Radiotelephone license application. This government-issued license states the call sign which is your craft's identification for radio purposes.

(2) OPERATOR'S LICENSE

A Restricted Radiotelephone Operator Permit is the license most often held by small vessel radio operators when a radio is not required for safety purposes.

The Restricted Radiotelephone Operator Permit must be posted or kept with the operator. Only a licensed radio operator may operate a transceiver.


However, non-licensed individuals may talk over a transceiver if a licensed operator starts, supervises, ends the call and makes the necessary log entries.

A current copy of the applicable government rules and regulations is only required to be on hand for vessels in which a radio telephone is compulsory. However, even if you are not required to have these on hand it is your responsibility to be thoroughly acquainted with all pertinent rules and regulations.


NOTE For the UK version: Even though the IC-M510BB is capable of operation on VHF marine channels 1021, 1023, 1081, 1082 and 1083, according to FCC regulations these simplex channels cannot be lawfully used by the general population in USA waters.

Command microphone

Front panel:

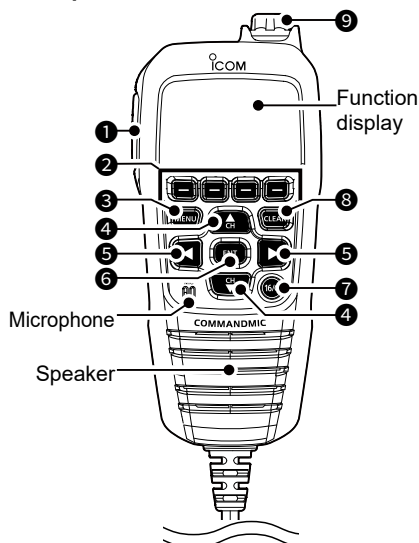

Rear panel:

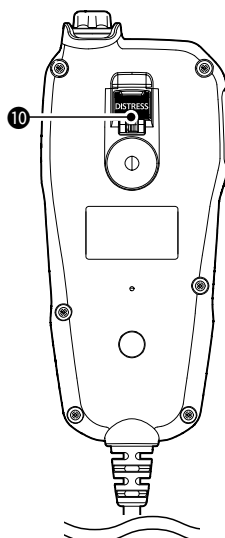

1 PTT SWITCH [PTT] (p.XX)

Hold down to transmit, release to receive.

2 SOFTWARE KEYS (p.XX)

Scroll the key functions pushing [◀] or [▶], then push either of the 4 software keys to select the function displayed at the bottom of the display.

3 MENU KEY [MENU]

Push to display or close the Menu screen.

4 UP/DOWN KEYS [▲ CH]/[▼ CH]

- Push to select an operating channel, Menu items, Menu settings, and so on. (p. XX)
- Push to select a character or number in the entry mode. (pp. XX, XX~XX)

5 LEFT/RIGHT KEYS [◀]/[▶]

- Push to scroll the Software Key functions. (pp. XX~XX)
- Push to select a character or number in the entry mode. (pp. XX, XX, XX~XX)

6 ENTER KEY [ENT]

Push to set the entered data, selected item, and so on.

7 CHANNEL 16/CALL CHANNEL KEY [16/C]

- Push to select Channel 16. (p. XX)
- Hold down for 1.5 seconds to select the Call channel. (p. XX)

8 CLEAR KEY [CLEAR]

Push to cancel the entered data or to return to the previous screen.

9 VOLUME/SQUELCH/POWER DIAL [VOL]/[SQL]/[PWR]/[DIAL]

- Rotate to adjust the volume level, squelch level
- Hold down for 1 second to turn the transceiver ON or OFF.
- Push to set the entered data, selected item, and so on.


10 DISTRESS KEY [DISTRESS]

Hold down for 3 seconds to transmit a Distress call. (p. XX)

2 PANEL DESCRIPTION

■ Function Display (INFO screen)

- ① When you switch the main screen between the INFO, the Plotter, and the MOB screens, push **DISP**.

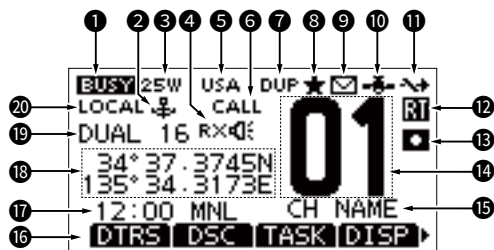

① BUSY/TRANSMIT

- **TX** is displayed when receiving a signal or the squelch is open.
- **BUSY** is displayed while transmitting.

② ANCHOR WATCH INDICATOR

Displayed when the Anchor Watch function is activated.

③ POWER

- "25W" is displayed when high power is selected.
- "1W" is displayed when low power is selected.

④ RX HAILER

Displayed while in the RX Hailer mode.

AUTO FOGHORN

FX is displayed when the Auto Foghorn function is activated.

- ① **RX** takes precedence over **FX** on the screen.

⑤ CHANNEL GROUP

Displays the selected channel group.

- ① The selectable channels differ, depending on the version or presetting.

⑥ CALL CHANNEL

Displayed when the Call channel is selected

⑦ DUPLEX

Displayed when a Duplex channel is selected.

⑧ FAVORITE CHANNEL

Displayed when a Favorite channel is selected.

⑨ MESSAGE

Displayed when there are unread DSC messages

Blinks when a DSC message is received.

⑩ GPS INDICATOR

- Displayed when the transceiver receives valid position data.
- Blinks when invalid GPS data is being received.

⑪ CH AUTO SWITCH

Displayed when "CH AUTO SWITCH" is set to anything other than "Accept."

⑫ RT (Radio Telephone) INDICATOR

Displayed while in the Radio Telephone mode.

- ① Returns to the Standby mode if no operation occurs during the preset period of time.

⑬ VOICE RECORD

- **RE** is displayed while recording the audio.
- **PL** is displayed while playing back the recorded audio.

LOW BATTERY INDICATOR

LO is displayed when the battery voltage is low.

⑭ CH NUMBER READOUT

Displays the selected channel number

⑮ CH NAME FIELD

The channel name is displayed.

16 SOFTWARE KEYS

Software key functions are displayed.

17 TIME ZONE

The current time is displayed when valid GPS data is received, or the time has been manually entered.

- "NO TIME" is Displayed when valid GPS data is not received or time has not been manually entered.
- "???" blinks every 2 seconds instead of the time when the GPS current time is invalid.
- ① After 23.5 hours has passed, "NO TIME" will be displayed.
- "???" blinks every 2 seconds instead of the time after 4 hours have passed since you manually entered the time.
- "LOCAL" is displayed when the offset time is set.
- "MNL" is displayed when the time was manually entered.

18 POSITION

The current position is displayed when valid GPS data is received, or the position has been manually entered.

- "NO POSITION" is displayed when valid GPS data is not received or your position has not been manually entered.
- "???" blinks every 2 seconds instead of your position when the GPS position is invalid.
- ① The last position is held for only 23.5 hours. After that, "NO POSITION" will be displayed.
- "???" blinks every 2 seconds instead of the position after 4 hours have passed since you manually entered your position.
- ① The manually entered position is held for only 23.5 hours. After that, "NO POSITION" will be displayed.

19 SCAN INDICATOR

- "SCAN" is displayed during a Normal scan.
- "SCAN 16" is displayed during a Priority scan.
- "DUAL 16" is displayed during Dualwatch.
- "TRI 16" is displayed during Tri-Watch.

20 ATTENUATOR INDICATOR

(For only the USA version)

Displayed when the Attenuator function is turned ON.

2 PANEL DESCRIPTION

■ Software Keys

Various often-used functions are assigned to the Software Keys for easy access. The functions' icons are displayed above the Software Keys, as shown below.

◇ Selecting a Software Key function

Push [◀] or [▶] to slide through the selectable functions that are assigned to the Software Keys.

Push the Software Key under the function's icon to select the function.



NOTE: The displayed icons or their order may differ, depending on the transceiver version or the presetting. When the MMSI code is not set, the Software Keys for the DSC function are not displayed.

◇ Software Key functions

Compose Distress [DTRS] (p.XX)

Push to display the "Compose Distress" screen to select the nature of distress, then to make a call.

NEVER MAKE A DISTRESS CALL IF YOUR VESSEL OR A PERSON IS NOT IN AN EMERGENCY. A DISTRESS CALL SHOULD BE MADE ONLY WHEN IMMEDIATE HELP IS NEEDED.

Compose other DSC [DSC] (p.XX)

Push to compose an Individual call, Group call, All Ships call or a Test call, and so on.

Task List [TASK] (p.XX)

(For only the USA version)

Push to enter the Task List.

① Displayed only when "Multiple" is selected in the "Procedure" in the Menu screen.

Unread List [UNREAD] (p.XX)

Push to enter the Unread List.

① Displayed only when "Single" is selected in the "Procedure" in the Menu screen.

DISPLAY [DISP] (p.XX)

Push to switch the main screen between the INFO, the Plotter, and the MOB screens

Range [RANGE] (p.XX)

Push to select the plotter display range on the Plotter screen.

① Displayed only on the plotter screen.

Target Select [SEL ◀]/[SEL ▶] (p.XX)

Push to select an AIS target, or MOB.

① Displayed only on the plotter screen.

Target Details [INFO] (p.XX)

Push to display the details on the selected target.

① Displayed only on the plotter screen.

Scan [SCAN] (p.XX)

Push to start or stop a Normal or Priority scan.

Dualwatch/Tri-watch [DW]/[TW] (p.XX)

(Except for the NLD version)

Push to start or stop the Dualwatch or Tri-watch.

Channel/Weather channel [CH/WX] (p.XX)

Push to select regular channels or Weather channels.

- ① The Weather channel is only for the USA version. [CH] is displayed for other versions.
- ① While the Call channel or Channel 16 is displayed, push this key to return to the regular channel mode.

DSC Log [LOG] (p.XX)

Push to display the received call log or distress message log.

Man Overboard [MOB] (p.XX)

Push to enter the Man Overboard (MOB) mode.

While in the MOB mode, push to stop the MOB mode.

Anchor Watch [ANCHOR] (p.XX)

Push to start or stop the Anchor watch function.

High/Low [HI/LO] (p.XX)

Push to set the output power level to high or low.

- ① Some channels are set to only low power.

RX Play [PLAY] (p.XX)

Push to play back the recorded audio.

RX Hailer [RX HAILER] (p.XX)

Push to display the RX Hailer popup screen.

- ① To use this function, an external speaker must be connected to the transceiver.

Attenuator [LO/DX] (p.XX)

(For only the USA version)

Push to turn the Attenuator function ON or OFF.

- ① "LOCAL" is displayed when the Attenuator function is turned ON.

AquaQuake [AQUA] (p.XX)

Hold down to turn ON the AquaQuake function to clear water from the command microphone's speaker grill.

Favorite Channel [★] (p.XX)

Push to set or clear the displayed channel as a Favorite channel.

CH Name [NAME] (p.XX)

Push to edit the name of the displayed channel.

Backlight [BKLT] (p.XX)

Push to display the Backlight popup screen.

In the Backlight popup screen, you can set the backlight level.

For only the European version:

When you turn ON the transceiver, "Model" screen is displayed depending on the setting. Select the country where you operate the transceiver.

① If no country is selected, "General" is automatically selected.

■ Entering the MMSI code

The Maritime Mobile Service Identity (MMSI: DSC self ID) code consists of 9 digits.

You can only enter the code when turning ON the transceiver for the first time.

This initial code can be entered only once.


After entering, it can be changed only by your dealer or distributor.

If your MMSI code has already been entered, doing the steps below is not necessary.



1. Hold down [PWR] to turn ON the transceiver.
 - Three short beeps sound, and "Push [ENT] to Register your MMSI" is displayed.
2. Push [ENT] to start entering the MMSI code.
 - The "MMSI INPUT" screen is displayed.
 - ① Push [CLEAR] twice to skip the entry.
If you skip the entry, you cannot make a DSC call. To enter the code after skipping, turn OFF the power, and then turn it ON again.
3. Enter the MMSI code.

TIP:

- Select a number using [◀] and [▶].
- Push [ENT] to enter the selected number.
- Select "←" or "→" on the screen, or rotate [DIAL] to move the cursor.

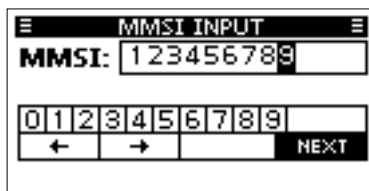

4. Repeat step 3 to enter all 9 digits.
5. Select **NEXT** and push [ENT] to set the entered code.
 - The "MMSI CONFIRMATION" screen is displayed.
6. Enter your MMSI code again to confirm.
7. Select **FINISH** to set the entered code.
 - When your MMSI code is successfully entered, "MMSI registered successfully." is briefly displayed, and then enters the operating screen.
 - ① Your MMSI code is also displayed on the opening screen.

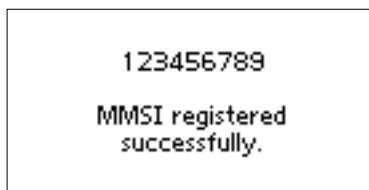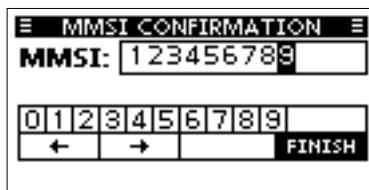

■ Entering the ATIS ID (For NLD and FRG versions)

The Automatic Transmitter Identification System (ATIS) ID consists of 10 digits. You can enter the ID in the "ATIS ID Input" item on the Menu screen.

This ID entering can be done only once.


After entering, it can be changed only by your dealer or distributor. If your ATIS ID has already been entered, doing the steps below is not necessary.

3


1. Push [MENU].
 - The Menu screen is displayed.
2. Push [▲] or [▼], or rotate [DIAL] to select "ATIS ID Input," then push [ENT] to start entering.
 - The "ATIS ID INPUT" screen is displayed.
3. Enter your ATIS ID.

TIP:


- Select a number using [◀] and [▶].
- Push [ENT], or [DIAL] to enter the selected number.
- Select "←" or "→", or rotate [DIAL] on the screen to move the cursor.

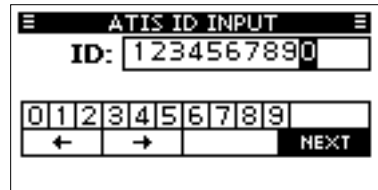

4. Repeat step 3 to enter all 10 digits.
5. Select **NEXT** to set the entered ID.
 - The "ATIS ID CONFIRMATION" screen is displayed.
6. Enter your ATIS ID again to confirm.

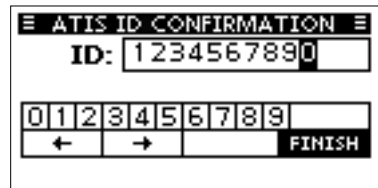

7. Select **FINISH** to set the entered ID.
 - When your ATIS ID is successfully entered, the screen displays "ATIS ID registered successfully.," and then enters the operating screen.
- ① You can check the ATIS ID in "Radio Information" on the Menu screen.

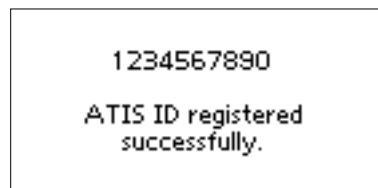

■ Selecting a channel

◇ Regular Channel

You can select a channel by pushing [▲] or [▼].

◇ Channel 16

Channel 16 is the distress and safety channel. It is used to establish the initial contact with a station, and for emergency communications. Channel 16 is monitored during both Dualwatch and Tri-watch. While in the standby mode, you must monitor Channel 16.


- Push [16/C] to select Channel 16.
 - ① To return to the previously selected channel, push **CH/WX** or **CH**.



◇ Call channel

Each Channel Group has separate leisure-use Call channels. The Call channel is scanned during Tri-watch. The Call channels can be selected and used to store your most often used channels in each Channel Group, for quick recall. See page XX for details on setting the Call channel.

- Hold down [16/C] for 1 second to select the Call channel.
 - The Call channel number and “CALL” are displayed.
 - ① To return to the previously selected channel, push **CH/WX** or **CH**.

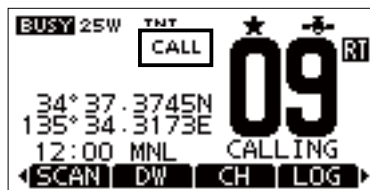

◇ Selecting a Channel Group

Channel Groups are preset into your transceiver. You can select a Channel Group for USA, International, Canadian, DSC, and ATIS depending on the transceiver version.

1. Open the “CHANNEL GROUP” screen.
[MENU] > Settings > Radio > **Channel Group**
2. Push [▲] or [▼], or rotate [DIAL] to select a Channel Group, and then push [ENT] or [DIAL].
3. Push [MENU] to exit the Menu screen.
4. The selected Channel Group's icon is displayed on the operating screen.

Version	Preset Channel Group				
	USA	INT	CAN	DSC	ATIS
USA	✓	✓	✓		
UK	✓	✓			
European		✓			
NLD		✓			✓
FRG		✓		✓	✓

■ Weather channels and Weather Alert

(For only the USA version)


The USA version transceiver has 10 preset Weather channels.

The transceivers are capable* of monitoring broadcasts from the National Oceanographic and Atmospheric Administration (NOAA). The transceiver automatically detects a Weather alert tone on the selected weather channel, or while scanning.

*When used within range of the broadcasts.

◇ Selecting a Weather channel

1. Push [CH/WX].
 - "WX" is displayed on the operating screen instead of the Channel Group.
2. Push [▲] or [▼], or rotate [DIAL] to select a Weather channel.

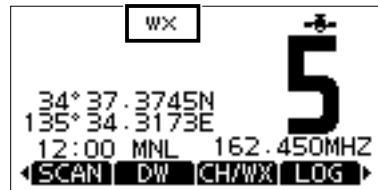



The Weather channel list

WX channel	Frequency (MHz)	WX channel	Frequency (MHz)
1	162.550	6	162.500
2	162.400	7	162.525
3	162.475	8	161.650
4	162.425	9	161.775
5	162.450	10	163.275

◇ Setting the Weather Alert

To receive the weather alert, set the WX Alert to "ON with Scan," or "ON."

1. Open the "WEATHER ALERT" screen.
 - [MENU] > Settings > Radio > **WX Alert**
 2. Select "ON with Scan," or "ON."
 - "🔊" is displayed next to the weather channel icon.
- ① "WX🔊" blinks until you push a key after detecting an alert.

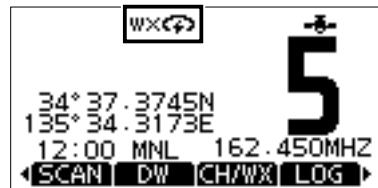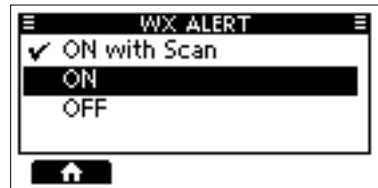


4 BASIC OPERATIONS

■ Adjusting the volume/squelch/backlight/display contrast

◇ Adjusting the volume level


- Rotate [VOL] to adjust the audio volume level.

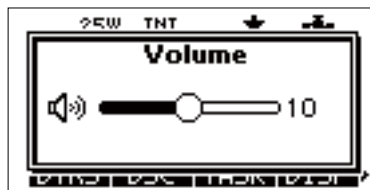

◇ Adjusting the squelch level

Squelch enables the audio to be heard only while receiving a signal that is stronger than the set level. A higher level blocks weak signals, so that you can receive only stronger signals. A lower level enables you to hear weak signals.

- Push [SQL] one or more times and rotate [SQL] to adjust the squelch level.

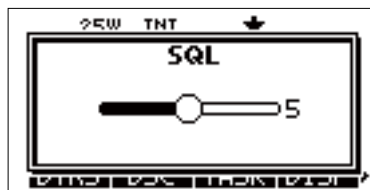

◇ Adjusting the backlight

The Function display and keys can be backlit for better visibility under low light conditions.

1. Open the "BACKLIGHT" screen.


[MENU] > Settings > Configuration > **Backlight**

① You can also push **BKLT** to open the "Backlight" screen.

2. Push [◀] or [▶] or rotate [DIAL] to adjust the backlight level, and push [ENT] to exit.

- The backlight level is set, and the transceiver returns to the previous screen.

① The backlight level is adjustable in 7 levels and "OFF."

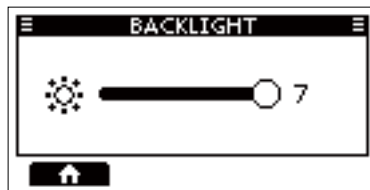


◇ Adjusting the display contrast

1. Open the "DISPLAY CONTRAST" screen.

[MENU] > Settings > Configuration > **Display Contrast**

2. Push [◀] or [▶] or rotate [DIAL] to adjust the display contrast, and push [ENT] to exit.

① The contrast level is adjustable in 8 levels.

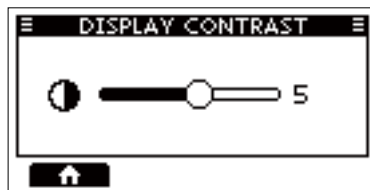


■ Setting the Call channel

By default, a Call channel is set in each Channel Group.

You can set your most often-used channel as your Call channel in each Channel Group for quick recall.

1. Open the "CALL CHANNEL" screen.
[MENU] > Settings > Radio > **Call Channel**
2. Push [▲] or [▼], or rotate [DIAL] to select the channel.
3. Push [ENT] or [DIAL] to set the selected channel as the Call channel.
4. Push [MENU] to exit the Menu screen.

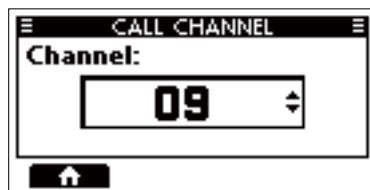

■ AquaQuake Water Draining function

Water in the speaker grill may muffle the sound coming from the speaker. The AquaQuake Water Draining function removes water from the speaker grill by vibrating the speaker cone.

CAUTION: DO NOT use the AquaQuake Water Draining function when an external speaker is connected.

1. Push [◀] or [▶] to display **AQUA**.
2. Hold down **AQUA** to turn ON the function.
 - A low frequency vibration beep sounds to drain the water, regardless of the volume level setting.
 - ① This function is activated for a maximum of 10 seconds, even if you continue to hold down **AQUA**.



3. Release **AQUA** to turn OFF the function.

■ Editing a channel name

You can edit the name of each operating channel and weather channel, using numbers, uppercase letters, symbols, and a space. This enables easy recognition of the channels or stations. All VHF marine channels are set with default names.

1. Push [▲] or [▼], or rotate [DIAL] to select the channel to edit.
2. Push [◀] or [▶] to display **NAME**.
 - ① You cannot edit a channel name during Dualwatch, Tri-watch, or a scan.
3. Push **NAME**.
 - The "CHANNEL NAME" screen is displayed.
4. Edit the channel name.
 - ① Select **123** to enter numbers, and **ABC** to enter symbols.
5. Select **FINISH**, and then push [ENT] or [DIAL] to save the edited name and return to the operating screen.




4 BASIC OPERATIONS

■ Receiving and transmitting

CAUTION: DO NOT transmit without an antenna.

1. Push [▲] or [▼], or push [DIAL] one or more times and rotate [DIAL] to select a channel to call on.
 - The channel number and name are briefly displayed.
 - ① **EUSY** is displayed while receiving a signal.
2. Hold down [PTT] and speak into the microphone at your normal voice level.
 - **TX** is displayed while transmitting.
3. Release [PTT] to receive.

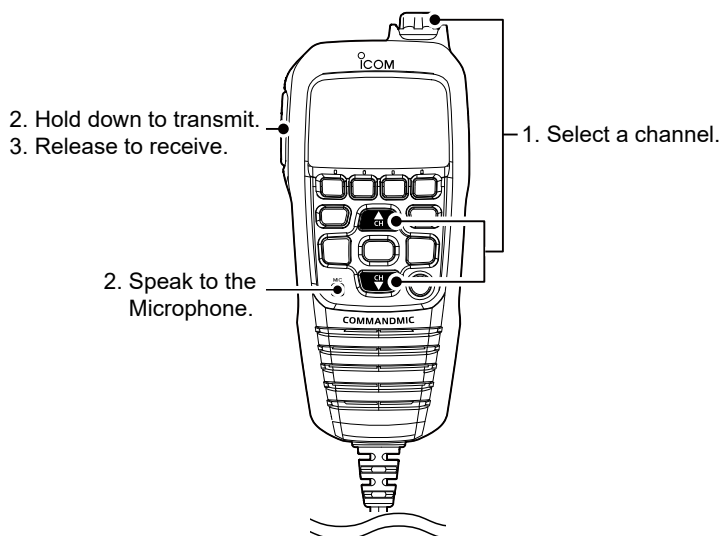

TIP: To maximize the readability of your transmitted signal, pause for a second after holding down [PTT] and hold the microphone 5 to 10 cm from your mouth, and then speak at your normal voice level.

NOTE: The Time-out Timer function cuts OFF transmission after 5 minutes of continuously transmitting, to prevent prolonged transmission.

■ Scan types

You can find ongoing communication by scanning the Favorite channels. Scan is for all the transceiver versions except the NLD version.


Before starting a scan :

- Set the channels that you want to scan as Favorite channels. (p. XX)
 - ① Only the Favorite channels are scanned.
- Set the scan type to "Priority Scan" or "Normal Scan" on the Menu screen. (p. XX)

[MENU] > Settings > Radio > **Scan Type**

Normal Scan


Sequentially searches through all Favorite channels. Channel 16 is not scanned unless it is set as a Favorite channel.

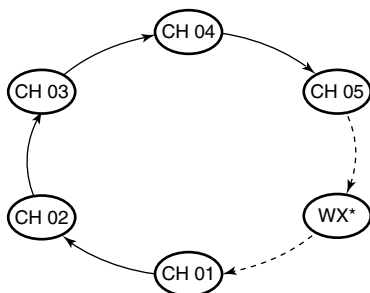

*For the USA version, when the Weather Alert function is ON, the previously selected Weather channel is also scanned.

Priority Scan

Sequentially searches through all Favorite channels, while also periodically checking Channel 16.

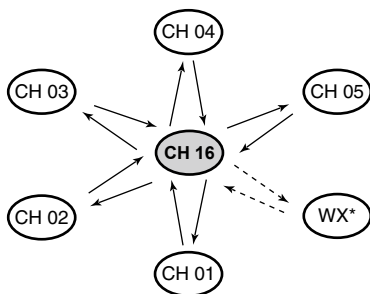

*For the USA version, when the Weather Alert function is ON, the previously selected Weather channel is also scanned.

When a signal is received:

On Channel 16:

The scan pauses until the signal disappears.

On a channel other than Channel 16:

The scan becomes Dualwatch until the signal disappears.

5 SCAN OPERATION

■ Setting Favorite channels (Except for the NLD version)

You can quickly recall often-used channels by setting them as Favorite channels. You can set Favorite channels in each Channel Group.

1. Select a Channel Group on the Menu screen. (p. XX)

[MENU] > Settings > Radio > **Channel Group**

2. Push [▲] or [▼], or rotate [DIAL] to select the channel.
3. Push [◀] or [▶] to display **★**.
4. Push **★**.
 - The selected channel is set as a Favorite channel, and "★" is displayed.
 - ① To cancel the setting, push **★** again.

TIP: You can set all channels as Favorite channels, clear all settings, or reset to the defaults. By default, some channels are preset as Favorite channels. The preset channels differ, depending on the transceiver version.



■ Starting a scan (Except for the NLD version)

Example: Starting a Normal Scan.

1. Select a Channel Group on the Menu screen. (p. XX)

[MENU] > Settings > Radio > **Channel Group**

2. Push [◀] or [▶] to display **SCAN**.
3. Push **SCAN**.
 - The scan starts.
 - "SCAN" is displayed during a Normal Scan and "SCAN 16" is displayed during a Priority Scan.
 - "SCAN" and **BUSY** are displayed when a signal is received.
- ① When a signal is received, the scan pauses until it disappears, or resumes after 5 seconds, depending on the Scan Timer setting in "Radio Settings."
- ② A beep sounds and "16" blinks when a signal is received on Channel 16 during a Priority scan.
4. To stop the scan, push **SCAN**.

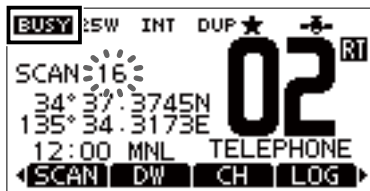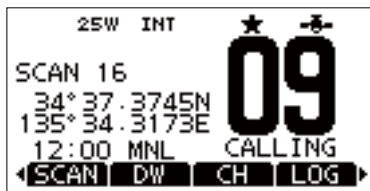

TIP: To properly receive signals, be sure to adjust the squelch to a suitable level.


DUALWATCH/TRI-WATCH (Except for the NLD version)

6

Description


Dualwatch and Tri-watch are convenient to periodically check Channel 16 while you are operating on another channel.

Dualwatch

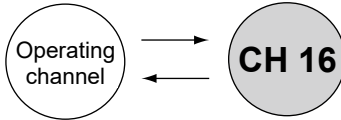

Periodically checks Channel 16 while operating on another channel.

Tri-watch

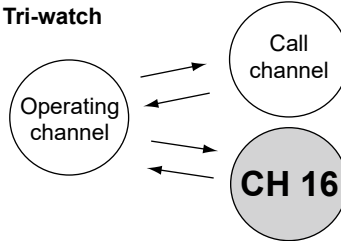

Periodically checks Channel 16 and the Call channel while operating on another channel.

When a signal is received:

On Channel 16: Dualwatch/Tri-watch pauses on Channel 16 until the signal disappears.



On the Call channel: Tri-watch switches to Dualwatch until the signal on the Call channel disappears.

Operation

1. Select Dualwatch or Tri-watch on the Menu screen.

[MENU] > Settings > Radio > **Dual/Tri-Watch**

2. Push [▲] or [▼], or rotate [DIAL] to select a channel.
3. Push [◀] or [▶] to display **DW** or **TW**.
4. Push **DW** or **TW**.
 - Dualwatch or Tri-watch starts.
 - "DUAL 16" is displayed for Dualwatch, or "TRI 16" is displayed for Tri-watch.
 - ① **BUSY** is displayed when a signal is received.
 - ① A beep tone sounds and "16" starts to blink when a signal is received on Channel 16.
5. To cancel Dualwatch or Tri-watch, push **DW** or **TW** again.

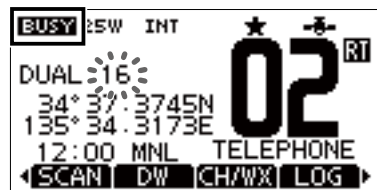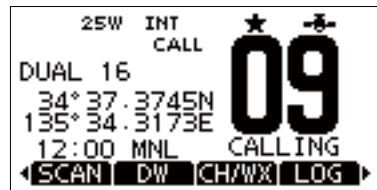

■ DSC address ID

◇ Entering an Individual or Group ID

You can enter a total of 75 Individual IDs and 25 Group IDs, and assign names to them of up to 10 characters.

1. Open the "INDIVIDUAL ID" or "GROUPID" screen.

[MENU] > Settings > DSC > **Individual ID**

[MENU] > Settings > DSC > **Group ID**


2. Push **ADD**.
 - "No ID" is displayed if no ID is entered.
3. Enter an Individual or Group ID.

TIP:

- Select a number using [**◀**] and [**▶**].
- Push [ENT] or [DIAL] to set the selected number.
- Select "**←**" or "**→**" on the screen, or rotate [DIAL] to move the cursor.

NOTE:

- For a Group ID, the first digit is fixed as "0."
- For any coast station ID, the first two digits are fixed as "0."

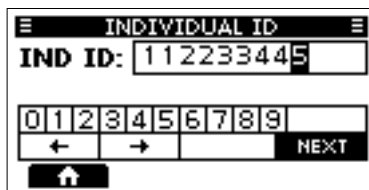

4. Push **NEXT** to start entering the ID's name.

TIP:

- Select **123** to enter numbers and letters, and **456** to enter symbols.
- Select a number, character, or space using [**▲**], [**▼**], [**◀**], and [**▶**].
- Push [ENT] or [DIAL] to enter the selected number or character.
- Select "**←**" or "**→**" on the screen to move the cursor, or to select the entered character.



5. After entering, push **FINISH** to save, and return to the previous screen.
 - The entered name is displayed.



◇ Deleting an entered ID

(Example: Deleting an Individual ID: STATION 2)

1. Open the "INDIVIDUAL ID" screen.
[MENU] > Settings > DSC > **Individual ID**
2. Select "STATION 2," and then push **DEL**.
• "Delete the ID. Are You Sure?" is displayed.
3. Push **OK** to delete.
① Push **CANCEL** to cancel the deletion.
• The selected ID is deleted, and then returns to the previous screen.



7

■ Entering the position and time

A Distress call should include the vessel's position, date, and time. If no GPS data is received, manually enter the position and Universal Time Coordinated (UTC) time.

NOTE:



- The manual entry is disabled while valid GPS data is received.
- The manually entered position and time is valid only for 23.5 hours, or until turning OFF the transceiver.

1. Open the "POSITION INPUT" screen.
[MENU] > Settings > DSC > **Position Input**


2. Enter the latitude.

TIP:

- Select a number or a compass direction using [▲], [▼], [◀], and [▶].
- Select "←" or "→" on the screen, or rotate [DIAL] to move the cursor.
- Select **NEXT** and then push [ENT] or [DIAL] to save the selected number.

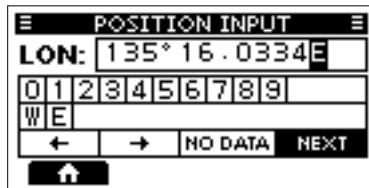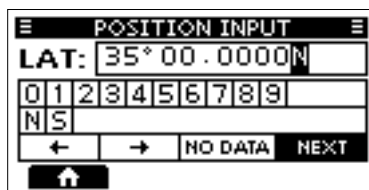

3. Enter the longitude and the UTC time.
① See the TIP in step 2 to enter.
4. After entering, push **FINISH** to save, and return to the "DSC" screen.

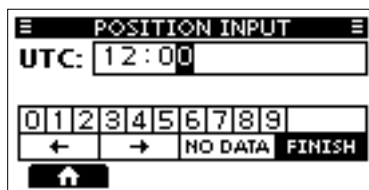

7 DIGITAL SELECTIVE CALLING (DSC)


■ Sending DSC calls (Distress)

A Distress call should be sent if, in the opinion of the captain, the ship or a person is in distress and requires immediate assistance.


NEVER MAKE A DISTRESS CALL IF YOUR SHIP OR A PERSON IS NOT IN AN EMERGENCY. A DISTRESS CALL SHOULD BE MADE ONLY WHEN IMMEDIATE HELP IS NEEDED.

◇ Simple call

1. Confirm that no Distress call is being received.
2. While lifting up the key cover, hold down [DISTRESS] for 3 seconds until you hear 3 short countdown beeps and a long beep sound.
 - The backlight blinks.

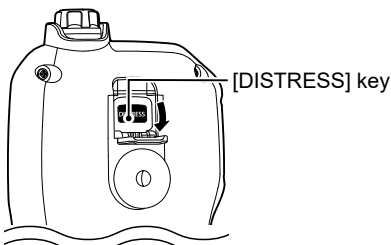

3. After sending, wait for an Acknowledgment call.
 - "Waiting for ACK" is displayed.
 - The Distress call is automatically sent every 3.5 to 4.5 minutes, until an Acknowledgment is received, or a Distress Cancel call is sent.
4. When you receive an Acknowledgment, an alarm sounds. Push **ALARM OFF** to turn OFF the alarm.
 - Channel 16 is automatically selected.
5. Push **CLOSE**.
6. Hold down [PTT], and then explain your situation.
7. After you have finished your conversation, push **↑**.
 - "Terminate the procedure. Are you sure?" is displayed.
8. Push **OK** to return to the operating screen.

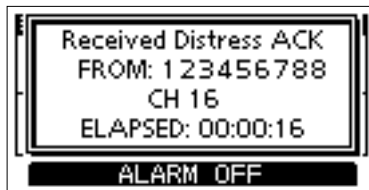


TIP: A default Distress alert contains:

- Nature of distress: Undesignated distress
- Position information: The latest GPS, or manually input position, that is held for 23.5 hours, or until you turn OFF the transceiver.

◇ Regular call

Select the nature of the Distress call to include in the Regular Distress call.

1. Push **DTRS**.
 - The “COMPOSE DISTRESS” screen is displayed.
2. Push [ENT] or [DIAL] to enter the Nature selection mode.
3. Select the nature of the Distress, and then push [ENT] or [DIAL]. (Example: Flooding)
 - The setting is saved and returns to the previous screen.
 - ① If no valid GPS data is being received, select “Position,” and then enter the latitude, longitude, and UTC.
See “Entering the position and time” on page 18 for details.

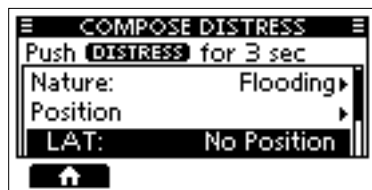

4. While lifting up the key cover, hold down [DISTRESS] (the red button) for 3 seconds until you hear 3 short countdown beeps and a long beep sound.
 - The backlight blinks.



5. After sending, wait for an Acknowledgment.
 - “Waiting for ACK” is displayed.
 - ① The Distress call is automatically sent every 3.5 to 4.5 minutes, until an Acknowledgment is received, or a Distress Cancel call is sent. (p. 21)



6. When you receive an Acknowledgment, an alarm sounds. Push **ALARM OFF** to turn OFF the alarm.
 - Channel 16 is automatically selected.
7. Hold down [PTT] to communicate.
8. After you have finished your conversation, push **HOME**.
 - “Terminate the procedure. Are you sure?” is displayed.
9. Push **OK** to return to the operating screen.




TIP: You can also send a Regular call by selecting the “Distress” item on the Menu screen.

7 DIGITAL SELECTIVE CALLING (DSC)

◇ Distress Cancel call

If you have accidentally made a Distress call, or made an incorrect Distress call, send a Distress Cancel call to cancel the call as soon as possible while waiting for an Acknowledgment. Be sure to report the purpose of the cancellation.

1. While waiting for an Acknowledgment, push **CANCEL**.
 - The screen on the right is displayed.

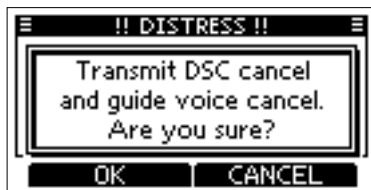


2. Push **OK**.
 - The Distress Cancel call is sent.
 - Channel 16 is automatically selected.



3. Hold down [PTT] to report the purpose of the cancellation.
 - ① You can display the wording of the cancellation by pushing [▼].



4. After communicating, push **FINISH**.
 - ① The screen on the right is displayed.
5. Push **HOME** to finish the Distress Cancel call.
 - "Terminate the procedure. Are you sure?" is displayed.
6. Push **OK** to return to the operating screen.

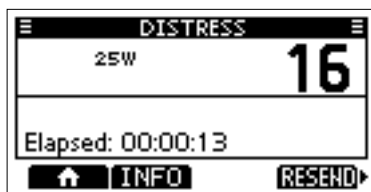

◇ Distress call Software Key description

While waiting for an Acknowledgment:

CANCEL : Cancels the Distress call and enables you to send a Cancel call.

RESEND : Enables you to resend the Distress call by holding down [DISTRESS] again.

PAUSE : Pauses the countdown to resend the next Distress call.

After receiving an Acknowledgment:

INFO : Displays the Distress call information.

◇ Sending a Distress Relay acknowledgment (For only the USA version)

You can send the Distress Relay acknowledgment only when a Distress Relay call is received.

1. When a Distress Relay call is received:
 - An alarm sounds.
 - The screen on the right is displayed.
2. Push any **ALARM OFF** to turn OFF the alarm.




3. Push **ACPT**.
 - The received information is displayed.



4. Push **ACK**.
 - The call contents screen is displayed.
 - ① Rotate [DIAL] to view the call contents.



5. Push **CALL** to send the Distress Relay acknowledgment.

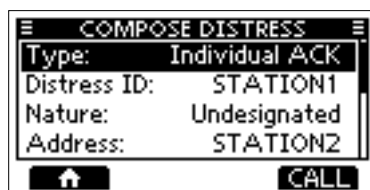

6. Hold down [PTT] to communicate.
7. After you have finished your conversation, push **CANCEL**.
 - "Terminate the procedure. Are you sure?" is displayed.
8. Push **OK** to return to the operating screen.

7 DIGITAL SELECTIVE CALLING (DSC)

■ Sending DSC calls (other)




NOTE: To ensure proper DSC operation, be sure to correctly adjust the “CH 70 SQL Level” item on the Menu screen. (p. 45)

◇ Sending an Individual call

An Individual call enables you to send a DSC signal to only a specific station. You can communicate after receiving the Acknowledgment “Able to comply.”

NOTE: You can also compose an Individual call to an AIS target on the Plotter screen or the AIS list. (pp. 54, 57)

1. Push **DSC**.
 - The “COMPOSE OTHER” screen is displayed.
 - ① You can also display the screen by selecting the “Compose Other” item on the Menu screen.
2. Select “Msg Type,” and then push [ENT] or [DIAL].
3. Select “Individual Call,” and then push [ENT] or [DIAL].
 - Returns to the previous screen.
4. Select “Address,” and then push [ENT] or [DIAL].
5. Select the station to send an Individual call to, and then push [ENT] or [DIAL].
 - Returns to the previous screen.
 - ① You can also select “Manual Input” to manually enter the target station ID.
6. Select “Channel,” and then push [ENT] or [DIAL].
7. Select a channel to assign, and then push [ENT] or [DIAL].
 - ① The assigned channels are preset by default.
8. Push **CALL** to send the Individual call.
 - “Transmitting Individual Call” is displayed, and then “Waiting for ACK” is displayed.
 - ① If Channel 70 is busy, the transceiver stands by until the channel becomes clear.

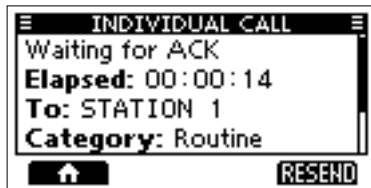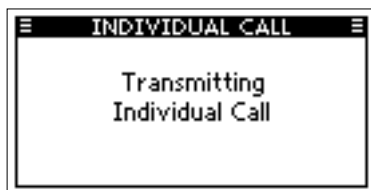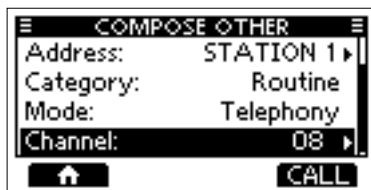

- When you receive an Acknowledgment "Able to comply":
 - An alarm sounds.
 - The screen on the right is displayed.

- Push **ALARM OFF** to turn OFF the alarm.
 - The channel assigned in step 7 is automatically selected.
 - If the called station cannot use the channel that you assigned, a different channel is selected by the other station.
- Push **CLOSE**.
- Hold down [PTT] to communicate.



TIP: If you received an Acknowledgment "Unable to comply":

- Push **ALARM OFF** to turn OFF the alarm, and then push **CLOSE**.
 - The Acknowledge information is displayed.
- Push **HOME**, and then **OK** to return to the operating screen.



◆ Sending an Individual Acknowledgment

When you have received an Individual call (p. 36), send an Acknowledgment to the calling station. When the Auto Ack is set to "Manual," you can select an appropriate acknowledgment type.

- While an Individual call is being received, push **ALARM OFF** to turn OFF the alarm.
 - The received call's information is displayed.
- Push **ACPT**.
 - The Acknowledgment category screen is displayed.
 - If you want to send an Acknowledgment "Able to comply" right away, push **ABLE**.
 - If you cannot communicate, and want to return to the operating screen, push **IGN**.
- Push **ABLE**, **UNABLE**, or **NEWCH** to select the Acknowledgment type.



- ABLE:** Sends an Acknowledgment (Able to Comply) without any changes.
- UNABLE:** Sends an Acknowledgment but (Unable to Comply): cannot communicate.
- NEWCH:** Sends an Acknowledgment. You can (Propose New CH) specify the Voice Communication channel. (Example: Channel 16)

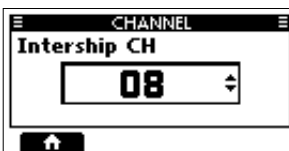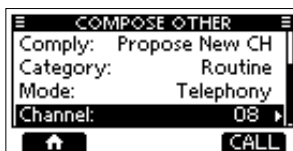


- Push **CALL** to send the Acknowledgment.

7 DIGITAL SELECTIVE CALLING (DSC)

◇ Sending an All Ships call

All Ships that have DSC transceiver use Channel 70 as their listening channel. When you want to announce a message to these ships, if they are within range, use the All Ships call.

1. Push **DSC**.
 - The "COMPOSE OTHER" screen is displayed.
 - ① You can also display the screen by selecting the "Compose Other" item on the Menu screen.
2. Select "Msg Type," and then push [ENT] or [DIAL].
 - The "MESSAGE TYPE" screen is displayed.
3. Select "All Ships Call," and then push [ENT] or [DIAL].
 - Returns to the previous screen.
4. Select "Category," and then push [ENT] or [DIAL].
 - The "CATEGORY" screen is displayed.
5. Select a category of the call, and the push [ENT] or [DIAL].
 - Returns to the previous screen.

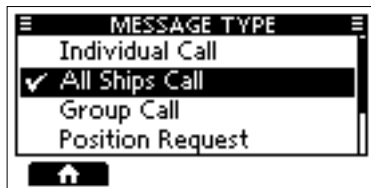


6. Select "Channel," and then push [ENT] or [DIAL].
7. Select the channel to assign, and then push [ENT] or [DIAL].
 - ① The assigned channels are preset by default.

8. Push **CALL** to send the All Ships call.
 - "Transmitting All Ships Call" is displayed, and then the assigned channel is automatically selected.
 - ① If Channel 70 is busy, the transceiver stands by until the channel becomes clear.
9. Hold down [PTT] to communicate.



10. Push **HOME** to finish the All Ships call.
 - "Terminate the procedure. Are you sure?" is displayed.
11. Push **OK** to return to the operating screen.
 - Returns to the operating screen.

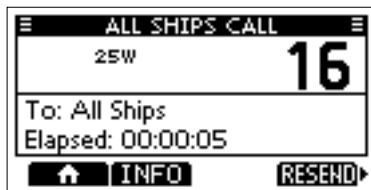


◇ Sending a Group call

A Group call enables you to send a DSC call to only a specific group.

- ① You can send a Group call to a pre-entered group address, or manually enter the address before sending. (p. 17)

1. Push **DSC**.
 - The "COMPOSE OTHER" screen is displayed.
 - ① You can also display the screen by selecting the "Compose Other" item in the Menu screen.
2. Select "Msg Type," and then push [ENT] or [DIAL].
 - The "MESSAGE TYPE" screen is displayed.
3. Select "Group Call," and then push [ENT] or [DIAL].
 - The Group call is selected, and returns to the previous screen.
4. Select "Address," and then push [ENT] or [DIAL].
 - The "ADDRESS" screen is displayed.
5. Select the group to send a Group call, and then push [ENT] or [DIAL].
 - ① You can also select "Manual Input" to manually enter the target group.
6. Select "Channel," and then push [ENT]. or [DIAL].
7. Select the channel to assign, and then push [ENT].
 - ① The assigned channels are preset by default.

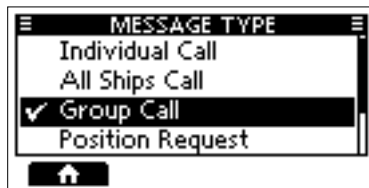

7

8. Push **CALL** to send the Group call.
 - "Transmitting Group Call" is displayed, and then the assigned channel is automatically selected.
 - ① If Channel 70 is busy, the transceiver stands by until the channel becomes clear.
9. Hold down [PTT] to communicate.



10. Push **HOME** to finish the All Ships call.
 - "Terminate the procedure. Are you sure?" is displayed.
11. Push **OK** to return to the operating screen.
 - Returns to the operating screen.






7 DIGITAL SELECTIVE CALLING (DSC)

◇ Sending a Test call

You should avoid testing calls on the exclusive DSC Distress channels and safety calling channels. When you cannot avoid testing on a Distress or safety channel, you should indicate that these are test calls.

Normally the Test call would require no further communications between the two stations involved.

1. Push **DSC**.
 - The "COMPOSE OTHER" screen is displayed.
 - ① You can also display the screen by selecting the "Compose Other" item on the Menu screen.
2. Select "Test Call," and then push [ENT] or [DIAL].
 - The Test call is selected, and returns to the "COMPOSE OTHER" screen.
3. Select "Address," and then push [ENT] or [DIAL].
 - The "ADDRESS" screen is displayed.
4. Select a station to send the Test call to.
 - ① You can also select "Manual Input" to manually enter the calling station.
5. Push **CALL** to send the Test call.
 - ① If Channel 70 is busy, the transceiver stands by until the channel becomes clear.
6. When you receive an Acknowledgment:
 - An alarm sounds.
 - The screen on the right is displayed.
7. Push **ALARM OFF** to turn OFF the alarm.
 - The Acknowledgment information is displayed.
8. Push **CLOSE**.
 - The received call's information is displayed.
 - The call is saved in the DSC Log.
9. Push **HOME** to return to the operating screen.
 - "Terminate the procedure. Are you sure?" is displayed.
10. Push **OK** to return to the operating screen.
 - Returns to the operating screen.

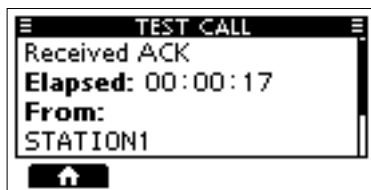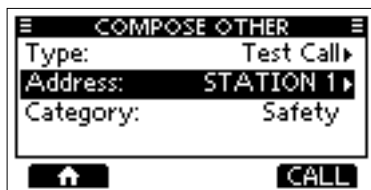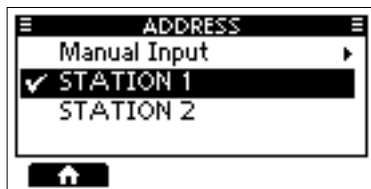

◇ Sending a Test Acknowledgment

By default, when you receive a Test call, the Auto ACK function automatically sends an Acknowledgment to the calling station (p. 44). If the function is set to “Manual,” do the following steps to send an Acknowledgment.


1. After a Test call is being received, push **ALARM OFF** to turn OFF the alarm.
2. Push **ACPT**.
 - The received call's information is displayed.



3. Push **ACK**.
 - The “Test ACK” confirmation screen is displayed.



4. Push **CALL** to send the Acknowledgment.
 - “Transmitting Test ACK” is displayed.
5. Push **↑**, and then push **OK** to return to the operating screen.

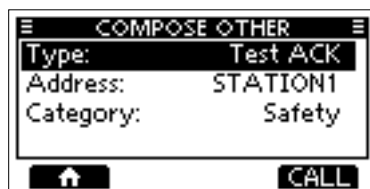


7 DIGITAL SELECTIVE CALLING (DSC)

◇ Sending a Position Request call/Polling Request call (For only the USA version)

You can send a Position Request call or Polling request call to a station, depending on the presetting.

- Send a Position Request call when you want to know a specific ship's current position.
- Send a Polling Request call when you want to know whether a specific ship is in the communication area, or not. **Example: Sending a Position Request call**

1. Push **DSC**.
 - The "COMPOSE OTHER" screen is displayed.
 - ① You can also display the screen by selecting the "Compose Other" item on the Menu screen.
2. Select "Msg Type," and then push [ENT] or [DIAL].
3. Select "Position Request," and then push [ENT] or [DIAL].
 - ① When you send a Polling Request call, select "Polling Request."
 - Returns to the previous screen.
4. Select "Address," and then push [ENT] or [DIAL].
5. Select a target to send a Position Request call to, and then push [ENT] or [DIAL].
 - ① You can also select "Manual Input" to manually enter the target ID.

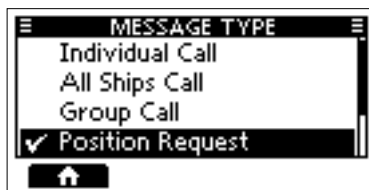

6. Push **CALL** to send the Position Request call.
 - Position Request call is sent, and then "Waiting for ACK" is displayed.
 - ① If Channel 70 is busy, the transceiver stands by until the channel becomes clear.



7. When you receive a Position Reply:
 - An alarm sounds.
 - The screen on the right is displayed.
8. Push **ALARM OFF** to turn OFF the alarm.



9. Push **CLOSE**.
 - The received information is displayed.
10. Push [▲] or [▼], or rotate [DIAL] to scroll the screen, and then check the target's position.
11. Push **HOME**, and then **OK** to return to the operating screen.

◇ Sending a Position Reply call

Send a Position Reply call when a Position Request call is received.

If the Auto ACK function is set to "Auto," the Acknowledgment is automatically sent to the calling station. (p. 44)

1. After a Position Request is being received, push **ALARM OFF** to turn OFF the alarm.
 - The received call's information is displayed.



2. Push the Software Key below the intended operation.

IGN: Ignores the call and returns to the operating screen.

- The call is saved in the DSC Log.
- blinks continuously until you display the call message.

HOLD: Holds the RX call task, and returns to the Main screen.

ABLE: Sends Acknowledgment "Able to comply" right away.

- The call is saved in the DSC Log.
- Displays the Acknowledgment information, and then returns to the operating screen by pushing and then **OK**.

UNABLE: Sends an Acknowledgment "Unable to Comply."

- The call is saved in the DSC Log.
- Displays the Acknowledgment information, and then returns to the operating screen by pushing and then **OK**.



7 DIGITAL SELECTIVE CALLING (DSC)

◇ Sending a Position Reply call

- ACPT** : Accepts the call.
- Displays the received call's information.
 - The call is saved in the DSC Log. Push **ABLE** or **UNABLE**, then push **CALL** to send the Position Reply call.

HOME : Closes the call, and then returns to the operating screen.

ABLE : Sends an acknowledgment with position and time data.
(Able to Comply)

UNABLE : Sends an acknowledgment with no position and time data.
(Unable to Comply)

- Push **HOME**, and then **OK** to return to the operating screen.




◇ Sending a Polling Reply call


Send a Polling Reply call when a Polling Request call is received.

- ① When "Polling ACK" is set to "Auto," the transceiver automatically sends the call.


1. While a Polling Request call is being received, push **ALARM OFF** to turn OFF the alarm.

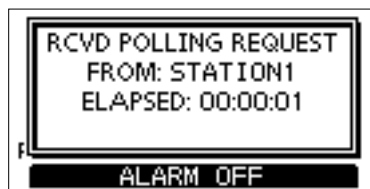


2. Push **ACPT**.
 - Enters the DSC Task mode.

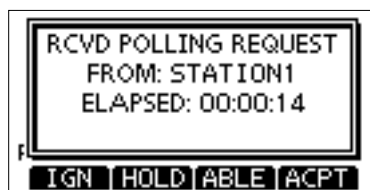

3. Push **ACK**.
 - The call contents screen is displayed.

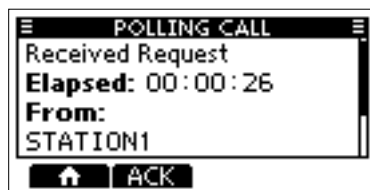

4. Push **CALL** to send the Polling Reply.
 - "Transmitting Polling Reply" is displayed.
5. Push **↑**, and then push **OK** to return to the operating screen.

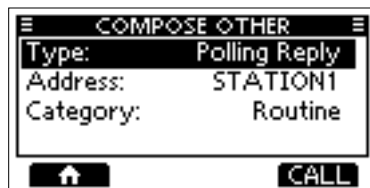

7 DIGITAL SELECTIVE CALLING (DSC)

■ Receiving DSC calls (Distress)

The transceiver receives Distress calls, Distress Acknowledgments, and Distress Cancel calls. When you receive a call, an emergency alarm sounds.

NOTE: The screens that are displayed when a Distress call or an Acknowledgment is received slightly differ from one another. The following steps are described using an example of receiving a Distress call.

When a Distress call is received:

- The emergency alarm sounds until you turn it OFF.
- "RECEIVED DISTRESS" is displayed.



1. Push **ALARM OFF** to turn OFF the alarm.
2. Push the Software Key below the intended operation.

IGN: Returns to the operating screen. The call is saved in the DSC Log. "✉" blinks continuously until you display the call message.

HOLD: Holds the RX call task, and returns to the Main screen.

PAUSE: **PAUSE** is not displayed if the "CH Auto Switch" item is set to "Manual." (p. 44)
Pauses the countdown until the assigned channel is automatically selected.

ACPT: Accepts the call. Channel 16 is automatically selected. Monitor Channel 16 as a coast station may require assistance. After Channel 16 is selected, select your next operation by pushing the Software Key below the following options.

🏠: Closes the Distress operation, and returns to the operating screen.

HIST: Displays the "DISTRESS HISTORY" screen.



When a Distress acknowledgment is received:

1. After a Distress Acknowledgments is being received, push **ALARM OFF** to turn OFF the alarm.
2. Push **CLOSE**
 - The received information is displayed.



3. Push **ACPT**.
 - The received information is displayed.
4. Push **↑**.
 - "Terminate the procedure. Are you sure?" is displayed.



5. Push **OK** to return to the operating screen.

When a Distress Cancel call is received:

1. Push **ALARM OFF** to turn OFF the alarm.
 - The received information is displayed.



2. Push **↑**, and then push **OK** to return to the operating screen.



7 DIGITAL SELECTIVE CALLING (DSC)

◇ Receiving a Distress Relay call

When a Distress Relay call is received:

- An alarm sounds.
- The following screen is displayed and the backlight blinks.
- "📡" blinks.

1. Push **ALARM OFF**.



2. Push the Software Key below the next operation.

IGN: Returns to the operating screen. The call is saved in the DSC Log. "📡" blinks continuously until you display the call message.

HOLD: Holds the RX call task, and returns to the Main screen.

PAUSE: **PAUSE** is not displayed if the "CH Auto Switch" item is set to "Manual." (p. 44) Pauses the countdown until the assigned channel is automatically selected.

ACPT: The call is saved in the DSC Log. Accepts the call. Channel 16 is automatically selected. Monitor Channel 16 as a coast station may require assistance. After Channel 16 is selected, select your next operation by pushing the Software Key below the following options.

🏠: Returns to the operating screen.

HIST: Displays the "DISTRESS HISTORY" screen.



3. Push **🏠**, and then **OK** to return to the operating screen.

■ Receiving DSC calls (other)

The transceiver receives the following types of DSC calls.

- Individual call (p. 36)
- Individual Acknowledgment (p. 24)
- Group call / All Ships call (p. 37)
- Position Request call (p. 38)
- Polling Request call (p. 32)
- Test call (p. 39)
- Test Acknowledgment / Position Reply call / Polling Reply call (p. 40)

① The receivable call types may differ, depending on the transceiver version or presetting.

By default, the Auto ACK function automatically sends an Acknowledgment to the calling station. ([MENU] > Settings > DSC > **Auto ACK** (p. 44))

If Auto ACK is set to "Manual," you can manually send an Acknowledgment for each call as described in this section.

◆ Receiving an Individual call

When an Individual call is received:

- An alarm sounds.
 - "RCVD INDIVIDUAL CALL" is displayed.
1. Push **ALARM OFF** to turn OFF the alarm.



2. Push the Software Key below the next operation.

IGN: Ignores the call and returns to the operating screen.

- The call is saved in the DSC Log.
- "📧" blinks continuously until you display the call message.

HOLD: Holds the RX call task, and returns to the Main screen.

ABLE: Sends an Individual Acknowledgment right away.

- Automatically switches to the assigned channel.

- After sending, push **RESEND** to resend.
- The call is saved in the DSC Log.

ACPT: Accepts the call.

- The call is saved in the DSC Log.
- The received call's information is displayed.
- Push the Software Key to select the Acknowledgment option.



🏠: Push to delete the task and returns to the Main screen.

ABLE: Sends an Acknowledgment without any changes.
(Able to Comply)

UNABLE: Sends an Acknowledgment but cannot communicate.
(Unable to Comply)

NEWCH: Able to communicate but proposes another channel.
(Propose New CH) Specify the channel by pushing [▲] or [▼].



7 DIGITAL SELECTIVE CALLING (DSC)

◇ Receiving a Group call or All Ships call

When a Group call is received:

- An alarm sounds.
- "RECEIVED GROUP CALL" is displayed.

(Example: when a Group call is received)




When an All Ships call is received:

- An alarm sounds.
- "RECEIVED ALL SHIPS CALL" is displayed.

1. Push **ALARM OFF** to turn OFF the alarm.
 - The channel that is assigned by the caller is automatically selected after 10 seconds by default.
2. Push the Software Key below your next operation.

IGN: Ignores the call and returns to the operating screen.


- The call is saved in the DSC Log.
-  blinks continuously until you display the call message.

HOLD: Holds the RX call task, and returns to the Main screen.

PAUSE: Pauses the countdown until the assigned channel is automatically selected.

- The call is saved in the DSC Log.
- ① **PAUSE** is not displayed if the "CH Auto Switch" item is set to "Manual." (p. 44)

ACPT: Accepts the call.

- The assigned channel is selected.
- The call is saved in the DSC Log.
- : Closes the call, and then returns to the operating screen.



◆ Receiving a Position Request call

(May not be used, depending on the presetting)

NOTE: Even if the Auto ACK function is set to “Manual” while waiting to receiving a distress acknowledgment or after receiving a distress acknowledgment, the Position Reply is automatically sent to the calling station.

When a Position Request call is received:

- An alarm sounds.
- “RCVD POS REQUEST” is displayed.

1. Push **ALARM OFF** to turn OFF the alarm.



2. Push the Software Key below the intended operation.

IGN: Ignores the call and returns to the operating screen.

- The call is saved in the DSC Log.
- blinks continuously until you display the call message.

HOLD: Holds the RX call task, and returns to the Main screen.

ABLE: Sends Acknowledgment “Able to comply” right away.
(Able to comply)


UNABLE: Sends an Acknowledgment “Unable to Comply.”
(Unable to Comply)

- The call is saved in the DSC Log.
- Displays the Acknowledgment information, and then returns to the operating screen by pushing and then **OK**.

ACPT: Accepts the call.

- Displays the received call’s information.
- The call is saved in the DSC Log.

Push **ABLE** or **UNABLE**, then push **CALL** to send the Position Reply call.
(p. 30)

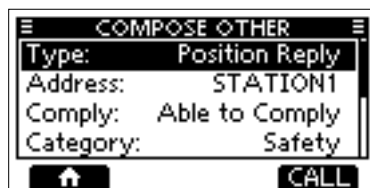

7 DIGITAL SELECTIVE CALLING (DSC)

◇ Receiving a Test call

When a Test call is received:


- An alarm sounds.
- "RECEIVED TEST CALL" is displayed.

1. Push **ALARM OFF** to turn OFF the alarm.



2. Push the Software Key below your next operation.

IGN: Ignores the call and returns to the operating screen.

- The call is saved in the DSC Log.
-  blinks continuously until you display the call message.

HOLD: Holds the RX call task, and returns to the Main screen.

ABLE: Sends a Test Acknowledgment (Able to "Able to Comply.")



- The call is saved in the DSC Log.

ACPT: Accepts the call.

- Displays the received call's information.
- The call is saved in the DSC Log.
- The received call's information is displayed.

Push **ACK**, and then push **CALL** to send a Test Acknowledgment. (p. 39)

Push **RESEND** to resend.

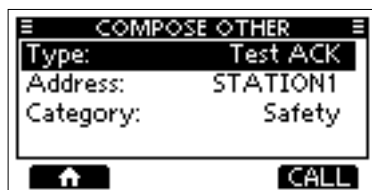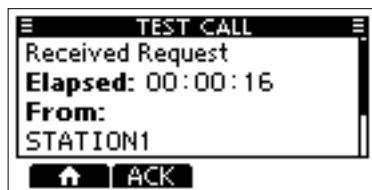


◇ Receiving a Test acknowledgment/Position Reply call* /Polling Reply call (*For only the USA version)

Example: Receiving a Test acknowledgment

When a call is received:

- An alarm sounds.
 - The following screen is displayed and the backlight blinks.
 - "☑" blinks.
1. Push **ALARM OFF** to turn OFF the alarm.
 2. Push **CLOSE**
 - The received information is displayed.
 3. Push **⏠**
 - "Terminate the procedure. Are you sure?" is displayed.
 4. Push **OK** to return to the operating screen.

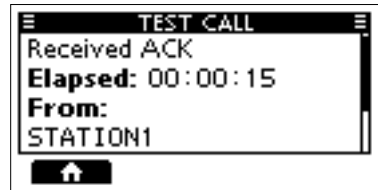

7 DIGITAL SELECTIVE CALLING (DSC)

■ DSC Log

◇ Received DSC Log

The transceiver saves up to 30 received Distress call messages and 50 received “Others” call messages in your DSC Log.

On the operating screen, “” is displayed when there is an unread call message.

The icon blinks when there is a new received call message.

1. Open the “DSC LOG” screen.

[MENU] > **DSC Log**

2. Select “Received Call Log,” and then push [ENT].
 - The “RECEIVED CALL LOG” screen is displayed.
3. Select “Distress” or “Others,” and then push [ENT].
 - ① “Distress” displays the received Distress call log, and “Others” displays the received DSC call log.



TIP: You can also display the “RECEIVED CALL LOG” screen by pushing **LOG** on the operating screen.

4. Select a log, and then push [ENT], [DIAL], or **INFO** to display the detailed information.

INFO: Displays the detailed information.

DEL: Deletes the selected call log.

MMSI: Saves the MMSI as an Individual ID.

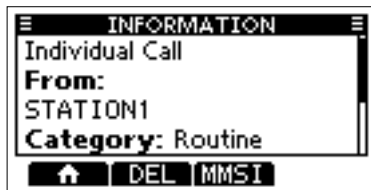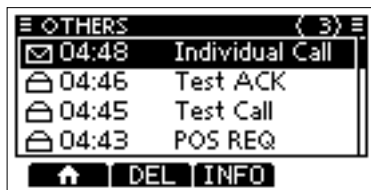

◇ Transmitted DSC Log

The transceiver saves up to 30 DSC transmitted calls in your DSC Log.

1. Open the “DSC LOG” screen.

[MENU] > **DSC Log**

2. Select “Transmitted Call Log,” and then push [ENT].
 - The “TRANSMITTED CALL LOG” screen is displayed.
3. Select a log, and then push [ENT] to display the detailed information.

INFO: Displays the detailed information.

DEL: Deletes the selected call log.

MMSI: Saves the MMSI as an Individual ID or a Group ID.

Multiple-task mode

(For only the USA version, depending on the presetting)

If the Multiple-task function is enabled, the transceiver can hold up to 7 tasks. You can handle more than 2 DSC tasks simultaneously by switching between the tasks. To use the Multiple-task mode, select "Multiple" in the "Procedure" on the Menu screen. (p. 45)

[MENU] > Settings > DSC > **Procedure**

When the Multiple-task mode is activated, **TASK** is displayed on the operating screen.

NOTE: The Task mode has a Inactivity Timer function. After a certain period of time has passed without any operation on a task, the transceiver automatically deletes a task and returns to the operating screen.

When a Inactivity Timer activates, an alarm sounds and a count down message is displayed for 10 seconds.

7

◇ Holding a DSC task

In the Multiple-task mode, you can hold or activate the DSC task as follows.

Example: When a Group call is received:

1. Push **ALARM OFF** to turn OFF the alarm.
 - The received call's information is displayed.
2. Push **HOLD**.
 - The received Group call task is held into the task list and returns to the operating screen.



◇ Activating the held DSC task

1. Push **TASK** to display the task list.
 - The task list is displayed.
2. Select the task that you want to activate.



3. Push **ACTIVE** to activate the task.
 - The activated task information is displayed.
4. Push [PTT] to communicate.
5. After finishing the communication, push **DEL** to delete the task.



7 DIGITAL SELECTIVE CALLING (DSC)

◇ Task list

You can display the “TASK LIST” screen by pushing **TASK**.

The number of tasks is displayed at the top of the screen.



On the “TASK LIST” screen, the following Software Keys are displayed.

HOME: Holds the task and returns to the operating screen.

DEL: Finishes the selected task.

ACTIVE: Activates the selected task.

HOLD: Holds the selected task.

INFO: Displays the task information.

■ DSC Settings

On the “DSC” screen, you can make settings of the DSC call related items.

[MENU] > Settings > **DSC**

Position Input

See “Entering the position and time” on page 18 for details.

Individual ID

See “Entering an Individual ID” on page 17 for details.

Group ID

See “Entering a Group ID” on page 17 for details.

Auto ACK

The Auto ACK function automatically sends an Acknowledgment when an appropriate Request is received.

● Individual ACK

Auto (Able): Automatically sends “Able to comply.”

Auto (Unable): Automatically sends “Unable to comply.”

Manual: Manually sends an Acknowledgment.

● Position ACK

Auto (Able): Automatically sends “Able to comply.”

Manual: Manually sends an Acknowledgment.

● Polling ACK

Auto: Automatically sends an Acknowledgment.

Manual: Manually sends an Acknowledgment.

● Test ACK

Auto: Automatically sends an Acknowledgment.

Manual: Manually sends an Acknowledgment.

CH Auto Switch

Select whether or not to automatically switch to channel 16 or the specified channel, or ignore the call.

Accept after 10 sec.:

After receiving a DSC call, the transceiver remains on the operating channel for 10 seconds. After that, the transceiver automatically switches to the channel that is specified on the DSC call.

Ignore after 10 sec.:

After receiving a DSC call, if you do not push **ACPT** in 10 seconds, the transceiver ignores the call, and then remains on the current operating channel.

Manual:

After receiving a DSC call, you can select whether or not to accept the received DSC call.

NOTE: In the Multiple-task mode, “Ignore” is renamed to “Hold after 10 sec.”

DSC Data Output

When receiving a DSC call from the station that is selected in this setting, the transceiver outputs the DSC data to the NMEA output port.

① You can send Distress calls despite of this setting.

All Stations: From any station.

Stations List: From the stations that are entered Individual ID or Group ID on the Menu screen.

OFF: Does not output any DSC data to an external device.

7 DIGITAL SELECTIVE CALLING (DSC)

■ DSC Settings

Alarm Status

Sets the alarm ON or OFF when receiving each type of DSC call.

- **Safety**
- **Routine**
- **Warning**

Sets the alarm for when:

- No MMSI code is entered.
- The position data has not been received for 10 minutes after turning ON the transceiver.
- The received position data has not been updated for 10 minutes.
- The received position data has not been updated for 4 hours.
- The manually entered position data has not been updated for 23.5 hours.

- **Self-Terminate**

An alarm sounds when duplicate Distress calls are received.

- **Discrete**

An alarm sounds when a lower priority call is received while receiving a high priority call.

CH 70 SQL Level


Sets the Squelch level for Channel 70 to 1 ~ 10 or Open.

Self Check Test

The Self-Test sends DSC signals to the receiving AF circuit to compare the sending and receiving signals at the AF level.

Push [ENT] to start the Self-Test.

- ① When the sending and receiving DSC signals match, "OK" is displayed.

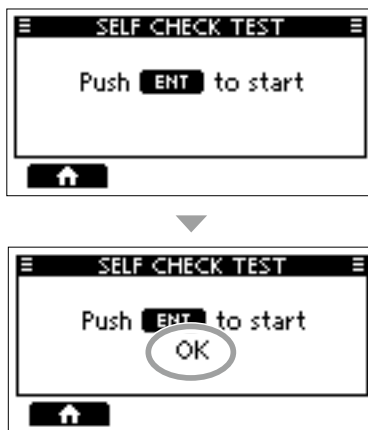

Procedure (For only the USA version)

You can select the type of task for the transceiver, depending on the presetting.

Single: Handles only 1 task at the same time.

Multiple: Handles up to 7 tasks at the same time.

■ Making an Individual call to an AIS target

You can transmit an Individual call to a selected AIS target, without entering the target's MMSI code. In this case, the call type is automatically set to Routine.

◇ Selecting an AIS target on the IC-M510BB

You can compose an Individual call to an AIS target selected on the Plotter screen or the AIS list.

NOTE: The IC-M510BB can be input AIS information from the built-in AIS receiver (if built in) or an external NMEA 0183 or NMEA 2000 sentence source.

1. Select the AIS target from the Plotter screen, the Target List, the Friends List, or the Danger list (pp. 55, 57).
2. Push **DSC**.
 - "COMPOSE OTHER" screen is displayed.
3. Select "Channel," then push [ENT] or [DIAL] to display the Voice channel selection screen.
 - ① See page 23 for details.
4. Select a channel to assign, and then push [ENT] or [DIAL].
5. Push **CALL** to send the Individual call.
6. When you receive an Acknowledgment "Able to comply", an alarm sounds. Push **ALARM OFF** to turn OFF the alarm.
 - The channel assigned in step 4 is automatically selected.
 - ① If the called station cannot use the channel that you assigned, a different channel is selected by the other station.
7. Push **CLOSE**.
8. Hold down [PTT] to communicate.



◇ Using an AIS transponder

When the optional MA-510TR CLASS B AIS TRANSPONDER is connected to the transceiver, you can transmit an Individual call to a selected AIS target and the voice channel on the transponder.

① See page XX for connecting instructions.

NOTE: To ensure correct operation of the DSC function, make sure you correctly set the CH70 SQL Level. (p. XX)

① See the next page for the operation.



7 DIGITAL SELECTIVE CALLING (DSC)

◇ Using an AIS transponder

Transponder operation:


1. Select an AIS target on the plotter display, Target, Danger, or Friends list screen.
 - ① See the MA-510TR INSTRUCTION MANUAL for details.
2. Push [ENT] to display the Menu window.
 - The Menu window is displayed.
3. Select "Send DSC," and then push [ENT].
 - The "DSC TRANSMISSION" screen is displayed.
4. Push [▲] or [▼] to select a voice channel.
 - Voice channels are already preset into the transponder in the recommended order.

NOTE: When a base station is selected in step 1, a voice channel will be specified by the base station. Therefore you cannot change the channel. The transponder will display "Voice Channel is specified by the Base station," in this case.

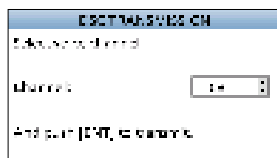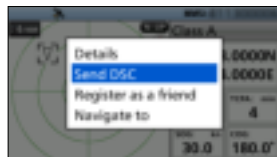

5. Push [ENT] to make the Individual DSC call.
 - "Transmitting individual call" is displayed.
 - ① If Channel 70 is busy, the transceiver stands by until the channel becomes clear.
6. After making the Individual DSC call, "DSC transmission completed." is displayed.
 - If the transceiver cannot make the call, "DSC transmission failed." is displayed.

Transceiver operation:

7. When the acknowledgment is received, alarm sounds.
 - If the acknowledgment 'Able to comply' is received, push **ALARM OFF** to stop the alarm, and then select the voice channel specified in step 4.
 - A different voice channel will be selected if the station you called cannot use the channel.
 - To reply, push [PTT] and speak at a normal voice level.
 - You can check the MMSI code or the name, if entered, of the AIS target on the display.
 - If the acknowledgment 'Unable to comply' is received, push **ALARM OFF** to stop the alarm, then the Acknowledge information is displayed.
8. After the communication is finished, push  to return to the normal operating mode.



■ DSC Remote Control (EN 300 338-8 compatible)

With controllers connected to the transceiver, you can perform DSC remote control communications. Up to 3 command microphones and an external device can be used as controllers.

For more information about connecting an external device, see page. XX.

◇ Editing a controller name

A name can be assigned to each controller for easy identification.

1. Open the “NAME” screen.

[MENU] > Settings > Configuration > Controller > **Name**

① Only controllers connected to the transceiver are listed.

① The controller being operated has “(Own)” appended to its name.


2. Push [▲] or [▼], or rotate [DIAL] to select a controller.

3. Push [ENT] or [DIAL] to enter the “NAME” screen.

4. Edit a controller name.

① Select **123** to enter numbers, and **ABC** to enter symbols.

5. Select **FINISH**, and then push [ENT] or [DIAL] to save the edited name and return to the previous screen.

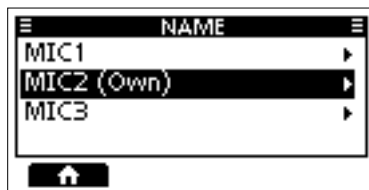

7

◇ Setting the Priority Controller

Select which controller to be used as the Priority Controller.

The Priority Controller takes precedence over other controllers in DSC operations.

Except for sending a Distress call, a DSC task can be handled only by the first controller operated.

1. Open the “PRIORITY” screen.


[MENU] > Settings > Configuration > Controller > **Priority**

① Only controllers connected to the transceiver are listed.

① The controller being operated has “(Own)” appended to its name.

2. Push [▲] or [▼], or rotate [DIAL] to select a controller to be used as the Priority Controller.

① The Priority Controller's ID is automatically set to 0.

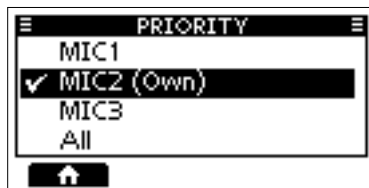

NOTE:

- If the ID of the external device is set to 0, the device is automatically set as the Priority Controller.
- When the external device is set as the Priority Controller, regardless of its ID, DSC remote control from the device is accepted.

7 DIGITAL SELECTIVE CALLING (DSC)

◇ Dealing with ID and Priority


When controllers are connected to the transceiver, the unique ID is automatically assigned to each controller in order from 1 to 99.

Once a controller is set as the Priority Controller, however, its ID is replaced with 0 because the ID of the Priority Controller ID is fixed at 0.

To check the current ID of each controller, open the "ID" screen.

[MENU] > Settings > Configuration > Controller > **ID**

- ① The IDs are for display only and cannot be edited.
- ① The ID of an external device is assigned by the device itself, not by the transceiver.

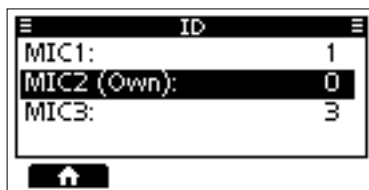

NOTE: With Non-Priority Controllers, you cannot make changes to DSC-related settings listed below. To configure the settings, use the Priority Controller.

MENU > Settings > Configuration > Inactivity Timer >	Not DSC Related
	DSC Related
	Distress Related
	RT Related
MENU > Settings > DSC > Auto ACK >	Individual ACK
	Position ACK
	Polling ACK
	Test ACK
MENU > Settings > DSC >	CH Auto Switch

When a controller gets disconnected while holding a DSC task:

Controllers are considered disconnected when the following conditions are met.

Controller	Condition
Command microphone	Unplugged or turned off
External device	The transceiver has not received a single sentence via NMEA 0183 interface in the last 2 minutes.

Once a controller is disconnected, the right to handle a DSC task will be released.

After that, the first Non-Priority Controller operated will have the the right.

- ① When the Priority Controller is disconnected, the controller names are displayed with "(None)" appended.

[MENU] > Settings > Configuration > Controller > **Priority**

◇ Allowing controllers to perform DSC operations

Select whether or not to allow controllers to perform DSC operations.

1. Open the “DSC OPERATION” screen.

[MENU] > Settings > Configuration > Controller > **DSC Operation**

① Only controllers connected to the transceiver are listed.

① The controller being operated has “(Own)” appended to its name.

2. Push [▲] or [▼], or rotate [DIAL] to select a controller.
3. Push [ENT] or [DIAL] to select ON or OFF.




ON: Accepts DSC remote control from the controllers.

Even when this item is set to “ON,” DSC remote control from the Non-Priority Controllers is accepted only from the first controller operated.

OFF: Refuses DSC remote control from the controllers.

Except for sending a distress call, DSC remote control from the Non-Priority Controllers with this item set to “OFF” is not allowed.

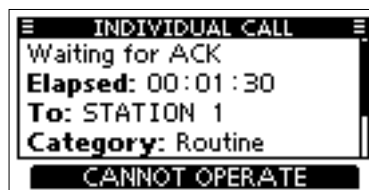


4. Push  to exit the Menu screen.

NOTE: The IC-M510BB can be input AIS information from the built-in AIS receiver (if built in) or an external NMEA 0183 or NMEA 2000 sentence source.

About AIS

The Automatic Identification System (AIS) is primarily used for collision-risk management and navigation safety. It can automatically transmit and receive vessel information, such as the vessel name, MMSI code, vessel type, position data, speed, course, destination, and more, depending on the class. Information is exchanged among vessels and/or base stations on the VHF maritime mobile band. The information helps to identify other nearby vessels or stations by displaying the received data on a plotter or a radar screen.

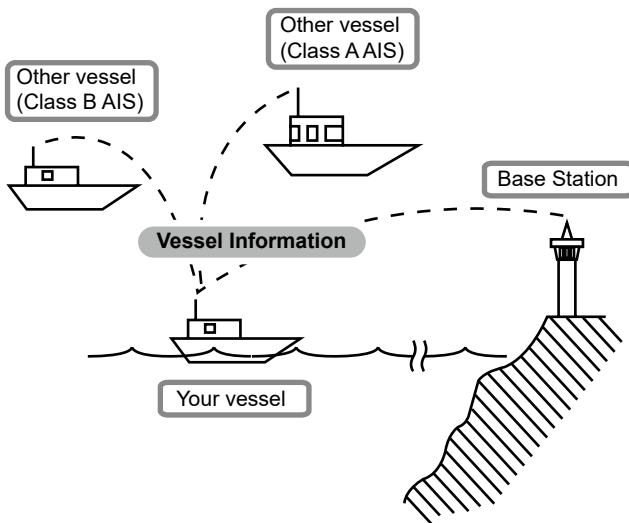

AIS classes

There are 7 types of AIS stations, vessels, base stations, Search and Rescue (SAR), Aids to Navigation (AtoN), Search and Rescue Transmitter (AIS-SART), Man OverBoard (MOB), and Emergency Position Indicating Radio Beacon-AIS (EPIRB-AIS).

There are 2 classes of AIS units, which are installed on vessels, Class A and Class B.

Under the Safety Of Life At Sea (SOLAS) convention, all SOLAS vessels, as described below, are required to install a Class A AIS transponder:

- Upwards of 300 gross tonnage engaged on international voyages.
- Passenger vessels, irrespective of size, engaged on international voyages.
- Upwards of 500 gross tonnage not engaged on international voyages.

A Class B AIS transponder is designed to be interoperability with Class A units, but not to impact the Class A network.




Many commercial vessels, and some leisure craft, not classified as requiring a Class A unit, choose to install a Class B unit to avoid accidents at sea.

8 AIS FUNCTION

■ Using the Plotter screen

On the plotter screen, the display range and the icons of the AIS target, waypoint and MOB are displayed. You can change the display range and type, depending on your operating style.

1. Push [DISP] and then select "Plotter".
 - The Plotter screen is displayed.
2. Push the Software Key for your next operation.



	Returns to the operating screen.
RANGE	Selects the display range. (p. 53)
SEL 	Selects the closest target to your vessel.
SEL 	Selects the farthest target from your vessel.
INFO	Displays the details on the selected target. (p. 58)
MOB	Push to enter the Man Overboard (MOB) mode. (p. 65) While in the Man Overboard (MOB) mode, push to stop the MOB mode.
ANCHOR	Push to start the Anchor watch function. (p. 66) While in the Anchor watch mode, push to stop Anchor watch.

NOTE: An alarm sounds when an AIS target is closer than the CPA (Closest Point of Approach) and TCPA (Time to CPA) settings, and so on, depending on the presetting. To stop the alarm buzzer, push any key.

- ① If a popup screen is displayed, push any key again to turn it OFF.


TIP: You can display only the Plotter screen by selecting the "Plotter" item on the Menu screen.

[MENU] > AIS > **Plotter**

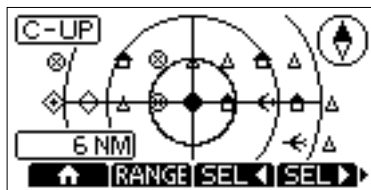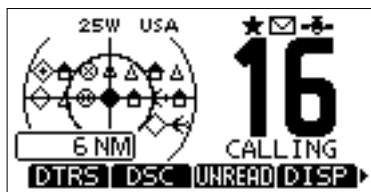

◇ Plotter screen

Displays the plotter display and selected target's information.

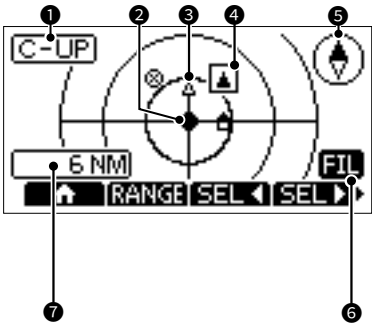

① DISPLAY TYPE

Displays the selected display type. You can select the display type in “North up/ Course up” on the Menu screen. (p. 60)

[MENU] > Settings > AIS > North/Course up

- ① When “N-UP” is displayed, the top of the plotter screen represents North.
- ① When “C-UP” is displayed, the top of the plotter screen represents the direction your vessel's course over ground.

② YOUR VESSEL ICON

Displayed in the center of the screen.

- ① When “N-UP” is displayed, the vessel icon automatically points in the direction your vessel is heading, in 5.625 degree steps.
- ① When “C-UP” is displayed, the vessel icon constantly points to the top of the plotter screen.
- ① When your vessel moves less than 2 knots, ■ is displayed.

③ TARGET ICONS

Targets whose AIS signal are received are displayed with icons. The icon may differ, depending on the target type or its status.

Icon	Description
	AIS target: Vessel
	AIS target: Search and Rescue (SAR) vessel
	① The tip of the target triangle automatically points in the direction it's heading.
	AIS target: Vessel (Friend) (Black triangle)
	AIS target: AIS-SART, AIS-MOB, and EPIRB-AIS
	AIS target: Search and Rescue (SAR) aircraft
	AIS target: Aids to Navigation (AtoN)
	AIS target: Aids to Navigation (AtoN) virtual
	AIS target: Base station
	MOB

- ① Icons for other than the SAR aircraft, Base station, Waypoint, and MOB start blinking when the AIS target is closer than your CPA and TCPA settings (Danger target).

① A vessel is regarded as a “Lost target,” and a cross mark displays on the target icon after a specified period of time has passed since the vessel last transmitted data (p. 71). The Lost target icon disappears from the plotter display 6 minutes and 40 seconds after the vessel was regarded as a “Lost target.” Ask your dealer for details.

④ TARGET BOX

Displays the selected target.

- ① When a target box is displayed, push **INFO** to display the detail screen of the selected target.

⑤ COMPASS

Displays the bearing information.

8 AIS FUNCTION

◇ Plotter screen

⑥ DISPLAY FILTER INDICATOR

Displayed when the type of targets on the plotter screen are filtered. (p. 60)

[MENU] > Settings > AIS > **Target Display**

All Targets: All AIS targets are displayed.

Danger Only: Only Danger AIS targets are displayed.

Friends Only: Only Friend AIS Targets are displayed.

⑦ DISPLAY RANGE

- Displays the selected display range.
- Push **RANGE** to select the desired display range.



① 0.125, 0.25, 0.5, 0.75, 1.5, 3, 6, 12, 24, 36 NM (nautical miles) can be selected.

■ Using the AIS list screen

There are 3 types of AIS lists, Target, Danger, and Friends.

The target's information is automatically updated every 5 seconds, and then the AIS target data is sorted.

1. Push [MENU].
 - The Menu screen is displayed.
2. Push [▲], [▼], or rotate [DIAL] to select "AIS," and then push [ENT], [DIAL], or [▶].
 - The "AIS" screen is displayed.
3. Push [▲] or [▼] to select a list, and then push [ENT], [DIAL], or [▶].
 - The list screen is displayed.
4. Push [▲], [▼], or rotate [DIAL] to select an AIS target.

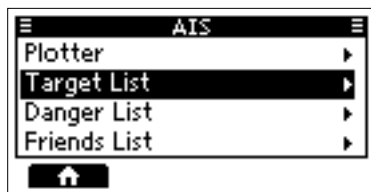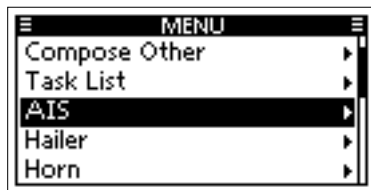

5. Push the Software Key below for your next operation.

DSC: Displays the "COMPOSE OTHER" screen to send an Individual call. (p. 25)

① Displayed only when a target is selected.

INFO: Displays the details on the selected target. (p. 58)

① Displayed only when the target is selected.

FRIEND: Sets the selected target as a Friend. (p. 57)

① Displayed only in the Target List or Danger List.

PLOT: Displays the selected target on the plotter screen. (p. 52)

NOTE: An alarm sounds when an AIS target is closer than the CPA and TCPA settings, and so on, depending on the presetting. To stop the alarm buzzer, push any key.

① If the popup screen is displayed, push any key again to turn it OFF.

8 AIS FUNCTION

◇ Target/Friends List screen

The Target List screen displays up to 200 AIS targets.

The Friends List screen displays the AIS targets of up to 100 targets that you set as a Friend. (p. 57)

The AIS target data is sorted by the distance from your vessel, and the closest target is located at the top of the list.



MMSI/Name	RNG	BRG
500200000	1.6	090
500600000	1.6	270
500400000	2.0	180

Navigation buttons: [Home] [DSC] [INFO] [PLOT]



MMSI/Name	RNG	BRG
500200000	1.6	090
500400000	2.0	180
500000000	2.0	000

Navigation buttons: [Home] [DSC] [INFO] [PLOT]

① THE NUMBER OF TARGETS

Displays the number of AIS targets.

② TARGET INFORMATION

Displays the following AIS target information.


- MMSI code or name
- Range (RNG) from your vessel to the target (units: NM)
- Bearing (BRG) from your vessel to the target (units: degree)

◇ Danger list screen

The Danger List screen displays any Danger target whose CPA (Closest Point of Approach) distance and TCPA (Time to CPA) time are less than the set values. You can set the values in "CPA" and "TCPA" on the Menu screen. (p. 60)

[MENU] > Settings > AIS > CPA/TCPA > CPA or TCPA

- ① The transceiver can display up to 200 targets.

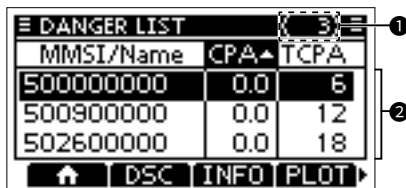

MMSI/Name	CPA	TCPA
500000000	0.0	6
500900000	0.0	12
502600000	0.0	18

Navigation buttons: [Home] [DSC] [INFO] [PLOT]

① THE NUMBER OF TARGETS

Displays the number of AIS targets.

② DANGER TARGET INFORMATION

Displays the following AIS target information.

- MMSI code or name
- CPA: Closest Point of Approach (unit: NM)
- TCPA: Time to CPA (units: minute)

■ Setting a Friend

You can set up to 100 AIS targets as a Friend in the Friends List.

An alarm sounds when a Friend is detected, depending on the setting. (p. 61)

◇ Entering an ID

There are 3 ways of setting a Friend, using the Friends List, selecting in the AIS list, or selecting on the plotter display.

Using the Friends List:

1. Open the "FRIENDS LIST" screen.

[MENU] > Settings > AIS > Friends > **Friends List**

- "No ID" is displayed when there is no Friend.
2. Push **ADD** to display the Friend ID window.
 3. Enter an ID.

TIP:


- Select a number using [◀] and [▶].
- Push [ENT], or [DIAL] to enter the selected number.
- Select "←" or "→" on the screen, or rotate [DIAL] to move the cursor.

4. Push **FINISH** to save the edited ID.
 - The target is added to the Friends List.

Selecting in the Target List or Danger List:

1. Open a "Target List" or a "Danger List".

[MENU] > AIS > **Target List** or **Danger List**

2. Push [▲] or [▼], or rotate [DIAL] to select an AIS target.
3. Push **FRIEND**.
 - "Register as a Friend," is displayed.
 -  is displayed.

Selecting on the plotter display:

1. Open the plotter screen. (p. 52)
2. Push **SEL** or **SEL** to select an AIS target.
3. Push **INFO** to display the details screen.
 - The "DETAILS" screen is displayed.
4. Push **FRIEND**.
 - The target is added to the Friends List.
 - A friend target is displayed with ▲ (black triangle) on the plotter screen.

◇ Editing an ID

1. Open the "FRIENDS LIST" screen.

[MENU] > Settings > AIS > Friends > **Friends List**

2. Push [▲] or [▼], or rotate [DIAL] to select an ID.
3. Push **EDIT**.
 - ① See step 3 in "Using the Friends List," as described to the left.

◇ Deleting an ID

1. Open the "FRIENDS LIST" screen.

[MENU] > Settings > AIS > Friends > **Friends List**

2. Push [▲] or [▼], or rotate [DIAL] to select an ID.
3. Push **DEL**.
 - "Delete the ID. Are you sure?" is displayed.
4. Push **OK**.

■ About the Detail screen

The Detail screen displays the information about the selected AIS target or waypoint. The contents may differ, depending on the selected target.

- ① When a Danger target is selected, is displayed. (p. 56)
- ① When a Friend target is selected, is displayed. (p. 56)

- Push the Software Key below for your next operation.

DSC: Displays the “COMPOSE OTHER” screen to send an Individual call. (p. 25)

FRIEND: Sets the selected target as a Friend.
(p. 57)

- ① A beep sounds and a popup screen is displayed when the memory is full.

MMSI: Displays the Individual ID entry screen.
(p. 8)

- ① A beep sounds and a popup screen is displayed when the memory is full, or the ID has been already added.



◆ Contents list

NOTE: The contents may differ, depending on the received data.

Class A and SAR vessel
AIS class
MMSI code
Ship name
Country name
Call sign
Vendor ID
IMO number
CPA (Closest Point of Approach)
TCPA (Time to CPA)
Position (Latitude, Longitude)
SOG (Speed Over Ground)
COG (Course Over Ground)
HDG (Heading)
PA (Position Accuracy (H: High, L: Low))
Range
Bearing
ROT (Rate Of Turn)
Bow to antenna distance
Stern to antenna distance
Port side to antenna distance
Starboard side to antenna distance

Length
Beam
Draught
Type of ship
NAV Status
Destination
Estimated time of arrival
Elapsed time

Class B
AIS class
MMSI code
Ship name
Country name
Call sign
Vendor ID
CPA (Closest Point of Approach)
TCPA (Time to CPA)
Position (Latitude, Longitude)
SOG (Speed Over Ground)
COG (Course Over Ground)
HDG (Heading)

PA (Position Accuracy (H: High, L: Low))
Range
Bearing
Bow to antenna distance
Stern to antenna distance
Port side to antenna distance
Starboard side to antenna distance
Length
Beam
Type of ship
Elapsed time

AIS-SART, AIS-MOB, and EPIRB-AIS

AIS class
MMSI code
CPA (Closest Point of Approach)
TCPA (Time to CPA)
Position (Latitude, Longitude)
SOG (Speed Over Ground)
COG (Course Over Ground)
HDG (Heading)
PA (Position Accuracy (H: High, L: Low))
Range
Bearing
ROT (Rate Of Turn)
Elapsed time

Base station

AIS class
MMSI code
Position (Latitude, Longitude)
PA (Position Accuracy (H: High, L: Low))
Vendor ID
Range
Bearing
Elapsed time

SAR aircraft

AIS class
MMSI code
Target name
Country name
Call sign
Vendor ID

Position (Latitude, Longitude)
SOG (Speed Over Ground)
COG (Course Over Ground)
ALT (Altitude)
PA (Position Accuracy (H: High, L: Low))
Range
Bearing
Length
Width
Elapsed time

AtoN and AtoN virtual

AIS class
MMSI code
Target name
CPA (Closest Point of Approach)
TCPA (Time to CPA)
Position (Latitude, Longitude)
PA (Position Accuracy (H: High, L: Low))
Position indicator (ON POSN: ON Position, OFF POSN: OFF Position)
Range
Bearing
Bow to antenna length
Stern to antenna length
Port side to antenna length
Starboard side to antenna length
Length
Beam
Type of AtoN
Elapsed time

MOB

Position (Latitude, Longitude)
Range
Bearing

8 AIS FUNCTION

■ AIS settings

AIS settings can be customized in “AIS” on the Menu screen.

[MENU] > Settings > **AIS**

North up/Course up

You can select the display type for the plotter screen.

North up: The top of the plotter screen represents North.

Course up: The top of the plotter screen represents the direction your vessel's course over ground.

Target Display

You can select whether or not to limit the AIS or waypoint targets that are displayed on the plotter display. You can easily see the plotter display.

① The indicator is displayed on the plotter display. (p. 57)

① The waypoint for navigation is displayed, regardless of this setting.

All targets: All targets are displayed.

Danger only: Only Danger AIS targets are displayed.

Friends only: Only Friend AIS targets are displayed.

CPA/TCPA

● Alarm

You can select whether or not to turn the following alarm functions ON or OFF.

ON: The alarm function is ON. An alarm sounds, and a popup screen is displayed.

① The alarm may not sound, depending on the “Audible Alarm” setting.

OFF: The alarm function is OFF.

• Approach

The alarm function for when a vessel's CPA is closer, and TCPA is less than the set value.

• Lost

The alarm function for when a danger target is regarded as a “Lost target.” (p. 71)

● Audible Alarm

You can select whether or not to sound the following alarms.

ON: The alarm sounds.

OFF: The alarm does not sound.

• Approach

The alarm function for when a vessel's CPA is closer, and TCPA is less than the set value.

• Lost

The alarm function for when a danger target is regarded as a “Lost target.” (p. 71)

● CPA

Set a CPA (Closest Point of Approach) value between 0.01 and 6.00 NM (in 0.01 NM steps) for the alarm function.

● TCPA

Set a TCPA (Time to CPA) value between 1 and 60 minutes (in 1 minute steps) for the alarm function.

● Slow Warn

The GPS receiver calculated COG data of a vessel that is at anchor or drifting is unreliable, and therefore the CPA and TCPA data may not be calculated correctly. If a vessel is anchored in your alarm zone, the unreliable data can cause the collision alarm to sound many times, even if there is no real danger. To prevent this, when the anchored vessel's SOG is less than this set value, the Slow Warn function assumes that vessel's COG is fixed towards your vessel and an alarm will sound.

• Function

Turn the Slow warn function ON or OFF.
ON: The Slow warn function is turned ON.
OFF: The Slow warn function is turned OFF.

• Speed

Set a speed for the Slow warn function between 0.1 and 4.9 kn (in 0.1 kn steps).

NOTE: If other vessels at anchor or drifting come into your alarm zone, the Slow warn alarm will sound again. Only if the previous vessel disappears from the Danger list (p. 56), and then re-enters the list, can a new Slow warn or regular alarm sound, depending on the vessel's SOG, or CPA and TCPA. The Slow warn function operates in the same way if your vessel is at anchor and other vessels enter your alarm zone.

Friends

● Friends List

Displays all Friend targets that you have entered.

- ① "No ID" is displayed when there is no Friend target.
- ① See page 57 for how to set a Friend.

● Friends Alarm

• Function

You can select whether or not to turn the following alarm function ON or OFF when a vessel that is entered into the Friends List is detected.

ON: The alarm function is ON.
An alarm sounds, and a popup screen is displayed when a vessel that is entered into the Friends list is detected, regardless of the set range.

ON
(in range): The alarm function is ON when a vessel that has entered into the Friends list is detected in the set range.

OFF: The alarm function is OFF.

• Audible Alarm

You can select whether or not to sound the Friends alarm.

ON: The alarm sounds.
OFF: The alarm does not sound.

• Range

Set the range to between 0.01 and 6.00 NM (in 0.01 NM steps) for the alarm function.

8 AIS FUNCTION

■ AIS settings

ID Blocking

The transceiver blocks AIS transponders that are entered into the ID Blocking list. Enter your vessel's transponder ID or other vessel's transponder IDs if necessary to prevent the transceiver from detecting them as dangerous targets.

① You can enter up to 10 MMSI codes.

• Entering an ID

1. Open the "ID BLOCKING" screen.

[MENU] > Settings > AIS >
ID Blocking

- The blocked AIS transponder's ID is displayed.
 - "No ID" is displayed if there is no blocked AIS transponder.
2. Push **ADD** to start the ID entry.
 3. Enter an ID.

TIP:

- Select a number using [◀] and [▶].
- Push [ENT] or [DIAL] to enter the selected number.
- Select "←" or "→," or rotate [DIAL] to move the cursor.

4. Select **FINISH**, and then push [ENT] to enter the ID.

• Editing an ID

1. Open the "ID BLOCKING" screen.

[MENU] > Settings > AIS >
ID Blocking

2. Push [▲] or [▼] to select an ID.
3. Push **EDIT**.
 - See step 3 in "Entering an ID," as described above.
4. Push **OK**.

• Deleting an ID

1. Open the "ID BLOCKING" screen.

[MENU] > Settings > AIS >
ID Blocking

2. Push [▲] or [▼] to select an ID.
3. Push **DEL**.
 - "Delete the ID. Are you sure?" is displayed.
4. Push **OK**.


NOTE: For the other functions, the transceiver must be receiving valid GPS signals, or your position must be entered. (p. 20)

■ MOB (Man Overboard)

You can enter a Man OverBoard (MOB) waypoint into the transceiver with its GPS position data, as soon as a person has fallen into the water and needs to be rescued. This enables you to reach the MOB location even in the dark, or when you have lost visual contact.

You can select an AIS target during the MOB mode.


◇ Starting MOB

- Push **MOB** to enter the MOB mode.
 - Three beeps sound.
 - The MOB screen is displayed.
 -  is displayed at your current position on the plotter screen.

TIP: You can also start the MOB mode by selecting the “Start MOB” item on the Menu screen. [MENU] > MOB > **Start MOB**



◇ Stopping MOB

1. Push **MOB** to stop the MOB mode.
 - “Deactivate MOB. Are you sure?” is displayed.
2. Push **OK**.
 -  disappears, and the transceiver returns to the previous screen.

TIP: You can also stop the MOB mode by selecting the “Stop MOB” item on the Menu screen. [MENU] > MOB > **Stop MOB**



9 OTHER FUNCTIONS

■ Anchor Watch


Anchor Watch is the function to sound an alarm when your vessel is at anchor and has drifted.

◇ Starting Anchor Watch

- Push **ANCHOR** to start the Anchor Watch mode.
 - The “ANCHOR INFORMATION” screen is displayed.

TIP: You can also start the Anchor Watch mode by selecting the “Start Anchor Watch” item on the Menu screen.

[MENU] > Anchor Watch > **Start Anchor Watch**

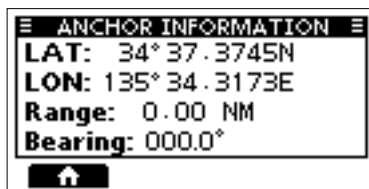

- ① When your vessel exceeds the range of the anchor watch, “Exceeded anchor radius!” is displayed.



◇ Stopping Anchor Watch

1. Push **ANCHOR** to stop the Anchor Watch mode.
 - “Deactivate anchor watch. Are you sure?” is displayed.
2. Push **OK**.

TIP: You can also stop the Anchor Watch mode by selecting the “Stop MOB” item on the Menu screen.

[MENU] > Anchor Watch > **Stop Anchor Watch**



◇ Anchor Watch Settings

[MENU] > Settings > **Anchor Watch**

● Audible Alarm

Select whether or not to sound an alarm when the vessel is drifting off its anchor position.

ON: The alarm sounds.

OFF: The alarm does not sound.

● Range

Set the alarm function range from 0.01 to 6.00 NM (0.01 NM steps).

■ Lost target

A vessel is regarded as a “Lost target” after a specified period of time has passed since the vessel last transmitted data, as described below.

The “Lost target” icon disappears from the plotter display 6 minutes and 40 seconds after the vessel was regarded as a “Lost target.” Ask your dealer for details.

The criteria to become a Lost target

• Class A/B

	Vessel type	Lost target maximum interval Class A	Lost target maximum interval Class B *1	
			CS *2	SO*3
1	Class A: Vessel is at anchor, moored and not moving faster than 3 knots Class B: Vessel is not moving faster than 2 knots	1080 seconds	1080 seconds	
2	Vessel is at anchor, moored and moving faster than 3 knots	60 seconds	N/A	
3	Class A: Vessel is moving between 0 and 14 knots Class B: Vessel is moving between 2 and 14 knots	60 seconds	N/A	180 seconds
4	Vessel is moving between 0 and 14 knots while changing course	60 seconds	N/A	
5	Vessel is moving between 14 and 23 knots	36 seconds	N/A	90 seconds
6	Vessel is moving between 14 and 23 knots while changing course	36 seconds	N/A	
7	Vessel is moving faster than 23 knots	30 seconds	N/A	30 seconds
8	Vessel is moving faster than 23 knots while changing course	30 seconds	N/A	
9	Vessel is moving faster than 2 knots	N/A	180 seconds	N/A

*1 AIS Class B does not provide information about the navigational status, anchored or moored.

*2 CS: Carrier-sense

*3 SO: Self organized

• Others


Category	Lost target maximum interval
SAR aircraft	60 seconds
AtoN	1080 seconds
Base station	60 seconds


9 OTHER FUNCTIONS

■ Voice Record


This function automatically records the last 120 seconds of the received audio.

◇ Audio recording

1. Open the "VOICE RECORD" screen.
[MENU] > Settings > Radio > **Voice Record**
 2. Select "Auto (Last 120 sec)."
- Recording starts automatically when a signal is received.
 -  is displayed when recording the received audio.
 - The recorded audio is erased when the transceiver is turned off.

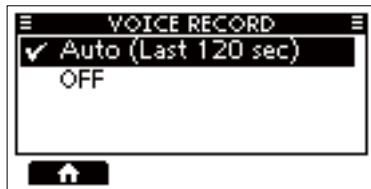

◇ Audio playback

1. Push **PLAY**
 -  is displayed while playing back the recorded audio.
2. Push **PLAY** again to stop playing the recorded audio.



■ Using the Intercom

The Intercom function enables you to communicate between the deck and the cabin. The optional HM-195 COMMANDMICIV™ is required for Intercom operation.

① Connect the HM-195 as described on page XX.


NOTE: While using the Intercom function,

- Transmit is disabled.
- The received call audio is muted.
- Operation is disabled on devices other than the two that are using the Intercom function.


1. Open the “INTERCOM” screen.

[MENU] > **Intercom**

2. Select a unit, and then push [ENT] or [DIAL].
 - Enters the Intercom mode.
 - ① “ALL” is displayed only when 3 command microphones are connected to the transceiver.
 - ① The controller being operated has “(Own)” appended to its name.

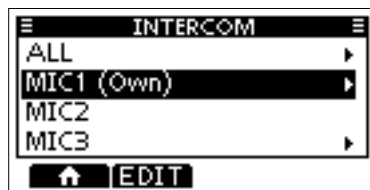

3. Hold down **CALL** to sound the intercom beeps.
 - The transceiver and the command microphone, or the mobile device sound beeps while holding down **CALL**.
 - “CALL” is displayed.

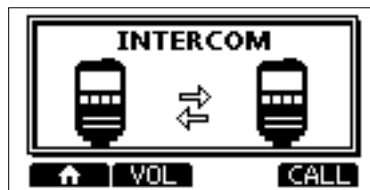

4. After releasing **CALL**, hold down [PTT] and speak into the microphone at your normal voice level.
 - “TALK” is displayed.
 - ① To adjust the transceiver volume level, rotate [VOL].
 - ① To adjust the command microphone's intercom volume level, rotate [VOL] on the command microphone.



5. After releasing [PTT], you can hear the response through the speaker.
6. Push [CLEAR] to return to the previous screen.

NOTE: While in the Intercom mode, the transmit and receive functions are disabled. When the transceiver is transmitting, the Intercom function is disabled.

9 OTHER FUNCTIONS

■ Using the RX Hailer

The RX Hailer function enables you to hear the received audio on the deck or bridge through a Hailer speaker.


To use this function, the external hailer speaker must be connected to the transceiver.

① See page XX for details of the connection.

1. Push **RX** to enter the RX Hailer mode.
2. Push **▼**, and then push **◀** or **▶** or rotate **[DIAL]** to set the RX Hailer function ON or OFF.



3. Push **▲**, and then push **◀** or **▶** or rotate **[DIAL]** to adjust the volume level.
4. To exit the RX hailer mode, push **[ENT]** or **[DIAL]**.
 - **RX** is displayed when the RX hailer function is set to ON.

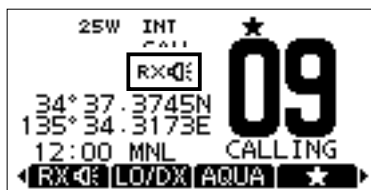

■ Using the Hailer

You can talk without leaving the bridge by using the 2 way hailer function.

To use this function, the external hailer speaker must be connected to the transceiver.

- You cannot transmit while using the hailer.

1. Open the “Hailer” screen.

[MENU] > **Hailer**

2. Hold down [PTT] and speak at your normal voice level.

- While holding down [PTT], the screen shown on the right is displayed.



- ① Push **VOL** to open the volume adjustment screen.



NOTE: While in the Hailer mode, the transmit and receive functions are disabled. When the transceiver is transmitting, the Hailer function is disabled.





9 OTHER FUNCTIONS


■ Using the Horn function


◇ Automatic Foghorn function

The Automatic Foghorn function sounds a horn repeatedly until the function is turned OFF.

The foghorn outputs from the hailer speaker. To use this function, the hailer speaker must be connected to the transceiver.

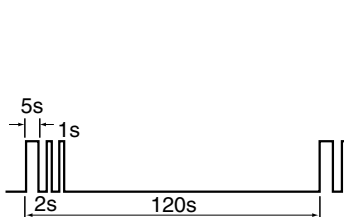TYPE	PATTERN		USAGE
Underway	One 5-second blast every 120 seconds.		Motor vessel underway and making way.
Stop	Two 5-second blasts (separated by 2 seconds) every 120 seconds.		Motor vessel underway but stopped (not making way).
Sail	One 5-second blast followed by two 1-second blasts (each separated by 2 seconds) every 120 seconds.		Sailing vessel underway, fishing vessel (underway or anchored), vessel not under command, a vessel restricted in her ability to maneuver (underway or at anchor), or a vessel towing or pushing another ahead.
Tow	One 5-second blast followed by three 1-second blasts (each separated by 2-seconds) every 120 seconds.		Vessel under tow (manned).

- Open the “AUTO FOGHORN” screen.
[MENU] > Horn > **Auto Foghorn**
- Select the foghorn pattern, and then push [ENT] or [DIAL] to return to the previous screen.
 -  is displayed.
 - ① To turn OFF the Auto Foghorn, select “OFF” in the “Auto Foghorn” menu.

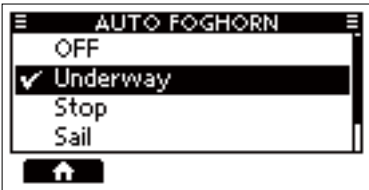

◇ Horn Volume function

1. Open the "HORN VOLUME" screen.
[MENU] > Horn > **Horn Volume**
2. Push [◀] or [▶], or rotate [DIAL] to adjust the foghorn level.



◇ Manual Horn function

1. Open the "Manual Horn" screen.
[MENU] > Horn > **Manual Horn**
 2. Hold down **HORN** to sound a horn.
 - While holding down **HORN**, the horn sounds, and the screen shown on the right is displayed.
- ① To adjust the horn volume level, push **VOL** to open the Horn Volume popup screen.




NOTE: While in the Horn mode, the transmit and receive functions are disabled. When the transceiver is transmitting, the Horn function is disabled.

9

◇ Frequency setting

1. Open the Frequency.
[MENU] > Horn > **Frequency**
2. Select the foghorn's audio frequency.

① Available frequency range is 200 Hz to 700 Hz in 50 Hz steps.

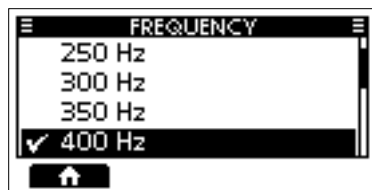

10 MENU SCREEN




■ Using the Menu screen

The Menu screen is used to set items, select options, and so on for the transceiver's functions.

◇ Menu screen operation

Example: Setting the key beep to "OFF."

1. Push [MENU].
 - The Menu screen is displayed.
2. Push [▲] or [▼], or rotate [DIAL] to select "Settings," and then push [ENT], [DIAL], or [▶].
 - The "Settings" screen is displayed.
 - ① Holding down [▲] or [▼], or rotate [DIAL] sequentially scrolls up or down through the Menu screen.
3. Push [▲] or [▼], or rotate [DIAL] to select "Configuration," and then push [ENT], [DIAL], or [▶].
 - The "Configuration" screen is displayed.
4. Push [▲] or [▼], or rotate [DIAL] to select "Key Beep," and then push [ENT], [DIAL], or [▶].
 - The "Key Beep" screen is displayed.
5. Push [▲] or [▼], or rotate [DIAL] to select "OFF," and then push [ENT] or [DIAL].
 - "OFF" is set and the transceiver returns to the previous screen.

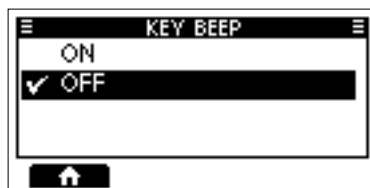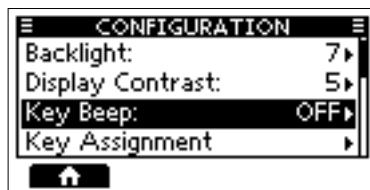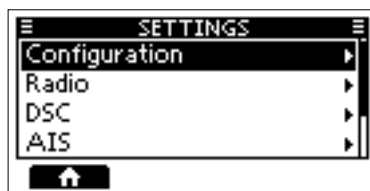

TIP:

- To exit the Menu screen, push [MENU].
- To return to the previous screen, push [◀] or [CLEAR].

◇ Menu screen items

The Menu screen contains the following items.

See the referred pages for each items.

The displayed menu items may differ, depending on the transceiver version or presetting.

Menu	Submenu	Item	Reference
Compose Distress	—	Nature	p. XX
	Position	LAT	p. XX
		LON	
		UTC	
Compose Other	—	Type	p. XX
		Address	
		Category	
		Mode	
		Channel	p. XX
Unread List/ Task List *1	—	—	p. XX
AIS	—	Plotter	p.XX
		Target List	p.XX
		Danger List	
		Friends List	
Hailer	—	—	p.XX
Horn	—	Manual Horn	p.XX
		Auto Foghorn	p. XX
		Horn Volume	p. XX
		Frequency	p. XX
Intercom *2	—	—	p. XX
MOB	—	Start MOB/Stop MOB	p. XX
	—	MOB Information	
Anchor Watch	—	Start Anchor Watch/ Stop Anchor Watch	p. XX
	—	Anchor Information	
GPS Information	—	—	p.XX
AquaQuake	—	—	p.XX
DSC Log	Received Call Log	—	p.XX
	Transmitted Call Log	—	

*1 For only the USA version.

*2 Displayed only when 2 or more command microphones are connected to the transceiver.

*3 For only the EUR, UK, FRG, NLD versions.

*4 Except for the NLD version.

10 MENU SCREEN

◇ Menu screen items

Menu	Submenu	Item	Reference
Settings	Configuration	Backlight	p.XX
		Display Contrast	p.XX
		Key Beep	p.XX
		Key Assignment	p.XX, XX
		UTC Offset	p.XX
		Inactivity Timer	p.XX
		GPS	
		COMMANDMIC SP	p.XX
		RX Hailer	p.XX
		Noise Cancel	p.XX
		Power Switch	
		Controller	p.XX
		Model *3	p.XX
	Radio	Scan Type *4	p.XX
		Scan Timer *4	
		Dual/Tri-Watch *4	
		Channel Group	
		Call Channel	
		WX Alert *1	
		Voice Record	
		Favorite Channel *4	
		Channel Display	p.XX
		LO/DX *1	
	DSC	Position Input	p.XX
		Individual ID	
		Group ID	
		Auto ACK	
		CH Auto Switch	
		DSC Data Output	
		Alarm Status	p.XX
		CH 70 SQL Level	
		Self Check Test	
		Procedure *1	
	AIS	North/Course Up	p.XX
		Target Display	
		CPA/TCPA	
		Friends	p.XX
		ID Blocking	p.XX
	Anchor Watch	Audible Alarm	p.XX
		Range	
	NMEA	NMEA 0183	p.XX
		NMEA 2000	

Menu	Submenu	Item	Reference
Radio Information	—	—	p.XX
ATIS ID INPUT	—	—	p.XX

■ Menu items description

◆ GPS Info

Displays your position, date, time, Speed Over Ground (SOG), and Course Over Ground (COG).

◆ Settings

• Configuration

[MENU] > Settings > Configuration

Backlight

You can adjust the backlight level.

Display Contrast

You can adjust the display contrast of the command microphone's display in 8 steps.

Key Beep

You can select whether or not to sound a beep when a key is pushed.
ON: Sounds a beep when a key is pushed.
OFF: No beep sounds, for silent operation.

Key Assignment

● Softkeys (1~20)

You can change which Software Key functions to display, and their order. You can assign up to 20 Software Keys at a time.

- ① The usable Software Key functions and their order may differ, depending on the transceiver version or presetting.
- ① Some Software Keys may not be usable, depending on other settings.

● Dial

You can assign the audio volume (Volume), squelch (SQL), channel selection (Channel), and the backlight level (Backlight) to any one of 4 sequential positions on the Dial.

UTC Offset

Set the offset time between Universal Time Coordinated (UTC) and your local time to between -14:00 and +14:00 (in 1 minute steps).

Inactivity Timer

The transceiver automatically returns to the operating screen if you push no key for the set period of time for each mode.

● Not DSC Related

Setting for when a screen that is not related to DSC is displayed.

● DSC Related

Setting for when a screen that is related to DSC is displayed.

● Distress Related

Setting for when a screen that is related to a Distress call is displayed.

● RT Related

Setting for when the transceiver is in the Radio Telephone mode.

GPS

Selects a satellite to be used for GPS (Global Positioning System) to pinpoint the geographic location of your transceiver anywhere in the world.

This setting may not be usable, depending on the transceiver version or presetting.

● GPS

The GPS is permanently set to ON.

● GLONASS

Selects whether or not to use the data from the GLONASS (GLOBAL'naya NAVigatsionnaya Sputnikovaya Sistema) satellites.

● SBAS

Turns the SBAS (Satellite Based Augmentation System) ON or OFF. When turning ON this function, the GPS position accuracy can be improved.

10 MENU SCREEN

◇ Settings

COMMANDMIC SP

Select the speaker to be used.

- **External Speaker**
Outputs audio from a command microphone's speaker.
- **External Speaker**
Outputs audio from an external speaker connected to a command microphone.

RX Hailer

Set the RX Hailer function.

① See page XX for details.

Noise Cancel

The Noise Cancel function reduces random noise components in the received or transmitted signal. Set the function for both receiving and transmitting.

- **RX**
 - OFF: The Noise Cancel function is OFF.
 - Low: Reduces random noise components in the received signal to approximately one half.
 - Middle: Reduces random noise components in the received signal to approximately one third.
 - High: Reduces random noise components in the received signal to approximately one tenth.
- **TX/Hailer**
 - ON: Reduces random noise components in the transmitted signal to approximately one third.
 - OFF: The Noise Cancel function is OFF.

Power Switch

Select whether or not to turn OFF the transceiver at the same time that you turn OFF the command microphone.

- **All Units**
When you turn OFF the command microphone, the transceiver is turned OFF at the same time.
- **Own Unit**
The transceiver is not turned OFF even if you turn OFF the command microphone.

Controller

Configure the settings for controllers.

① For more details, see page.XX

- **Name**
Enter a name of up to 10 characters for each controller.
- **Priority**
Select which controller to be used as the Priority Controller.
- **DSC Operation**
Set whether or not to accept DSC remote control from the controllers connected to the transceiver .
- **ID**
The unique ID of each controller is displayed.
The Priority Controller' ID is automatically set to 0.

Model

(For only the European versions)

Select the country where you operate the transceiver.

- ① After select the country, "The Settings are reset. Are you sure?" is displayed. Push **OK** to return to the Configuration screen.
- ① If no country is selected, "General" is automatically selected.

• Radio

[MENU] > Settings > **Radio**

Scan Type

(Except for the NLD version)

Selects the scan type. The default setting differs, depending on the transceiver version.

① See page XX for details.

Normal Scan: Scans all Favorite channels in the selected channel group.

Priority Scan: Sequentially scans all Favorite channels, while periodically checking Channel 16.

Scan Timer

(Except for the NLD version)

You can use the Scan Timer to pause, or to resume after 5 seconds, when a signal is detected.

ON: When a signal is detected on a channel, the scan pauses for 5 seconds, and then resumes. If the signal disappears in less than 5 seconds, the scan immediately resumes.

OFF: When a signal is detected on a channel, the scan pauses until the signal disappears, and then resumes.

Dual/Tri-Watch

(Except for the NLD version)

Select Dualwatch or Tri-Watch.

① See page XX for details.

Dualwatch: Periodically checks Channel 16 while operating on another channel.

Tri-Watch: Periodically checks Channel 16 and the Call channel while operating on another channel.

Channel Group

Select the suitable channel group for your operating area. Select USA, INT, or CAN, depending on the transceiver version.

① See page XX for details.

Call Channel

You can change your Call channel. The default setting may differ, depending on the transceiver version.

① See page XX for details.

WX Alert

For the USA version, an NOAA broadcast station transmits a Weather Alert tone before any important weather information.

① See page XX for details.

ON with Scan:

The preset Weather channels are sequentially checked while scanning.

ON: The previously selected (last used) Weather channel is checked while scanning.

OFF: The Weather Alert tone is not detected.

Voice Record

Auto (Last 120 sec):

The function automatically records the last 120 seconds of the received audio.

OFF: The function is OFF.

Favorite Channel

(Except for the NLD version)

You can set all channels as Favorite channels, clear all settings, or reset to default. By default, some channels are preset. The Favorite channels differ, depending on the transceiver version.

① See page XX for details.

Set All Channels: Sets all channels as Favorite channels.

Clear All Channels: Clears all Favorite channels.

Set Default: Resets Favorite channels to the default.

10 MENU SCREEN

◇ Settings

• Radio

[MENU] > Settings > **Radio**

Channel Display

You can select the number of digits to display the channel number.

① This setting may not be usable, depending on the transceiver version or presetting.

3 digits: The channel number is displayed in 3 digits, such as "01A."

4 digits: The channel number is displayed in 4 digits, such as "1001."

LO/DX

Push to turn the Attenuator function ON or OFF.

Local: The Attenuator function is ON.

Distance: The Attenuator function is OFF.

• NMEA

[MENU] > Settings > **NMEA**

NMEA 0183

Select the data transfer speed for each port to receive data from external devices.

4800 bps: Select to receive position data from an external GPS receiver.

38400 bps: Select to receive AIS data from an external AIS equipments.

NMEA 2000

NMEA 2000 is a communication standard used to connect various marine devices and display units in the vessel.

The transceiver can easily connect to a NMEA 2000 network with its plug-and-play functionality, and display the information provided from the devices on the network. Select the sensors in NMEA 2000 network which sends data to the transceiver.

① See the next page for the compatible PGN list.

1. Open the "NMEA 2000" screen.
2. Select the type of data from the menu screen and push [ENT] or [DIAL].
3. The transceiver starts searching the devices connected to NMEA 2000 network.
 - ① Push **STOP** to stop searching devices and display the device list.
4. The list of connected device is displayed.
5. Select the device to send the data to the transceiver, and push [ENT] or [DIAL].

- Device name: The selected device is used.

- Auto: The first device that sends the data to the transceiver or the device that sends a higher priority data is used.

- Not used: No NMEA 2000 device is used.

① Push **INFO** to display the detail of device.

① If another device sends a higher priority data to the transceiver after selecting "Auto," the device to be used will switch to that one. (Except for the AIS data)

① In the "Auto" item, the last connected device information is not saved.

① If the transceiver is connected to both NMEA 0183 and NMEA 2000 devices, the NMEA 2000 device has priority. Select "Not Used" if you want to use NMEA 0183 devices.

Compatible PGN list

Receive	
059392	ISO Acknowledgment
059904	ISO Request
060160	ISO Transport Protocol, Data Transfer
060416	ISO Transport Protocol, Connection Management
060928	ISO Address Claim
065240	ISO Commanded Address
126208	NMEA
126996	Product Information
129026	COG (Course Over Ground) and SOG (Speed Over Ground) - Rapid Update
129029	GNSS (Global Navigation Satellite System) Position Data
129038	AIS Class A Position Report
129039	AIS Class B Position Report
129040	AIS Class B Extended Position Report
129041	AIS Aids to Navigation (AtoN) Report
129793	AIS UTC and Date Report (Base Station)
129794	AIS Class A Static and Voyage Related Data
129798	AIS SAR Aircraft Position Report
129809	AIS Class B "CS" Static Data Report, Part A
129810	AIS Class B "CS" Static Data Report, Part B

Transmit	
059392	ISO Acknowledgment
059904	ISO Request
060416	ISO Transport Protocol, Connection Management
060928	ISO Address Claim
126208	NMEA - Acknowledge Group Function
126464	PGN List
126993	Heartbeat
126996	Product Information
126998	Configuration Information
129026	COG (course over ground) and SOG (speed over ground) - Rapid Update
129029	GNSS (Global Navigation Satellite System) Position Data
129038	AIS Class A Position Report
129039	AIS Class B Position Report
129040	AIS Class B Extended Position Report
129041	AIS Aids to Navigation (AtoN) Report
129793	AIS UTC and Date Report (Base Station)
129794	AIS Class A Static and Voyage Related Data
129798	AIS SAR Aircraft Position Report
129799	Radio Frequency/Mode/Power
129808	DSC Call Information
129809	AIS Class B "CS" Static Data Report, Part A
129810	AIS Class B "CS" Static Data Report, Part B

◇ Radio Info

[MENU] > Radio Info


Displays your transceiver and command microphone's information as shown below.



11 CONNECTIONS

■ Connections

Front panel:

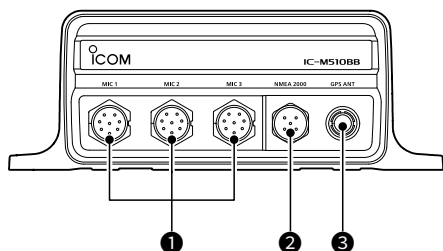

1 COMMAND MICROPHONE JACK

Connects the supplied or optional command microphone.

2 NMEA 2000™ CONNECTOR

Connects to an NMEA network.

3 GPS ANTENNA CONNECTOR

Connects to the supplied or optional GPS antenna.

NOTE: Be sure the GPS antenna is positioned where it has a clear view to receive signals from satellites, and fixed using the double-sided adhesive pad supplied with the antenna.


4 ANTENNA CONNECTOR

Connects to a marine VHF antenna with a PL-259 connector.

A key element in the performance of any communication system is the antenna. Ask your dealer about antennas and the best place to mount them.

CAUTION: DO NOT transmit without an antenna.

Rear panel:

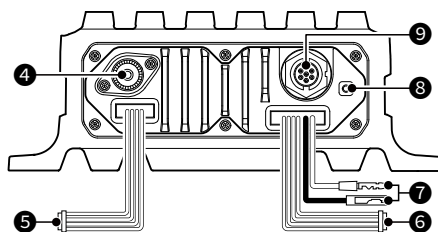

5 NMEA IN/OUT LEADS

Yellow: Listener A (Data-H), Data In (+)
Green: Listener B (Data-L), Data In (-)
Connect to the NMEA output lines of a GPS receiver or an AIS device for position data.

- NMEA 0183 (ver. 2.0 or later) sentence format RMC, GGA, GNS, or GLL and VTG compatible GPS receiver is required. Ask your dealer about suitable GPS receivers.

- The GPS sentences input from this connector are given priority over the sentences input from the built-in GPS receiver.

- The AIS information through the AIS device inputs as VDM sentence.

① The data communication speed (baud rate) is fixed at 38400 bps. Set the NMEA 0183 item to "38400 bps."

- The external VDM sentence takes precedence over others.

White: Talker A (Data-H), Data Out (+)
Brown: Talker B (Data-L), Data Out (-)
Connect to NMEA 0183 input lines of a navigation equipment.

- An NMEA 0183 (ver. 2.0 or later) sentence format DSC or DSE compatible navigation equipment is required.
- The GPS outputs RMC format sentences.
- The AIS information through the NMEA2000 device and the internal AIS receiver outputs as VDM sentences.

6 AF OUT LEADS


Connects to an external speaker.

Blue: External Speaker (+)

Black: External Speaker (-)

NOTE for NMEA In/Out and AF Out leads: The connectors are attached to keep the leads together. Before connecting to a piece of equipment, cut the leads to remove the connector.


The pin layout is shown in the figure below.

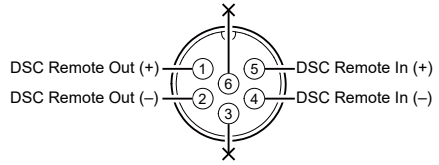

7 DC POWER CONNECTOR

Connects to a 13.8 V (USA version) or 12.0 V (EUR versions) DC power source.
(+: Red, -: Black)

CAUTION: After connecting the DC power cable, NMEA leads or external speaker leads, cover the connector and leads with a vulcanizing tape, as shown below, to prevent water seeping into the connection.

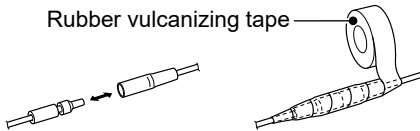

8 GROUND TERMINAL

Connects to a vessel ground to prevent electrical shocks and interference from other equipment occurring.

Use a PH M3 × 6 screw (user supplied).

9 DSC REMOTE CONTROL INTERFACE

Connects to an external navigation device or PC console software.
(EN 300 338-8 compatible)

NOTE:

- No connector supplied.
You'll need the compatible one to connect an external device.
(Connector: CCBDF06FCC-LLS7001)
- The electric interface of the device to be connected must be RS-422 compliant.
- The receiver circuit of the device to be connected must consist of an opto-isolator and be electrically isolated.

Cleaning

If the transceiver becomes dusty or dirty, wipe it clean with a soft cloth.



DO NOT use harsh solvents such as Benzene or alcohol, as they will damage the transceiver's surfaces.

Connecting to the MA-510TR

Connect the transceiver to the MA-510TR using the accessory cable. After connecting, an Individual DSC call can be made to the AIS target using the transponder without entering the target's MMSI code. (p.XX)

① See the MA-510TR instruction manual for the connecting instruction.

● Connect each lead to the appropriate lead as follows.

- Listener A (Data-H) (Yellow):
To NMEA OUT (+)
- Listener B (Data-L) (Green):
To NMEA OUT (-)
- Talker A (Data-H) (White):
To NMEA IN (+)
- Talker B (Data-L) (Brown):
To NMEA IN (-)

11 CONNECTIONS

■ Supplied accessories

NOTE: Some accessories may not be supplied, or the shape may be different, depending on the transceiver version.

Self-tapping screws
(5 × 20 mm)



GPS antenna and
double-sided adhesive pad



Warning sticker
(For only the USA version)




Spring washers (M5)
⊙ ⊙ ⊙ ⊙

Flat washers (M5)
⊙ ⊙ ⊙ ⊙

Command microphone


DC power cable

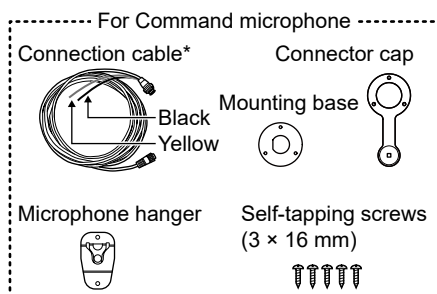

* The OPC-1540 has external speaker leads, as shown above.
(Yellow: Speaker (+), Black: Speaker (-))

■ Fuse replacement

One fuse is installed in the supplied DC power cable. If the fuse blows or the transceiver stops functioning, track down the source of the problem, repair it, and replace the damaged fuse with a new one of the proper rating.

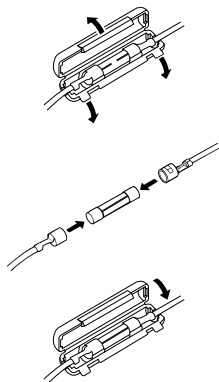

Fuse Coding explanation


Fuse Coding: F 250 V 10 A
Fuse Voltage Rating: 250 Volts
Fuse Current Rating: 10 Amperes

■ Mounting the transceiver

Using the template on the supplied leaflet, mount the transceiver securely to a surface which is more than 10 mm (0.03 ft) thick and can support more than 5 kg (11 lb) using the 4 supplied screws (5 × 20 mm), as illustrated below.

CAUTION: KEEP the transceiver and microphone at least 1 meter (3.3 ft) away from the vessel's magnetic navigation compass.

NOTE: Be sure that the GPS antenna is positioned where it has a clear view to receive signals from satellites, and fixed using the double-sided adhesive pad supplied with the GPS antenna.

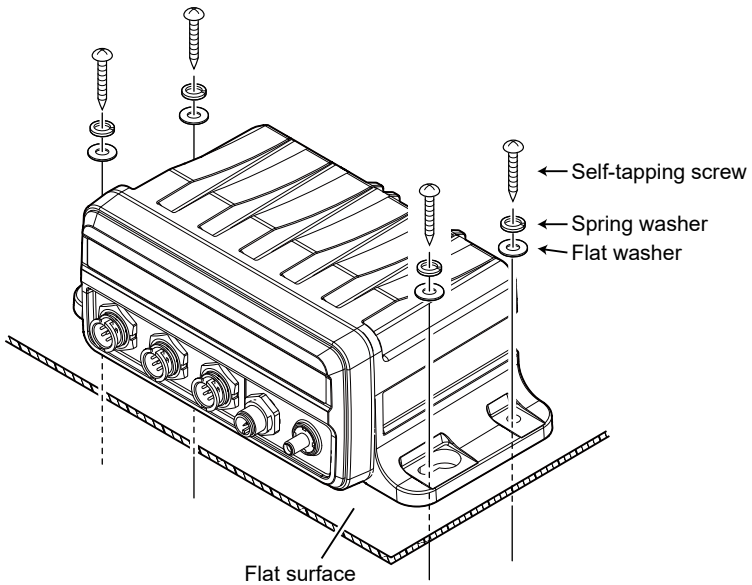

11 CONNECTIONS

■ Microphone installation


When you use the supplied or optional HM-195 COMMAND MICROPHONE, the optional 6 meters long OPC-1541 EXTENSION CABLE can be connected between the OPC-1540 and the transceiver to operate from even longer distances.

You can also install the extension cable's connector as a built-in plug on a cabinet or wall.


NOTE: The firmware of the command microphones may be updated when you connect them to the transceiver.


◆ Installation

1. Insert the connection cable connector into the command microphone jack, and tighten the nut.
2. To use the cable connector as a wall socket, install it as shown below.
3. Using the mounting base as a template, carefully mark the holes where the cable and 3 screws will be fastened.
4. Drill holes at these marks.
5. Install the mounting base using the supplied screws, as shown below.

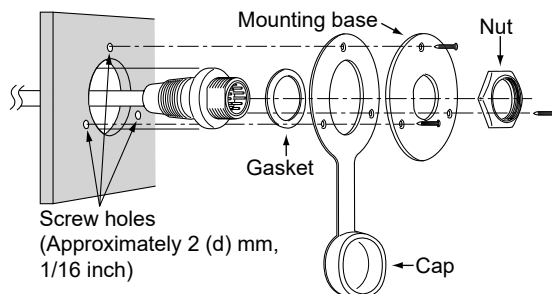

6. The completed installation should look like this.

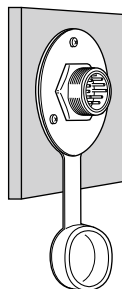

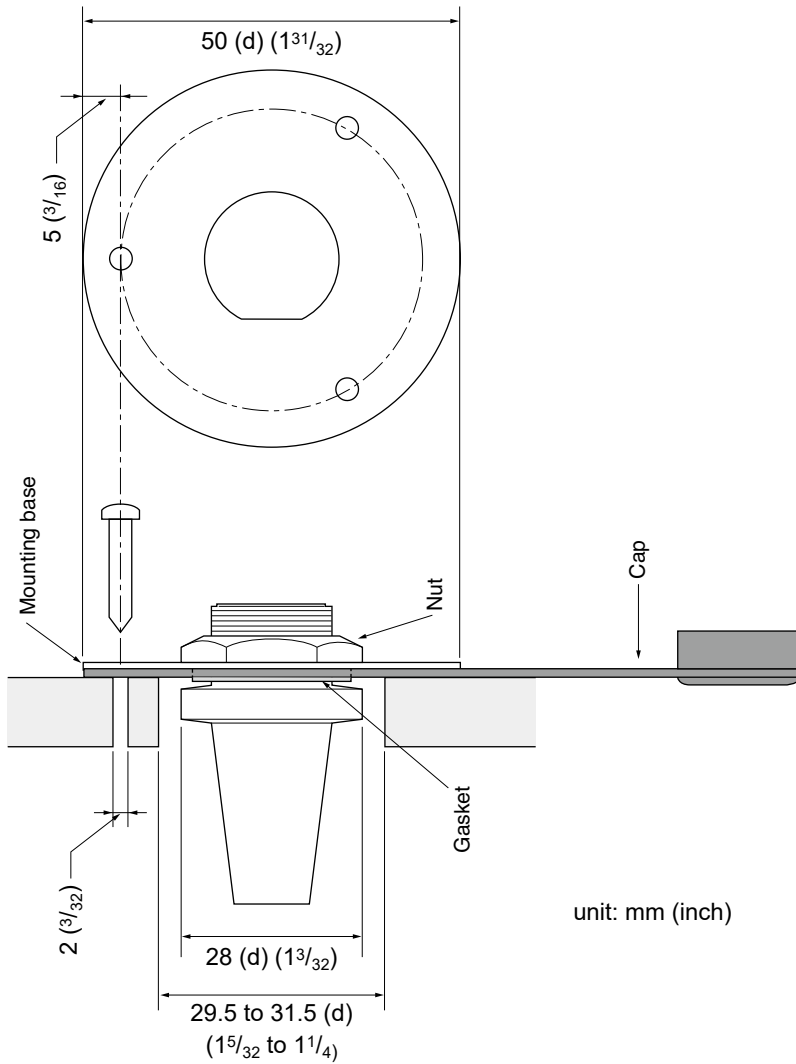

12 SPECIFICATIONS AND OPTIONS

■ Specifications

IC-M510BB USA Version

◆ General

- Frequency coverage:

TX	156.025 ~ 157.425 MHz
RX	156.050 ~ 163.275 MHz
DSC (CH70)	156.525 MHz
AIS1	161.975 MHz
AIS2	162.025 MHz
- Mode: 16K0G3E (FM), 16K0G2B (DSC), 16K0GXW (AIS)
- Operating temperature range: -20°C ~ +60°C, -4°F ~ +140°F
- Current drain (at 13.8 V):

TX high (25 W)	5.5 A maximum
RX Maximum audio	1.5 A maximum (Command microphone) 3.3 A maximum (External speaker)
- Power supply requirement: Negative ground 13.8 V DC (11.7 ~ 15.9 V DC)
- Antenna impedance: 50 Ω nominal
- Dimensions:

Transceiver	216 (W) × 79 (H) × 113 (D) mm 8.5 (W) × 3.1 (H) × 4.4 (D) in
Command microphone	67.5 (W) × 144.5 (H) × 37 (D) mm 2.7 (W) × 5.7 (H) × 1.5 (D) in
- Weight (approximate):

Transceiver	890 g, 2 lb
Command microphone	400 g, 14.1 oz

◆ Transmitter

- Output power: 25 W or 1 W
- Modulation system: Variable reactance frequency modulation
- Maximum frequency deviation: ±5 kHz
- Spurious emissions:

Less than -70 dBc (High Power)
Less than -56 dBc (Low Power)
- Frequency error: Less than ± 1.5 kHz
- Adjacent channel power: More than 70 dB
- Audio harmonic distortion: Less than 10 % (at 60% Deviation)
- Residual modulation: More than 40 dB
- Audio frequency response: +1 dB to -3 dB of 6 dB octave from 300 Hz to 3000 Hz

◆ Receiver

- Receive system: Double conversion superheterodyne
- Sensitivity:

FM	-10 dBμ emf Typ. at 12 dB SINAD
DSC (CH70)	-7 dBμ emf Typ. (1% BER)
AIS	-115 dBm (20% PER)
- Squelch sensitivity: Less than -10 dBμ
- Intermodulation rejection ratio:

FM	More than 70 dB
DSC (CH70)	More than 68 dBμ emf (1% BER)
AIS	More than -55 dBm (20% BER)
- Spurious response:

FM	More than 70 dB
DSC (CH70)	More than 73 dBμ emf (1% BER)
- Adjacent channel selectivity:

FM	More than 70 dB
DSC (CH70)	More than 73 dBμ emf (1% BER)
AIS	More than -50 dBm (20% BER)
- Audio output power:

Command microphone	2 W
External Speaker	15 W
- Hum and noise: More than 40 dB
- Audio frequency response: +1 dB to -3 dB of -6 dB octave from 300 Hz to 3000 Hz

IC-M510BB European Versions

◆ General

- Frequency coverage:

TX	156.025 ~ 161.425 MHz (Depending on the version)
RX	156.050 ~ 162.000 MHz (Depending on the version)
DSC (CH70)	156.525 MHz
AIS1	161.975 MHz
AIS2	162.025 MHz
- Mode: 16K0G3E (FM), 16K0G2B (DSC), 16K0GXW (AIS)
- Operating temperature range: -20°C ~ +60°C
- Current drain (at 13.8 V):

TX high (25 W)	5.5 A maximum
RX Maximum audio	1.5 A maximum (Command microphone*) 3.3 A maximum (External speaker)
- Power supply requirement: Negative ground
- Antenna impedance: 50 Ω nominal
- Dimensions:

Transceiver	216 (W) × 79 (H) × 113 (D) mm
Command microphone	67.5 (W) × 144.5 (H) × 37 (D) mm
- Weight (approximate):

Transceiver	890 g
Command microphone	400 g

◆ Transmitter

- Output power: 25 W or 1 W
- Modulation system: Variable reactance frequency modulation
- Maximum frequency deviation: ±5 kHz
- Spurious emissions: Less than 0.25 μW
- Frequency error: Less than ± 1.5 kHz
- Adjacent channel power: More than 70 dB
- Audio harmonic distortion: Less than 10 % (at 60% Deviation)
- Residual modulation: More than 40 dB
- Audio frequency response: +1 dB to -3 dB of 6 dB octave from 300 Hz to 3000 Hz

◆ Receiver

- Receive system: Double conversion superheterodyne
- Sensitivity:

FM	-2 dBμ emf Typ. at 20 dB SINAD
DSC (CH70)	-7 dBμ emf Typ. (1% BER)
AIS	-115 dBm Typ. (20% PER)
- Squelch sensitivity: Less than -2 dBμ emf
- Intermodulation rejection ratio:

FM	More than 68 dB
DSC (CH70)	More than 68 dBμ emf (1% BER)
AIS	More than -55 dBm (20% BER)
- Spurious response:

FM	More than 70 dB
DSC (CH70)	More than 73 dBμ emf (1% BER)
- Adjacent channel selectivity:

FM	More than 70 dB
DSC (CH70)	More than 73 dBμ emf (1% BER)
AIS	More than -50 dBm (20% BER)
- Audio output power:

Command microphone	2 W
External Speaker	15 W
- Hum and noise: More than 40 dB
- Audio frequency response: +1 dB to -3 dB of -6 dB octave from 300 Hz to 3000 Hz

* When one command microphone is connected.

12 SPECIFICATIONS AND OPTIONS


■ Specifications

Common

◇ Built-in GPS receiver

• Channel:	Tracking Calculation	Maximum 24 ch Maximum 12 ch
• Differential satellites:	WAAS, EGNOS, MSAS, GAGAN	
• Corresponding GPS:	GPS, GLONASS, SBAS	
• Receiving frequency:	GPS, SBAS	1575.42 MHz
	GLONASS	1602.00 MHz

■ Dimensions

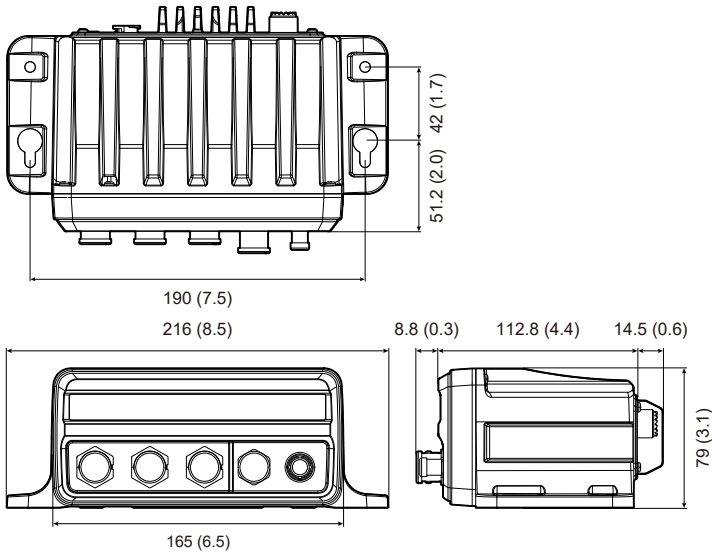

unit: mm (inch)

■ Options

NOTE: When an optional product with a lower IP rating than the transceiver is attached, the transceiver meets the lower IP rating of the optional product.

- **HM-195B/HM-195SW**

- **HM-195GB/HM-195GW** COMMANDMICIV™

- An external microphone-type controller. Provides optional intercom operation.

- A 6 meters (20 feet) long connection cable, microphone hanger, and mounting base are included.

- HM-195B/HM-195GB: Black

- HM-195SW/HM-195GW: White

- **OPC-1541** MICROPHONE EXTENSION CABLE

- A 6 meters (20 feet) long microphone extension cable for optional HM-195. Up to two OPC-1541 can be connected. Usable length is 18 meters (60 feet) maximum.

- **SP-37** HORN SPEAKER

- The external horn speaker. Connect with the AF Out leads for the external speaker.

- ① SP-37 has not been tested and Icom does not guarantee its waterproofness.

- **UX-241** GNSS ANTENNA

- To receive GPS signals.

- **MA-510TR** AIS TRANSPONDER

- You can make an Individual call to the selected AIS target without entering the target's MMSI code.

13 TROUBLESHOOTING

The transceiver does not turn ON.

- There is a bad connection to the power supply.
→ Check the connection to the transceiver and power supply. (p.XX)
- The fuse is blown.
→ Repair the problem, and then replace the fuse. (p.XX)

Little or no sound comes from the speaker.

- The squelch level is set too high.
→ Set the squelch to the threshold point. (p.XX)
- The volume level is set too low.
→ Set the volume level to a suitable level. (p.XX)

You cannot transmit with high power.

- Some channels are set for low power or receive only by regulations.
→ Change channels. (p.XX)
- The output power is set to low.
→ Push **HI/LO** to select high power. (p.XX)

Scan does not start.

- More than 2 favorite channels are not set.
→ Set at least 2 favorite channels. (p.XX)

No beep sounds.

- The Key Beep function is OFF.
→ Turn ON the function. (p.XX)

Individual or Group ID cannot be set.

- The entered ID code is incorrect. The first digit must be set to between '1' and '9' for an Individual ID.
→ Enter a correct ID code. (p.XX)

"??" blinks instead of the position and time.

- Four hours have passed since you manually entered the position.
- The GPS position is invalid.
→ Enter the position and time. (p.XX)

"No Position" and "No Time" are displayed instead of the position and time.

- The GPS signal is not correctly received.
→ Check the GPS antenna connection and position. (p.XX)
→ Check the cable connection to NMEA In/Out leads. (p.XX)
→ Check the transceiver is located where the GPS antenna has a clear view to receive signal from satellites. (p.XX)
- The position and time have not been manually entered.
→ Enter the position and time. (p.XX)

Sensitivity is too low, and only strong signals can be heard.

- The antenna is defective or the coaxial cable connector is shorted or cut.
→ Repair the problem and then reconnect to the antenna connector. (p.XX)

Communication cannot be established.

- The antenna is defective or the coaxial cable connector is shorted or cut.
→ Repair the problem and then reconnect to the antenna connector. (p.XX)

The transceiver is locked up, and does not respond.

- A software error has occurred.
→ Turn OFF the transceiver, and then turn it ON again.

The transceiver does not work.

- The transceiver's Phase Lock Loop is unlocked.
→ Contact your dealer.

The collision alarm does not sound.

- The collision alarm function is OFF.
→ Turn ON the collision alarm function. (p.XX)

14 CH LIST

■ For IC-M510BB USA version

NOTE: When the “Channel Display” is set to “3 digits” in the Radio setting, the channel number is displayed in 3 digits. See page XX for details. (For example: “1001” is displayed as “01A.”)

Channel Number			Frequency (MHz)	
USA	INT	CAN	Transmit	Receive
	01	01	156.050	160.650
1001	1001		156.050	156.050
	02	02	156.100	160.700
	03	03	156.150	160.750
	04		156.200	160.800
		1004	156.200	156.200
	05		156.250	160.850
1005	1005	1005	156.250	156.250
06	06	06	156.300	156.300
	07		156.350	160.950
1007	1007	1007	156.350	156.350
08	08	08	156.400	156.400
09	09	09	156.450	156.450
10	10	10	156.500	156.500
11	11	11	156.550	156.550
12	12	12	156.600	156.600
13* ³	13	13* ¹	156.650	156.650
14	14	14	156.700	156.700
15* ²	15* ¹	15* ¹	156.750	156.750
16	16	16	156.800	156.800
17* ¹	17	17* ¹	156.850	156.850
	18		156.900	161.500
1018	1018	1018	156.900	156.900
	19		156.950	161.550
1019	1019	1019	156.950	156.950
	2019		RX only	161.550
20	20	20* ¹	157.000	161.600
1020	1020		157.000	157.000
	2020		RX only	161.600
	21		157.050	161.650
1021	1021	1021	157.050	157.050
		2021	RX only	161.650
	22		157.100	161.700
1022	1022	1022	157.100	157.100
	23	23	157.150	161.750
1023	1023		157.150	157.150
		2023	RX only	161.750
24		24	157.200	161.800
25		25	157.250	161.850
		2025	RX only	161.850
26		26	157.300	161.900
27	27	27	157.350	161.950
	1027		157.350	157.350
28	28	28	157.400	162.000

*1 Low power only.

*2 RX only.

*3 Momentary High Power.

Channel Number			Frequency (MHz)	
USA	INT	CAN	Transmit	Receive
	1028		157.400	157.400
		2028	RX only	162.000
	60	60	156.025	160.625
	61		156.075	160.675
		1061	156.075	156.075
	62		156.125	160.725
		1062	156.125	156.125
	63		156.175	160.775
1063	1063	1063	156.175	156.175
	64	64	156.225	160.825
		1064	156.225	156.225
	65		156.275	160.875
1065	1065	1065*1	156.275	156.275
	66		156.325	160.925
1066	1066	1066*1	156.325	156.325
67*3	67	67	156.375	156.375
68	68	68	156.425	156.425
69	69	69	156.475	156.475
71	71	71	156.575	156.575
72	72	72	156.625	156.625
73	73	73	156.675	156.675
74	74	74	156.725	156.725
	75*1	75*1	156.775	156.775
	76*1	76*1	156.825	156.825
77*1	77	77*1	156.875	156.875
	78		156.925	161.525
1078	1078	1078	156.925	156.925
	2078		RX only	161.525
	79		156.975	161.575
1079	1079	1079	156.975	156.975
	2079		RX only	161.575
	80		157.025	161.625
1080	1080	1080	157.025	157.025
	81		157.075	161.675
1081	1081	1081	157.075	157.075
	82		157.125	161.725
1082	1082	1082	157.125	157.125
	83		157.175	161.775
1083	1083	1083	157.175	157.175
		2083	RX only	161.775
84		84	157.225	161.825
85		85	157.275	161.875
86		86	157.325	161.925
87	87	87	157.375	157.375
88	88	88	157.425	157.425

*1 Low power only.

*2 RX only.

*3 Momentary High Power.

NOTE: Simplex channels, 1021, 1023, 1081, 1082, and 1083 **CANNOT** be lawfully used by the general public in USA waters.

14 CH LIST

■ For IC-M510BB EUR versions

NOTE: When the "Channel Display" is set to "3 digits" in the Radio setting, the channel number is displayed in 3 digits. See pageXX for details. (For example: "1001" is displayed as "01A.")

◇ International channels

CH	Frequency (MHz)		CH	Frequency (MHz)		CH	Frequency (MHz)	
	Transmit	Receive		Transmit	Receive		Transmit	Receive
01	156.050	160.650	2020	RX only	161.600	71	156.575	156.575
02	156.100	160.700	21	157.050	161.650	72	156.625	156.625
03	156.150	160.750	22	157.100	161.700	73	156.675	156.675
04	156.200	160.800	23	157.150	161.750	74	156.725	156.725
05	156.250	160.850	24	157.200	161.800	75*1	156.775	156.775
06	156.300	156.300	25	157.250	161.850	76*1	156.825	156.825
07	156.350	160.950	26	157.300	161.900	77	156.875	156.875
08	156.400	156.400	27*2	157.350	161.950	78	156.925	161.525
09	156.450	156.450	1027*3	157.350	157.350	1078	156.925	156.925
10	156.500	156.500	28*2	157.400	162.000	2078	RX only	161.525
11	156.550	156.550	1028*3	157.400	157.400	79	156.975	161.575
12	156.600	156.600	31*1,6	157.050	162.150	1079	156.975	156.975
13	156.650	156.650	1037*4,5	157.850	157.850	2079	RX only	161.575
14	156.700	156.700	60	156.025	160.625	80	157.025	161.625
15*1	156.750	156.750	61	156.075	160.675	81	157.075	161.675
16	156.800	156.800	62	156.125	160.725	82	157.125	161.725
17*1	156.850	156.850	63	156.175	160.775	83	157.175	161.775
18	156.900	161.500	64	156.225	160.825	84	157.225	161.825
19	156.950	161.550	65	156.275	160.875	85	157.275	161.875
1019	156.950	156.950	66	156.325	160.925	86	157.325	161.925
2019	RX only	161.550	67	156.375	156.375	87	157.375	157.375
20	157.000	161.600	68	156.425	156.425	88	157.425	157.425
1020	157.000	157.000	69	156.475	156.475	P4*7	161.425	161.425

*1 Low power only. *2 Except for the UK and EUR versions. *3 For only the UK and EUR versions.

*4 Low power only for the NLD version. *5 For only the NLD and UK versions.

*6 For only the NLD version. *7 For only the UK version.

① 1037 and P4 channels are UK Marina Channels: M1=1037, M2=P4 for only the UK version.



◇ USA channels (for the UK version only)

CH	Frequency (MHz)		CH	Frequency (MHz)		CH	Frequency (MHz)		CH	Frequency (MHz)	
	Transmit	Receive		Transmit	Receive		Transmit	Receive		Transmit	Receive
1001	156.050	156.050	17*2	156.850	156.850	1037	157.850	157.850	1079	156.975	156.975
1005	156.250	156.250	1018	156.900	156.900	1063	156.175	156.175	1080	157.025	157.025
06	156.300	156.300	1019	156.950	156.950	1065	156.275	156.275	1081	157.075	157.075
1007	156.350	156.350	20	157.000	161.600	1066	156.325	156.325	1082	157.125	157.125
08	156.400	156.400	1020	157.000	157.000	67*1	156.375	156.375	1083	157.175	157.175
09	156.450	156.450	1021	157.050	157.050	68	156.425	156.425	84	157.225	161.825
10	156.500	156.500	1022	157.100	157.100	69	156.475	156.475	85	157.275	161.875
11	156.550	156.550	1023	157.150	157.150	71	156.575	156.575	86	157.325	161.925
12	156.600	156.600	24	157.200	161.800	72	156.625	156.625	87	157.375	157.375
13*1	156.650	156.650	25	157.250	161.850	73	156.675	156.675	88	157.425	157.425
14	156.700	156.700	26	157.300	161.900	74	156.725	156.725	P4	161.425	161.425
15	RX only	156.750	27	157.350	161.950	77*2	156.875	156.875			
16	156.800	156.800	28	157.400	162.000	1078	156.925	156.925			

*1 Momentary High Power *2 Low power only

① 1037 and P4 channels are UK Marina Channels: M1=1037, M2=P4.

  NOTE: Simplex channels, 1021, 1023, 1081, 1082, and 1083 **CANNOT** be lawfully used by the general public in USA waters.





INSTRUCTION MANUAL

VHF MARINE TRANSCEIVER **IC-M410BB**



This device complies with Part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.

Icom Inc.

Thank you for choosing this Icom product. This product was designed and built with Icom's state of the art technology and craftsmanship. With proper care, this product should provide you with years of trouble-free operation.

■ Important

READ ALL INSTRUCTIONS carefully and completely before using the transceiver.

SAVE THIS INSTRUCTION MANUAL — This instruction manual contains important operating instructions for the IC-M410BB.

This instruction manual includes some functions that are usable only when they are preset by your dealer. Ask your dealer for details.

■ Explicit Definitions

WORD	DEFINITION
⚠ WARNING!	Personal injury, fire hazard or electric shock may occur.
CAUTION	Equipment damage may occur.
NOTE	If disregarded, inconvenience only. No risk of personal injury, fire or electric shock.

Icom is not responsible for the destruction, damage to, or performance of any Icom or non-Icom equipment, if the malfunction is because of:

- Force majeure, including, but not limited to, fires, earthquakes, storms, floods, lightning, other natural disasters, disturbances, riots, war, or radioactive contamination.
- The use of Icom transceivers with any equipment that is not manufactured or approved by Icom.

■ Features

- Up to 2 COMMANDMIC™ capability, VHF Black Box Transceiver
- Built-in Class D DSC, "DISTRESS" key on the back of the COMMANDMIC™
- Integrated GPS receiver
- NMEA 0183-HS and NMEA 2000™ connectivity
- Internal 15 W Hailer/Fog Horn
- IPX7 waterproof (1 m depth water for 30 minutes)
- Active noise cancelling for transmitted and received audio.

Icom and the Icom logo are registered trademarks of Icom Incorporated (Japan) in Japan, the United States, the United Kingdom, Germany, France, Spain, Russia, Australia, New Zealand, and/or other countries. AquaQuake is a trademark of Icom Incorporated. COMMANDMIC is a trademark of Icom Incorporated. NMEA 2000 is a trademark of the National Maritime Electronics Association, Inc. All other products or brands are registered trademarks or trademarks of their respective holders.

■ In Case of Emergency

If your vessel requires assistance, contact other vessels and the Coast Guard by sending a distress call on Channel 16 or transmit your Distress call using Digital Selective Calling (DSC) on Channel 70.


◇ Using Channel 16

1. Push [16/C] to switch to Channel 16.
2. While holding down [PTT], give the appropriate information as follows:

- "MAYDAY MAYDAY MAYDAY."
- "THIS IS"
[redacted]
(name of vessel).
- Say your call sign or other indication of the vessel (AND your 9 digit DSC ID, if you have one).
- "LOCATED AT"
[redacted]
(your position).
- State the nature of the distress and assistance required.
- Give any other information which might facilitate the rescue.

◇ Using Digital Selective Calling

1. Lift up the key cover on the back of the command microphone, hold down [DISTRESS] for 3 seconds until the 3 short beeps and then one long beep sound.

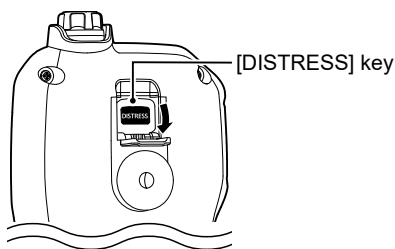

2. Wait for an acknowledgment from another station.
3. After the acknowledgment is received, Channel 16 is automatically selected.
4. Hold down [PTT], then transmit the appropriate information as listed above.

■ Radio Operation Warning



WARNING

Icom requires the radio operator to meet the FCC Requirements for Radio Frequency Exposure. An omnidirectional antenna with gain not greater than 9 dBi must be mounted a minimum of 5 meters (measured from the lowest point of the antenna) vertically above the main deck and all possible personnel. This is the minimum safe separation distance estimated to meet all RF exposure compliance requirements. This 5 meter distance is based

on the FCC Safe Maximum Permissible Exposure (MPE) distance of 3 meters added to the height of an adult (2 meters) and is appropriate for all vessels.

For watercraft without suitable structures, the antenna must be mounted so as to maintain a minimum of 1 meter vertically between the antenna, (measured from the lowest point of the antenna), to the heads of all persons AND all persons must stay outside of the 3 meter MPE radius.

Do not transmit with radio and antenna when persons are within the MPE radius of the antenna, unless such persons (such as driver or radio operator) are shielded from antenna field by a grounded metallic barrier. The MPE Radius is the minimum distance from the antenna axis that person should maintain in order to avoid RF exposure higher than the allowable MPE level set by FCC.

FAILURE TO OBSERVE THESE LIMITS MAY ALLOW THOSE WITHIN THE MPE RADIUS TO EXPERIENCE RF RADIATION ABSORPTION WHICH EXCEEDS THE FCC MAXIMUM PERMISSIBLE EXPOSURE (MPE) LIMIT.

IT IS THE RESPONSIBILITY OF THE RADIO OPERATOR TO ENSURE THAT THE MAXIMUM PERMISSIBLE EXPOSURE LIMITS ARE OBSERVED AT ALL TIMES DURING RADIO TRANSMISSION. THE RADIO OPERATOR IS TO ENSURE THAT NO BYSTANDERS COME WITHIN THE RADIUS OF THE MAXIMUM PERMISSIBLE EXPOSURE LIMITS.

Determining MPE Radius

THE MAXIMUM PERMISSIBLE EXPOSURE (MPE) RADIUS HAS BEEN ESTIMATED TO BE A RADIUS OF ABOUT 3 M PER OET BULLETIN 65 OF THE FCC.

THIS ESTIMATE IS MADE ASSUMING THE MAXIMUM POWER OF THE RADIO AND ANTENNAS WITH A MAXIMUM GAIN OF 9 dBi ARE USED FOR A SHIP MOUNTED SYSTEM.

■ Avertissement Pour Les Opérateurs Radio



AVERTISSEMENT

Icom exige que l'opérateur radio se conforme aux exigences de la FCC en matière d'exposition aux radiofréquences. Une antenne omnidirectionnelle dont le gain ne dépasse pas 9 dBi doit être fixée à une distance minimale de 5 mètres (mesurée depuis le point le plus bas de l'antenne) verticalement au-dessus du pont principal et de tout le personnel qui peut s'y trouver. Il s'agit de la distance de sécurité minimale prévue pour satisfaire aux exigences de conformité en matière d'exposition aux RF. Cette distance de 5 mètres est établie en fonction de l'exposition maximale admissible sécuritaire de 3 mètres établie par la FCC, à laquelle on ajoute la hauteur d'un adulte (2 mètres); cette distance convient pour tous les navires.

Dans le cas des embarcations sans structure convenable, l'antenne doit être fixée de façon à maintenir une distance minimale de 1 mètre verticalement entre cette antenne (mesurée depuis son point le plus bas) et la tête de toute personne présente; toutes les personnes présentes doivent se tenir à l'extérieur d'un rayon d'exposition maximale admissible de 3 mètres.

Ne pas émettre à l'aide de la radio et de l'antenne lorsque des personnes se trouvent à l'intérieur du rayon d'exposition maximale admissible de cette antenne, à moins que ces personnes (comme le conducteur ou l'opérateur radio) ne soient protégées du champ de l'antenne par un écran métallique relié à la masse. Le rayon d'exposition maximale admissible équivaut à la distance minimale que cette personne doit maintenir entre elle et l'axe de l'antenne pour éviter une exposition aux RF supérieure au niveau d'exposition maximale admissible fixé par la FCC.

LE NON-RESPECT DE CES LIMITES PEUT CAUSER, POUR LES PERSONNES SITUÉES DANS LE RAYON D'EXPOSITION MAXIMALE ADMISSIBLE, UNE ABSORPTION DE RAYONNEMENT DE RF SUPÉRIEURE À L'EXPOSITION MAXIMALE ADMISSIBLE FIXÉE PAR LA FCC.

L'OPÉRATEUR RADIO EST RESPONSABLE D'ASSURER QUE LES LIMITES D'EXPOSITION MAXIMALE ADMISSIBLE SOIENT RESPECTÉES EN TOUT TEMPS PENDANT LA TRANSMISSION RADIO. L'OPÉRATEUR RADIO DOIT S'ASSURER QU'AUCUNE PERSONNE PRÉSENTE NE SE SITUE À L'INTÉRIEUR DU RAYON D'EXPOSITION MAXIMALE ADMISSIBLE.

**Établir le rayon d'exposition maximale admissible
ON ESTIME QUE LE RAYON D'EXPOSITION MAXIMALE ADMISSIBLE EST D'ENVIRON 3 M, TEL QUE STIPULÉ DANS LE BULLETIN OET 65 DE LA FCC. CETTE DISTANCE ESTIMÉE TIEN COMPTE D'UN SYSTÈME INSTALLÉ SUR UN NAVIRE UTILISANT LA PUISSANCE MAXIMALE DE LA RADIO ET DES ANTENNES DONT LE GAIN MAXIMAL EST DE 9 dBi.**

■ FCC Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications to this transceiver, not expressly approved by Icom Inc., could void your authority to operate this transceiver under FCC regulations.

■ Information FCC

Cet appareil est conforme à la partie 15 de la réglementation FCC. Son fonctionnement est soumis à la condition que cet appareil ne provoque pas d'interférences nocives. Cet équipement a été testé et reconnu conforme aux limites fixées pour un appareil numérique de classe B, conformément à la partie 15 de la réglementation FCC. Ces limites ont été fixées afin d'assurer une protection raisonnable contre les interférences nocives dans une installation résidentielle. Cet équipement génère, utilise et peut émettre un rayonnement de fréquence radio. S'il n'a pas été installé conformément aux instructions, il peut par ailleurs créer des interférences perturbant les communications radio. Toutefois, il n'y a aucune garantie que les interférences ne se produiront pas dans une installation particulière. Si cet équipement crée des interférences perturbant la réception de la radio ou de la télévision, comme cela peut être déterminé en éteignant et en allumant l'équipement, l'utilisateur est invité à essayer de corriger l'interférence en prenant une ou plusieurs des mesures ci-après :

- Réorienter ou changer de place l'antenne de réception.
- Éloigner l'équipement et le récepteur.
- Connecter l'équipement sur une prise sur un autre circuit que celui sur lequel le récepteur est connecté.
- Faire appel au revendeur ou à un technicien radio/TV expérimenté.

MISE EN GARDE : Tout changement ou modification, non expressément approuvé par Icom Inc., peut annuler l'autorisation de l'utilisateur à utiliser cet appareil conformément à la réglementation FCC.

■ Note

A WARNING STICKER is supplied with the USA version transceiver.

To comply with FCC regulations, this sticker must be affixed in such a location as to be readily seen from the operating controls of the radio. Make sure the chosen location is clean and dry before applying the sticker.

■ Precautions

⚠ **WARNING! NEVER** connect the transceiver directly to an AC outlet. This may cause a fire or an electric shock.

⚠ **WARNING! NEVER** connect the transceiver to a power source of more than 16 V DC such as a 24 V battery. This connection could cause a fire or damage the transceiver.

⚠ **WARNING! NEVER** reverse the DC power cable polarity. This could cause a fire or damage the equipment.

⚠ **WARNING! NEVER** cut the DC power cable between the DC power connector on the transceiver's rear panel and the fuse holder. If an incorrect connection is made after cutting, the transceiver may be damaged.

⚠ **WARNING! NEVER** operate the transceiver during a lightning storm. It may result in an electric shock, cause a fire or damage the transceiver. Always disconnect the power source and antenna before a storm.

⚠ **WARNING! NEVER** place the transceiver where normal operation of the vessel may be hindered, or where it could cause bodily injury.

CAUTION: DO NOT place or leave the transceiver in areas with temperatures below -20°C or above $+60^{\circ}\text{C}$ (-4°F or above $+140^{\circ}\text{F}$), or in areas subject to direct sunlight, such as a dashboard.

CAUTION: DO NOT use harsh solvents such as Benzine or alcohol when cleaning. This could damage the equipment surfaces. If the surface becomes dusty or dirty, wipe it clean with a soft, dry cloth.

NEVER place the transceiver in an insecure place to avoid inadvertent use by unauthorized persons.

BE CAREFUL! The transceiver's rear panel will become hot when transmitting continuously for long periods of time.

BE CAREFUL! The transceiver meets IPX7 requirements for waterproof protection*. However, once the transceiver or microphone has been dropped, or the waterproof seal is cracked or damaged, waterproof protection cannot be guaranteed because of possible damage to the case or the waterproof seal.

* Except for the DC power connector, NMEA In/Out leads and AF Out leads.

NOTE: Install the transceiver and/or microphone more than 1 meter from the vessel's magnetic navigation compass.

■ Précautions

⚠ **AVERTISSEMENT ! NE JAMAIS** relier l'émetteur-récepteur à une prise CA. Cela pourrait provoquer un choc électrique ou un incendie.

⚠ **AVERTISSEMENT ! NE JAMAIS** brancher l'émetteur-récepteur sur une source d'alimentation supérieure à 16 V CC, comme une batterie de 24 V. Cela pourrait endommager l'émetteur-récepteur.

⚠ **AVERTISSEMENT ! NE JAMAIS** inverser la polarité du câble d'alimentation CC lors de la connexion à une source d'alimentation. Cela pourrait endommager l'émetteur-récepteur.

⚠ **AVERTISSEMENT ! NE JAMAIS** couper le câble d'alimentation CC entre la prise CC à l'arrière de l'émetteur-récepteur et le porte-fusible. L'émetteur-récepteur peut être endommagé par la suite en cas de connexion inappropriée.

⚠ **AVERTISSEMENT ! NE JAMAIS** utiliser l'émetteur-récepteur durant un orage. Cela risquerait de provoquer un choc électrique, un incendie ou d'endommager l'émetteur-récepteur. Toujours débrancher la source d'alimentation et l'antenne avant une tempête.

⚠ **AVERTISSEMENT ! NE JAMAIS** installer l'émetteur-récepteur à un emplacement où il pourrait gêner le fonctionnement normal du navire ou provoquer des blessures corporelles.

MISE EN GARDE : NE PAS utiliser ou placer l'émetteur-récepteur dans des zones où la température est inférieure à -20°C (-4°F) ou supérieure à $+60^{\circ}\text{C}$ ($+140^{\circ}\text{F}$) ou dans des zones soumises au rayonnement solaire direct, telles le tableau de bord.

MISE EN GARDE : NE PAS utiliser de dissolvants agressifs tels que du Benzène ou de l'alcool lors du nettoyage, car ils endommageraient les surfaces de l'émetteur-récepteur. Si l'émetteur-récepteur est poussiéreux ou sale, nettoyez-le avec un tissu doux et sec.

MISE EN GARDE : La face arrière de la VHF chauffe en cas d'utilisation continue sur une longue durée.

MISE EN GARDE : L'émetteur-récepteur est étanche conformément à la norme IPX7*. L'étanchéité ne peut plus être garantie après une chute de l'appareil en raison des risques de fissures du boîtier, de dégradation du joint d'étanchéité, etc.

*Les connecteurs sur le panneau arrière ne sont pas étanches IPX7.

REMARQUE: INSTALLER la VHF et le microphone à au moins 1 m du compas de route du navire.

NE placez **JAMAIS** l'appareil dans un endroit non sécurisé pour éviter toute utilisation par des personnes non autorisées.

Si la face avant est exposée à de l'eau de mer, **ASSUREZ-VOUS DE LE NETTOYER ENTIEREMENT AVEC DE L'EAU DOUCE** lorsque la protection étanche sur le panneau avant fonctionne. Dans le cas contraire, les touches et le commutateur risquent de ne plus fonctionner en raison de la cristallisation du sel.

■ Installation Note

Installation:

The installation of this equipment should be made in such a manner as to respect the EC recommended electromagnetic field exposure limits. (1999/519/EC)

The maximum RF power available from this device is 25 watts. The antenna should be installed as high as possible for maximum efficiency and the installation height should be at least 1.76 meters above any accessible position. In the case where an antenna cannot be installed at a reasonable height, then the transmitter should neither be continuously operated for long periods if any person is within a distance of 1.76 meters of the antenna, nor operated at all if any person is touching the antenna.

It is recommended that antenna of a maximum gain of 3 dB is used. If higher gain antenna is required then please contact your Icom distributor for revised installation recommendations.

Operation:

The exposure to RF electromagnetic field is only applicable when this device is transmitting. This exposure is naturally reduced due to the nature of alternating periods of receiving and transmitting. Keep your transmissions to the minimum necessary.

■ Disposal



The crossed-out wheeled-bin symbol on your product, literature, or packaging reminds you that in the European Union, all electrical and electronic products, batteries, and accumulators

(rechargeable batteries) must be taken to designated collection locations at the end of their working life. Do not dispose of these products as unsorted municipal waste. Dispose of them according to the laws in your area.

■ About CE and DOC



Hereby, Icom Inc. declares that the versions of the IC-M410BB which have the "CE" symbol on the product,

comply with the essential requirements of the Radio Equipment Directive, 2014/53/EU, and the restriction of the use of certain hazardous substances in electrical and electronic equipment Directive, 2011/65/EU. The full text of the EU declaration of conformity is available at the following internet address:

<https://www.icomjapan.com/support/>

For the European versions:

The following caution is printed on the labels of the transceiver.



CAUTION

AVOID TOUCHING REAR PANEL DURING PROLONGED USE.

This is because the transceiver's rear panel will become hot when continuously transmitting for long periods of time.

■ Recommendation



CLEAN THE TRANSCEIVER AND MICROPHONE THOROUGHLY WITH FRESH WATER after exposure to saltwater, and dry it before operating. Otherwise, the transceiver's keys and switches may become unusable, due to salt crystallization.

NOTE: If the transceiver's waterproof protection appears defective, carefully clean it with a soft, damp (fresh water) cloth, then, dry it before operating.
The transceiver may lose its waterproof protection if the case or microphone is cracked or broken, the microphone connector is not screwed in completely, or the transceiver has been dropped.
Contact your Icom distributor or your dealer for advice.



■ Key Icon Description

The keys are described in this manual as follows:

The keys that have words or letters on them are described with the characters "[]."
Example: [MENU], [CLEAR]

The software keys are described with the icon such as  or . The function of the keys are shown at the bottom of the display. Push the key below the desired function.

You can use the following keys on the Menu screen.

FUNCTION	ACTION
Select	Push [▼] or [▲], or rotate [DIAL].
Enter	Push [ENT] or [DIAL].
Go to the next tree level	Push [ENT], [▶], or [DIAL].
Go back to the previous tree level	Push [CLEAR], or [◀].
Cancel	Push [CLEAR] or  .
Exit	Push [MENU] or  .

Information:
In this instruction manual, the transceiver model names are described as shown below.
U.S.A.: USA
Europe: EUR
Germany: FRG
Netherlands: NLD
U.K.: UK

■ Operating Rules

◇ Priorities

- Read all rules and regulations pertaining to priorities and keep an up-to-date copy handy. Safety and distress calls take priority over all others.
- You must monitor Channel 16 when you are not operating on another channel.
- False or fraudulent distress calls are prohibited under law.

◇ Privacy

- Information overheard but not intended for you cannot lawfully be used in any way.
- Indecent or profane language is prohibited.

◇ Radio licenses

(1) SHIP STATION LICENSE

You must have a current radio station license before using the transceiver. It is unlawful to operate a ship station which is not licensed.

Inquire through your dealer or the appropriate government agency for a Ship-Radiotelephone license application. This government-issued license states the call sign which is your craft's identification for radio purposes.

(2) OPERATOR'S LICENSE

 
A Restricted Radiotelephone Operator Permit is the license most often held by small vessel radio operators when a radio is not required for safety purposes.

The Restricted Radiotelephone Operator Permit must be posted or kept with the operator. Only a licensed radio operator may operate a transceiver.

However, non-licensed individuals may talk over a transceiver if a licensed operator starts, supervises, ends the call and makes the necessary log entries.

A current copy of the applicable government rules and regulations is only required to be on hand for vessels in which a radio telephone is compulsory. However, even if you are not required to have these on hand it is your responsibility to be thoroughly acquainted with all pertinent rules and regulations.

NOTE For the UK version: Even though the IC-M410BB is capable of operation on VHF marine channels 1021, 1023, 1081, 1082 and 1083, according to FCC regulations these simplex channels cannot be lawfully used by the general population in USA waters.



ICOM

INSTRUCTIONS ①


REMOTE-CONTROL MICROPHONE

HM-195 series


1 Supplied accessories

Accessories included with the HM-195:	Qty.
① Connection cable (OPC-1540*: 6 m; 20 ft)	1
② Mounting base	1
③ Connector cap	1
④ Microphone hanger	1
⑤ Screws (M3 × 16 mm; self-tapping)	5

*The OPC-1540 has external speaker leads, as illustrated to the right. (Yellow: Speaker (+), Black: Speaker (-))

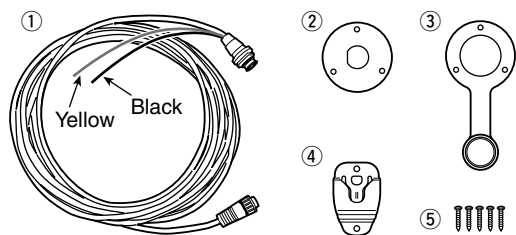

2 Function display

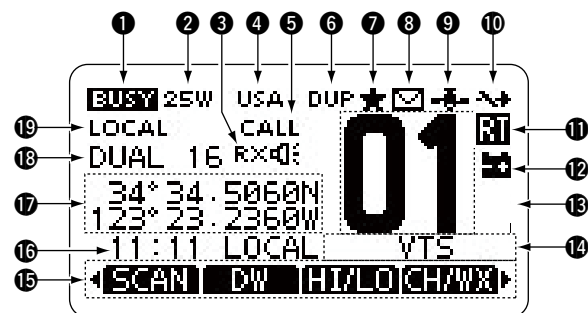

- BUSY/TRANSMIT ICON** (See 6)
 - “BUSY” appears when receiving a signal or when the squelch is open.
 - “TX” appears while transmitting.
- POWER ICON** (See 6)
 - “25W” appears when high power is selected.
 - “1W” appears when low power is selected.
- RX SPEAKER ICON** (See 23)
 - Appears while in the RX Speaker mode.
- CHANNEL GROUP ICON** (See 5)
 - Selected channel group icons, USA “USA,” International “INT,” Canadian “CAN,” ATIS “ATIS” or DSC “DSC” appears, depending on the transceiver version.
 - “WX” appears when the weather channel is selected.*


*For only USA and Australian version.
- CALL CHANNEL ICON** (See 5)
 - Appears when the Call channel is selected.
- DUPLEX ICON** (See 5)
 - Appears when a duplex channel is selected.
- FAVORITE CHANNEL ICON** (See 13)
 - Appears when a Favorite (TAG) channel is selected.
- MAIL ICON** (See 24)
 - Blinks when there is an unread message.
- GPS ICON**
 - Stays ON when the GPS receiver is activated and valid position data is received.
 - Blinks when invalid position data is being received.
- SWITCH ICON** (See 26)
 - Appears when the “CH AUTO SWITCH” or “CH 16 SWITCH” in DSC Settings is set to ‘OFF.’
- RT (Radio Telephone) ICON** (See 24) (For only USA version)
 - Appears while receiving or transmitting a signal, and when the channel is changed.

Thank you for choosing this Icom product. READ ALL INSTRUCTIONS carefully and completely before using this product. These instructions describe only the remote-control operations. In this INSTRUCTIONS, the IC-M423/IC-M424 series is used for an example. Some functions may not be usable, and some screen, function name, and softkey name may be different, depending on the transceiver. See the transceiver’s manual for detail operation.

- LOW BATTERY ICON**
 - Blinks when the battery voltage drops to approximately 10 V DC or less.
- CHANNEL NUMBER READOUT**
 - Shows the selected operating channel number.
- CHANNEL NAME FIELD**
 - The channel name appears, if entered. (See 8)
- KEY ICONS** (See 4)
 - Shows the assigned function of the softkeys on the front panel.
- TIME ZONE INDICATOR**
 - Shows the current time when a GPS receiver is connected, or the time is manually entered.
 - When the GPS current time is invalid, “??” will blink every 2 seconds instead of the current time. After 23.5 hours has passed, “NO TIME” will appear.
 - “??” will blink every 2 seconds instead of the current time, after 3 hours and 59 minutes have passed from when the time was manually entered. The manually entered time is held for only 23.5 hours, and after that, “NO TIME” will appear.
 - “LOCAL” appears when the offset time is set.
 - “MNL” appears when the time is manually entered.
 - “UTC” appears when the GGA, GLL or GNS GPS sentence format is included in the GPS signal.
 - The date information appears when the RMC GPS sentence format is included in the GPS signal.
 - “NO TIME” appears when no GPS receiver is connected, and no time is manually entered.
- POSITION INDICATOR**
 - Shows the current position when a GPS receiver is connected, or the position is manually entered.
 - When the GPS position is invalid, “??” may blink every 2 seconds instead of position. The last position is held for only 23.5 hours, and after that, “NO POSITION” will appear.
 - “??” will blink every 2 seconds instead of position, after 3 hours and 59 minutes have passed from the time when the position is manually entered. The manually entered position is held for only 23.5 hours, and after that, “NO POSITION” will appear.
 - “NO POSITION” appears when no GPS receiver is connected, and no position is manually entered.
- SCAN INDICATOR**
 - “SCAN 16” appears during a Priority scan; “SCAN” appears during a Normal scan. (See 14)
 - “DUAL 16” appears during Dualwatch; “TRI 16” appears during Tri-watch. (See 15)
- LOCAL ICON** (See 6) (For only USA and Australian version.)
 - Appears when the Attenuator function is turned ON.

3 Panel description

The HM-195 remotely controls the transceiver and provides an Intercom function.

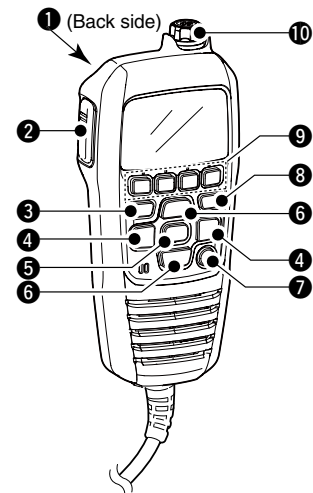


- DISTRESS KEY [DISTRESS]** (See 19)
 - Hold down for 3 seconds to transmit a Distress call.
- PTT SWITCH [PTT]**
 - Hold down to transmit, release to receive. (See 6)
- MENU KEY [MENU]** (See 31)
 - Push to enter or exit the Menu screen.
- LEFT AND RIGHT KEYS [◀]/[▶]**
 - Push to switch to the previous or next key function that is assigned to the softkeys. (See 4)
 - Push to select the character or number in the table while in the channel name, position entry mode, and so on. (See 8, 16, 17)

4 Softkey function

Various functions can be assigned to the softkeys. When a key function is assigned, the key icon is displayed above the softkey, as shown below. Consult your Icom dealer for details concerning which functions are preassigned to the keys.

◇ Softkey function selection

When “◀” or “▶” is displayed beside the key icon, pushing [◀] or [▶] sequentially shows the previous or next key function that is assigned to the softkey.

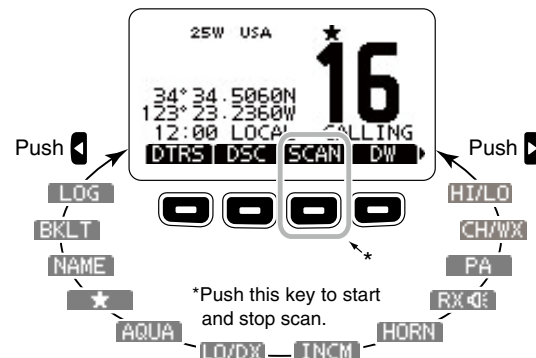

The order of the key icons may differ depending on the pre-setting, and the contents may differ, depending on the transceiver version.

- ENTER KEY [ENT]** (See 8, 10, 16)
 - Push to set the entered data, selected item, and so on.
- UP AND DOWN/CHANNEL SELECT KEYS [▲•CH]/[▼•CH]**
 - Push to select the operating channels, Menu items, Menu settings, and so on. (See 5, 31)
 - Push to check Favorite channels, change the scanning direction or manually resume a scan. (See 14)
- CHANNEL 16/CALL CHANNEL KEY [16/C]**
 - Push to select Channel 16. (See 5)
 - Hold down for 1 second to select the Call channel. (See 5)
 - “CALL” appears when the Call channel is selected.
 - When the Call channel is selected, hold down for 3 seconds to enter Call channel entry mode. (See 7)
- CLEAR KEY [CLEAR]** (See 8, 16, 31)
 - Push to cancel the entered data, or to exit the Menu screen.
- SOFTKEYS**
 - Functions can be assigned in the Menu screen. See the transceiver’s manual for details.
- VOLUME AND SQUELCH SWITCH/POWER SWITCH [VOL/SQL•PWR]**
 - When the power is OFF, hold down for 1 second to turn ON power. (See 6)
 - Hold down for 1 second to turn OFF power.
 - When the power is ON, push to enter the volume level adjustment mode.* (See 10)
 - Each push of this switch toggles the mode between the volume level adjustment, squelch threshold level adjustment, operating channel selection and the LCD and key backlight brightness adjustment, if assigned.
 - Rotate to adjust the volume level.* (See 10)

*The function can be assigned in the Menu screen.

5 Selecting a Channel

◇ Channel 16

- Push [16/C] to select Channel 16.
- Push [CH/WX]* to return to the screen displayed before you selected Channel 16, or push [▲](CH) or [▼](CH) to select an operating channel.



◇ Call channel

- Hold down [16/C] for 1 second to select the Call channel of the selected channel group.
- Push [CH/WX]* to return to the screen displayed before you selected Call channel, or push [▲](CH) or [▼](CH) to select an operating channel.



*[CHAN] appears except for a USA and Australian version.


◇ Weather channels

- (For only USA and Australian version.)
- Push [CH/WX] once or twice to select a weather channel.
 - “WX” appears when a weather channel is selected.
 - “WX” appears when the Weather Alert function is in turned ON.
 - Push [▲](CH) or [▼](CH) to select a channel.

5 Selecting a Channel (Continued)

◇ Selecting the Channel group

- ① Push [MENU].
- ② Rotate Dial or push [▲]/[▼] to select “Radio Settings,” and then push [ENT].
- ③ Rotate Dial or push [▲]/[▼] to select “CHAN Group,” and then push [ENT].
- ④ Rotate Dial or push [▲]/[▼] to select the channel group, and then push [ENT].
 - The selectable channel groups may differ, depending on the transceiver version.
- ⑤ Push [EXIT] to exit.
- ⑥ Push [▲](CH) or [▼](CH) to select a channel.
 - “DUP” appears when a duplex channel is selected.

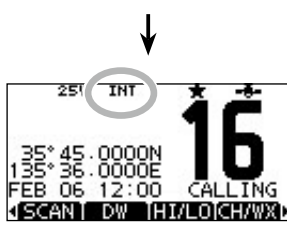

When the International channel group is selected.

6 Receiving and transmitting

- ① Hold down [PWR] to turn ON the power.
- ② Set the audio and squelch levels. (See **10**, **11**)
 - ➡ First, open the squelch. Then, adjust the audio output level. After that, adjust the squelch level until the noise just disappears.
- ③ Change the channel group. (See **5**)
- ④ Push [▲](CH) or [▼](CH) to select a channel. (See **5**)
 - When receiving a signal, “**BUSY**” appears and audio is heard.
 - Further adjustment of the volume level may be necessary.
- ⑤ Push [LO/DX] to turn the receive Attenuator function ON or OFF, if necessary.
 - For only USA and Australian version.
 - “LOCAL” appears when the receive Attenuator function is ON.
- ⑥ Push [HI/LO] to select the output power, if necessary.
 - “25W” appears when high power is selected, and “1W” appears when low power is selected.
 - Choose low power for short range communications, choose high power for longer distance communications.
 - Some channels are for only low power.
- ⑦ Hold down [PTT] to transmit, then speak at your normal voice level.
 - “**TX**” appears.
 - Channel 70 cannot be used for transmission other than DSC.
- ⑧ Release [PTT] to receive.

✓ Information

The Noise Cancel function reduces random noise components in the transmit and/or receive signal. See the transceiver’s manual for details.

Simplex channels, 1021, 1023, 1081, 1082 and 1083 CANNOT be lawfully used by the general public in USA waters.


IMPORTANT: To maximize the readability of your transmitted signal, pause a few seconds after pushing [PTT], hold the microphone 5 to 10 cm (2 to 4 inches) from your mouth and speak at your normal voice level.

✓ NOTE for the TOT (Time-out Timer) function

The TOT function inhibits continuous transmission beyond a preset time period after the transmission starts. 10 seconds before transmission is cutoff, a beep sounds to indicate the transmission will be shut down and “TOT” appears in the channel name field. Transmission is not possible for 10 seconds after this shut down.

7 Entering a Call channel

- ① Select the channel group. (See **5**)
- ② Hold down [16/C] for 1 second to select the Call channel of the selected channel group.
 - “CALL” and the Call channel number appear.
- ③ Hold down [16/C] again for 3 seconds (until a long beep changes to 2 short beeps) to enter the Call channel entry mode.
- ④ Rotate Dial or push [▲](CH) or [▼](CH) to select a channel.

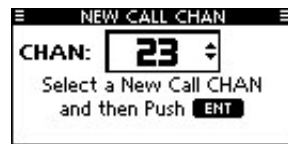

- ⑤ Push [ENT] to save the displayed channel as the Call channel.
 - Push [CLEAR] to cancel.

8 Entering a Channel name

Enter a name of up to 10 characters. Capital letters, 0 to 9, some symbols (! " # \$ % & ' () * + , - . / [\] ^ _ : ; < = > ?) and a space can be entered.

- ① Push [▲](CH) or [▼](CH) to select a channel.
 - First, cancel the Dualwatch, Tri-watch or Scan function, if activated.
- ② Push [NAME] to open the channel name entry screen.
 - A black box is displayed on the first character.



- ③ Enter the channel name in the following manner:
 - Select a character using Dial, or [▲]/[▼]/[◀]/[▶].
 - Push [ENT] to set it.
 - To move the cursor, select either arrow, “←” or “→,” then push [ENT].
 - Select “SPACE,” then push [ENT] to enter a space.
 - Select “DELETE,” then push [ENT] to delete a character.
 - Push [CLEAR] to cancel and return to the previous screen.
- ④ Repeat step ③ to enter all characters.



- ⑤ Push [◀], [▶], [▲] or [▼] to select “FINISH,” then push [ENT] to set the name and return to the previous screen.


9 Using the AquaQuake water draining function

The AquaQuake water draining function clears water away from the speaker grill. Without this function, water may muffle the sound coming from the speaker. A buzzing sound is heard when this function is activated.

- ➡ While holding down [AQUA], the AquaQuake function is activated to clear water away from the speaker grill.
 - While holding down [AQUA], a low buzzing sounds to drain water, regardless of the volume level setting.
 - The HM-195’s keys are disabled while the AquaQuake function is activated.

10 Adjusting the volume level

- ① Rotate [VOL/SQ](Dial), or push [VOL/SQ](Dial) one or more times to display the volume adjustment screen.
- ② Rotate [VOL/SQ](Dial) to adjust the volume level.
 - The HM-195 has 20 volume levels and OFF.
 - If no key operation is performed for about 5 seconds, the HM-195 sets the selected volume level, and returns to the normal mode.

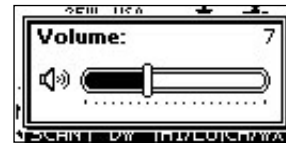


- ③ Push [ENT] to set the level, and exit the volume adjustment mode.
 - Push [CLEAR] to cancel.

The function can be assigned to [VOL/SQ](Dial). See the transceiver’s manual for details.

11 Adjusting the squelch level

- ① Push [VOL/SQ](Dial) one or more times to display the squelch adjustment screen.
- ② Rotate [VOL/SQ](Dial) to adjust the squelch level.
 - The squelch is adjustable in 11 levels. OPEN is completely open; 10 is tight squelch; 1 is loose squelch.
 - If no key operation is performed for about 5 seconds, the selected squelch level is set, and returns to the normal mode.

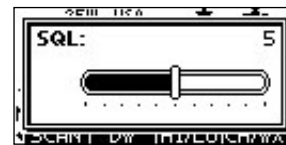

- ③ Push [ENT] to set the level, and exit the squelch adjustment mode.
 - Push [CLEAR] to cancel.

The function can be assigned to [VOL/SQ](Dial). See the transceiver’s manual for details.

12 Adjusting the Backlight level

The function display and keys can be backlit for better visibility under low light conditions. The backlight is adjustable in 7 levels and OFF.

- ➡ Push [BKLT] to show the backlight adjustment screen. Rotate Dial to adjust the brightness of the LCD and key backlight, and then push [ENT].
 - If no key operation is performed for about 5 seconds, the HM-195 sets the selected backlight level, and returns to the normal mode.



13 Setting Favorite channels

- ① Select the channel group. (See **5**)
- ② Select the channel to be set as a Favorite channel.
- ③ Push [★] to set the displayed channel as a Favorite channel.
 - “★” appears on the display.
- ④ To cancel the Favorite channel setting, repeat step ③.
 - “★” disappears.

✓ Clearing (or setting) all tagged channels

Hold down [★] for 3 seconds (until a long beep changes to 2 short beeps) to clear all Favorite channel settings in the selected channel group.

- Repeat above procedure to set all channels as Favorite channels.

14 Starting a scan

- ① Select Priority scan or Normal scan in the Menu screen.
 - See the transceiver’s manual for details.
- ② Select the channel group. (See **5**)
- ③ Set the Favorite channels. (See **13**)
- ④ Make sure the squelch is closed to start a scan.
- ⑤ Push [SCAN] to start a Priority or Normal scan.
 - “SCAN 16” appears during a Priority scan; “SCAN” appears during a Normal scan.
 - When a signal is detected, the scan pauses until the signal disappears, or resumes after pausing 5 seconds, depending on the Set mode setting. (Channel 16 is still monitored during a Priority scan.)
 - Push [▲]/[▼] to check the scanning Favorite channels, change the scanning direction or manually resume the scan.
 - A beep tone sounds and “16” blinks when a signal is received on Channel 16 during a Priority scan.



- ⑥ To stop the scan, push [CLEAR], or repeat step ⑤.

15 Dualwatch/Tri-watch operation

- ① Select Dualwatch or Tri-watch in the Menu screen.
 - See the transceiver’s manual for details.
- ② Push [▲](CH) or [▼](CH) to select the operating channel.
- ③ Push [DW] to start a Dualwatch or Tri-watch scan.
 - “DUAL 16” appears during Dualwatch; “TRI 16” appears during Tri-watch.
 - A beep tone sounds when a signal is received on Channel 16.



- ④ To cancel Dualwatch or Tri-watch, push [DW] again.

See “Instructions ②” (16 to 22) or “Instructions ③” (23 to 31) for other functions.

CLEAN THE HM-195 THOROUGHLY WITH FRESH WATER after exposure to saltwater, otherwise, the keys and switch may become inoperable due to salt crystallization.

Icom Inc.

1-1-32 Kamiminami, Hirano-ku, Osaka 547-0003, Japan

Apr. 2021

Count on us!

A7022D-1EX-4 Printed in Japan

© 2012–2021 Icom Inc.

ICOM

INSTRUCTIONS ②

REMOTE-CONTROL MICROPHONE

HM-195 series

16 Entering Individual/Group ID

- Enter "INDIVIDUAL ID" or "GROUP ID" in the DSC SETTINGS menu.
- Push [ADD].
 - The "INDIVIDUAL ID" or "GROUP ID" entry screen is displayed.

INDIVIDUAL ID											
IND ID: []-----											
0	1	2	3	4	5	6	7	8	9		
										FINISH	
EXIT BACK											

GROUP ID											
GRP ID: [0]-----											
0	1	2	3	4	5	6	7	8	9		
										FINISH	
EXIT BACK											

- Enter an ID in the following way:
 - Select a number using Dial, or [▲]/[▼]/[◀]/[▶].
 - Push [ENT] or Dial to set it.
 - To move the cursor, select either arrow, "←" or "→," then push [ENT] or Dial.

▨ The first digit is specified as '0' for a Group ID.

▨ The first two digits are '0' for any Coast station ID.
- Repeat step ③ to enter all 9 digits.
- After entering, push [ENT] or Dial to set it.
 - The ID name entry screen is displayed.

INDIVIDUAL ID											
NAME: []											
A	B	C	D	E	F	G	H	I	J	K	L
N	O	P	Q	R	S	T	U	V	W	X	Y
										FINISH	
EXIT BACK											

GROUP ID											
NAME: []											
A	B	C	D	E	F	G	H	I	J	K	L
N	O	P	Q	R	S	T	U	V	W	X	Y
										FINISH	
EXIT BACK											

- Enter a 10 digit ID name in the following way:
 - Select a character using Dial, or [▲]/[▼]/[◀]/[▶].
 - Push [ENT] or Dial to set it.
 - To move the cursor, select either arrow, "←" or "→," then push [ENT] or Dial.
 - Push [123] then [!\$?] then [ABC] to select a character group.
- After entering the ID name, select "FINISH" using Dial, or [▲]/[▼]/[◀]/[▶], then push [ENT] or Dial to set it.
 - The "INDIVIDUAL ID" or "GROUP ID" list screen is displayed.

INDIVIDUAL ID											
ICOM 1											
ADD EDIT DEL											

GROUP ID											
GROUP 1											
ADD EDIT DEL											

- Push [MENU] to exit the MENU screen.

In this INSTRUCTIONS, the IC-M423/IC-M424 series is used for an example.

- Some functions and DSC calls may not be usable depending on the transceiver model or version.
- Some screen, function name, and softkey name may be different, depending on the transceiver.

See the transceiver's manual for detail operation.

17 Deleting Individual/Group ID

- Enter "INDIVIDUAL ID" or "GROUP ID" in the DSC SETTINGS menu.
 - When no address ID is entered, "No ID" is displayed. In this case, push [MENU] to exit the MENU screen.
- Rotate Dial or push [▲]/[▼] to select an ID name, then push [DEL].

INDIVIDUAL ID											
ICOM 1											
ICOM 2											
ADD EDIT DEL											

GROUP ID											
GROUP 1											
GROUP 2											
ADD EDIT DEL											

- Push [OK] to delete the ID, and return to the "INDIVIDUAL ID" or "GROUP ID" list screen.
 - Push [CANCEL] to cancel it.

INDIVIDUAL ID											
ARE YOU SURE?											
OK CANCEL											

GROUP ID											
ARE YOU SURE?											
OK CANCEL											

- Push [MENU] to exit the MENU screen.

18 Entering position and time

- Enter "POSITION INPUT" in the DSC SETTINGS menu.
- Edit your latitude and longitude position using Dial, or [▲]/[▼]/[◀]/[▶].
 - Select a number using Dial, or [▲]/[▼]/[◀]/[▶].
 - Push [ENT] or Dial to set it.
 - To move the cursor, select either arrow, "←" or "→," then push [ENT] or Dial.
 - Select N (North latitude) or S (South latitude) when the cursor is on the 'N' or 'S' position.
 - Select W (West longitude) or E (East longitude) when the cursor is on the 'W' or 'E' position.

POSITION INPUT											
LAT: []°--'---N											
0	1	2	3	4	5	6	7	8	9		
										FINISH	
EXIT BACK											

POSITION INPUT											
LON: []°--'---W											
0	1	2	3	4	5	6	7	8	9		
										FINISH	
EXIT BACK											

- After entering the position, push [ENT] to save it.
- The UTC time entry screen is displayed, enter the UTC time in the following way:
 - Select a number using Dial, or [▲]/[▼]/[◀]/[▶].
 - Push [ENT] or Dial to set it.
 - To move the cursor, select either arrow, "←" or "→," then push [ENT] or Dial.

POSITION INPUT											
UTC: []:--											
0	1	2	3	4	5	6	7	8	9		
										FINISH	
EXIT BACK											

- Push [ENT] or Dial to save your position and time.
 - Return to the "DSC SETTING" screen.

19 Making a Distress Call

▨ The Distress call is automatically transmitted every 3.5 to 4.5 minutes, until an acknowledgement is received ('Call repeat' mode), or a DSC Cancel call is made (See 21).

◇ Simple Call

- Confirm no Distress call is being received.
- While lifting up the key cover, hold down [DISTRESS] for 3 seconds to transmit the Distress call.
 - While holding down [DISTRESS], count down beeps sound and both the key and display backlighting blink.
 - DSC channel (Channel 70) is automatically selected and the Distress call is transmitted.

!! DISTRESS !!											
Hold Down for 3 sec.											

!! DISTRESS !!											
TRANSMITTING DISTRESS ALERT											

- After transmitting the call, the transceiver waits for an acknowledgment call.
 - Push [RESEND] to manually transmit the Distress repeat call.
 - Push [◀]/[▶] then push [INFO] to display the transmitted Distress call information.
 - Push [◀]/[▶] then push [PAUSE] to pause the 'Call repeat' mode; push [RESUME] to resume it.

!! DISTRESS !!											
Waiting for ACK											
Next TX after 3 min. 42 sec.											
CANCEL RESEND											

- After receiving the acknowledgment, push [ALARM OFF] then reply using the microphone.

▨ A distress alert default contains:

- Nature of distress: Undesignated distress
- Position information: The latest GPS or manually entered position is held for 23.5 hours, or until the power is turned OFF.

◇ Regular Call

- Enter "DISTRESS CALL" in the DSC CALLS menu.
- Select the nature of the distress using Dial or [▲]/[▼], then push Dial or [ENT].
 - 'Undesignated,' 'Fire,' 'Explosion,' 'Flooding,' 'Collision,' 'Grounding,' 'Capsizing,' 'Sinking,' 'Adrift,' 'Abandoning ship,' 'Piracy' or 'Man Overboard' is selectable.
 - The nature of the distress is stored for 10 minutes after a selection is made.

DISTRESS CALL											
Undesignated											
Fire, Explosion											
Flooding											
Collision											
EXIT BACK ENT											

- The Distress call confirmation screen is displayed.
 - Rotate Dial or push [▲]/[▼] to see the hidden lines.

DISTRESS CALL											
Push DISTRESS for 3 sec											
MMSI: 123456789											
Undesignated											
35° 00.0000N											
EXIT BACK											

- Hold down [DISTRESS] for 3 seconds to transmit the Distress call.
 - While holding down [DISTRESS], count down beeps sound and both the key and display backlighting blink.
 - The selected nature of the distress is stored for 10 minutes.
- After transmitting the call, the transceiver waits for an acknowledgment call.
 - Push [RESEND] to manually transmit the Distress repeat call.
 - Push [◀]/[▶] then push [INFO] to display the transmitted Distress call information.
 - Push [◀]/[▶] then push [PAUSE] to pause the 'Call repeat' mode, push [RESUME] to resume it.

- After receiving an acknowledgment call, push [ALARM OFF], then reply using the microphone.

▨ A distress alert contains:

- Nature of distress: Selected in step ②.
- Position information: The latest GPS or manually entered position is held for 23.5 hours, or until the power is turned OFF.

When no GPS receiver is connected, and both position and time have been manually entered, the screen shown below appears. Edit your latitude and longitude position and UTC time as follows:

DISTRESS CALL											
Latitude: 35° 00.0000N											
Longitude: 123° 45.0000E											
EXIT BACK											

- ▨ Push [CHG], then edit your latitude and longitude position and UTC time.
- Select a number using Dial, or [▲]/[▼]/[◀]/[▶].
 - Push [ENT] or Dial to set it.
 - To move the cursor, select either arrow, "←" or "→," then push [ENT] or Dial.
 - Select N (North latitude) or S (South latitude) when the cursor is on the 'N' or 'S' position.
 - Select W (West longitude) or E (East longitude) when the cursor is on the 'W' or 'E' position.

20 Canceling a Distress call

- While waiting for an acknowledgment call, push [CANCEL].

DISTRESS CALL											
Waiting for ACK											
Next TX after 3 min. 42 sec.											
CANCEL RESEND											

- Push [CONTINUE].
 - Push [BACK] to return to waiting for an acknowledgement call.
- Push [FINISH].
 - Push [EXIT] to return to waiting for an acknowledgement call.
- The Distress cancel call is transmitted.

DISTRESS CALL											
Transmitted											
EXIT BACK											

- Channel 16 is automatically selected.
 - Report your situation using the microphone.
 - After the report, push [EXIT] to return to the normal operating mode.

21 Making a Distress Relay ACK

(For only USA version)

- When a Distress Relay Call is received, beeps sound. Push [ALARM OFF] to stop the beeps.
- Push [ACPT].
 - Push [IGN] to ignore the call and return to the normal operating mode.
 - Push [INFO] to display the Distress Relay Call information.
 - Push [PAUSE] to pause the countdown. The Distress cancel call is transmitted.
- Push [ACK].
 - Push [EXIT] to return to the normal operating mode*. *The exit confirmation dialog is displayed.
- The Distress Relay Acknowledgement confirmation screen is displayed. Push [CALL] to transmit the acknowledgement call.
- After transmitting the acknowledgement call, Channel 16 is automatically selected.
 - Push [EXIT] to return to the normal operating mode*. *The exit confirmation dialog is displayed.
 - Push [RESEND] to resend the acknowledgement.

22 Making DSC calls

/// To ensure correct operation of the DSC function, make sure you set the squelch correctly.

◇ Making an Individual Call


- ① Enter “INDIVIDUAL CALL” in the DSC CALLS menu.
- ② Select or enter the individual address.
- ③ Select Routine, Safety or Urgency as the call type.

/// **NOTE:** When a coast station is selected in step ②, the voice channel is automatically specified by the coast station. Therefore, skip step ④ and go directly to step ⑤.

- ④ Select a intership channel.
- ⑤ A confirmation screen appears.
- ⑥ Push [CALL] to transmit the Individual call.
- ⑦ Standby on Channel 70 until an acknowledgement is received.
 - To return to the normal operating mode, push [EXIT].*
 - *Only USA version, the exit confirmation dialog is displayed, and then push [RESEND] to resend the call.
- ⑧ When the acknowledgement ‘Able to comply’ is received, beeps sound and the screen below is displayed.



- Push [ALARM OFF] to stop the beeps, and then select the intership channel specified in step ④.
- A different intership channel will be automatically selected if the station you called cannot use the channel.
 - Reply using the microphone. And go to step ⑨.

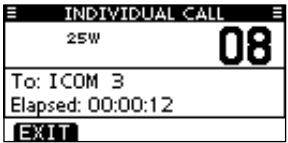

- Or, when the acknowledgement ‘Unable to comply’ is received, beeps sound.
- Push [ALARM OFF] to stop the beeps. Then push [EXIT] to return to the operating channel (before you entered the MENU screen).

- ⑨ After communicating, push [EXIT] to return to the normal operating mode.

◇ Making an Individual Acknowledgement

Quick ACK:

- ① When an Individual call is received, beeps sound. Push [ALARM OFF] to stop the beeps.
- ② Push [ACK].
- ③ Select one of three options, Able to Comply, Unable to Comply or Propose New Channel, and then push [ENT].



- ④ The Individual ACK confirmation screen is displayed.
- ⑤ Push [CALL] to transmit the acknowledgement call.
- ⑥ Reply to the call using the microphone.
- ⑦ Push [EXIT] to return to the normal operating mode.*
 - *Only USA version, the exit confirmation dialog is displayed, and then push [RESEND] to resend the acknowledgement.

Manual ACK:

- ① Enter “INDIVIDUAL ACK” in the DSC CALLS menu.
 - When no Individual call has been received, the “Individual ACK” item will not be displayed.
- ② Select an individual address or ID code to reply to, using Dial or [▲]/[▼], then push [ENT].
- ③ Perform steps ③ to ⑦, as described in “Quick ACK.” above.

◇ Making a Group Call

 
- ① Enter “GROUP CALL” in the DSC CALLS menu.
- ② Select or enter the group address.
- ③ Select an intership channel.
- ④ A confirmation screen appears.
- ⑤ Push [CALL] to transmit the Group call.
- ⑥ Announce the information using the microphone.
- ⑦ After the announcement, push [EXIT] to return to the normal operating mode.*
 - *Only USA version, the exit confirmation dialog is displayed, and then push [RESEND] to resend the call.

◇ Making an All Ships Call

- ① Enter “ALL SHIPS CALL” in the DSC CALLS menu.
- ② Select a category.
 - The selectable category may differ according to the connected transceiver setting.
- ③ Select a traffic channel.
- ④ A confirmation screen appears.
- ⑤ Push [CALL] to transmit the All Ships call.
- ⑥ Announce the message using the microphone.
- ⑦ After the announcement, push [EXIT] to return to the normal operating mode.*
 - *Only USA version, the exit confirmation dialog is displayed, and then push [RESEND] to resend the call.

◇ Making a Position Request Call

- ① Enter “POSITION REQUEST” in the DSC CALLS menu.
- ② Select or enter an individual address.
- ③ A confirmation screen appears.
 - Confirm the call contents.
- ④ Push [CALL] to transmit the Position Request Call.
 - If Channel 70 is busy, the transceiver stands by until the channel becomes clear.
- ⑤ When the acknowledgement call is received, beeps sound.
- ⑥ Push [ALARM OFF] to stop the beeps, and then push [EXIT] to return to the normal operating mode.*
 - *Only USA version, the exit confirmation dialog is displayed, and then push [RESEND] to resend the call.



◇ Making a Position Report Call

- ① Enter “POSITION REPORT” in the DSC CALLS menu.
- ② Select or enter an individual address.
- ③ A confirmation screen appears.
 - Confirm the call contents.
- ④ Push [CALL] to transmit the Position Report Call.
 - If Channel 70 is busy, the transceiver stands by until the channel becomes clear.
- ⑤ After the Position Report Call has been transmitted, the transceiver automatically returns to the normal operating mode.

◇ Transmitting a Polling Request Call

- ① Enter “POLLING REQUEST” in the DSC CALLS menu.
- ② Select or enter an individual address.
- ③ A confirmation screen appears.
 - Confirm the call contents.
- ④ Push [CALL] to transmit the Polling Request Call.
 - If Channel 70 is busy, the transceiver stands by until the channel becomes clear.
- ⑤ When the acknowledgement call is received, beeps sound.
- ⑥ Push [ALARM OFF] to stop the beeps, and then push [EXIT] to return to the normal operating mode.*
 - *Only USA version, the exit confirmation dialog is displayed, and then push [RESEND] to resend the call.



22 Making DSC calls (Continued)

◇ Transmitting a Test Call

- ① Enter “TEST CALL” in the DSC CALLS menu.
- ② Select or enter an individual address.
- ③ A confirmation screen appears.
- ④ Push [CALL] to transmit the Test call.
- ⑤ When the acknowledgement call is received, beeps sound.
- ⑥ Push [ALARM OFF] to stop the beeps, and then push [EXIT] to return to the normal operating mode.



◇ Making a Test Acknowledgement Call

Quick ACK:

- ① When a Test call is received, beeps sound. Push [ALARM OFF] to stop the beeps.
- ② Push [ACK].
 - Push [INFO] to display the Test call information. Push [BACK] to return to the previous screen, or push [ACK].
- ③ The Test ACK confirmation screen is displayed. Push [CALL] to transmit the acknowledgement call.
- ④ After transmitting the acknowledgement call, the transceiver returns to the normal operating mode.

Manual ACK:

- ① Enter “TEST ACK” in the DSC CALLS menu.
 - If no Test call has been received, the “TEST ACK” item will not be displayed.
- ② Select a Test call to reply to, using Dial or [▲]/[▼], then push Dial or [ENT].
- ③ The Test ACK confirmation screen is displayed. Push [CALL] to transmit the acknowledgement call.
- ④ After transmitting the acknowledgement call, the transceiver returns to the normal operating mode.

◇ Making a Position Reply Call

Quick Reply:

- ① When a Position Request call is received, beeps sound. Push [ALARM OFF] to stop the beeps.



- ② Push [ACK].
 - Push [INFO] to display the Position Request call information. Push [BACK] to return to the previous screen, or push [ACK].
- ③ The Position Reply confirmation screen is displayed. Push [CALL] to transmit the reply call.
- ④ After transmitting the reply call, the transceiver returns to the normal operating mode.

Manual Reply:

- ① Enter “POSITION REPLY” in the DSC CALLS menu.
 - If no Position Request call has been received, the “POSITION REPLY” item will not be displayed.
- ② Select a Position Request call to reply to.
- ③ The Position Reply call confirmation screen is displayed. Push [CALL] to transmit the acknowledgement call.
- ④ After transmitting the reply call, the transceiver returns to the normal operating mode.

◇ Making a Position Report Reply Call

Quick Reply:

- ① When a Position Report Request call is received, beeps sound. Push [ALARM OFF] to stop the beeps.



- ② Push [ACK].
 - Push [INFO] to display the Position Report Request call information. Push [BACK] to return to the previous screen, or push [ACK].
- ③ The Position Report Reply confirmation screen is displayed. Push [CALL] to transmit the reply call.
- ④ After transmitting the reply call, the transceiver returns to the normal operating mode.


Manual Reply:

- ① Enter “POSITION REPORT REPLY” in the DSC CALLS menu.
 - If no Position Report Request call has been received, the “POSITION REPORT REPLY” item will not be displayed.
- ② Select a Position Report Request call to reply to, using Dial or [▲]/[▼], then push Dial or [ENT].
- ③ The Position Report Reply call confirmation screen is displayed. Push [CALL] to transmit the acknowledgement call.
- ④ After transmitting the reply call, the transceiver returns to the normal operating mode.

◇ Transmitting a Polling Reply Call

Quick Reply:

- ① When a Polling Request call is received, beeps sound. Push [ALARM OFF] to stop the beeps.

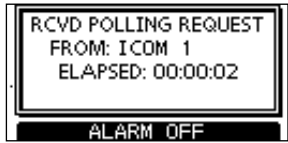

- ② Push [ACK].
 - Push [INFO] to display the Polling Request call information. Push [BACK] to return to the previous screen, or push [ACK].
- ③ The Polling Reply confirmation screen is displayed. Push [CALL] to transmit the reply call.
- ④ After transmitting the reply call, the transceiver returns to the normal operating mode.

Manual Reply:

- ① Enter “POLLING REPLY” in the DSC CALLS menu.
 - If no Polling Request call has been received, the “POLLING REPLY” item will not be displayed.
- ② Select a Polling Request call to be replied.
- ③ The Polling Reply call confirmation screen is displayed. Push [CALL] to transmit the acknowledgement call.
- ④ After transmitting the reply call, the transceiver returns to the normal operating mode.

See “Instructions ①” (1 to 15) or “Instructions ③” (23 to 31) for other functions.

Icom Inc.

1-1-32 Kamiminami, Hirano-ku, Osaka 547-0003, Japan

Apr. 2021

Count on us!

A7022D-2EX-3

Printed in Japan

© 2012–2021 Icom Inc.

ICOM

INSTRUCTIONS ③


REMOTE-CONTROL MICROPHONE

HM-195 series

23 Receiving DSC calls

◆ Receiving a Distress Call/Distress Acknowledgement

- ① Push [ALARM OFF] to stop the alarm and the blinking backlight.
- ② Push a softkey to select your action.

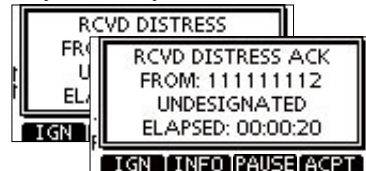

[IGN] Push to ignore the call and return to the normal operating mode.

[INFO] Push to display the Received Call information. (See 24)

[PAUSE] (For only USA version) Push to pause the countdown.

- Displayed if the “CH Auto Switch:” item in the DSC SETTINGS menu is set to “10 sec”(See 26).
- Push [RESUME] to resume the countdown.

[ACPT] Push to accept the call, then push [CH 16] to switch the operating channel to Channel 16. After that, monitor it, as a coast station may require assistance.

◆ Receiving a Distress Relay Call/ Distress Relay Acknowledgement

- ① Push [ALARM OFF] to stop the alarm and the blinking backlight.
- ② Push a softkey to select your action.

[IGN] Push to ignore the call and return to the normal operating mode.

[INFO] Push to display the Received Call information. (See 24)

[PAUSE] (For only USA version.) Push to pause the countdown.

- Displayed if the “CH Auto Switch:” item in the DSC SETTINGS menu is set to “10 sec”(See 26).
- Push [RESUME] to resume the countdown.

[ACPT] Push to accept the call, then push [CH 16] to switch the operating channel to Channel 16. After that, monitor it, as a coast station may require assistance.

◆ Receiving an Individual Call

- ① Push [ALARM OFF] to stop the alarm and the blinking backlight.
- If [ALARM OFF] is not pushed within 2 minutes, the next screen may appear, depending on the call Category.

[IGN] Push to ignore the call and return to the normal operating mode.

[INFO] Push to display the Received Call information. (See 24)

[PAUSE] (For only USA version.) Push to pause the countdown.

- Displayed if the “CH Auto Switch:” item in the DSC SETTINGS menu is set to “10 sec”(See 26).
- Push [RESUME] to resume the countdown.

[ACK] Push to display the “INDIVIDUAL ACK” screen to reply to the call, and select the channel specified by the calling station for voice communication, depending on your situation. See 22 for details of the Individual Acknowledgement procedure.

When “INDIVIDUAL ACK” is set to “Auto ACK (Unable),” the transceiver automatically replies to the call. In that case, both the TX and RX calls are stored in the Transmitted and Received Call Logs.

In this INSTRUCTIONS, the IC-M423/IC-M424 series is used for an example.


- Some functions and DSC calls may not be usable depending on the transceiver model or version.
- Some screen, function name, and softkey name may be different, depending on the transceiver.

See the transceiver’s manual for detail operation.

◆ Receiving a Group Call/Geographical Area Call/ All Ships Call

- ① Push [ALARM OFF] to stop the alarm and the blinking backlight.
- If [ALARM OFF] is not pushed within 2 minutes, the next screen may appear, depending on the call Category.

- ② Push a softkey to select your action.

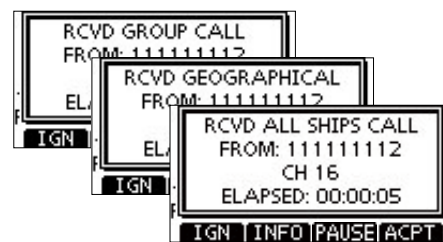

[IGN] Push to ignore the call and return to the normal operating mode.

[INFO] Push to display the Received Call information. (See 24)

[PAUSE] (For only USA version.) Push to pause the countdown.

- Displayed if the “CH Auto Switch:” item in the DSC SETTINGS menu is set to “10 sec”(See 26).
- Push [RESUME] to resume the countdown.

[ACPT] Push to monitor the channel specified by the calling station for its announcement.

Note for Geographical Area Call

When no GPS receiver is connected, or if there is a problem with the connected receiver, all Geographical Area Calls are received, regardless of your position.

◆ Receiving a Position Request Call

- ① Push [ALARM OFF] to stop the alarm and the blinking backlight.
- If [ALARM OFF] is not pushed within 2 minutes, the next screen may appear, depending on the call Category.

- ② Push a softkey to select your action.



[IGN] Push to ignore the call and return to the normal operating mode.

[INFO] Push to display the Received Call information. (See 24)

[UNABLE] (For only USA version.) Push to transmit the “Unable to Comply” acknowledgement.

[ABLE] (For only USA version.) Push to transmit the “Able to Comply” acknowledgement.

[ACK] Push to display the “POSITION REPLY” screen and send a reply to the call. (See 22)

When “POSITION ACK” is set to “Auto TX,” the transceiver automatically replies to the call. In that case, both the TX and RX calls are stored in the Transmitted and Received Call Logs.

23 Receiving DSC calls (Continued)

◆ Receiving a Position Report Call

- ① Push [ALARM OFF] to stop the alarm and the blinking backlight.
 - If [ALARM OFF] is not pushed within 2 minutes, the next screen may appear, depending on the call Category.
- ② Push a softkey to select your action.




[EXIT] Push to ignore the call and return to the normal operating mode.

[INFO] Push to display the Received Call information. (See 24)

◆ Receiving a Polling Request Call

- ① Push [ALARM OFF] to stop the alarm and the blinking backlight.
 - If [ALARM OFF] is not pushed within 2 minutes, the next screen may appear, depending on the call Category.
- ② Push a softkey to select your action.

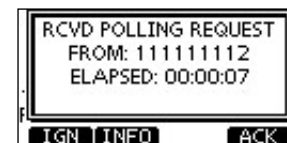

[IGN] Push to ignore the call and return to the normal operating mode.


[INFO] Push to display the Received Call information. (See 24)

[ACK] Push to display the “POLLING REPLY” screen to reply to the call. (See 22)

When “POSITION ACK” is set to “Auto TX,” the transceiver automatically replies to the call. In that case, both the TX and RX calls are stored in the Transmitted and Received Call Logs.

◆ Receiving a Test Call

- ① Push [ALARM OFF] to stop the alarm and the blinking backlight.
 - If [ALARM OFF] is not pushed within 2 minutes, the next screen may appear, depending on the call Category.
- ② Push a softkey to select your action.

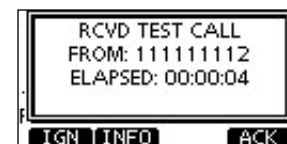

[IGN] Push to ignore the call and return to the normal operating mode.


[INFO] Push to display the Received Call information. (See 24)

[ACK] Push to display the “TEST ACK” screen to reply to the call. (See 22)

When “TEST ACK” is set to “Auto TX,” the transceiver automatically replies to the call. In that case, both the TX and RX calls are stored in the Transmitted and Received Call Logs.

◆ Receiving a Test Acknowledgement Call

- ① Push [ALARM OFF] to stop the alarm and the blinking backlight.
 - If [ALARM OFF] is not pushed within 2 minutes, the next screen may appear, depending on the call Category.
- ② Push [EXIT] to return to the normal operating mode.

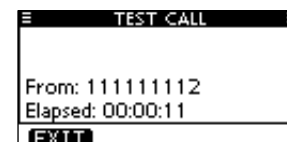


24 Received Call Log

The transceiver automatically stores up to 50 distress messages and 50 other messages, and they can be used as a supplement to your logbook.


- While in the normal operating mode, “✉” blinks in the upper right corner of the LCD when there is an unread message.

- ① Push [LOG] to enter “RCVD CALL LOG” in the DSC CALLS menu, or you can enter it through the Menu screen.

- ② Select “Distress” or “Others.”
- The Distress messages are stored in “Distress.”
- The messages other than the Distress are stored in “Others.”
- “✉” appears when there are unread messages.
- “✉” appears when there are no unread messages.
- No icon appears when there are no messages.

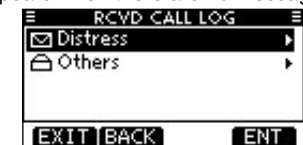

- ③ Select the message.
- The message in the unopened file has not been read.

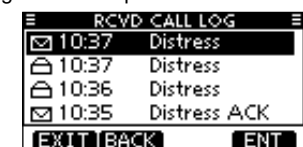


When “Distress” is selected in step ②.

- ④ Rotate Dial to scroll the message contents.
- ⑤ To delete the displayed message, push [DEL].
- A confirmation screen appears, then push [OK] to delete.
- ⑥ Push [EXIT] to return to the normal operating mode.

25 Transmitted Call Log

The transceiver automatically stores up to 50 transmitted calls, and the logs can be used as a supplement to your logbook.

- ① Enter “TX CALL LOG” in the DSC CALLS menu.
- ② Select the message.

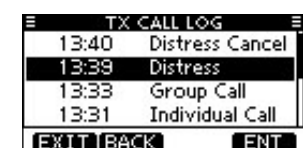

Rotate Dial to scroll the message contents.

- ④ To delete the displayed message, push [DEL].
- The confirmation screen appears, then push [OK] to delete.
- ⑤ Push [EXIT] to return to the normal operating mode.

26 DSC Settings

◇ Automatic Acknowledgement

- Enter either “INDIVIDUAL ACK,” “POSITION ACK” or “TEST ACK” in the DSC Settings menu.
- Rotate Dial to select “Auto TX” or “Manual TX,” then push [ENT].
 - Push [BACK] to cancel and return to the DSC Settings menu.
- Push [EXIT] to return to the normal operating mode.

◇ Channel Auto Switch function (For only USA version.)

- Enter “CH AUTO SWITCH” in the DSC Settings menu.
- Rotate Dial to set the Channel Auto Switch function to “Auto (No Delay),” “10 Second Delay” or “OFF,” then push [ENT].
 - Push [BACK] to cancel and return to the DSC Settings menu.
- Push [EXIT] to return to the normal operating mode.

◇ Channel 16 Switch function

- Enter “CH 16 SWITCH” in the DSC Settings menu.
- Rotate Dial to set the Channel 16 Switch function to “Auto (No Delay),” “10 Second Delay” or “OFF,” then push [ENT].
 - Push [BACK] to cancel and return to the DSC Settings menu.
- Push [EXIT] to return to the normal operating mode.

◇ DSC Data Output

- Enter “DSC DATA OUTPUT” in the DSC Settings menu.
- Rotate Dial to set the DSC Data Output function to “All Station,” “List Station” or “OFF,” then push [ENT].
 - Push [BACK] to cancel and return to the DSC Settings menu.
- Push [EXIT] to return to the normal operating mode.

◇ Alarm

- Enter “ALARM” in the DSC Settings menu.
- Rotate Dial to select the status, then push [ENT].
 - Push [BACK] to cancel and return to the DSC Settings menu.
 - “Safety,” “Routine,” “Warning,” “Self-Terminate” and “Discrete” are selectable. (default: ON)
- Rotate Dial to set the Alarm setting to “ON” or “OFF.”
- Push [EXIT] to return to the normal operating mode.

◇ Channel 70 Squelch level

- Enter “CH 70 SQL LEVEL” in the DSC Settings menu.
- Rotate Dial to adjust the squelch level until the noise just disappears, then push [ENT].
 - Push [BACK] to cancel and return to the DSC Settings menu.
- Push [EXIT] to return to the normal operating mode.

◇ DSC Loop Test

- Enter “DSC LOOP TEST” in the DSC Settings menu.
- Push [ENT] to start the DSC loop test.
 - Push [BACK] to cancel and return to the DSC Settings menu.
 - When the transmit DSC and receive DSC signals are matched, “OK” appears.
- Push [EXIT] to return to the normal operating mode.

/// If “NG” appears in step ②, either or both TX and RX DSC circuits has a problem. In that case, you will have to send the transceiver to your nearest dealer for repair.

27 Intercom operation

This function is not available with the IC-M400BB.

- Push [INCM] to enter the Intercom mode.
- Hold down [INCM CALL] to sound the intercom beeps.
 - The transceiver and the command microphone sound beeps while holding down [INCM CALL].
 - “CALL” appears.
- After releasing [INCM CALL], hold down [PTT] and speak into the microphone at a normal voice level.
 - “TALK” appears on the caller’s display, or “LSTN” appears on the listener’s display.
 - To adjust the HM-195’s intercom volume level, rotate [VOL/SQL](Dial) on the HM-195.
- After releasing [PTT] you can hear the response through the speaker.



On the caller’s display



On the listener’s display

- To return to the normal operating mode, push [EXIT].

28 RX Speaker function


- Push [RX] to enter the RX Speaker mode.
 - The RX Speaker volume level adjustment screen is displayed.



- Rotate Dial or push [▲]/[▼]/[◀]/[▶] to adjust the RX Speaker volume level, and then push [ENT].
 - “RX ” appears.
- To return to normal operating mode, push [RX].
 - “RX ” disappears.

29 PA (Public Address) function

- Push [PA] to enter the Public Address mode.
- Hold down [PTT] and speak at a normal voice level.
 - While holding down [PTT], the screen below is displayed.
 - To adjust the PA volume level, rotate Dial.

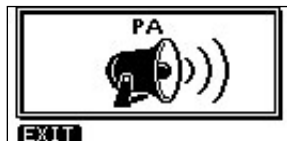

- Push [EXIT] to return to normal operating screen.

30 Horn function

- Push [HORN] to enter the Horn mode.
- Hold down [HORN] to sound a horn.
 - While holding down [HORN], the horn sounds, and the screen below is displayed.
 - To adjust the horn volume level, rotate Dial.



- Push [EXIT] to return to the normal operating screen.

31 Menu screen operation

The Menu screen is used to change the transceiver’s functions and the microphone’s own functions, send DSC calls or show the entered MMSI and ATIS*¹ codes and GPS information*².

*¹ Appears only when the transceiver is the Dutch or German version.

*² Appears only when a GPS receiver compatible with NMEA0183 ver. 2.0 or 3.01 is connected to the transceiver.

These instructions are for only the microphone’s own functions. Refer to the transceiver’s manual for the settings of the other functions. (Some functions cannot be selected from the HM-195.)

◇ Entering the Menu screen and operation

- Push [MENU].
- Rotate Dial or push [▲]/[▼] to select the root item, and then push [ENT].
- Rotate Dial or push [▲]/[▼] to select the item, and then push [ENT].
- Rotate Dial or push [▲]/[▼] to select the option, and then push [ENT] to set it.
- Push [EXIT] to exit the Menu screen.
 - Push [CLEAR] or [BACK] to return to the previous screen.

• Backlight

The function display and keys of the HM-195 can be backlit for better visibility under low light conditions.
The backlight can be set to 7 levels and OFF. (Default: 7)

• Display contrast

The contrast of the HM-195’s function display can be adjusted in 8 steps.
Level 1 is the lowest contrast, and level 8 is the highest contrast. (Default: 5)

• Key Beep

You can turn OFF beep tones for silent operation, or you can turn ON the tones to have confirmation beeps sound when a key is pushed. (Default: ON)

• COMMANDMIC Speaker


The HM-195’s external speaker can be used instead of the internal speaker. (Default: Internal Speaker)

/// Regardless of this setting, the transceiver’s microphone speaker is ON.

■ TIP

If the transceiver supports, you can use the AIS functions and the Highway function with the HM-195. Push **DISP** to display the Plotter screen or the Highway screen on the command microphone screen.

◇ Plotter screen

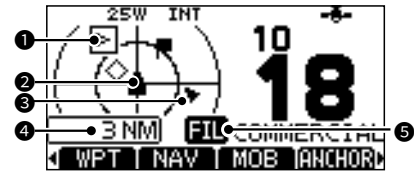

① TARGET BOX

② YOUR VESSEL ICON

/// The vessel icon automatically points in the direction your vessel is heading, in 45 degree steps.

/// When your vessel moves less than 2 knots per hour speed, is displayed.

③ TARGET ICONS

	AIS target: Vessel
	AIS target: Vessel (Friend)
	AIS target: AIS-SART, AIS-MOB, and EPIRB-AIS
	AIS target: Search and Rescue (SAR) aircraft
	AIS target: Aids to Navigation (AtoN)
	AIS target: Aids to Navigation (AtoN) virtual
	AIS target: Base station
	Waypoint: During navigation.
	MOB


*Blinks when the AIS target is closer than your CPA and TCPA settings (Danger target).

④ DISPLAY RANGE

⑤ DISPLAY FILTER INDICATOR

Displayed when the type of targets on the Plotter screen is filtered.

◇ Highway screen

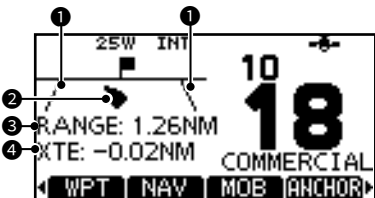

① XTE LIMIT LINE

② YOUR VESSEL ICON

/// When your vessel moves less than 2 knots per hour speed, is displayed.

③ RANGE

Displays the range (RNG) from your vessel to the target.

④ XTE

Displays the Cross Track Error.

📖 See “Instructions ①” (1 to 15) or “Instructions ②” (16 to 22) for other functions.

Icom Inc.

1-1-32 Kamiminami, Hirano-ku, Osaka 547-0003, Japan

Apr. 2021

Count on us!

A7022D-3EX-4

Printed in Japan

© 2012–2021 Icom Inc.

ICOM

INSTRUCTIONS ④
FOR IC-M400BB/
IC-M400BBE

REMOTE-CONTROL MICROPHONE

HM-195B

HM-195SW

32 Menu Screen Operation 2

See “Instructions ③” (B1 Menu screen operation) for entering the menu screen operation.

The Menu screen is used for setting infrequently changed values, function settings or sending DSC calls.



Menu lists

◇ MMSI/GPS Information

The transceiver shows the entered MMSI code and GPS information. If the code is not entered, “NO DSC MMSI” is displayed.



33 Radio Settings items

◇ Scan type

The transceiver has two scan types, Normal scan and Priority scan. A Normal scan searches all Favorite channels in the selected channel group. A Priority scan sequentially searches all Favorite channels, while monitoring Channel 16. (Default: Priority Scan*)




*“Normal Scan” is the default for the USA version.

◇ Scan timer

The scan timer can be selected as a pause (OFF) or timer scan (ON). When OFF is selected, the scan pauses until the signal disappears.

(Default: OFF)

- **Priority scan:** When ON is selected, the scan pauses for 5 seconds and then resumes, even if a signal has been received on any channel other than Channel 16.
- **Normal scan:** When ON is selected, the scan pauses for 5 seconds and then resumes, even if a signal has been received on any channel.

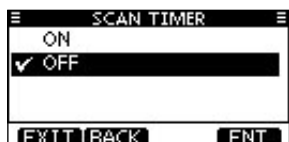

◇ Dual/Tri-watch

This item can be selected as Dualwatch or Tri-watch. (p. 19) (Default: Dualwatch)



◇ Channel Group

Except for the European version, a channel group suitable for your operating area can be selected. Depending on the transceiver version, INT, USA, CAN, ATIS or DSC may be selectable. • The screen below shows the USA version.



◇ Weather alert (For only USA and Australian version.)


A NOAA broadcast station transmits a weather alert tone before important weather information. (Default: OFF)

- “WX” with a weather icon blinks until the transceiver is operated after the transceiver detects the alert.
- “WX” with a weather icon appears instead of “WX” when the function is set ON.

ON with Scan: The preset weather channels are sequentially checked while scanning.

ON: The previously selected (last used) weather channel is checked while scanning.

OFF: The transceiver does not detect a weather alert tone.

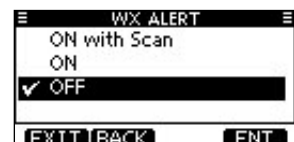

◇ CH Display

You can select the number of digits to display the channel number. (Default: 4 Digits)

- This setting may not be usable, depending on the transceiver's version or presetting.

3 Digits: The channel number is displayed in 3 digits, such as “01A.”

4 Digits: The channel number is displayed in 4 digits, such as “1001.”




34 Configurations

See “Instructions ③” (B1 Menu screen operation) for Backlight, Display Contrast, Key Beep, and COMMANDMIC Speaker functions details.


◇ Key Assignment

Desired functions can be assigned to Dial and the softkeys.

- ① When the “KEY ASSIGNMENT” screen is displayed, rotate Dial or push [▲]/[▼] to select “Dial” or “Softkeys,” and then push [ENT].
- ② Rotate Dial or push [▲]/[▼] to select the desired position, and then push [ENT].
 - To return to the default, select “Set default” and push [ENT].

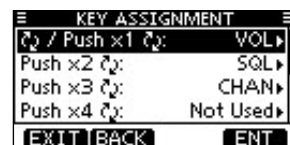


For “Dial” assignment

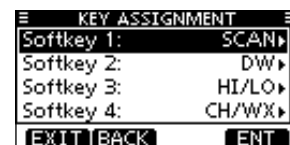


For “Softkeys” assignment

- ③ Rotate Dial or push [▲]/[▼] to select the option, and then push [ENT] to set it.
 - “✓” is displayed next to the selected option.

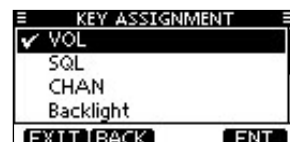

For “Dial” assignment

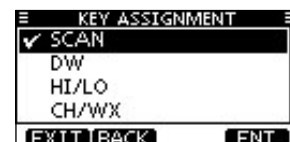

For “Softkeys” assignment*

*[CH/WX] appears instead of [CHAN], depending on the version.

- ④ Push [EXIT] to exit the Menu screen.
 - Push [CLEAR] or [BACK] to return to the previous screen.

• Dial assignment

The Audio volume (VOL), squelch (SQL), channel selection (CHAN) and LCD backlight level (Backlight) functions can be assigned to any one of 4 sequential positions on Dial. Pushing Dial 1 to 4 times sequentially selects the desired function, and rotating Dial adjusts the level or selects a value or number.

For example:

- VOL is assigned the 1st position, and pushing Dial once selects VOL. The VOL adjust screen is displayed and rotating Dial adjusts the audio volume.
- CH is assigned to the 3rd position, and pushing Dial three times selects CH. The channel number is displayed and rotating Dial will select the desired channel.

You can assign VOL, SQL, CHAN and Backlight to any one of the 1st, 2nd, 3rd, or 4th sequential positions.

Repeatedly pushing Dial sequentially displays all the functions in the order they are assigned, and skips any functions assigned as Not Used.

• Softkeys assignment

The desired function can be assigned as the softkey function. The assigned function can be used when its key icon is displayed.

See page 3 for details of the assignable key functions.

◇ UTC Offset


Set the offset time between the UTC (Universal Time Coordinated) and your local time to between –14:00 and +14:00 (in 1 minute steps). (Default: 00:00)



◇ Noise Cancel

Set the Noise Cancel function for both receive and transmit.

- ① When the “NOISE CANCEL” screen is displayed, rotate Dial or push [▲]/[▼] to select “RX” or “TX,” and then push [ENT].

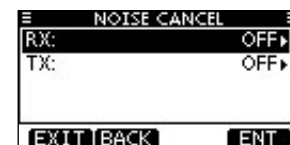


- ② Rotate Dial or push [▲]/[▼] to select the option, and then push [ENT] to set it.
 - “✓” is displayed next to the selected option.
- ③ Push [EXIT] to exit the Menu screen.
 - Push [CLEAR] or [BACK] to return to the previous screen.

• RX

Turn the receive Noise Cancel function ON or OFF.

OFF: Turns OFF the function. (Default)

- 1: The Noise Cancel function reduces random noise components in the received signal to approximately one half.
- 2: The Noise Cancel function reduces random noise components in the received signal to approximately one third.
- 3: The Noise Cancel function reduces random noise components in the received signal to approximately one tenth.

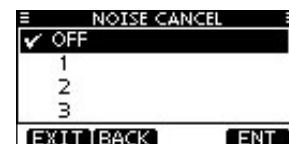


• TX

Turn the transmit Noise Cancel function ON or OFF.

OFF: Turns OFF the function. (Default)


ON: The Noise Cancel function reduces random noise components in the transmitted signal to one third.

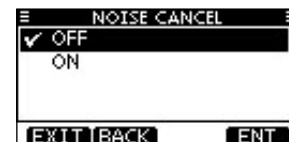

◇ Inactivity Timer

Set the inactivity timer to between 1 and 10 minutes (in 1 minute steps) or OFF for the “Not DSC Related” and “DSC Related” item, and set to between 1 and 15 minutes (in 1 minute steps) or OFF for the “DSC Related” item. The count down alarm sounds 10 seconds before the Inactive timer returns the current screen to the normal operating screen.

- ① When the “INACTIVITY TIMER” screen is displayed, rotate Dial or push [▲]/[▼] to select “Not DSC Related” or “DSC Related,” and then push [ENT].
- ② Rotate Dial or push [▲]/[▼] to select the option, and then push [ENT] to set it.
 - “✓” is displayed next to the selected option.
- ③ Push [EXIT] to exit the Menu screen.
 - Push [CLEAR] or [BACK] to return to the previous screen.

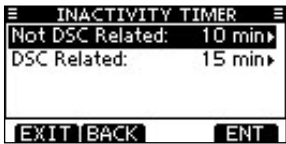

• Not DSC Related

When the LCD displays a screen other than the normal operation screen, or one not related to the DSC, and no key operation occurs for this set period, the transceiver automatically returns to the normal operating screen.
(Default: 10 min)



• DSC Related

When the LCD displays the screen related to the DSC, and no key operation occurs for this set period, the transceiver automatically returns to the normal operating screen.
(Default: 15 min)




• RT Related (For only USA version.)

While receiving or transmitting a signal, and when the channel is changed, the RT (Radio Telephone) icon is displayed. The icon disappears if you push no key for the period of time set in the Menu screen shown below.
(Default: 30 sec)



◇ NMEA Output


Select the Data Output function option for a NMEA output port.

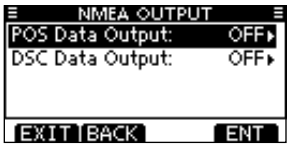

• POS data output

When receiving position data from an external GPS receiver, this function sends the data from the NMEA Output port to an external device.

(Default: OFF)

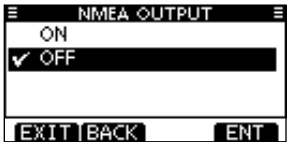


• DSC data output

When receiving a DSC call, this function sends the DSC data from the NMEA Output port to an external device.

(Default: OFF)

All Stations: Outputs the call from any vessel from the NMEA Output port.
Station List: Outputs the call from any vessels listed on the Individual ID screen.
OFF: Does not output any call to an external device.

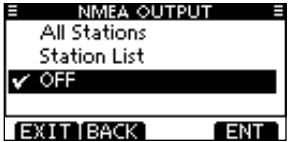

◇ Remote ID

Set a Remote ID number to between 1 and 69. The Remote ID is included in the sentence of the Icom original NMEA format.
(Default: 15)



📖 See “Instructions ①” (1 to 15), “Instructions ②” (16 to 22), or “Instructions ③” (23 to 31) for other functions.