
4.65 inches

Table Lamp with Tray

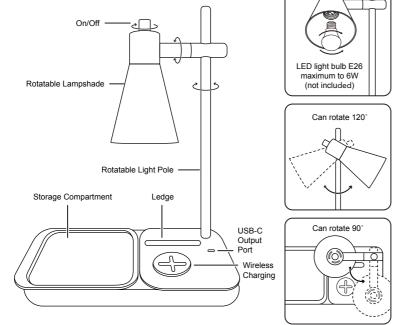

before you get started:

- · Make sure that the phone is aligned with the plus sign on the charging surface for the most efficient
- Thicker phone cases as well as some materials may interfere with the ability to wirelessly charge.
- Not all phones can wirelessly charge. If you are unsure if your phone has this capability, please refer to
- If you are using a case that doubles as a wallet, be sure to remove credit cards, IDs, and anything with a magnetic strip before charging as they may become damaged.

whats included:

· Table lamp with tray

• Turn the knob on the top to turn the light on and off, rotate the lampshade to adjust to position.

how to charge:

 
- Place the table lamp on a sturdy flat surface.
- Plug the power supply into a 120VAC electrical outlet.
- If you are using a wallet case or wallet pocket remove credit cards or any card with a magnetic strip before charging to prevent damage.
- Place your wireless charging enabled device onto the wireless charger and align the device with the plus sign of the charging surface or the device may not charge.
- · Charge time will vary by device.

troubleshooting:

- If the charger is not working, double check that the power supply is plugged into a grounded wall outlet.
- · Certain phone cases may interfere with wireless charging. Remove phone case for the best results.
- Double check the placement of the device on the wireless charger. For best results the center of the device should be centered on the charger
- · Please refer to the chart below for proper charge placement:







Wireless charging is compatible with iPhone 8 and newer phones as well as other wireless charging enabled devices. Please consult your device's user manual if you are unsure if your device is

Note: Apple Watch® is not compatible with this device.

- · Remove credit cards and other cards with magnetic strips to prevent damage to them.
- · Keep the charger away from extreme heat and direct sunlight.
- Do not modify or repair this device.
- Do not use in high temperatures or extreme weather.
- Do not use chemical detergents to clean your devie, use a soft dry cloth.
- · Immediately unplug it from its power source if it gets wet.

FCC ID:2AO23-LM6 Wireless Charger Output: 5W Max; USB-C Output: 5V::2A(Single); Wireless Output + USB-C Output: Total 5V::2A

This device compiles with part 15 of the FCC Rules. Operation is subject to the following two conditions: 1) This device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation. Warning: Changes or modifications to this unit not expressly approved by the party responsible for compilation could viol the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference also communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

 Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- . Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or

Target Corp. Mpls. MN, 55403 Phone: 1-800-440-0680

Check for damaged or missing parts. Contact us at customersupport@gemsfindyours.com to order missing supplies

FRONT BACK

6.5 inches