 


tzumi® Bluetooth® AquaBoost™

Floating Waterproof Speaker

Model: 4819
FCC ID: HBO4819

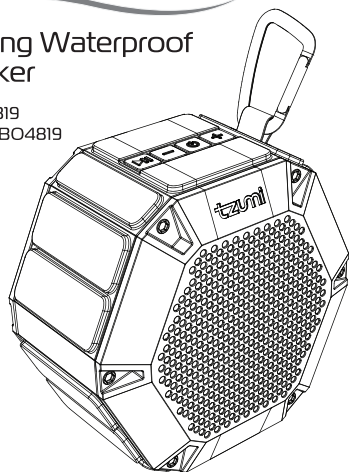

User Guide

PRODUCT OVERVIEW

 
 
 
1. Volume +/Next
2. Power
3. Volume -/Previous
4. Play/Pause/Answer/Refuse

5. Micro USB port
6. Aux
7. LED Indicator
8. MIC

Micro USB Cable



AUX Cable

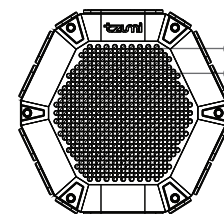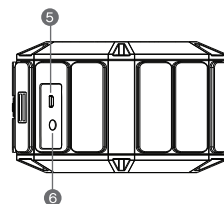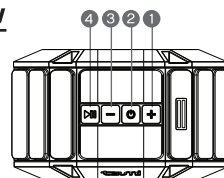


CHARGING YOUR SPEAKER


The battery must be fully charged prior to use. It takes approximately 3 hours to fully charge your Speaker (from depleted unit).

Red light ON - unit charging
Light OFF - unit fully charged

 - A Via AC Adapter/Wall Charger:** Using the provided Micro USB cable, connect your Speaker (Micro USB port) to the AC Adapter (USB port).

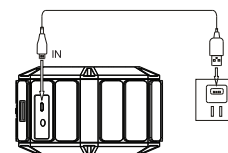

 - B Via Computer:** Using the provided Micro USB cable, connect your Speaker (Micro USB port) to the computer/laptop (USB port).

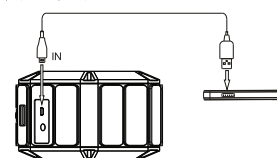


over ➡

PAIRING THE SPEAKER TO BLUETOOTH DEVICE


Make sure the Bluetooth function is available on your cell phone. Specific pairing procedures will be different depending on different cell phone. For detailed information, please refer to your cell phone's User Guide.

- If no device connection is made within 10 minutes of the Speaker being switched on, the Speaker will automatically be switched off to save power.
- After a successful pairing, devices will memorize each other. Therefore, no pairing will be needed next time.

1. Keep the distance between the cell phone and the Speaker within 3 feet (for pairing only).
2. Turn on the Speaker by pressing and holding the Power Button  for 3 seconds.
3. The tone prompt will sound and the LED light will flash blue. The unit will automatically enter into pairing mode.
4. Activate the Bluetooth function of the cell phone to search for the Bluetooth devices. After finishing the search, select "Tzumi-AquaBoost" in the device list display.
5. Your AquaBoost Speaker is ready for use.

SPEAKER CONTROLS

ON/OFF

Press and hold  button for 3 seconds to turn the unit ON. Press and hold the button again to turn it OFF. The unit will turn itself off if inactive for 10 minutes.

VOLUME

During a call or when listening to music

Volume +
Press and hold  Button.

Volume -
Press and hold  Button.

MUSIC

NOTE: The Music Function Control only works with Bluetooth devices that support the A2DP profile.

Go to next song

Press  Button.


Go to previous song

Press  Button.

PLAY/PAUSE/ANSWER/REFUSE THE CALL

Press  button to answer the call, press it again to hang up.

Press and hold  button for 2 seconds to refuse the call.

Double press  button to call back the last number.

 
To hang up the call press it again.

TO RESET UNIT

Press  button 3 times to reset the Speaker to its original setting.

AUX MODE

Use the 3.5mm audio cable (included) to connect the Speaker to an audio source (MP3/MP4, mobile phone, computer). A tone will sound. The speaker will play the music from the audio source.

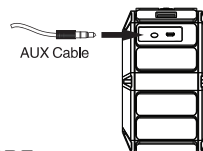

IMPORTANT SAFEGUARDS

- Keep speaker away from any source of heat.
- Always adjust the speaker volume to a suitable level to avoid hearing damage or the damage to the unit.
- If not using the speaker for a long period of time, keep the internal battery charged (charge once every 3 months). This will extend the life of your lithium battery.

SPECIFICATIONS

Frequency: 100Hz ~ 15KHz

Battery: 3.7V/1200mAh

Bluetooth version: V4.2

Distance: 33 ft (10m)

Charging time: up to 3 hours

Playing time: up to 8 hours

Speaker unit Diameter: 45mm



tzumi® AquaBoost Waterproof Outdoor Speaker Distributed by tzumi® Inc. NY, NY 10016
©Copyright 2017 tzumi All Rights Reserved. Made In China.

©Copyright 2017 iPhone is a trademark of Apple Inc. Registered in the US and other countries. Bluetooth SIG, Inc. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by tzumi® is under license. Other trademarks and trade names are those of their respective owners. Subject to change without prior notice.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

FCC ID:HBO4819