

CAR MULTIMEDIA SYSTEM

USER'S MANUAL

CRETA

Please read this manual carefully before operating your set and retain it for future reference. Designs and specifications are subject to change without prior notice.

The screens shown in this manual may differ from the actual screens of the product.

The design and specification of this product may change without prior notification for product improvement.

When transferring the vehicle to another individual, include this user's manual so that the next driver can continue its use.



iPod®

iPod® is a registered trademark of Apple Inc.

Bluetooth®

The Bluetooth Wireless Technology word mark and logos are registered trademarks owned by Bluetooth Wireless Technology SIG, Inc.

DOLBY

Manufactured under license from Dolby Laboratories “Dolby” and the double-D symbol are trademarks of Dolby Laboratories

Cortex

Cortex is the name of the ARM Processor Architecture used in the AV System.

Windows Embedded Compact 7

Windows Embedded Compact 7 is an operating system used in the AV System.

Table of Contents

Precautions for safety

Safety notes	6
--------------------	---

Key Product Features

Key Product Features	8
----------------------------	---

Component Names and Functions

Head Unit	9
Steering Wheel	11

Using the System for the First Time

Turning the System On/Off	12
Turning the System ON	12
Turning the System Off	12
AV ON/OFF	12
Resetting the System	12

FM/AM

Basic Screen	13
Listening to FM/AM radio	14
Auto tuning	14
Manual tuning	14
Selecting Presets	14
Selecting Lists	14

Saving Radio Frequency	15
Saving Manually	15
Using Preset Menu	15
Scan	15
Scanning Radio Frequency	15
Scanning Preset frequency	15
Sound settings	15

USB

About USB	16
-----------------	----

USB Music

Playing USB Music	17
Searching USB Music Files	17
Repeat	17
Shuffle	17
Scan All	17
Scan Folder	17
Album Cover view	18
List	18
Sound settings	18

USB Video

Playing USB Video	19
Searching USB Video Files	19
Repeat	19
Shuffle	19
List	20
Caption	20
Display settings	20
Sound settings	20

USB Photo

Viewing USB Photo	21
Switching to menu screen or full screen	21
Searching USB Image Files	21
Rotating / Slide show	21
Using the Menu Buttons	22
Slideshow interval	22
Display settings	22

iPod Music

About iPod	23
Supported iPod devices	23
Playing iPod Music	24
Searching iPod Music Files	24

Table of Contents

Using the Menu Buttons	24
Setting audiobook playback speed	24
Sound settings	24

AUX

Playing an AUX source	25
Using the Menu Buttons	25

Bluetooth Audio

Before playing the Bluetooth audio	26
Searching Bluetooth audio Files	26
Searching USB Music Files	26
Using the Menu Buttons	26

Getting started with navigation

Precautions for safe driving	27
What is GNSS?	27
About satellite signals	27
Acquiring satellite signals	27
(Refer to the separate navigation manual for more detailed operation)	

Bluetooth® Wireless Technology

Before Using the Bluetooth Handsfree	28
What is Bluetooth® Wireless Technology?	28
Precautions for Safe Driving	28
Cautions upon Connecting Bluetooth Phone	28

Bluetooth Connection

When no Phones Have Been Paired	29
Pairing from the Bluetooth® Device	29
Pairing from the car	29
When a Phone is Already Paired	30
When your phone is connected	30

Bluetooth Phone

Making/Answering Calls	31
Calling by Dialing a Number	31
Making a Call from Speed Dial	31
Calling through Redial	31
Answering a Call	31
Rejecting a Call	31
Operating Menus during a Call	32
Ending a Call	32
Switching Call to Bluetooth® Phone	32
Making 3 way call	32

Using the Menu Buttons	33
Contacts	33
Updating Mobile Phone Contacts	33
Making a call from contacts	33
Searching for contacts	33
Calling list	34
Viewing Calling lists	34
Favourites	34
Calling Favourites	34
Saving to Favourite	34
Deleting Favourites	35
Changing the Favourites name	35
Bluetooth settings	35

Setup

Starting mode	36
Sound	36
Sound Balance	36
Variable EQ	36
Volume setting	36
Beep	37
Display	37
Brightness	37
Dimming mode	38

Table of Contents

Bluetooth settings	38
Bluetooth connection	38
Ringtone	39
Change passkey	39
Changing device name	39
Auto Connection	40
System	40
Language	40
Keyboard	40
Standby screen	41
Factory settings	41

Specification

USB MP3 Specification	42
Video and Image Specification	42

Before thinking there is a product defect


Before thinking there is a product defect	43
---	----

Trouble shooting

Trouble shooting	44
------------------------	----

Precautions for safety

Safety notes

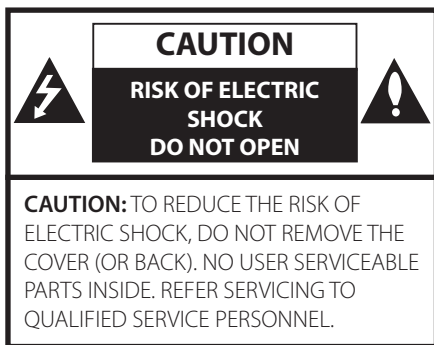

The lightning flash with the arrowhead symbol within an equilateral triangle is intended to alert the user about the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



Always operate the vehicle in a safe manner. Do not become distracted by the vehicle while driving and always be fully aware of all driving conditions. Do not change settings or any functions. Pull over in a safe and legal manner before attempting such operations.

To promote safety, certain functions are disabled unless the hand brake is on.



To reduce the risk of electric shock, do not remove the cover or back of this product. There are no user-serviceable parts inside. Refer servicing to qualified service personnel.



To reduce the risk of fire or electric shock, do not expose this product to dripping or splashing water, rain, or moisture.



When driving your vehicle, be sure to keep the volume of the unit low enough to allow you to hear sounds coming from the outside.



Do not drop it and avoid heavy impacts at any time.



The driver should not watch the monitor while driving. If the driver watches the monitor while driving, it may lead to carelessness and cause an accident.

Precautions for safety

WARNING:

- Do not stare at the screen while driving. Staring at the screen for prolonged periods of time could lead to traffic accidents.
- Do not disassemble, assemble, or modify the navigation system. Such acts could result in accidents, fire, or electric shock.
- Using phone features while driving may distract drivers from paying attention to traffic conditions and result in traffic accidents.
Use phone features only after the vehicle has been parked.
- Heed caution not to spill water or introduce foreign objects into the device. Such acts could lead to smoke, fire, or product malfunction.
- Please refrain from use if the screen is blank or no sound can be heard as these signs may indicate product malfunction. Continued use in such conditions could lead to accidents (fires, electric shock) or product malfunctions.

- Do not touch the antenna during thunder or lightening as such acts may lead to lightning induced electric shock.
- Do not stop or park in parking-restricted areas to operate the product. Such acts could lead to traffic accidents.
- The video screen will not operate when the vehicle is in motion. For your safety, first park the vehicle to watch or view the screen.
- Some Non-video features may also not operate when the vehicle is in motion. These features will operate only when the vehicle has been parked.

CAUTION:

- Do not keep the navigation system running with the engine stopped. Doing so may discharge the vehicle battery. When you use the navigation system, always keep the engine running.
- When the driver wants to operate navigation system, first park the vehicle in a safe location and set the parking brake.
Operating the system while driving can distract the driver and may result in a serious accident.
- Do not disassemble or modify this system. If you do, it may result in accidents, fire, or electrical shock.
- Some states/provinces may have laws limiting the use of video screens while driving. Use the system only where it is legal to do so.
- Do not use your phone in private mode when you are driving. You must stop at a safe location to use it.

Key Product Features



Key Product Features

Name	Description
Display	Wide TFT-LCD Display Provides high quality video through a Wide TFT-LCD Display using an LED Back Light.
Radio	Digital Tuner Feature Digital Tuner using PPL method that supports memory of 20 broadcast stations for each AM and FM modes. Radio broadcast station name Displays broadcast station names for key locations.
Multimedia Player	Support for various Media Formats Support for various media formats, including Radio, MP3, USB, iPod, AUX and Bluetooth® Audio Streaming modes.
Miscellaneous	Bluetooth® Wireless Technology Convenient use of Bluetooth® Handsfree by using buttons within the steering wheel remote controller.
	Digital Screen Control Features Easy control of features through touch screen options.
	Steering Wheel Remote Controller Control over audio features and Bluetooth® through the steering wheel remote controller for maximum convenience.

Component Names and Functions

Head Unit





Name	Description
1 RADIO	<ul style="list-style-type: none"> Operates FM/AM mode. Each time the key is pressed, mode is changed in order of FM ► AM ► FM.
2 MEDIA	<ul style="list-style-type: none"> Operates available media (USB, iPod, Bluetooth Audio, AUX). If the media is not connected, corresponding modes will be disabled.
3 SEEK TRACK	<p>When the  keys are pressed shortly.</p> <ul style="list-style-type: none"> In FM/AM mode, searches broadcast frequencies. In Media modes, changes the track, file or chapter. <p>When the  keys are pressed and held.</p> <ul style="list-style-type: none"> FM/AM mode : automatically searches broadcast frequencies and channels. Once released, searches and begins playing the next broadcast frequency. Media modes: rewinds or fast forwards the track or file (except AUX).
5 Power / Volume Knob	<ul style="list-style-type: none"> Power on When power is off, press to turn power on. Power off When power is on, press and hold to turn power off. Audio off When power is on, press to turn Audio off. Turn left/right to control volume.
6 Reset	Resets the system.

Component Names and Functions

Head Unit









Name	Description
6 MAP	Press to display the map screen of the current location when in a different mode.
7 PHONE	Takes user to phone screen.
8  	<ul style="list-style-type: none">• Turns off the screen.• Displays the Setup mode.
9 Tune / ENTER Knob	<ul style="list-style-type: none">• FM/AM mode : changes the frequency.• MEDIA (USB/iPod) mode : changes the track, file or title (except AUX).

Component Names and Functions

Steering Wheel



Name	Description
1 + VOL -	Controls the volume.
2  	<p>When keys are pressed shortly.</p> <ul style="list-style-type: none"> FM/AM mode: scans and receives the previous/next frequency. Media mode: changes the track, file or chapter. <p>When keys are pressed and held.</p> <ul style="list-style-type: none"> In FM/AM mode: changes frequencies while pressed. Upon release, scans and receives the next frequency. Media mode: rewinds or fast forwards the track or file.


Name	Description
3 	<p>Mutes the sound.</p>
4 	<ul style="list-style-type: none"> Operates FM ► AM ► Available Media (USB Music/USB Video/iPod/Bluetooth Audio/AUX). If the media is not connected, corresponding modes will be disabled. Press and hold the key to turn the Audio system on/off. When power is off, press the key to turn power back on.
5 	<p>When pressed shortly.</p> <ul style="list-style-type: none"> When pressed in the phone screen, displays the last call. When pressed in the dial screen, makes a call. When pressed in the incoming call screen, answers the call. When pressed during single call, switches call back to mobile phone (Private). When pressed during 3way call, swap call. When pressed twice, redials the last call. <p>When pressed and held.</p> <ul style="list-style-type: none"> When pressed during a Bluetooth® Handsfree call, switches call back to mobile phone (Private). When pressed while calling on the mobile phone, switches call back to Bluetooth® Handsfree (Operates only when Bluetooth® Handsfree is connected). When pressed, redials the last call.
6 	<ul style="list-style-type: none"> When pressed during a call, ends the phone call. When pressed in the incoming call screen, rejects the call.

Using the System for the First Time

Turning the System On/Off

Turning the System ON

Press the engine start button. If the brakes are not pressed, then the ACC and system will turn on. If the brakes are pressed, then the IGN and system will turn on and the ignition will start. In both instances, the following safety warning will be displayed.

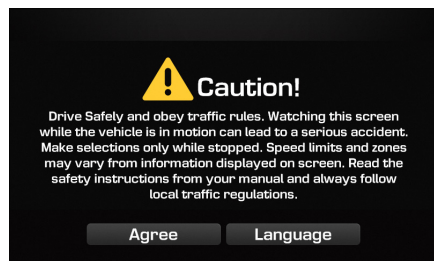

Pressing the PWR key on the head unit will display the safety warning page. Press the Agree button to display the most recent mode.



Turning the System Off

Press the engine start button again or press and hold the power key on the head unit to turn the system off.

NOTE

- If the system is turned off while the Handsfree is being used, then the call will automatically switch back to the mobile phone.


AV ON/OFF

Press the PWR key on the head unit when the AV is on. Press the PWR key or press the menu key to turn on AV.

While AV is turned off, the  key and the TUNE / ENTER knob will be disabled.


Resetting the System

This feature is used to reset the system in the occurrence of an unforeseen error or problem.

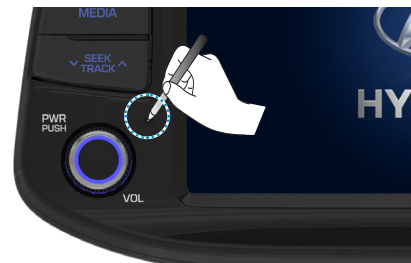

Press and hold the RESET key for about 1 second. (The use of a clip or pin is recommended when resetting the system.)


Basic Screen

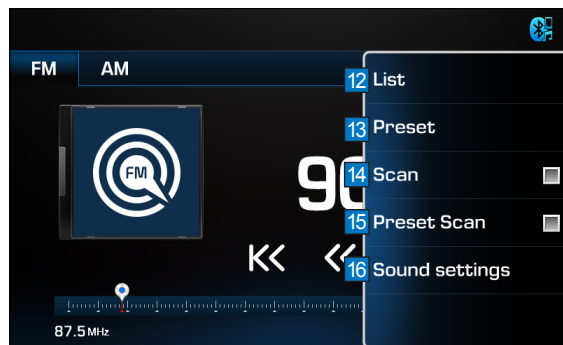

Name	Description
1 Mode tap	Press the tab to change between FM and AM mode.
2 Preset button	Displays the Preset List.
3 List button	Displays automatically updated lists.
4 Menu button	Displays List, Preset, Scan, Preset scan and Sound settings menus.
5 Frequency	Displays the current frequency.
6 Preset No.	Displays the current preset number.
7 Seek down	Single tap: seek down. Long tap: fast seek down.
8 Tune down	Single tap : tune down. Long tap: tune down until the button is released and plays the current frequency.
9 Tune up	Single tap : tune up. Long tap: tune up until the button is released and plays the current frequency.
10 Tune down	Single tap: seek up. Long tap: fast seek up.
11 Frequency bar	Use the tap to move to the desired frequency.
12 List	Displays automatically updated lists.
13 Preset	Displays saved presets for user selection.
14 Scan	Plays frequencies with superior reception for 3 seconds each.
15 Preset Scan	Plays frequencies saved to presets for 3 seconds and moves to the next saved frequency.
16 Sound settings	Sets sound related settings.

Listening to FM/AM radio

Press the **FM/AM** key to change the mode in order of FM ► AM ► FM.

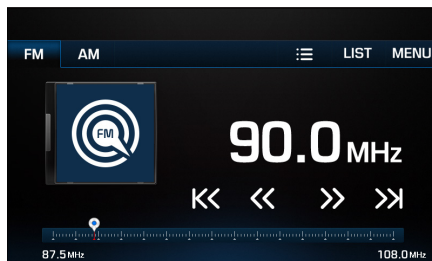

Auto tuning

Press the **SEEK TRACK** key or press the **I<<** **>>I** button to automatically search for frequencies.


Manual tuning

Press the TUNE / ENTER knob or press the **<<** **>>** button to manually select the frequency. The stations move up and down step by step.

Press the frequency bar to search for frequencies that you want.

Selecting Presets

Press the **MENU** button ► Press the **Preset** button. From the presets, select the frequency you want to listen to.

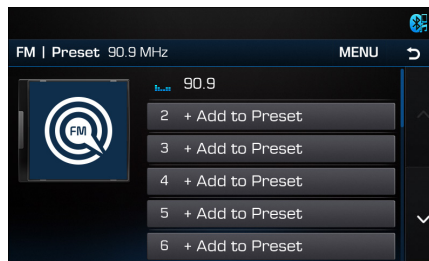

Selecting Lists

Press the **MENU** button ► Press the **List** button.

From the lists, select the frequency you want to listen to.

FM lists are automatically updated.


AM lists are manually updated by pressing (**↺**).



Saving Radio Frequency


Saving Manually

After selecting frequency ► Press the  button ► Press the .

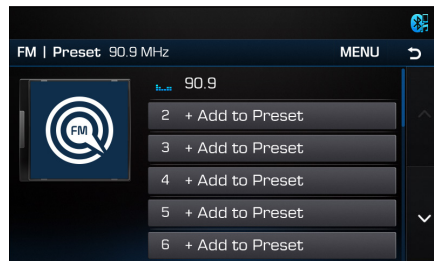


Using Preset Menu

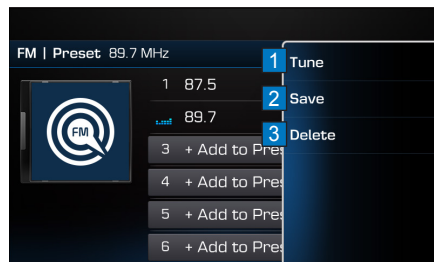


Press and hold the preset list you want to edit.

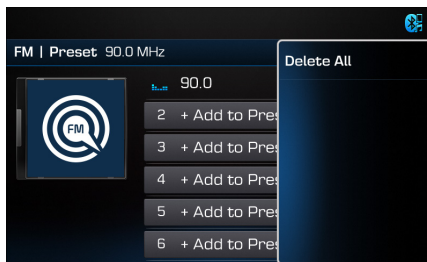

Name	Description
1 Tune	listens to frequency selected.
2 Save	overwrites frequency listening to currently.
3 Delete	deletes frequency.




NOTE

- Press the  button ► Press the  button ► Press the  to delete entire presets.

Scan

Scanning Radio Frequency

Press the  button ► Press the .

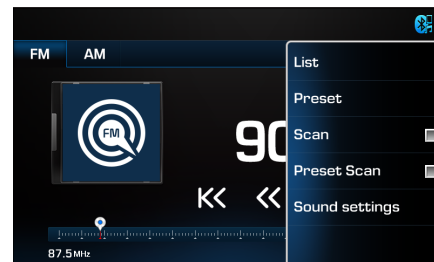

Starting from the current frequency, frequencies with superior reception are scanned for 3 seconds and the previous frequency is restored.

Scanning Preset frequency

Press the  button ► Press the .

Plays frequencies saved to presets for 3 seconds and moves to the next saved frequency.

NOTE

- When the scan is operating, pressing the controller will stop the function and return to the stopped station.

Sound settings

Press the  button ► Press the .

For details, refer to the "Sound" on the page 36.

About USB

Connect the USB device after turning on the engine. The USB device may become damaged if it is already connected when the ignition is turned on.


- Files that are not standard format files will not be played.
- For MP3/WMA files, only music files with compression rates between 8 Kbps ~ 320 Kbps can be played.
- Heed caution to static electricity when connecting/disconnecting external USB devices.
- Encoded MP3 Players will not be recognized when connected as an external device.
- When connecting an external USB device, the device may not properly recognize the USB in some states.
- Only USB devices formatted as FAT 12/16/32 are supported, and NTFS file system is not supported.
- Some USB devices may not be supported due to compatibility issues.
- Avoid contact between the USB connector with bodily parts/foreign objects.
- Repeated connecting/disconnecting of USB devices within short periods of time may result in product malfunction.
- Insert USB device after starting the car. If the car is started while USB device is inserted, it may damage USB device.
- The amount of time required to recognize the external USB device may differ depending on the type, size, or file formats stored on the USB. Such differences in required time are not indications of malfunction.
- The device may not recognize the USB device if separately purchased USB hubs and extension cables are being used. Connect the USB directly with the multimedia terminal of the vehicle.
- When application programs are installed to specific USBs, files may not properly play.
- The device may not operate normally if MP3 Players, cellular phones, digital cameras, or other electronic devices (USB devices not recognized as portable disk drives) are connected with the device.
- Charging through the USB may not work for some mobile devices.
- The device may not support normal operation when using a USB memory type besides Metal Cover Type USB Memory.
- The device may not support normal operation when using formats such as HDD Type, CF, or SD Memory.
- The device will not support files locked by DRM (Digital Rights Management).
- USB memory sticks used by connecting an Adaptor (SD Type or CF Type) may not be properly recognized.

USB Music

Playing USB Music

Once a USB is connected, USB Music mode will operate automatically.

Press the **MEDIA** key ► Press the **USB Music** button ► Press the Play button to play USB music.

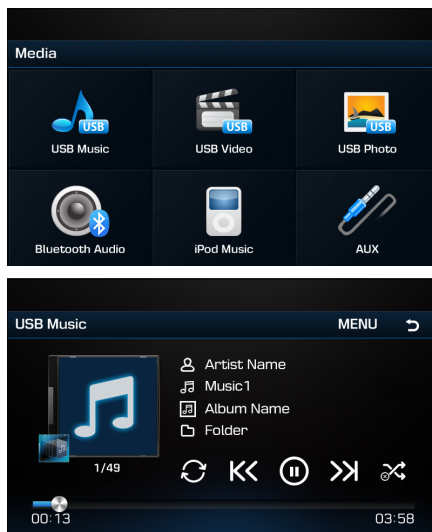

NOTE

- If the USB is not connected, or there is no media file in USB then the USB media button will be disabled.

Searching USB Music Files

While playing ► Press the **SEEK TRACK** key or the **I<<** **>>I** button to play the previous/next file.

- Pressing and holding the **SEEK TRACK** key or the **I<<** **>>I** button will rewind or fast forward the current file.
- While the **SEEK TRACK** key or the **I<<** **>>I** button is being pressed, the track will rewind or fast-forward at high speeds. Once the key is released, the USB Music will begin playing at normal speed.

NOTE

- Press the TUNE / ENTER knob allows you to select the previous/next file. This key will not rewind or fast-forward the file.

Repeat

Press the **REPEAT** button.

Each time the button is pressed, the option is changed from Repeat Folder(**REPEAT FOLDER**) ► Repeat One(**REPEAT ONE**) ► Off(Repeat All(**REPEAT ALL**)).

Shuffle

Press the **SHUFFLE** button.

Each time the button is pressed, the option is changed from Shuffle All(**SHUFFLE ALL**) ► Shuffle Folder(**SHUFFLE FOLDER**) ► Off(**SHUFFLE OFF**).




Scan All


Press the **MENU** button ► Press the **Options** button ► Press the **Scan All** to scan files within the USB in random order.

Scan Folder

Press the **MENU** button ► Press the **Options** button ► Press the **Scan Folder** to search files within the current folder.


Album Cover view

Press the  button ► Press the   button to search desired album.

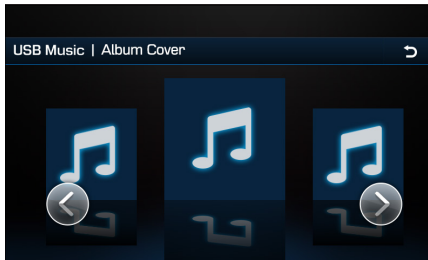

List

Press the  button ► Press the  button to display USB Music list screen.

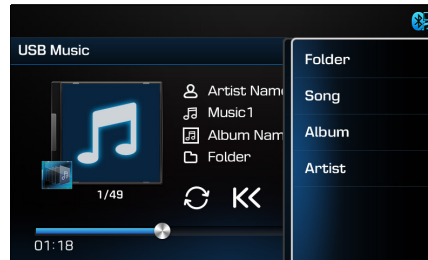

It is possible to search by Folder, Song, Album and Artist.

Sound settings

Press the  button ► Press the  button
► Press the .


For details, refer to the “Sound” on the page 36.

USB Video

Playing USB Video

Once a USB is connected, USB Video mode will operate automatically.

Press the **MEDIA** key ► Press **USB Video** button ► Press the Play button to play USB Video.

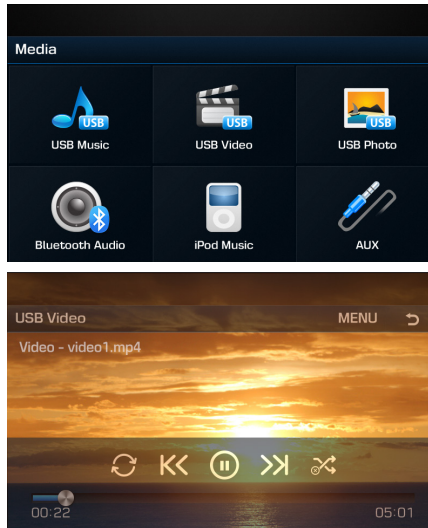

NOTE

- If the USB is not connected, or there is no media file in USB then the USB media button will be disabled.

Searching USB Video Files

While playing ► Press the **SEEK TRACK** key or **I<<** **>>I** button to play the previous/next file.

- Pressing and holding the **SEEK TRACK** key or **I<<** **>>I** button will rewind or fast forward the current file.
- While the **SEEK TRACK** key or **I<<** **>>I** button is being pressed, the track will rewind or fast-forward at high speeds. Once the key is released, the USB Video will begin playing at normal speed.

NOTE

- Press the TUNE / ENTER knob allows you to select the previous/next file. This key will not rewind or fast-forward the file.

Repeat

Press the **REPEAT** button.

Each time the button is pressed, the option is changed from Repeat Folder(**REPEAT FOLDER**) ► Repeat One(**REPEAT ONE**) ► Off(Repeat All(**REPEAT ALL**)).


Shuffle

Press the **SHUFFLE** button.

Each time the button is pressed, the option is changed from Shuffle All(**SHUFFLE ALL**) ► Shuffle Folder(**SHUFFLE FOLDER**) ► Off(**SHUFFLE OFF**).

List


Press the **MENU** button ► Press the **List** button to display USB Video list screen.

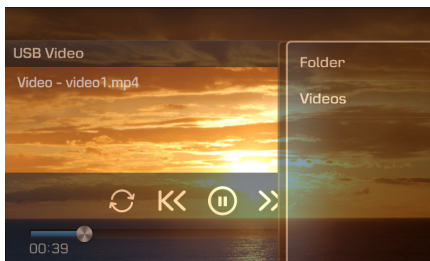

It is possible to search by Folder and Videos.


Caption

Press the **MENU** button ► Press the **Caption** button to display caption on USB Video screen.

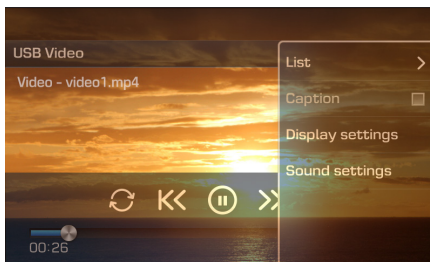

Display settings

Press the **MENU** button
► Press the **Display settings** button.

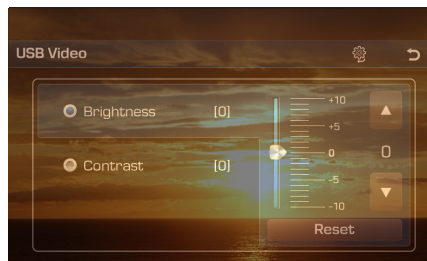

Press the **Reset** button to initialize the settings.


Press the **Settings** button to set "Brightness" and "Dimming mode".
For details, refer to the "Display" on the page 37.

Sound settings

Press the **MENU** button
► Press the **Sound settings** button.
For details, refer to the "Sound" on the page 36.

NOTE


- USB Video is not available while driving.
(Because of traffic regulations, videos are only available when your vehicle is parked.)

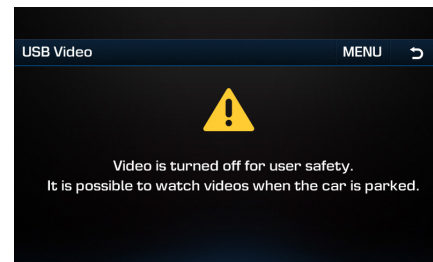

USB Photo

Viewing USB Photo

Press the **MEDIA** key ► Press **USB Photo** button ► Press the desired photo in List screen.

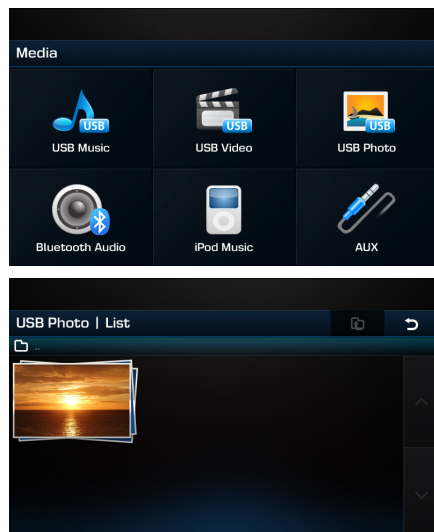


NOTE

- If the USB is not connected, or there is no media file in USB then the USB media button will be disabled.

Switching to menu screen or full screen

Press the photo to view with full screen.
Press the photo once more to return to the menu screen.

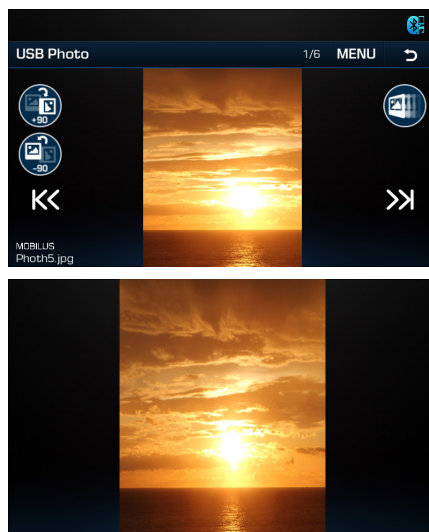

NOTE

- In full screen, images can be zoomed in/out by up to 300%.
- Press **⏮** to move to the List screen.

Searching USB Image Files


Press the **⏮** **⏭** button or turn the TUNE / ENTER knob to view the previous/next image.

Press **⏮** to view the list of USB photos.

Rotating / Slide show

Press the **⌂** **⌂** buttons to rotate image.

Press the **⌂** button to view slide show.

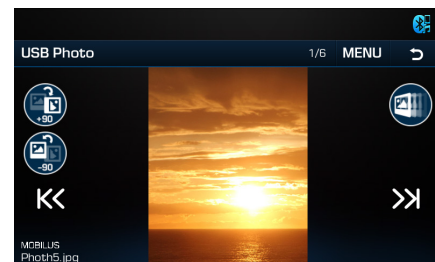


NOTE

- Press **⏮** to move to the previous screen.


Using the Menu Buttons

Press the **MENU** button to set Slide show, Slide time and Display settings menus.

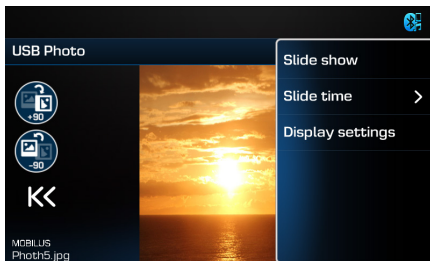

Slideshow interval

Press the **MENU** button ► Press the **Slide time** button.

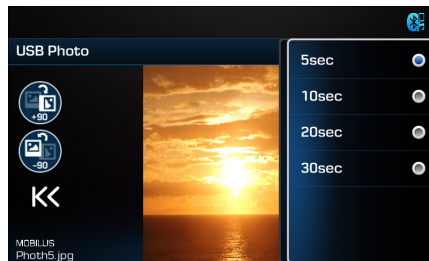

Slide show intervals can be set at **5 sec** , **10 sec** , **20 sec** , or **30 sec** intervals.


NOTE

- Slideshow is not available while driving.
(Because of traffic regulations, image is only available when your vehicle is parked.)

Display settings

Press the **MENU** button ► Press the **Display settings** button.

For details, refer to the "Display" on the page 37.

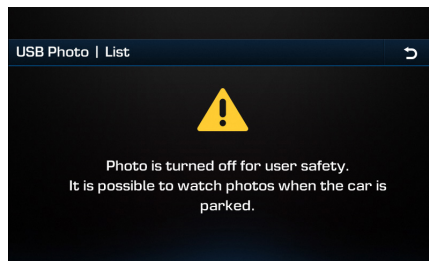

About iPod


iPod® is a registered trademark of Apple Inc.

- Some iPods with unsupported communication protocols may not properly operate with the system.
- If the iPod malfunctions due to an iPod device defect, reset the iPod and try again. (To learn more, refer to your iPod manual.)
- During ACC ON state, connecting the iPod through the iPod cable (The cable that is supplied when purchasing iPod/iPhone product.) will charge the iPod through the system.
- The use of genuine iPod cables supplied by Apple is recommended. (The use of other products may result in noise or abnormal operation.)
- Within iPhones, streaming audio and iPod control may occasionally conflict. If problems persist, remove the iPhone and connect again.
- Use iPod with complete synchronization to iTunes. Unauthorized song addition may cause abnormal operation.
- If iPod and Bluetooth are connected simultaneously with the same iPhone, you cannot use Bluetooth audio function.
- If iPod touch or iPhone is used, iOS4.2 or a later version is recommended.

Playing iPod Music

Once a iPod is connected, iPod Music mode will operate automatically.

Press the **MEDIA** key ► Press **iPod Music** button.

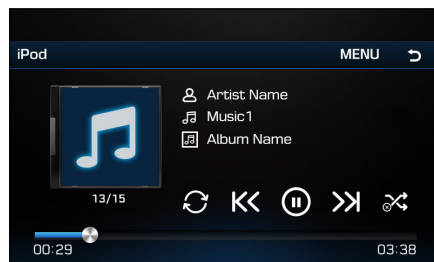

- Press the **►** button to play files saved within the iPod device.
- Press the **⏏** button to pause the file.

NOTE


- If the iPod is not connected, or there is no media file in iPod then the iPod Music button will be disabled.

Searching iPod Music Files

You can play the previous or next file.
For details, refer to the page 17.

Using the Menu Buttons

Press the **MENU** button to set List and options menus.

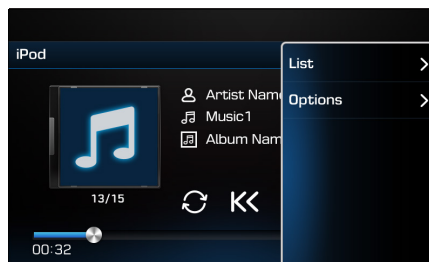


For details, refer to the "List" on the page 18.

Setting audiobook playback speed

Setting the playback speed only affects audio books purchased from the iTunes store or audible.com.

For details about iPod, refer to the iPod User Guide.

Press the **MENU** button ► Press the **options** ►
Press the **Audiobook** .

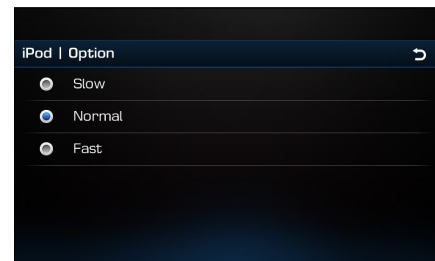

Sound settings

Press the **MENU** button ► Press the **options** ►
Press the **Sound settings** .


For details, refer to the "Sound" on the page 36.

AUX

Playing an AUX source


If an external device connector is connected with the AUX terminal, then AUX mode will automatically operate.

Press the **MEDIA** key ► Press the **AUX** button to play auxiliary device while a different source is playing.

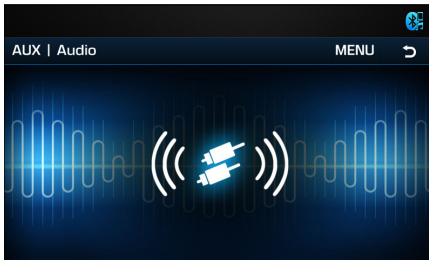

Using the Menu Buttons

Press the **MENU** button to set Sound.

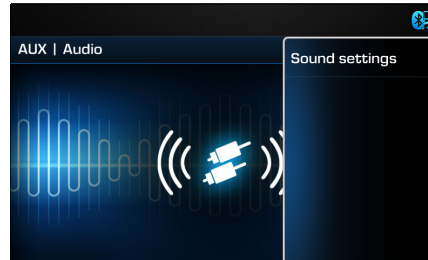


For details, refer to the "Sound" on the page 36.

Before playing the Bluetooth audio

- Music saved in the mobile phone can be played in the car through Bluetooth audio streaming.
- Bluetooth audio can be played only when a Bluetooth phone or Bluetooth audio device has been connected. To play Bluetooth audio, connect the Bluetooth phone to the car system. For more information on connecting Bluetooth, please refer to the user's manual [Pairing and connecting the unit and a Bluetooth phone] on page 29.
- If Bluetooth is disconnected while playing Bluetooth audio, the audio stream will be interrupted.
- The audio streaming function may not be supported in some mobile phones. Only one function can be used at a time, either the Bluetooth handsfree or the Bluetooth audio function. For example, if you convert to the Bluetooth handsfree while playing Bluetooth audio, the music stream is interrupted.
- Playing music from the car is not possible when there are no music files saved in the mobile phone.

Playing Bluetooth audio

Press the **Media** key ► Press the **Bluetooth Audio** button.

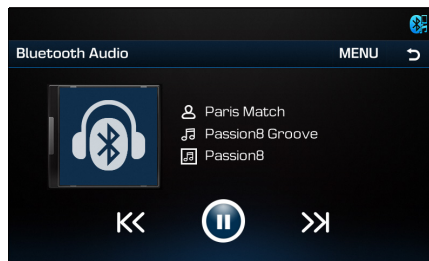

- Press the **▶** button to play files saved within the Bluetooth® phone.
- Press the **⏸** button to pause the file.

Searching Bluetooth audio Files


You can play the previous or next file.
For details, refer to the page 17.

NOTE

- The title/artist info may not be supported in some mobile phones. When it is not supported, only the symbol will be displayed.
- The play/pause feature may operate differently depending on the mobile phone.

Using the Menu Buttons

Press the **MENU** button to set List and Sound settings menus.

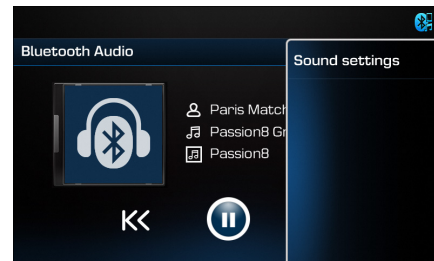

For details, refer to the "Sound" on the page 36.

Getting started with navigation

Precautions for safe driving

Please observe and comply with local traffic rules and regulations.

- For your safety, some features cannot be operated while driving. Features that cannot be operated will be disabled.
- The route displayed for destination guidance is a reference and the route guidance will take you to the vicinity of your destination. The highlighted route is not always the shortest distance, the least congested, and in some cases might, not be the fastest route.
- Road, name, and POI information may not always been completely updated. It might happen that road names and POI information is not up to date.
- The car position mark does not always indicate your exact location. This system uses GNSS information, various sensors, and road map data to display the current position. However, errors in displaying your location may occur if the satellite is transmitting inaccurate signals or two or less satellite signals can be received. Errors that occur in such conditions cannot be corrected.
- The position of the vehicle within the navigation may differ from your actual location depending on various reasons, including the satellite trans-

mission state, vehicle state (driving location and conditions), etc. Additionally, the car position mark may differ from the actual position if the map data is different from the actual road landscape, such as changes due to the construction of new roads. If such differences occur, driving for a short period of time will automatically correct the position of the vehicle through map matching or GNSS information.

What is GNSS?

The GNSS(Global Navigation Satellite System) is a satellite-based navigation system made up of a network of 32 satellites placed into orbit by the Global Positioning System (GPS) of U.S.A, GLONASS of RUSSIA, etc.

GNSS works in any weather conditions, anywhere in the world, 24 hours a day. There are no subscription fees or setup charges to use GNSS.

About satellite signals

Your unit must acquire satellite signals to operate. If you are indoors, near tall buildings or trees or in a parking garage, the unit cannot acquire satellite signals.

Acquiring satellite signals

Before the unit can determine your current position and navigate a route, you must do the following steps:

1. Go outside to an area free from tall obstructions.
2. Turn on the unit.
Acquiring satellite signals can take a few minutes.

Before Using the Bluetooth Handsfree

What is Bluetooth® Wireless Technology?

- Bluetooth® Wireless Technology refers to a short-distance wireless networking technology which uses a 2.45GHz frequency to connect various devices within a certain distance.
- Supported within PCs, external devices, Bluetooth® phones, PDAs, various electronic devices, and automotive environments, Bluetooth® Wireless Technology to be transmitted at high speeds without having to use a connector cable.
- Bluetooth® Handsfree refers to a device which allows the user to conveniently make phone calls with Bluetooth® mobile phones through the Multimedia system.
- The Bluetooth® Handsfree feature may not be supported in some mobile phones.

Precautions for Safe Driving


- Bluetooth® Handsfree is a feature that enables drivers to practice safe driving. Connecting the head unit with a Bluetooth® phone allows the user to conveniently make calls, receive calls, and manage the phone book. Before using Bluetooth® Wireless Technology, carefully read the contents of this user's manual.
- Excessive use or operations while driving may lead to negligent driving practices and be the cause of accidents. Do not operate the device excessively while driving.
- Viewing the screen for prolonged periods of time is dangerous and may lead to accidents. When driving, view the screen only for short periods of time.


Cautions upon Connecting Bluetooth Phone

- Before connecting the head unit with the mobile phone, check to see that the mobile phone supports Bluetooth® features.
- If you do not want automatic connection with your Bluetooth® device, turn the Bluetooth® feature off of the Bluetooth® device.
- Park the vehicle when connecting the head unit with the mobile phone.
- Some Bluetooth features may occasionally not operate properly depending on the firmware version of your mobile phone. If such features can be operated after receiving a S/W upgrade from your mobile phone manufacturer, unpair all devices and pair again before use.

Bluetooth Connection



When no Phones Have Been Paired

Press the  key on the steering wheel or press the **PHONE** key ► Press the **OK** .

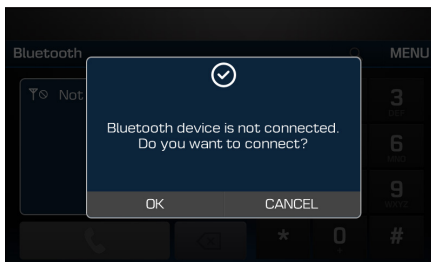

Pairing from the Bluetooth® Device



Press the **MENU** button ► Press the **Search from device** .

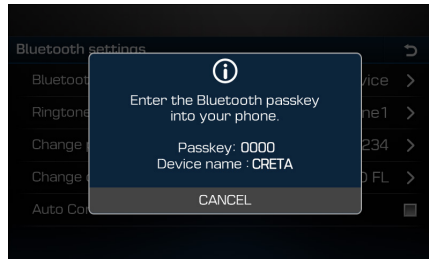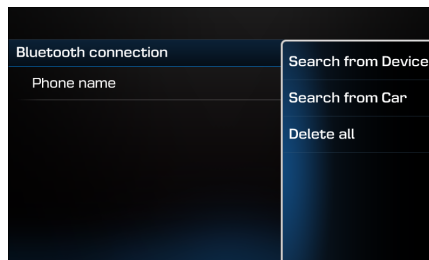

From the Bluetooth® device, search for the car name and pair the device. When searching from the Bluetooth® device, the car name is CRETA and the default passkey is '0000'.


Pairing from the car


Press the **MENU** button ► Press the **Search from car** ► Press the phone name to pair ► Press the **YES** .

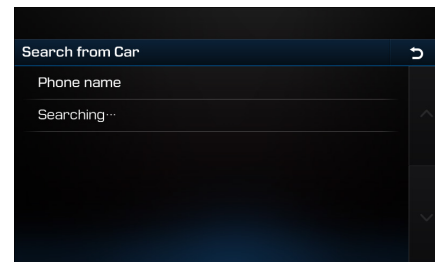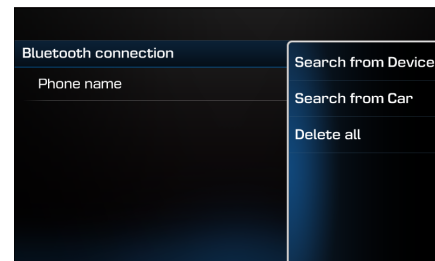

Bluetooth Connection

When a Phone is Already Paired


Press the  key on the steering wheel or press the **PHONE** key ► Press the **OK** ► Press the phone name to pair ► Press the **YES**.

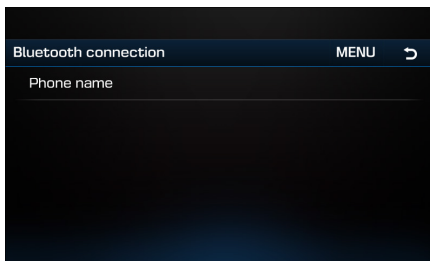


NOTE

- When a Bluetooth device is connected, a new device cannot be paired. If you want to pair a new phone, first disconnect the connected Bluetooth device.

When your phone is connected

Press the  key on the steering wheel or press the **PHONE** key on the head unit to display the following screen.

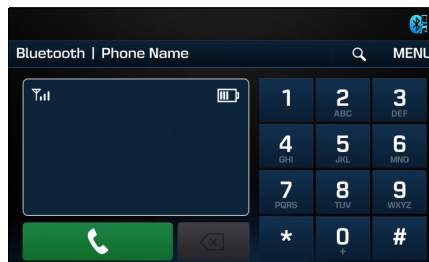



NOTE


- Once Bluetooth connection is successful, the name of the connected mobile phone will be displayed on the phone screen and Bluetooth handsfree functions will be ready to be operated.
- Some functions may not be supported due to limited Bluetooth compatibility between the car system and mobile phone.

Bluetooth Phone



Making/Answering Calls

Calling by Dialing a Number

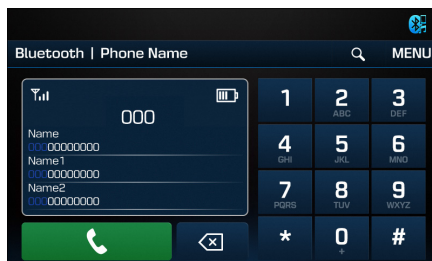Enter number on the Dial Pad ► Press the  button or the key  on the steering wheel.



NOTE

- If you press the wrong number, press  to delete one digit of the entered number. Press and hold the dial pad 0 + to enter a "+".
- Press the  button to search phone numbers. For detail, refer to the "Searching for contacts" on the page 33.

Making a Call from Speed Dial

Enter the 1 or 2 digit speed dial number with the Dial Pad ► Press and hold the last number.



Calling through Redial


Press and hold the  button or Press the  key on the steering wheel twice.

NOTE

- Redialing is not possible when there is no dialed calls list.

Answering a Call


Incoming call notice ► Press the  button or the  key on the steering wheel.

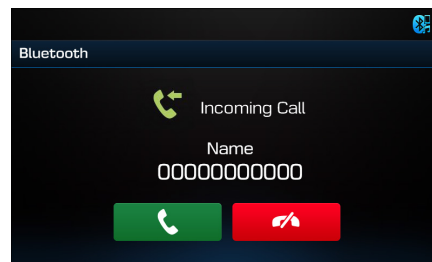


 



Rejecting a Call

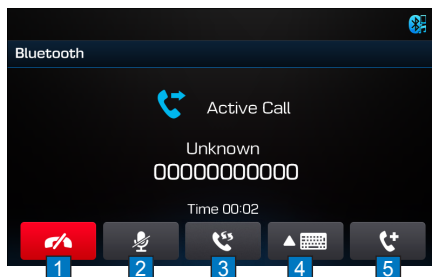

Incoming call notice ► Press the  button or the  key on the steering wheel.

Operating Menus during a Call






Name	Description
1 	Ends a call.
2 	Turns the Mic On/Off.
3 	Switches a voice call from the car handsfree to the mobile phone.
4 	Display dial pad screen for entering ARS numbers.
5 	3 Way call.



Ending a Call

While on a call ► Press the  button or the  key on the steering wheel.

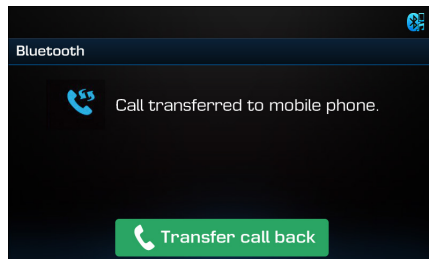

Switching Call to Bluetooth® Phone

During handsfree call ► Press the  button or press and hold the  key on the steering wheel.



During call on mobile phone ► Press the  button or press and hold the  key on the steering wheel.


Making 3 way call

While on a call ► Press the  button. ► Press phone number you want to make a call ► Press the  button.

Bluetooth Phone

Using the Menu Buttons

In Phone screen ► Press the **MENU** button to use Contacts , Calling list , Favorites , Bluetooth settings.

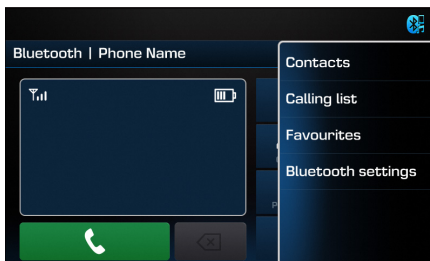


Contacts

Updating Mobile Phone Contacts

Up to 5,000 mobile phone contacts can be updated.


In Contacts screen ► Press the **MENU** button
► Press the **Update** .

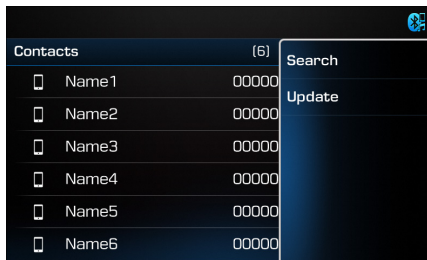

The contacts are deleted and the contacts of the connected phone is updated.


Making a call from contacts

In Contacts screen ► Press the contact you want to call.

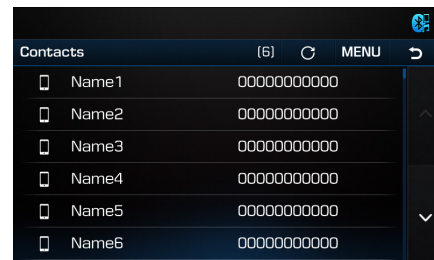

Searching for contacts


In Contacts screen ► Press the **MENU** button ►
Press the **Search** ► Enter the name ► Press the
OK ► Press the contact you want to call.

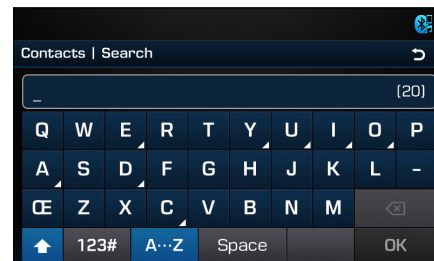

Calling list

Viewing Calling lists

In Phone screen ► Press the **MENU** button ► Press the **Calling lists** .

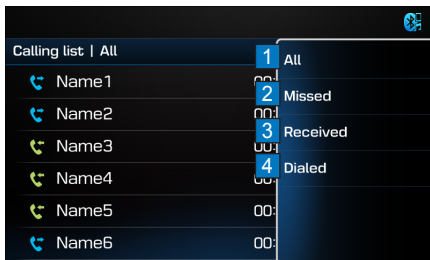

Press the **MENU** button on Calling list screen.

Name	Description
1 All	Displays all calling list.
2 Missed	Displays the missed calling list.
3 Received	Displays the incoming calling list.
4 Dialed	Displays the outgoing calling list.


NOTE

- The calling list may not be saved in some mobile phones.

Favourites


Calling Favourites

In Phone screen ► Press the **MENU** button ► Press the **Favourites** ► Press the Favourite you want to call.


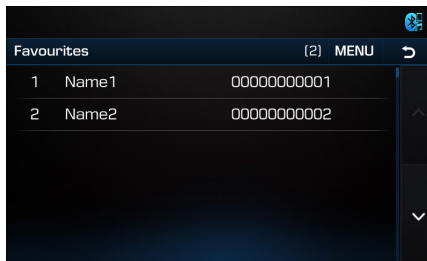


Saving to Favourite

In Phone screen ► Press the **Add to favourites** button.

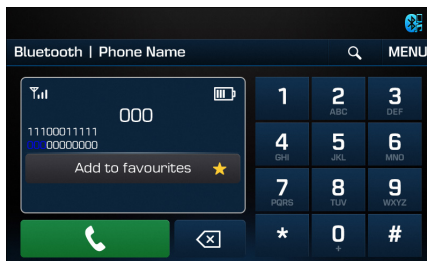


In Contacts screen or Calling list screen ► Press and hold the contact you want to save ► Press the **Save to Favourites** .

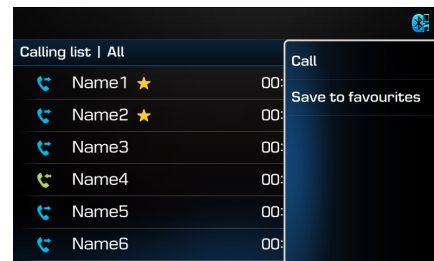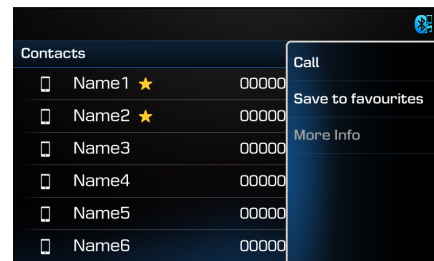


Bluetooth Phone

Deleting Favourites

In Favourites screen ► Press the **MENU** button ►
Press the **Delete all** ► Press the **OK**.

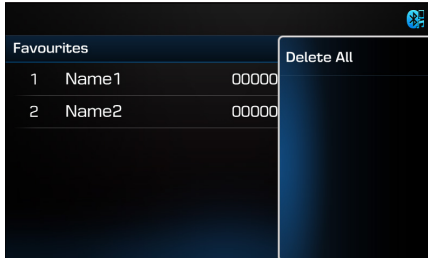


In Favourites screen ► Press and hold the favourite
you want to delete ► Press the **Delete** ► Press
the **OK**.

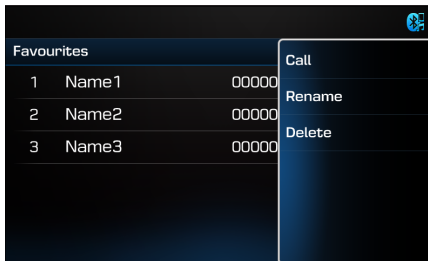


Changing the Favourites name

In Favourites screen ► Press and hold the favour-
ite you want to change ► Press the **Rename** ►
Enter the name ► Press the **OK**.

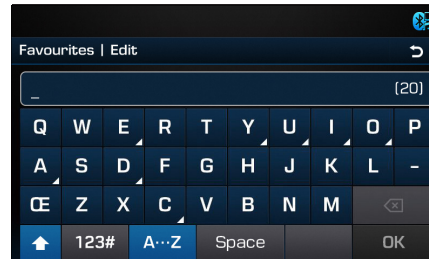

Bluetooth settings


In Phone screen ► Press the **MENU** button ►
Press the **Bluetooth settings**.

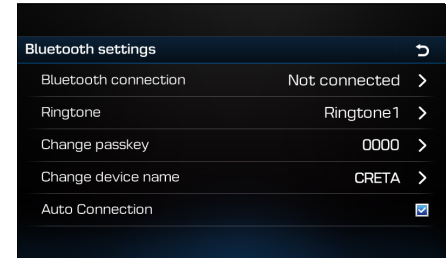


For details, refer to the "Bluetooth" on the page
38.

Setup

Starting mode


Press the  key to display the Setup screen.

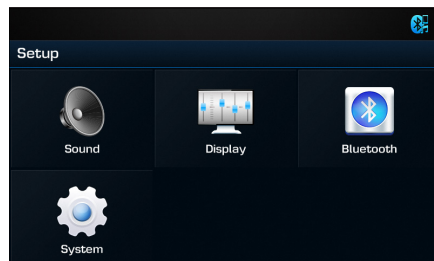

Sound

This menu is used to adjust the sound effects for the whole system.


Press the  key ► Press the **Sound** button.

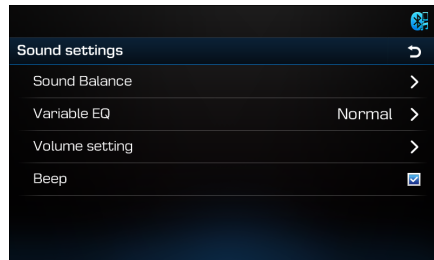


Sound Balance

In Sound settings screen ► Press the

Sound Balance ► Set the desired sound balance.

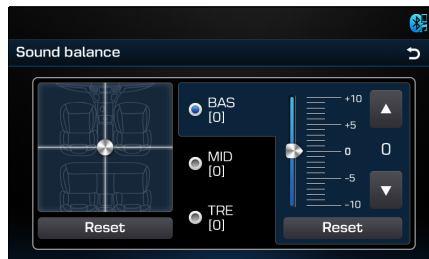


Use the , , , and  buttons to adjust settings.

Press the **Reset** to restore sound to the center position.

Variable EQ

In Sound settings screen ► Press the


Variable EQ ► Set the desired mode.

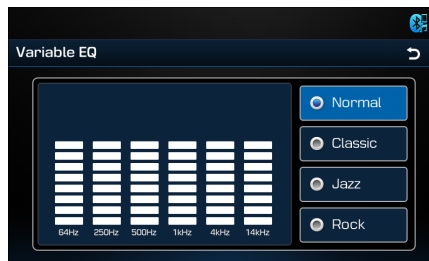




Volume setting

In Sound settings screen ► Press the

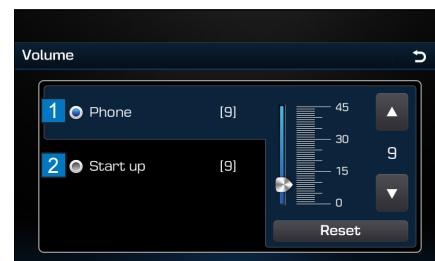Volume setting ► Set the desired volume.



Name	Description
1 Phone	Controls the volume related to phone.
2 Start up	Controls the audio volume when starting the system.

Use the , , and  buttons to adjust settings.


Press the **Reset** to initialize the settings.

Setup

Beep

This menu allows you to play a beep sound whenever you operate the touch screen.


In Sound settings screen ► Press the **Beep** to turn on/off.

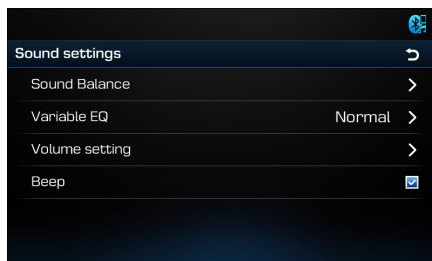

Display


This menu allows you to adjust the brightness and set the dimming mode for the whole system.

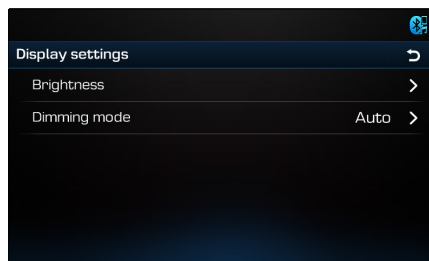


Press the  key ► Press the **Display**.



Brightness

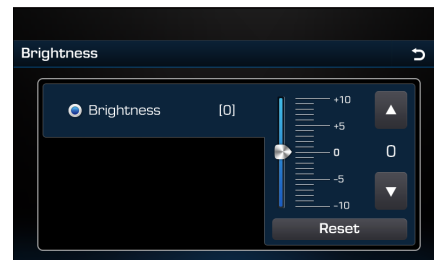In Display settings screen ► Press the **Brightness** ► Set the desired brightness.




Use the ,  and  buttons to adjust settings.

Press the **Reset** to initialize the settings.

Dimming mode


This menu allows you to set the brightness according to mode changes.


In Display settings screen ► Press the **Dimming mode** ► Set the desired mode.

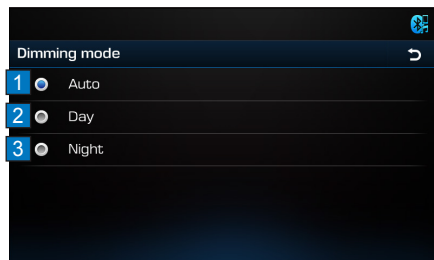

Name	Description
1 Auto	After selection of auto mode, two conditions arise. 1. Headlight on → Night mode 2. Headlight off → Day mode
2 Day	Brightness level always set on high.
3 Night	Brightness level always set on low.

Bluetooth settings



This menu allow you to set Bluetooth settings.
Press the  key ► Press the **Bluetooth**.

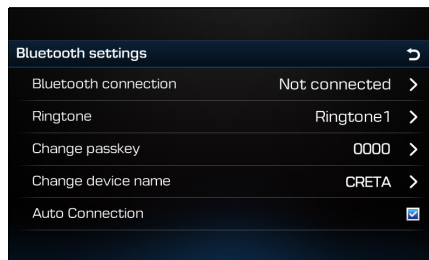

Bluetooth connection

This menu allow you to manage the Bluetooth device list, such as pairing, connecting or deleting Bluetooth devices.

In Bluetooth settings screen ► Press the **Bluetooth connection** ► Set the desired settings.

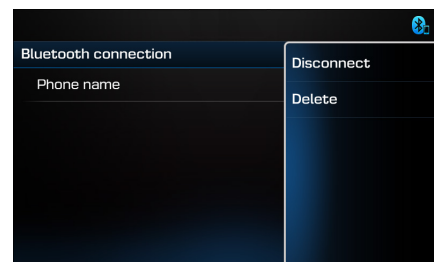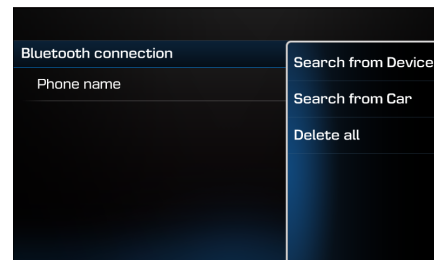


Press and hold the phone name to disconnect/delete the device.

Setup

Ringtone

The configured ringtone is played through the vehicle speakers when you receive a call.


In Bluetooth settings screen ► Press the **Ringtone** ► Set the desired ringtone.

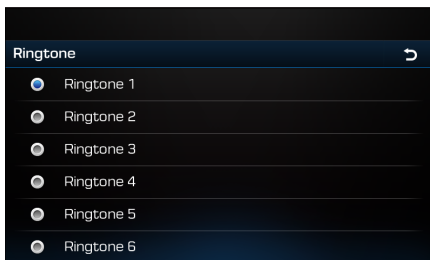

Change passkey

This feature allows you to change the passkey used for Bluetooth device authentication.

In Bluetooth settings screen ► Press the **Change passkey** ► Enter the passkey.

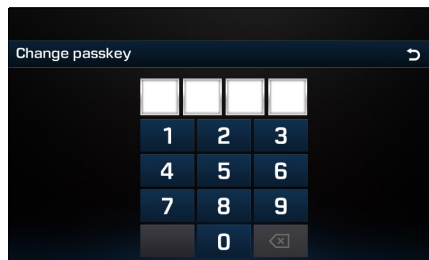

NOTE

- The default passkey is 0000.

Changing device name

In Bluetooth settings screen ► Press the

Change device name ► Enter the name.



NOTE


- The default device name is CRETA .

Setup

Auto Connection


The Bluetooth® device will automatically be connected according to the option set when the car ignition is turned on.

In Bluetooth settings screen ► Press the **Auto Connection** to turn on/off.

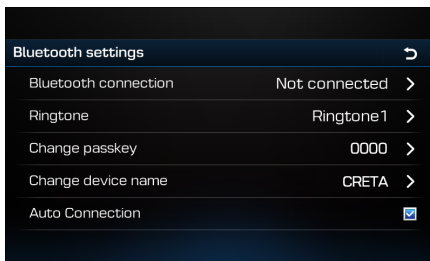

System


Press the  key ► Press the **System** button.

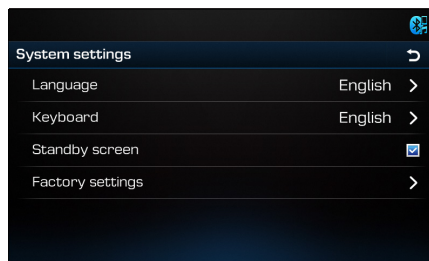

Language

This menu allows you to set the language of the system.


In System settings screen ► Press the **Language** ► Press the desired language.

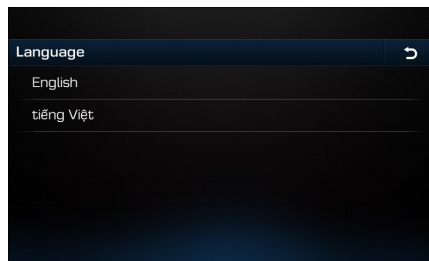

Keyboard

This option allows you to change the type of keyboard used within the system.


In System settings screen ► Press the **Keyboard** ► Press the desired language.

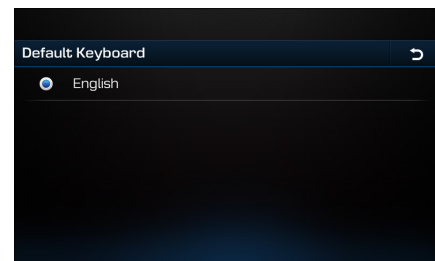

Setup


Standby screen



In System settings screen ► Press the **Standby screen** to turns on/off the screen displayed when the system power is turned off.

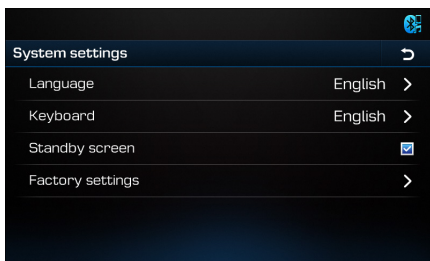

Factory settings

This menu allows you to reset settings specified by the user.

In System settings screen ► Press the **Factory settings** ► Press the desired item ► Press the  ► Press the **YES**.

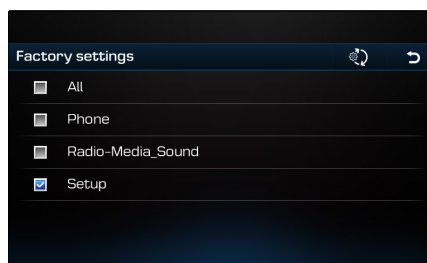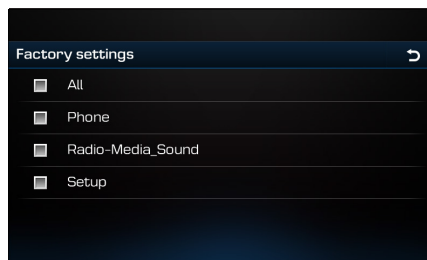

USB MP3 Specification

Category	Description
MP3 File Specification	Response Specification: MPEG1 AUDIO LAYER3
Recommended Bitrate and Sampling Frequency	Response Sampling Frequency : 32, 44.1, 48 (KHz) Response Bitrate: 32, 40, 48, 56, 64, 80, 96, 112, 128, 160, 192 ,224 ,256 ,320 (Kbps)
ID3 TAG	ID3 v1.1 and ID3 v2.x TAG
Detailed Specification	<ul style="list-style-type: none">• Max Directory Layers: 15 layers• Max length of folder names and file names: 255Bytes• Characters supported for folder/file names: English and numbers• Max number of files recognized from one USB device: 5000

Video and Image Specification

Category	Description
File Format	AVI(DivX), MPEG
Image Format	jpg, gif, bmp, png
Extensions	avi, divx, mpg, mpeg, mp4, wmv
Supported Image Resolution	Max 4000x3000
Supported Image File Size	Max 4 Mbytes
Supported image zoom in/out	Max 300%
Video Codec	MPEG4-ASP, MPEG4-AVC(H.264), AVS, VP8
Video Resolution	1920 x 1080 (WMV 9: Max 8Mbps, 1280x720, WMV 8: 640x480)
Audio Codec	MP3, OGG, WMA ...
Subtitles	SMI
Unsupported files	<ul style="list-style-type: none">• Files not compatible with supported specifications• Modified files (files with modified file formats)• Transformed files (example: AVI files encoded with WMV video codec)• Files without indexes

Before thinking there is a product defect

The current car position as shown on the navigation may differ from the actual position under the following conditions.

- When driving on Y-shaped roads with narrow angles, the current position may be displayed in the opposite direction.
- Within city streets, the current position may be displayed on the opposite side or on an off-road position.
- When changing the zoom level from maximum to a different level, the current position may become displayed on a different road.
- If the vehicle is loaded onto a ferry or a car transport vehicle, the current position may become stalled on the last position prior to loading.
- When entering a road after passing an underground parking structure, building parking structure or roads with many rotations.
- When driving in heavy traffic with frequent starts and stops.
- When driving under slippery conditions, such as heavy sand, snow, etc..
- When the tires have recently been replaced (Especially upon use of spare or

studless tires).

- When using tires of improper size.
- When the tire pressure for the 4 tires are different.
- When the replacement tire is worn or used (Especially studless tires having passed a second season).
- When driving near high-rise buildings.
- When a roof carrier has been installed.
- When a long distance route is calculated while driving on an expressway, in such cases, continued driving will automatically enable the system to conduct map matching or use updated GNSS information to provide the current position (In such cases, up to several minutes may be required).

Correct route guidance may not occur due to search conditions or driving position. The following occurrences are not malfunctions:

- Guidance to go straight may be given while driving on a straight road.
- Guidance may not be given even when having turned at an intersection.
- There are certain intersections in which guidance may not occur.

- A route guidance signaling for a u-turn may occur in some No u-turn intersections.
- Route guidance signaling entrance into a No-entry zone may occur (No-entry zone, road under construction, etc.).
- Guidance may be given to a position that is not the actual destination if roads to reach the actual destination do not exist or are too narrow.
- Faulty voice guidance may be given if the vehicle breaks away from the designated route. (e.g. if a turn is made at an intersection while the navigation provided guidance to go straight.)

These situations may occur after conducting route calculation. The following occurrences are not malfunctions:

- Guidance may be given to a position differing from the current position when turning at an intersection.
- When driving in high speeds, route recalculation may take a longer period of time.

Trouble shooting

1. Errors which occur during the operation or installation of the device may be mistaken as a malfunction of the actual device.
2. If you are having problems with the device, try the suggestions listed below.
3. If the problems persist, contact your dealer

Problem	Possible Cause
There are small red, blue, or green dots on the screen	Because the LCD is manufactured with technology requiring high point density, a pixel or lighting deficiency may occur within 0.01% of total pixels.
The sound or image is not working	<ul style="list-style-type: none">• Has the Switch for the vehicle been turned to [ACC] or [ON]?• Has the SYSTEM been turned OFF?
The screen is being displayed but sound is not working	<ul style="list-style-type: none">• Has the volume been set to a low level?• Has the volume been muted?
When the power is turned on, the corners of the screen are dark	<ul style="list-style-type: none">• The display appearing somewhat dark after prolonged periods of use is normal with LCD panels. It is not a malfunction.• If the screen is very dark, contact your nearest dealer for assistance.
Sound is working from only one speaker	Are the positions of Fader or Balance sound controls adjusted to only one side?
Sound does not work in AUX mode	Are the audio connector jacks fully inserted into the AUX terminal?
The external device is not working	Is the external device connected with a standard connector cable?
When turning power on, the most recent mode screen is not displayed	<p>Within modes that play files by reading external sources, such as USB, iPod, or Bluetooth® streaming mode, the most recently played mode screen prior to turning off power may not properly load.</p> <ul style="list-style-type: none">• If the corresponding device is not connected, the mode operated prior to the most recent mode will operate.• If the previous mode still cannot be properly played, the mode operated prior to that will operate.

Trouble shooting

Problem	Possible Cause	Countermeasure
The power does not turn on.	The fuse is disconnected.	<ul style="list-style-type: none"> Replace with a suitable fuse. If the fuse is disconnected again, please contact your point of purchase or service center.
	Device is not properly connected.	Check to see that the device has been properly connected.
The system does not play.	The vehicle battery is low.	Charge the battery if the problem persists, contact your point of purchase or service center.
The image colour/ tone quality is low.	The brightness, and contrast levels are not set properly.	Properly adjust the brightness, and contrast levels through Display Setup.
Sound does not work.	The volume level is set to the lowest level.	Adjust the volume level.
	The connection is not proper.	Check to see that the device has been properly connected.
	The device is currently fast-forwarding, rewinding, scanning, or playing in slow mode.	The sound will not work when the device is fast-forwarding, rewinding, scanning, or playing in slow mode.

Trouble shooting

Problem	Possible Cause	Countermeasure
The sound or image quality is low.	Vibration is occurring from where the conversion switch has been installed.	The sound may be short circuited and the image distorted if the device vibrates.
	Image colour/tone quality is low.	The device will return to normal once vibrations stop.
The USB does not work	USB memory is damaged.	Please use after formatting the USB into FAT 12/16/32 format.
	USB memory has been contaminated.	Remove any foreign substances on the contact surface of the USB memory and multimedia terminal.
	A separately purchased USB HUB is being used.	Directly connect the USB memory with the multimedia terminal on the vehicle.
	A USB extension cable is being used.	Directly connect the USB memory with the multimedia terminal on the vehicle.
	A USB which is not a Metal Cover Type USB Memory is being used.	Use standard USB Memory.
	An HDD type, CF, SD Memory is being used.	Use standard USB Memory.
	There are no music files which can be played.	Only MP3, WMA file formats are supported. Please use only the supported music file formats.
The iPod is not recognised even though it has been connected	There are no titles which can be played.	Use iTunes to download and save MP3 files into the iPod.
	The iPod firmware version has not been properly updated.	Use iTunes to update the firmware version and reconnect the iPod with the device.
	The iPod device does not recognise downloads.	Reset the iPod and reconnect with the device.



DC Symbol



DC 12 V



Speaker 4 Ω



Pulse 10 A



- Minus Ground



This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Any changes or modifications to this device not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum 20 cm between the radiator and your body. This transmitter must not be collocated or operating in conjunction with any other antenna or transmitter unless authorized to do so by the FCC.