

CAUTION-ELECTRIC TOY
NOT RECOMMENDED FOR CHILDREN
UNDER 6 YEARS OF AGE . AS WITH ALL
ELECTRIC PRODUCTS, PRECAUTIONS
SHOULD BE OBSERVED DURING HANDLING
AND USE TO PREVENT ELECTRIC SHOCK.
INPUT: 120VAC, 60HZ 4W ONLY. OUTPUT:
5.9VDC, 0.15A

FOC NOTE : THE MANUFACTURER
IS NOT RESPONSIBLE FOR ANY
RADIO OR TV INTERFERENCE CAUSED
BY UNAUTHORIZED MODIFICATIONS
TO THIS EQUIPMENT. SUCH MODIFICATIONS
COULD VOID THE USER'S AUTHORITY TO
OPERATE THE EQUIPMENT.

OPERATING INSTRUCTIONS

BATTERY INSTALLATION:-

(THE RECHARGEABLE NI-CD BATTERY PACK IS NOT CHARGED. PLEASE CHARGE IT FOR 8 HOURS PRIOR TO USE)

- 1) Plug the wall pack battery charger into wall outlet.
- 2) Click the battery pack into the charger. Make certain the battery pack is secure in charger.
- 3) To disconnect, push the button of the charger (See Diagram 1) and simultaneously slide battery pack out.
- 4) You should charge the battery pack for 8 hours the first two times. Then subsequent charges will require minimum 4 hours.
- 5) After charging, the battery will be warm. This condition is normal for fully charged batteries.
- 6) If the speed of the car slows down suddenly, it is time to recharge.
- 7) After use, the battery pack will be hot! Wait at least 20 minutes until it cools before recharging. Recharging a warm or hot battery pack will greatly shorten the use life of the battery.

BATTERY PACK CARE

- If battery pack and connector are wet, thoroughly dry before charging.
- Battery pack can be charged for much longer periods without harm. However we recommend unplugging the battery pack if battery pack will not be used for several days.

CAUTIONS

- Do not charge battery pack that is hot, wet or shows leakage or corrosion.
- May explode if disposed of in fire!
- Do not disassemble the battery pack.

HOW TO INSTALL BATTERIES IN VEHICLE :

1. Push the ON/OFF switch to "OFF" position on the underside of the vehicle. (See Diagram 2)
2. Open the battery cover.
3. Insert the 4.8 volt battery pack into battery compartment. (See Diagram 3)
4. Replace the battery cover.

HOW TO INSTALL BATTERY IN TRANSMITTER :

1. Slide open the battery case cover at the back of the transmitter and put a 9-volt battery inside following the engraved signs. (See Diagram 4)
2. Replace the battery case cover.

NOTE : REMOVE BATTERY AFTER YOU HAVE FINISHED USING YOUR VEHICLE.



(DIAGRAM 1)



(DIAGRAM 2)



(DIAGRAM 3)

ATTENTION PARENTS:-
IT IS RECOMMENDED THAT THIS TOY AND ALL ACCESSORIES BE PERIODICALLY EXAMINED
FOR POTENTIAL HAZARDS AND THAT ANY POTENTIALLY HAZARDOUS PARTS BE REPAIRED OR REPLACED.

HOW TO PLAY:

- Build up antenna by passing the cable through the antenna tube provided and plug into the vehicle tightly. Otherwise, the vehicle will not work. (See Diagram 2)
- Push the ON/OFF switch to the "ON" position of the vehicle. (See Diagram 2)

FORWARD RUNNING:

- Push the Driving Control Stick forward for forward running. (See Diagram 7)

REVERSE RUNNING:

- Put the Driving Control Stick backward for reverse running. (See Diagram 8)

FRONT WHEELS STEERING ADJUSTMENT:

- If the vehicle does not run straight forward, adjust the lever for satisfactory alignment on the underside of the vehicle. (See Diagram 9)
- If the vehicle runs towards left, turn "Steering Alignment Lever" towards "R".
- If the vehicle runs towards right, turn "Steering Alignment Lever" towards "L".

STEERING OPERATION:

- Turn the Steering Control Stick to the left or right while pushing the Driving Control Stick forward at the same time, the vehicle will turn left or right and run forward. (See Diagram 10)
- Turn the Steering Control Stick to the left or right while pulling the Driving Control Stick backward at the same time, the vehicle will turn left or right and run backward. (See Diagram 11)

STOP OPERATION:

- Release both Control Sticks, the vehicle will stop. (See Diagram 12)

PERFORMANCE TIPS:

- Don't drive in grass, sand or carpet.
- Don't go through water.
- Be sure to rest your vehicle for at least 30 minutes after every 15 minutes of operation.
- Make sure On/Off switch on your vehicle is on "OFF" when not in use.
- Don't bend antenna.
- Electrical, CB interference, mobile phones, air conditioning, elevators and steel girders in building will affect the operation of your vehicle.
- Don't leave the vehicle or transmitter near sources of heat or under direct sunlight for long periods of time.
- Remove the batteries from the vehicle and transmitter when not in use.

CARTON ELECTRIC TOY

Not recommended for children under 8 years of age. As
with all electric products, precautions should be observed
during handling and use to prevent electric shock.

INPUT: 220VAC 50/60HZ 4W ONLY
OUTPUT: 3.0VDC 0.15A



(DIAGRAM 4)



(DIAGRAM 5)



(DIAGRAM 6)

GO FORWARD AND
TURN LEFT
OR RIGHT



(DIAGRAM 7)



(DIAGRAM 10)



(DIAGRAM 8)



(DIAGRAM 11)



(DIAGRAM 9)



(DIAGRAM 12)