

Tag

User Manual



Tag User Manual	2-3
Index	

- 01 **Getting Started**
- 02 **Add Your Tag**
- 03 **Locate Your Tag**
- 04 **Notifications**
- 05 **When Your Tag Is Lost**
- 06 **Resetting Tag**
- 07 **Extras**
- 08 **The Fine Print**
- 09 **About Apple Find My**
- 10 **Battery**

Tag User Manual	4
01	Getting Started

- 01.1 **Power On / Off:**

Press the Tag Function Button once to turn it on. It should beep once to indicate that it is powered on.

To power off, hold the same button for at least three seconds. You will hear two beeps to indicate that your Tag is powered off.
- 01.2 **Check For Updates:**

To use the Apple Find My app to locate this item, the latest version of iOS, iPadOS, or macOS is recommended. The Find Items app on Apple Watch requires the latest version of watchOS.

Tag User Manual	5
02	Add Your Tag

- 02.1 **Start The App**

Open Find My app on your supported iPhone.
- 02.2 **Connect Your Tag**

Press the function button once to power on your Tag

Tap+, then "Add Other Item" .

Once your Tag is located, tap "connect"

Enter a name and choose an emoji for your Tag and tap "Continue".

Find My will ask for confirmation to add your Tag to your Apple ID Tap "Agree"

Tap "Finish" and your Tag will be set up and ready to be used.

Tag User Manual	6
03	Locate Your Tag

- 03.1 **Find Tag When It's Nearby:**

Open Find My app and select the "Items" tab or open the Find Items app on your iPhone or Apple Watch.

Tap on your Tag from the list.

Tap "Play Sound" to make your Tag beep.

Tap "Stop Sound" to stop the beeps once you find.
- 03.2 **Find Tag's Location:**

Open Find My app and select the "Items" tab or open the Find Items app on your iPhone or Apple Watch.

Tap on your Tag from the list.

Your Tag's location will appear on the Map with a time stamp of when the item was located.

To navigate to the Tag's location, tap "Directions" to open Apple Maps .

Tag User Manual	7
04	Notifications

- 04.1 **Enabling "Notify When Left Behind":**

Open Find My app and select the "Items" tab or open the Find Items app on your iPhone or Apple Watch.

Tap on your Tag from the list.

Under "Notifications" enable the "Notify When Left Behind" toggle.

You will receive a notification when you leave your Tag behind and it's no longer in range of your device.
- 04.2 **Enabling "Notify When Found":**

Under "Notifications", enable the "Notify When Found" toggle.

When your Tag is seen by another Find My network device, you will receive a notification of its location.

Note : " Notify When Found" can only be activated when your Tag is out of range.

Tag User Manual	8
05	When Your Tag Is Lost

- 05.1 **Enabling "Lost Mode":**

Open Find My app and select the "Items" tab or open the Find Items app on your iPhone or Apple Watch.

Tap on you Tag from the list.

Under "Lost Mode" tap "Enable"

A screen detailing Lost Mode will pop up, tap "Continue"

Enter your phone number or email address and tap "Next".

You may enter a message that will be shared with the person that finds your item.

Tap "Activate" to enable "Lost Mode"

Note: When "Lost Mode" is enabled, "Notify When Found" is automatically enabled.

Note: When "Lost Mode" is enabled, your Tag is locked and cannot be paired to a new device.

06 Resetting Tag

06.1 Remove The Tag From Find My App:

Open Find My app and select the "Items" tab.

Tap on your Tag from the list.

please ensure "Lost Mode" is disabled.

Scroll to the bottom of the screen and tap "Remove Item".

A summary will open, tap "Remove" to confirm.

06.2 Factory Reset Your Tag:

After successfully removing the Tag from Find My app, press the Tag's function button four times rapidly and then hold it a fifth time until you hear a ringing chime.

The Tag is now reset and ready to be paired to a new Apple ID.

07 Extras

07.1 Unwanted tracking:

If any Find My network accessory separated from its owner is seen moving with you over time, you'll be notified in one of two ways:

1. If you have an iPhone, iPad, Find My will send a notification to your Apple device. This feature is available on iOS or iPadOS 14.5 or later.

2. If you don't have an iOS device or a smartphone, a Find My network accessory that isn't with its owner for a period of time will emit a sound when it's moved.

These features were created specifically to discourage people from trying to track you without your knowledge.

08 The Fine Print

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.

08 The Fine Print

1. With not being connected to any other Bluetooth devices, one iPhone is capable of connecting to up to 32 pieces of Tags.

However, the number of connections may vary depending on the version of iOS in the iPhone.

2. A Tag can be shared with up to 5 more other iPhones after being bound to a connection, provided that the iOS of the bound phone and the shared connection phone must be of the same version.

3. Once the lost notice mode is turned on, when the item leaves the original location, the bound mobile phone will receive a lost notice.

4. After the lost mode is enabled, if a third party picks up the item, the picker can identify the device in the "Find My" APP on his iPhone and view the relevant lost information.

09 About Apple Find My

The Apple Find My network provides an easy, secure way to locate compatible personal items on a map using the Find My app on your iPhone, iPad, or Mac. Simply pair your compatible product with the Apple Find My app to view it right alongside your Apple devices. If your item ever goes missing, you can put it in Lost Mode to display a message and contact information to anyone who might find it. The Find My network is encrypted and anonymous, so no one else, not even Apple or the maker of your personal item, can view its location.

Use of the Works with Apple badge means that a product has been designed to work specifically with the technology identified in the badge and has been certified by the product manufacturer to meet Apple Find My network product specifications and requirements. Apple is not responsible for the operation of this device or use of this product or its compliance with safety and regulatory standards.

Apple, Apple Find My, Apple Watch, Find My, iPhone, iPad, iPadOS, Mac, macOS and watchOS are the trademarks of Apple Inc. iOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.

10 Battery

Tag contains a coin cell battery. The battery may need to be replaced during the life of the product. Replace only with the same type (CR2032) and rating of battery, observing the correct polarity.

To replace the battery:

1. Use your fingernail or insert a small tool into the gap to open the cover.


2. Use a paperclip to remove the battery and replace with a new one face the positive terminal up.

3. Close the battery cover by aligning the hole. There is a risk of fire or electric shock, if the battery is replaced by an incorrect type. Important: Dispose of used battery according to your local environmental laws and guidelines.

Keep batteries away from children. Do not ingest battery, if ingested or placed inside body seek medical attention immediately. Ingesting can cause severe chemical burns in just two hours and result in serious injury or death. If the battery compartment does not close securely, stop using the device and keep away from children.

10 Battery

10.1

 **WARNING:** Do not ingest battery; chemical burn hazard

Choking hazard

Tag, the battery compartment door, the battery, and case may present a choking hazard or cause other injury to small children. Keep these items away from small children.