Functions:

The product is powered on by default in the transmit mode, the red indicator light flashes quickly, long press the function key to switch to the receiving state, and the blue indicator light flashes rapidly.

Pairing steps:

A: Launch mode:

- 1. Plug the device into the USB port to supply power (such as TV, computer, mobile phone charger on the USB charging port), the device will automatically turn on, the device lights red and flashes quickly, that is, enters the wireless search state;
- 2. Insert the 3.5MM audio cable into the 3.5mm audio port on the device, and insert the other end of the audio cable into the audio output interface of the computer, TV, projector, mobile phone, tablet, MP3, CD player, etc. :the device's headphone output interface);
- 3. Turn on the audio receiving device (such as wireless headset, wireless speaker, etc.) to the pairing state, the device will be paired automatically, the pairing is successful, and the red indicator light is always on;
- 4. If it is not the wireless device you want to connect to, you can quickly search for the next wireless audio receiving device by briefly pressing the function button on the device.

B: Receive mode:

- 1. Plug the device into the USB port for power supply (5V USB interface), the device will automatically turn on, the device will light red indicator light and flash quickly, often press the function button, the indicator light will switch to blue, and flash quickly, that is, enter wireless reception.
- 2. Insert the 3.5MM audio cable into the 3.5mm audio port on the device, and insert the other end of the audio cable into the AUX port of the playback device (headphone, speaker, etc.);
- 3. Turn on the wireless function of the mobile phone (or computer), search for the surrounding wireless devices, find a device named "wireless music adapter" in the search results, find it and match it with it. After the pairing is successful, the indicator light on the wireless receiver becomes constantly lit state. When you have a coming call, press the button to answer the call hands-free.

C: RF information:

Bluetooth Chip: AC6928
Crystal Oscillator: 24MHz

3. Antenna Specification: PCB Antenna: 3 dBi

4. Frequency Range: 2402~2480MHz