

设计版本号

Rev\_1.3\_EN

Hesung | innovation  
和生创新



 
产品名称   Product name	日期   Date	尺寸   size
DR-KCM001S 说明书	2023/02/08	105 x 150 mm
印刷字体   type	比例   scale	装订方式 Bookbinding
Poppins *标注信息：微软雅黑（非印刷）	1:1	骑马钉装订
<p>材质：封面封底200g双铜 哑胶防刮花正面，反面不用哑胶 内页128g 铜版纸 印哑油</p> <p>印刷要求：四色印刷，文字线图清晰</p> <p><b>*此页删除不做印刷</b></p>		
设计师：Designer	设计总监   Design Director	
	TOM	



C0 M0  
Y0 K100



C0 M60  
Y100 K0




设计师	设计负责人	产品负责人	法规	采购

审稿 检查事项 会签以“/”形式确认 (负责部门明确确认)
审稿检查事项
商标规范
字符高度
工艺材质
颜色标识
产品文案
条码检查
厂址
全成分
警告标语
执行标准
产品尺寸
外/内箱尺寸
OEM信息*
产品包装信息
请相关部门确认产 品、包装等信息！
*OEM信息： 委托方及被委托方 信息（名称、地址、 邮编、电话、生产 许可证、卫生许可 证）



 正面

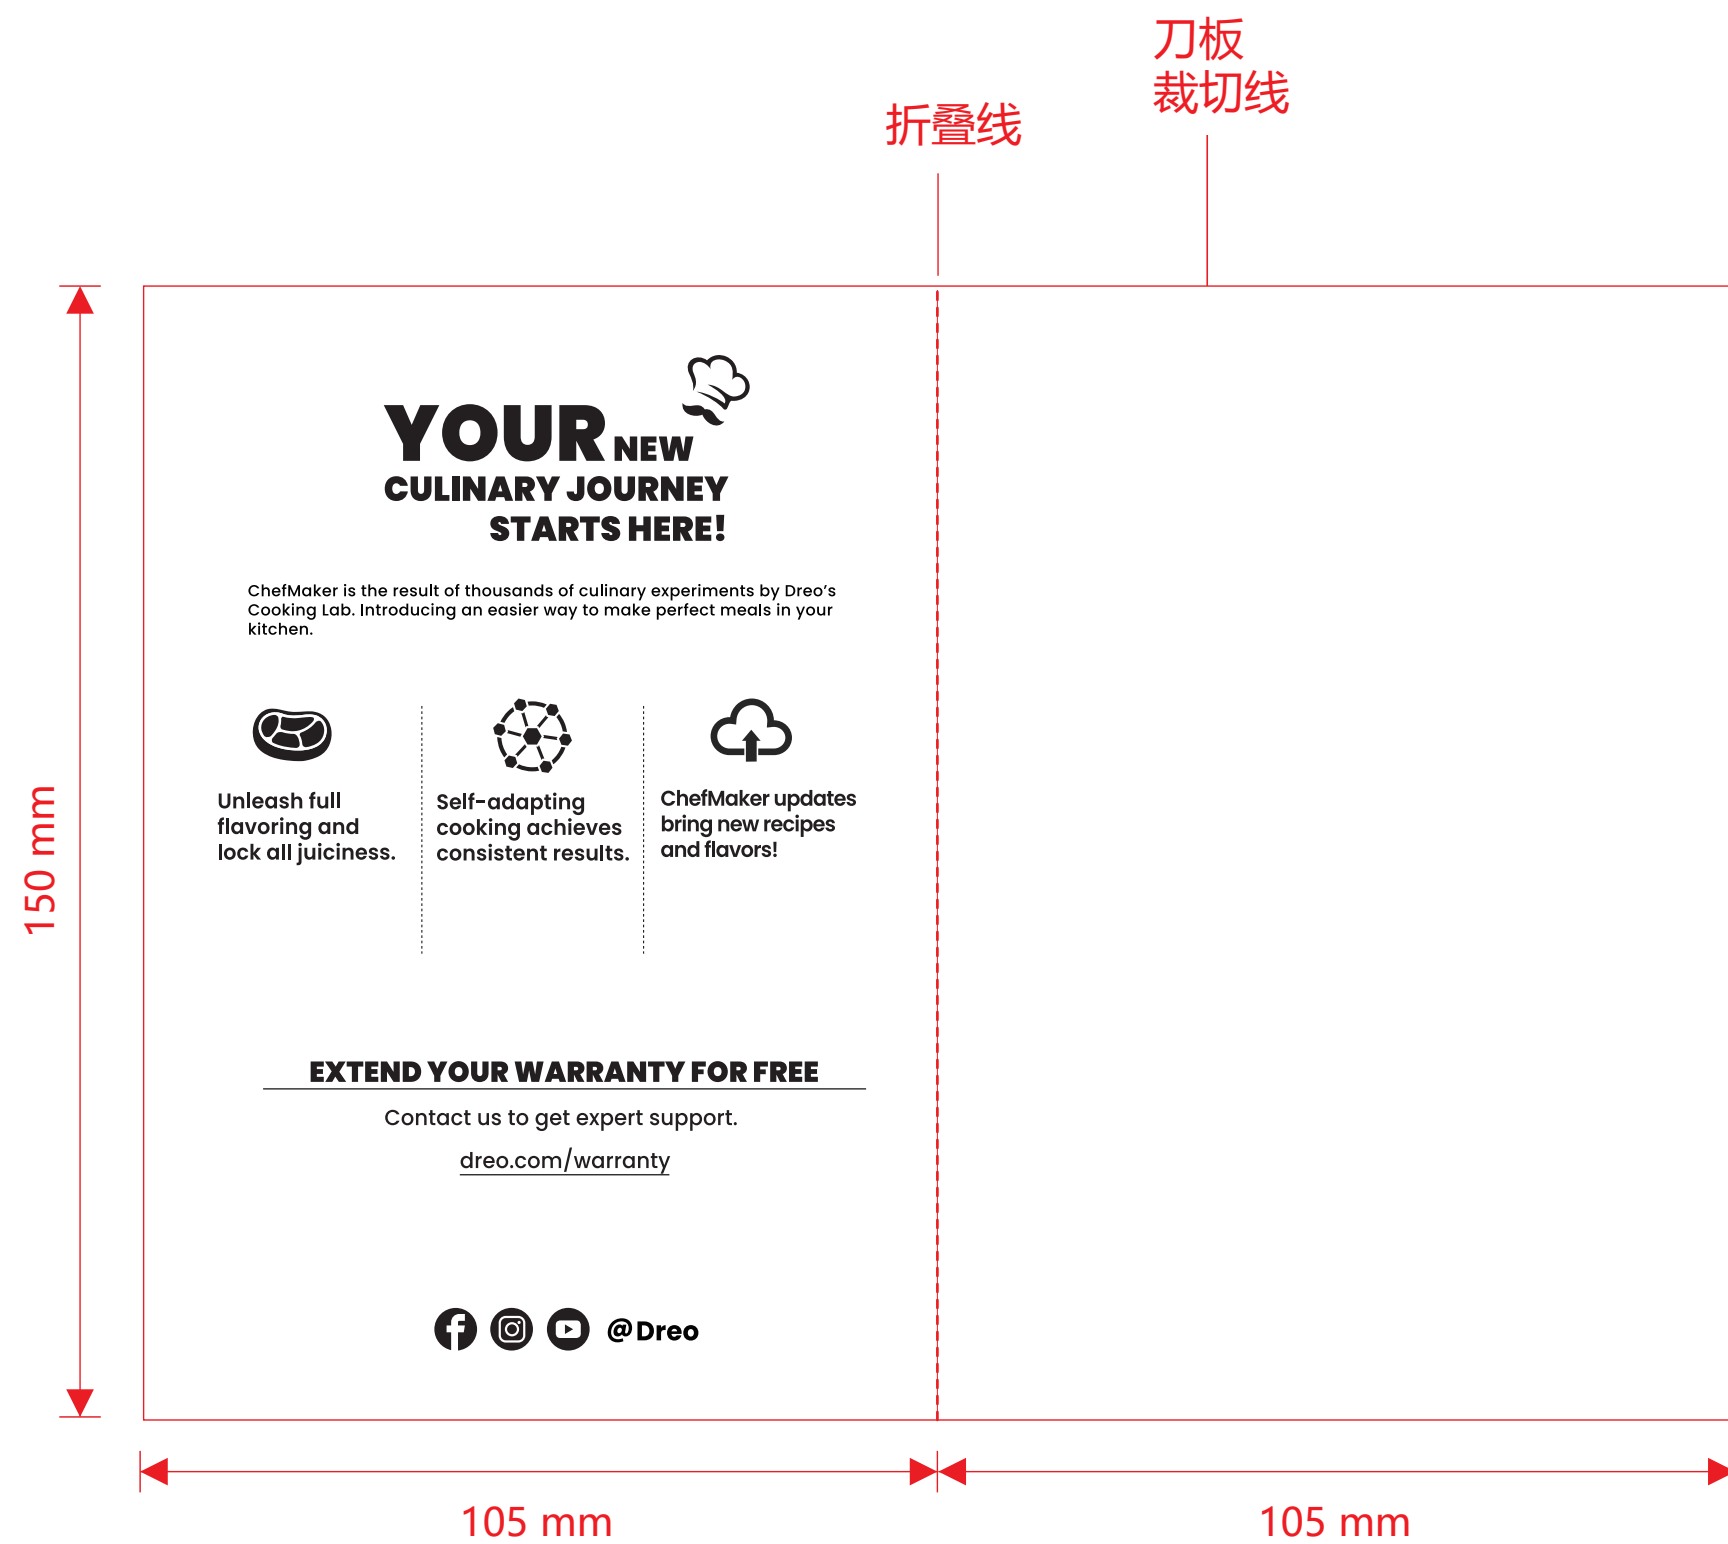

背面

# CONTENTS

<b>IMPORTANT SAFETY INSTRUCTIONS</b>	1-5
<b>GETTING TO KNOW YOUR APPLIANCE</b>	6-7
<b>CONNECTING TO YOUR APPLIANCE</b>	8
<b>GETTING STARTED</b>	9
<b>CHOOSING THE RIGHT MODE</b>	10-11
<b>TIPS FOR CHEFMAKER MODES</b>	12-13
<b>CLEANING AND MAINTENANCE</b>	13-16
<b>DREO CUSTOMER CARE</b>	17
<b>FCC STATEMENT</b>	18-19

# IMPORTANT SAFETY INSTRUCTIONS 1

BEFORE USING THIS APPLIANCE READ ALL INSTRUCTIONS AND CAUTIONARY MARKINGS IN YOUR USER GUIDE AND ON THE APPLIANCE.

When using an electrical appliance, basic precautions should always be followed, including the following:



**DO NOT touch hot surfaces.**  
Use the handle.



**DO NOT block any ventilation openings.** Hot steam is released through the air outlet. Keep your hands and face clear of openings.



**To protect against electrical shock, do not immerse the appliance, cord, or plug in water or other liquid.**



## Intended Use

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by person responsible for their safety.
2. Close supervision is necessary when any appliance is used by or near children.
3. Children should be supervised to ensure that they do not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised.

## Electricity Safety

1. Check if the voltage indicated on the appliance corresponds to the local main voltage before you connect the appliance.
2. DO NOT operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment. Always make sure that the plug is inserted properly into a wall outlet.
3. Do not let cord hang over edge of table or counter, or touch hot surface.
4. DO NOT plug in the appliance or operate the control panel with wet hands.
5. Never connect this appliance to an external timer switch or separate remote control system in order to avoid a hazardous situation.
6. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. DO NOT attempt to modify the plug in any way.
7. Immediately unplug the appliance if you see dark smoke coming out of the appliance. Wait for the smoke emission to stop, before you remove the pan from the appliance.

8. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn off the appliance, then remove plug from wall outlet.
9. If the SUPPLY CORD is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
10. Extension Cord:

A short power-supply cord (or detachable power-supply cord) is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use. If a longer detachable power-supply cord or extension cord is used:

- 1) The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance;
- 2) The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

## Related to Use

---

1. Keep your appliance away from flammable materials (curtains, tablecloth, etc.) Use on a flat, stable, heat-resistant surface away from heat sources or liquids during operation.
2. DO NOT place on a stove, near a hot gas or electric burners, or in a heated fryer.
3. DO NOT place the appliance against a wall or other appliances. Leave at least 4 inches of free space on the back and sides and 4 inches of free space above the appliance.
4. **DO NOT IMMERSE INTO WATER.** The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
5. DO NOT leave the appliance unattended while in use. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
6. DO NOT use outdoors.
7. DO NOT place anything on top or bottom of your appliance. store anything inside your appliance.
8. After using the appliance, the metal cover inside is very hot, avoid contact with it after cooking. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
9. DO NOT store any materials, other than manufacturers recommended accessories, in this appliance when not in use.
10. Preheating of the appliance is not necessary.
11. Extreme caution should be exercised when using containers constructed of other than metal or glass.


12. Use extreme caution when the cooking tray or disposing of hot grease.
13. DO NOT clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.



Meaning: the surfaces are liable to get hot during use.

## While Cooking

---

1. Oversized foods or metal utensils must not be inserted into your appliance as they may create a fire or risk of electric shock.
2. DO NOT place paper, cardboard or non-heat resistant plastic into your appliance, or any material which may catch fire or melt.
3. Do not cover any part of the appliance with metal foil. This will cause overheating of the appliance. Use extreme caution when using foil, and always fit the foil as securely as possible. If the foil contacts the appliance heating elements, this can cause overheating and risk of fire.
4. Never put baking or parchment paper into the appliance without food on top. Air circulation can cause paper to move and touch heating elements.
5. A fire may occur if the appliance is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
6. Pressing the  at any moment will shut down the appliance.

## Electromagnetic Fields (EMF)

---

This oven complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user manual, the appliance is safe to use based on scientific evidence available today.

# DO NOT IMMERSE INTO WATER FOR HOUSEHOLD USE ONLY READ AND SAVE THESE INSTRUCTIONS

# Gentle Reminder:



 
Check the appliance regularly and refer to TROUBLE-SHOOTING or contact our customer support if you need any assistance.

# Specifications

Model	DR-KCM001S
Voltage	AC 120V 60Hz
Power	1800W
Capacity	6QT
Temperature Range	100°F-450°F
Water Tank Capacity	5 oz (150ml)

# GETTING TO KNOW YOUR APPLIANCE

2

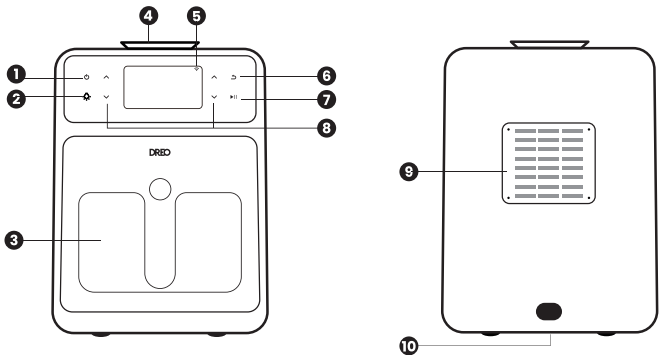

- 1 Power ON/OFF
- 2 Interior Light
- 3 Non-stick Basket
- 4 Water Tank
- 5 Wi-Fi Status
- 6 Cancel/Back
- 7 Confirm/Pause
- 8 Menu Navigation
- 9 Air Outlet
- 10 Air Inlet



## Grilling Rack

Use only for grilling and certain presets in Chef Mode



## Cooking Tray

Use for every day cooking (except for recipes that use grilling rack)



 
## Cook Probe

User Manual	Quick Start Guide
-------------	-------------------


## The right tools for a perfect cook

### Cook Probe


- Track doneness closely and achieve perfect results.
- Not recommended for frozen protein or cuts thinner than 1-inch (ChefMaker will display which recipes need it.)

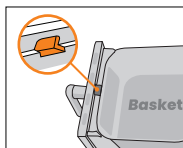

 Find the Cooking Probe slot inside your appliance basket.

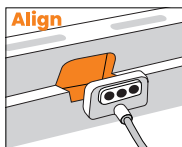

 Make sure the three pins are facing outwards.

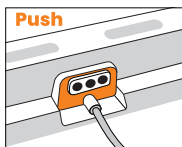

Push the Cooking Probe until you hear the "click".




- After cooking the Cook Probe may still be hot, take it out carefully to not get burned.

### Water tank

 - Add extra tenderness to your favorite meals.  
(ChefMaker will display which recipes need it)



Make sure the water outlet is aligned with the hole.

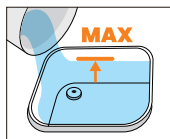

Fill to the max before using programs with moisture.



Keep the water tank lid closed while cooking.



- Always dry out the water tank after cooking.
- ONLY keep the water tank filled when you are about to use a cooking mode that requires it.

## CONNECTING TO YOUR APPLIANCE

# 3

Download the Dreo app to get the most out of your appliance!



Scan the QR code to download the Dreo app.

OR



Search "Dreo" on Google Play on App Store.

- 1 Launch the Dreo app and sign in or create account by following the in-app instructions.
- 2 Tap Add Device in the Dreo app and select the appliance you want to link.
- 3 On your appliance go to Settings>WLAN> Press ►. Make sure the display shows "Waiting for pairing"
- 4 Connect to your preferred Wi-Fi network through the Dreo app.
- 5 You're now ready to control the appliance on your app.

#### Tips

To reset Wi-Fi settings, on your appliance go to Settings>WLAN and double press ►►.

(Once reset, display will show "waiting for pairing")

To restore factory settings, on your appliance go to Settings>System Settings>Reset> Press and hold Confirm for 5s.

There may be OTA updates available the first time you connect your appliance. If so, please follow the steps on the Dreo app to continue.

Google, Google Play, YouTube and Google Home are trademarks of Google LLC.  
Apple App Store is a trademark of Apple Inc.


# GETTING STARTED 4

## Before First Use

- Remove all plastic packaging from your appliance.
- Clean all the cooking accessories and let them dry at room temperature.  
(see cleaning instructions, page 13–14).

## Initial Use

**Note:** it is recommended to heat your appliance to remove any remaining odor.

1. Tap  to turn on.
2. Select Classic Cook>Air Fry> Set temperature at 380°F and time to 15 minutes.
3. After heating is done, let the fryer cool, then wash the basket and cooking tray with soapy water and non-abrasive sponge.

# CHOOSING THE RIGHT MODE 5

Your new appliance includes a series of modes to simplify your cooking and magnify your tasting. Depending on what you are planning to cook, you can choose from:



## Chef Mode

Powered by CombiCook System

Achieve perfect results with the **ingredient-based** master Chef presets.

**Best for**



Meat



Poultry



Seafood



Vegetables

 




## Classic Cook

As simple as choosing your **cooking style**.


**Best for**

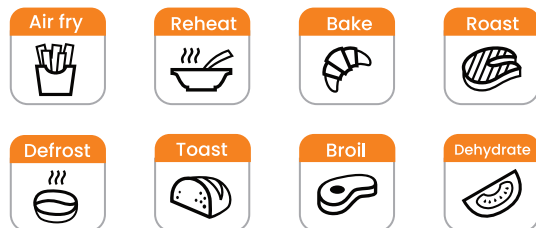

## Probe Cook

Take **full control** of temperature settings just like master chefs do.

 **Best for**

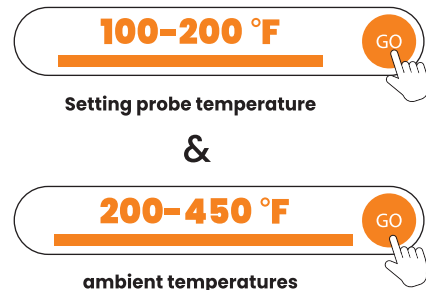

# TIPS FOR CHEFMAKER MODES 6



## Chef Mode

Make sure to use the cook probe and water tank when shown in your recipe.

Probe | Moisture



Cook Probe (Probe)



Water Tank (Moisture)

- Follow ChefMaker's tips for better cooking results.
- Sous Vide cook is better for achieving edge-to-edge doneness.



## Classic Cook

ChefMaker recommends the **optimum** temperature and time for your cooking style.



## Probe Cook



Set your desired doneness with the target probe temperature.



Ambient temperature helps you cook the surface of your food.

## CLEANING AND MAINTENANCE

# 7

- Always clean your appliance after every use.
- Turn off and unplug the appliance. Allow it to be cool before cleaning.
- You can pull out the basket for faster cooling.
- When cleaning it is recommended to use non-abrasive liquid cleanser.

## Main parts

Part	Cleaning instructions	Can I use the dishwasher ?
Main unit	Wipe the main unit with a damp cloth.	No
Cooking Tray/Grilling Rack	Can be either washed directly in the dishwasher or by hand, remember to dry all parts after use.	Yes
Non-stick basket	Can be either washed directly in the dishwasher or by hand, remember to dry all parts after use. Do not use a dry cloth on the glass or it may get scratched.	Yes
Cook Probe	Wipe with a damp cloth	No
Control Panel	Can be either washed directly in the dish washer or by hand, remember to dry all parts after use. Do not use a dry cloth on the glass or it may get scratched.	No
Water tank	Wipe with a damp cloth. Do not use a dry cloth on the display or it may get scratched.	Yes

**Note:** To extend the life of your appliance, do not use abrasive elements like cleaners, metal scouring pads or metal utensils to wipe-clean any part/accessory of your appliance.

## Water tank maintenance

To ensure optimum performance during your cooking, it is recommended:

- Dry out the water tank after cooking.
- Run a deep cleaning of pipes and nozzles at least once every 3 months.

## Water tank draining

1. ONLY keep the water tank filled when you are about to use it.

 
2. Always drain the water tank after cooking:

**Go to Settings > Maintenance > Water Pipe Drain > Confirm**


## Descaling (Aprox. 40 min)

### Steps:


1. Go to settings > Maintenance > Desaling.

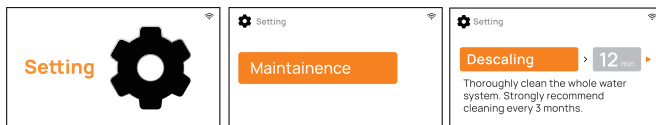

 2. Fill the water tank up the max mark and add some baking soda. Make sure the basket is in position and then confirm.

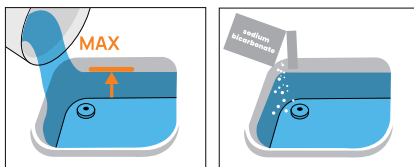

 3. After the first cleaning is done, fill the water tank once more, make sure the basket is in position and then confirm. After cleaning is done, drain the water from the basket.

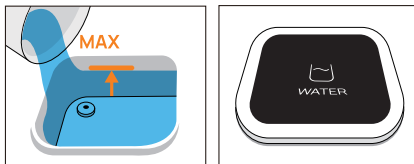

## Troubleshooting

Problem	Possible solution
<b>The appliance will not turn on</b>	Make sure the appliance is plugged in. Push the basket securely into the appliance.
<b>Foods are not completely cooked</b>	Do not overcrowd the basket in every cooked, if the basket is overstuffed, your ingredients will not receive proper heat. Try the Program mode using the cook probe for better accuracy.
<b>Foods are cooked unevenly</b>	Ingredients that are stacked on top of each other or close to each other need to be shaken during cooking. The non-stick cooking tray should be placed in the basket.
<b>Foods are not crispy after frying</b>	Spray or brush a small amount of oil on foods can increase crispiness.
<b>White smoke is coming out of my appliance</b>	The appliance may produce some white smoke when you use it for the first time. This is normal. Make sure the basket and the non-stick food tray is cleaned properly and is not greasy. Frying greasy foods will cause oil leaks into the basket. This oil will produce white smoke. This is normal and should not affect cooking.
<b>Dark smoke is coming out of my appliance</b>	Immediately unplug your appliance. Food is burning, wait for smoke to clear before pulling the basket out.
<b>How do I pause or stop the cooking?</b>	Remove the basket from the unit to pause the cooking and place it back to resume, you can also press the "▶  " button or return and then confirm to stop the cooking.
<b>Is the basket safe to put on my countertop?</b>	Use caution when handling, and place on heat-safe surfaces only.
<b>The cooking probe is not detected</b>	Make sure you properly secured the cooking probe to the basket, magnets must face towards the interior of your appliance.
<b>I can't find the appliance when adding to the Dreo app</b>	Make sure your appliance is turned on. Go to settings>WLAN>Confirm
<b>Connection to Wi-Fi fails</b>	Make sure you are connecting your appliance to a 2.4 Ghz network.

# DREO CUSTOMER CARE

# 8

## Default 12-Month Warranty

This appliance is covered by Dreo warranty for 12 months from the date of its original purchase.

## Extend Your Warranty

Extend your warranty by registering your new appliance on our website

<https://dreo.com/warranty>.

### The warranty will not apply in cases of:

1. Accident, misuse, or repairs performed by unauthorized personnel.
2. Any unit that has been tampered with or used for commercial purposes.
3. Normal wear and tear of wearable parts.
4. Use of force, damage caused by external influences.
5. Damage caused by non-observance of the User Manual, e.g. connection to an unsuitable mains supply or noncompliance with the instructions.
6. Partially or completely dismantled appliances.
7. Defects caused by or resulting from damages from shipping or from repairs, service, or alteration to the product or any of its parts that have been performed by a repair person not authorized by Dreo.

We can only provide after-sales service for products that are sold by Dreo or Dreo authorized retailers and distributors. If you have purchased the appliance from a different place, please contact your seller for return and warranty issues.

## We're Here to Help!



support@dreo.com



(888) 290-1688

Mon - Fri, 9:00 am-5:00 pm PST/PDT

# FCC STATEMENT

# 9

This device complies with Part 15 of the FCC Rules.

This equipment has been tested and found to comply with the limits for a Consumer ISM equipment, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

"Please note that changes or modifications of this product is not expressly approved by the party responsible for compliance and could void the user's authority to operate the equipment."

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.


"If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

" CAUTION: Any changes or modifications not expressly approved could void the user's authority to operate the equipment."

 [www.dreo.com](http://www.dreo.com)

 Shenzhen Hesung Innovation  
Technology Co., LTD

 26F, Bldg A7, Creative  
City, Shenzhen, China

Rev\_1.3\_EN

