

EE1738 – Wireless Earbuds

Instruction manual

Please read all of the instructions carefully and retain for future reference.

[3 MM CAPS] Safety Instructions

When using electrical products, basic safety precautions should always be followed.

Keep the product and its accessories out of the reach of children.

Keep small parts away from children as these may present a choking hazard.

Children under 8 years should be supervised to ensure that they do not play with the product.

This product is not a toy.

This product contains no user serviceable parts. If the product and any of its accessories are malfunctioning or have been damaged, recycle the product.

Keep the product away from heat sources, direct sunlight, humidity, water and any other liquid.

Do not operate the product with wet hands.

Do not operate the product if it has been exposed to water, moisture or any other liquid, to prevent against electric shock, explosion and/or injury to yourself and damage to the product.

Do not leave any objects susceptible to magnetism (cash cards etc.) near the product.

Do not use the product for anything other than its intended use.

Do not use any accessories other than those supplied.

It is imperative to unplug the charging cable after the product has been used, before it is cleaned.

This product is intended for domestic use only. It should not be used for commercial purposes.



To prevent possible hearing damage, do not listen at high volume levels for long periods of time – this may also damage the product.

Battery Safety

In the event of a battery and cell leaking, do not allow the liquid to come in contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.

Secondary cells and batteries need to be charged before use. After extended periods of storage, it may be necessary to charge and discharge the cells or batteries several times to obtain maximum performance.

Do not expose cells or batteries to heat or fire.

Do not crush, puncture, dismantle or otherwise damage batteries.

Do not store above 60 °C.

Avoid storage in direct sunlight.

Do not dispose of exhausted batteries in household waste.

Once the batteries have been exhausted, dispose of the product at a local recycling station.

Contact the local government offices for further details. This product is fitted with a 3.7 V 55 mAh li-ion rechargeable battery (non-removable).

UP Global Sourcing UK Ltd. hereby declares that this unit is in compliance with the essential requirements and other provisions of directive 2014/53/EU.

The declaration of conformity may be consulted at UP Global Sourcing UK Ltd., Victoria Street, Manchester OL9 0DD. UK or www.intempo.co.uk/declaration-letters.html

[3MM CAP] Care and Maintenance

Wipe the product with a soft, lint-free cloth.

Do not:

Use any abrasive cleaning solvents to clean the product.
Expose the product to extremely high or low temperatures.
Drop the product.
Attempt to disassemble the product.
Dispose of the product in a fire as it will result in an explosion.

Getting Started

Remove the product from the box.
Remove any packaging from the product.
Place the packaging inside the box and either store or dispose of safely.

In the Box

Wireless Earbuds
USB Charging Cable
Instruction Manual

Description of Parts

1. Wireless Earbuds
2. Play/Pause/Handsfree button
3. Skip/Volume + Button
4. Skip/Volume – Button
5. LED Indicator Light
6. Micro USB Charging Port
7. Hands-free Microphone
8. Micro USB charging cable
9. Micro USB connector
10. USB connector

Instructions for Use

Charging the Battery

The Wireless Earbuds are fitted with a 3.7 V 55 mAh li-ion battery. It is recommended that the battery is charged fully before first use; this will take approximately 1.5 hours.
Connect the micro USB end of the USB charging cable into the micro USB charging port on the Wireless Earbuds and the other end to a compatible USB port.
Whilst charging, the LED indicator light will illuminate red. Once the battery has charged fully, the LED indicator light will turn blue.
Once the Wireless Earbuds are fully charged, carefully disconnect both ends of the USB charging cable and store it safely for future use.

Using the Wireless Earbuds

Basic Functionality

Turn on the Wireless Earbuds by pressing and holding the 'Play/ Pause/ Handsfree' button for approximately 3 seconds.

Adjust the volume of the Wireless Earbuds using the 'Skip/Volume +' and 'Skip/Volume –' buttons. To increase the volume, press and hold the 'Skip/Volume +' button. Decrease the volume by pressing and holding the 'Skip/Volume –' button.

Pause the track by pressing the 'Play/ Pause/ Handsfree' button; push it once more to resume playing the track.

To switch to the next track, press the 'Skip/Volume +' button. Play the previous track by pressing the 'Skip/Volume –' button.

Press and hold the 'Play/ Pause' button for approximately 3 seconds to turn off the Wireless Earbuds.

Modes

Ensure that the Wireless Earbuds are turned on before using any of the following modes.

Bluetooth Mode

Pairing with a Bluetooth Compatible Device

STEP 1: When the Wireless Earbuds are switched on, the LED indicator light will flash, signalling that the Wireless Earbuds are ready to be paired with a Bluetooth compatible device.

STEP 2: Search for the Wireless Earbuds using a Bluetooth compatible device. Select 'EE1738' to connect and pair to them.

STEP 3: Once a connection has been made, the LED indicator light will remain solid to signal that the Wireless Earbuds are now paired with the Bluetooth compatible device.

STEP 4: To unpair or remove a Bluetooth compatible device from the Wireless Earbuds, turn off the Bluetooth function on the Bluetooth compatible device or unpair through the device's settings. The Wireless Earbuds can now be paired with a new Bluetooth compatible device.

NOTE: Once the Bluetooth compatible device has been paired with the Wireless Earbuds, sound can be controlled using either the Wireless Earbuds or the relevant controls on the Bluetooth compatible device.

Making Phone Calls via a Bluetooth Compatible Device

Once the Bluetooth compatible device has been paired with the Wireless Earbuds, phone calls can be made.

STEP 1: Using the Bluetooth compatible device, dial the number to be called and select the Bluetooth/hands-free option. The built-in microphone on the Wireless Earbuds will now act as a hands-free device.

STEP 2: To connect or disconnect a call using the Wireless Earbuds, press the 'Play/ Pause/ Handsfree' button.

STEP 3: To reject an incoming call, press and hold the 'Play/ Pause/ Handsfree' button.

STEP 4: To redial the last number called, press the 'Play/ Pause/ Handsfree' button twice.

NOTE: The volume of the phone call can be controlled using either the Wireless Earbuds or the Bluetooth compatible device.

Specifications

Product Code: EE1738

Bluetooth Version: 5.0

Wireless Distance: Up to 25m*

Driver Size: 10 mm

Impedance: 16 Ω

Sensitivity: 95 ± 5 dB
Frequency Response: 20 Hz-20 kHz
Charging Voltage: 5 V [DC SYMBOL]
Battery: 3.7 V 55 mAh
Bluetooth Frequency: 2.4 GHz

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Statement:

"This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.