 


NAUTICA

WIRELESS EARPHONE NTHP03

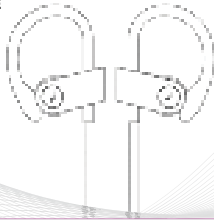

Thank you for purchasing an original Wireless Earphone - NTHP03

 
You are getting a high-quality product that's built to combine technology and design for your everyday use.

Please read the below info carefully to get the most out of your new product.

This guide is ENGLISH only. For other languages and more detailed info on care, use and warranty, please visit technofashion.com



WHAT'S IN THE BOX

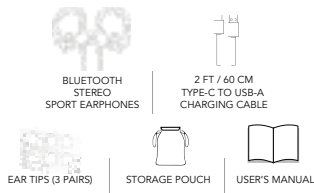


Your product comes with three pairs of ear tips (S, M and L). Try all sizes to find the size that fits best. Your device comes with size M ear tips on.

3



 
HOW TO USE?

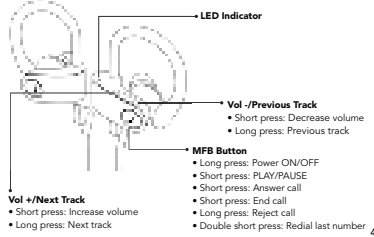

4

BLUETOOTH PAIRING

 - Power on your in-ear earphones and it will automatically turn to Bluetooth pairing mode. The LED indicator will flash in white and green.
- Activate the Bluetooth function on your phone within range and select "Nautica H110" from the list of available Bluetooth connections.
- When pairing is successful, the LED light will stop flashing and turn to green color.

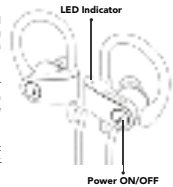

Reconnect Bluetooth: When powered on, the in-ear sport earphones will automatically connect to the latest successfully paired device.

 
5

HOW TO CHARGE YOUR EARPHONES

For the best experience, it is recommended to charge the unit before first use.

Use the included Type-C charging cable to connect the earphones to a USB port on your computer or to a USB wall adapter.

Charging will start automatically when connected. The white indicator light turns on while charging and turns off when the battery is full. It takes approximately 2 hours to be fully charged.

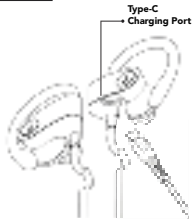

6



TECHNICAL SPECIFICATIONS

Bluetooth Version	v5.0
Wireless Range	33 ft / 10 m
Frequency Response	20 Hz - 20 kHz
Battery Capacity	110 mAh
Charging Time	2 hours
Talking Time	6 hours
Playing Time	5 hours
Standby Time	100 hours
Input Voltage	DC 5V
Rated Voltage	3.7 V
Impedance	16 Ω
Sensitivity	45 dB
Cable Length	27 in / 69 cm
Product Weight	0.67 oz / 19.1 g

7



SAFETY AND MAINTENANCE

Before you use the device, read the following precautions carefully to ensure optimal product performance.

The use of earphones will impair your ability to hear other sounds. Use caution while using your earphones during any activity that requires your full attention.

This package contains small parts that may be hazardous to children and should be kept out of reach of children. This product is not a toy – never allow children to play with this product.

Please do not overuse the earphones or put it under heavy pressure. Keep away from wet and heat. Exposing the product to extreme hot or cold, such as in a closed car in the summer and winter conditions, will reduce the capacity and lifetime of the product. Earphones listening at high volume levels – especially over extended periods of time – may damage your hearing.

Keep away from router or other high-frequency transmitting equipment to prevent interruption of signal receiving.

8

Please use the earphones under working range (up to 33 ft / 10 m). The effective range may vary depending on multiple conditions.

Power time may differ depending on personal use habits.

Do not dismantle the product. If any parts of your product require replacement for any reason, including normal wear and tear or breakage, please contact us. Unauthorized parties may damage the product.

Do not drop, strongly vibrate, or strike the product with hard objects to avoid damaging the internal circuit.

Do not use drastic chemicals or cleaner to clean the product. Do not use sharp objects to scratch the product surface.

9



WARRANTY INFORMATION

We do our best to make sure that this product is free from defects in materials and workmanship for a period of 1 year.

The following conditions must be met for your warranty claim to be approved:

You must have purchased the product from a Nautica or Technofashion authorized dealer.

You must provide proof as to the date of purchase from the Nautica or Technofashion authorized dealer.

You must have used the product only as intended and in accordance with the product's care instructions.

Within 12 months after the purchase, in case the product is determined to be defective (at the date of original purchase) due to improper materials or workmanship, you are entitled to free repair or exchange of goods.

10

The product should be returned to Technofashion.

The warranty does not cover defects caused by third-party modifications, repairs or replacement parts.

Punctures, scratches, normal wear and tear and the natural breakdown of colors and materials over extended time and use are not warranted. Warranty applies to the USA only.

We will make every effort to replace limited edition or discontinued products but cannot guarantee availability for replacement.

Any limited edition or discontinued product still under its applicable warranty that cannot be replaced with an identical product will be replaced with the equivalent model based on availability.

We may make changes to products and designs in the time you purchased your product and submitted a warranty claim.

Products repaired or replaced under this warranty may or may not incorporate these changes.

11



SUPPORT

For any questions, email us at support@technofashion.com

FCC ID: 2AZBO-N00016

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device has been tested and found complying with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the device and receiver.
- Connect the device into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

13

NAUTICA

designed, manufactured, distributed by
TECHNOFASHION

© 2021 Technofashion, Inc. All Rights Reserved.
Designed in USA. Made in China.
May be patented. See technofashion.com/patents

