

Tranzeo TR-Multi Series User Guide

Revision: 1.0
Firmware: 2.10
Date: 7/06/06

Document Revisions:

Version 1.0

June 9, 2006

Tranzeo Wireless Technologies Inc.

19473 Fraser Way
Pitt Meadows, BC
Canada V3Y 2V4

Toll Free Number: 1.866.872.6936
Technical Support: 1.888.460.6366
Local Number: 1.604.460.6002
Fax Number: 1.604.460.6005

General Inquiries: info@tranzeo.com
Sales: sales@tranzeo.com
Technical Support: support@tranzeo.com

Safety Information

FCC and IC Compliance

This device has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the device is operated in a residential environment. This device generates, uses, and can radiate radio frequency energy. If not installed and used in accordance with the user guide, may cause harmful interference to radio communication. In case of harmful interference, the users will be required to correct the interference at their own expense.

The users should not modify or change this device without written approval from Tranzeo Wireless. Modification could void authority to use the device.

For safety reasons, people should not work in a situation where RF exposure limits could be exceeded. To prevent this situation, the users should consider the following rules:

- Install the antenna so that there is a minimum of 81 cm of distance between the antenna and people.
- Do not turn on power to the device while installing the antenna.
- Do not connect the antenna while the device is in operation.
- Do not collocate or operate the antenna used with the device in conjunction with any other antenna or transmitter.
- Use this product only with the following Tranzeo antennas of the same or lower gain:

TR-VA24-16	16 dBi Vagi antenna
TR-GD-24-24	24 dBi Grid antenna
TR-OD-24-12	12 dBi Vertical Omni
TR-ODH24-13	13 dBi Horizontal Omi
TR-24H-90-17	17 dBi Sector antenna
TR-5.8-32DB-ANT	32 dBi Dish Antenna
TR-GD58-26	26 dBi Grid antenna
TR-HTQ-5.8-12	12 dBi Vertical Omni
TR-58V-60-17	17 dBi Vertical Sector
TR-58H-90-16	16 dBi Horizontal Sector

- In order to ensure compliance with local regulations, the installer **MUST** enter the gain of the antenna at the time of installation. See Chapter 3, *Wireless Settings*, for details.

- To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (EIRP) is not more than that required for successful communication.

Professional Installation Required

The product requires professional installation. Professional installers ensure that the equipment is installed following local regulations and safety codes.



Safety Instructions

You must read and understand the following safety instructions before installing the device:

- This antenna's grounding system must be installed according to Articles 810-15, 810-20, 810-21 of the National Electric Code, ANSI/NFPA No. 70-1993. If you have any questions or doubts about your antenna's grounding system, contact a local licensed electrician.
- Never attach the grounding wire while the device is powered.
- If the ground is to be attached to an existing electrical circuit, turn off the circuit before attaching the wire.
- Use the Tranzeo Power over Ethernet (POE) adapter only with approved Tranzeo models.

Lightning Protection

The key to lightning protection is to provide a harmless route for lightning to reach ground. The system should not be designed to attract lightning, nor can it repel lightning. National, state and local codes are designed to protect life, limb, and property, and must always be obeyed. When in doubt, consult local and national electrical codes or contact an electrician or professional trained in the design of grounding systems.

Table of Contents

Chapter 1: Overview	1-1
Introduction.....	1-1
Product Kit.....	1-1
Product Description.....	1-2
LED Panel Indicators.....	1-2
Chapter 2: Hardware Installation	2-1
Getting Ready	2-1
Tools Required.....	2-1
Site Selection	2-1
Orientation of the Radio	2-1
Power Supply.....	2-1
Installing the Ethernet Cable	2-2
Mounting the Radio	2-4
Grounding the Antenna.....	2-4
Connecting the Radio	2-5
Best Practices.....	2-6
Chapter 3: Configuration.....	3-1
Connecting to the Radio	3-1
Changing the IP Address - Windows XP.....	3-1
Changing the IP Address Using the Tranzeo Locator.....	3-2
Login into the Configuration Interface	3-3
Information Page	3-4
CPE Setup Menu.....	3-5
Wireless Settings	3-5
Administrative Settings	3-6
Security	3-7
Basic Security Settings	3-7
Advanced Security Settings.....	3-8
Status.....	3-9
AP List.....	3-9
ARP Table	3-9
Statistics.....	3-10
System Performance	3-12

Network Configuration	3-13
Router Mode	3-14
DHCP Configuration	3-15
IP Routing	3-16
Quality of Service	3-17
Port Forwarding	3-18
Port Filtering	3-19
Appendix A: Grounding and Lightning Protection Information ...	A-1
Appendix B: Product Specification.....	B-1
Appendix C: Protocol List	C-1
Appendix D: Common TCP Ports	D-1

Chapter 1: Overview


Introduction

The TR-Multi Series radios, the TR-Multi-N and TR-Multi-2, are advanced customer premises equipments (CPE) that offer the dual band capabilities of 802.11b and 802.11a within one unit. These integrated, dual band/antenna radios allow for quicker installs where they can be configured in either 2.4 GHz or 5 GHz frequency, eliminating the need for two types of radios.

The TR-Multi-2 radios come with a built-in antenna. The TR-Multi-N radios do not include an antenna.


Product Kit

The TR-Multi Series product kit contains the items shown below. If any item is missing or damaged, contact your local dealer for support.

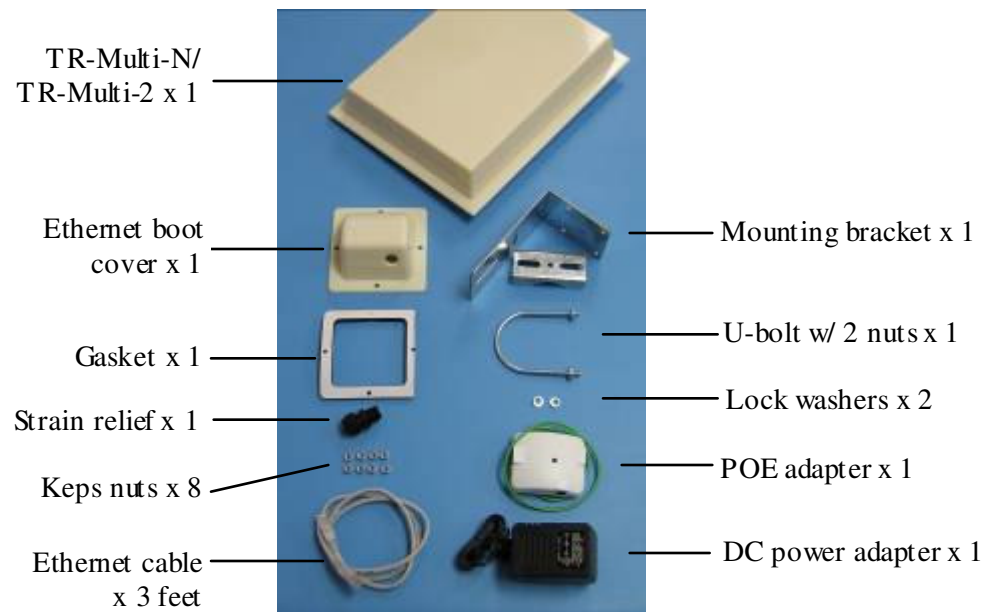

Product Description

The LEDs, ports and product information are located at the back of the TR-Multi Series radio, as shown in the picture.

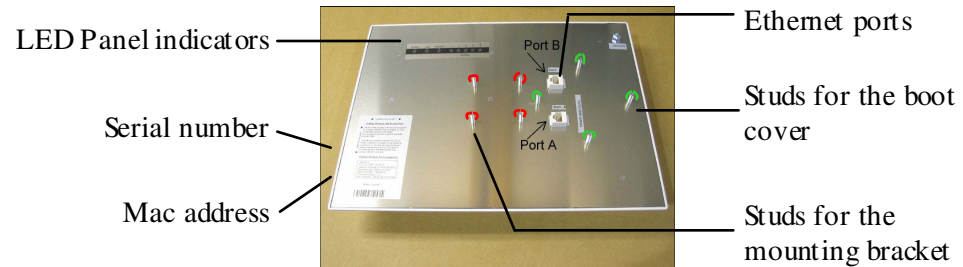

LED Panel Indicators

Label	Color *	Indicators
Power	● Green	On: Powered on Off: No power
LAN	● Green	On: Ethernet link Flashing: Ethernet traffic Off: No Ethernet link
Radio	● Green	On: Radio link Flashing: Radio activity Off: No radio link

*Note: Color of the LED panel indicators may vary.

Chapter 2: Hardware Installation

The TR-Multi Series radios are easy to install, as you'll see in this chapter. Before starting, you will need to get the tools listed below and decide about the site and orientation of the device. Once ready, follow the instructions about how to install the Ethernet cable, mount the device, ground the antenna, and make the connections in order to get a proper installation.

Getting Ready

Tools Required

To install your TR-Multi Series radio you will need the following tools:

- 1/2" wrench x 1
- 3/8" wrench x 1
- 3/4" wrench x 1
- Cat 5 cable stripper
- RJ-45 crimper x 1
- Cat 5 cable, enough to bring the signal from the radio to the Power over Ethernet (POE) adapter
- RJ-45 connectors x 2
- #6 green grounding wire

Site Selection

Determine the location of the radio before installation. Proper placement of the device is critical to ensure optimum radio range and performance. You should perform a site survey to determine the optimal location. Ensure the CPE is within line-of-sight of the access point (AP). Obstructions will impede performance of this device.

Orientation of the Radio

Determine if the orientation of the radio will be horizontal or vertical before installation. The TR-Multi Series radios can be mounted in either orientation. The Ethernet boot cover should always be placed so that the cable runs toward the ground for maximum environmental protection.

Power Supply

Only use the power adapter supplied with the TR-Multi Series radio. Otherwise, the product may be damaged and will not be covered by the Tranzeo warranty.

Installing the Ethernet Cable

Step 1:

Insert the strain relief, without the cap nut, into the port opening of the boot cover.



Step 2:

Using a 3/4" wrench, tighten the strain relief until it touches the boot cover.

IMPORTANT! Use hand tools only. Do not over tighten.



Step 3:

Put the cap nut back over the strain relief and insert the Cat 5 cable through it. Wire the cable following the EIA/TIA T568B standard, and attach the RJ-45 connectors to each end of the cable.



Step 4:


If you bought the device with dual port, repeat steps 1, 2, and 3 for the second port.

IMPORTANT! If you are not going to use the second port, insert the strain relief into the boot cover and tighten the cap nut to ensure a weather-tight seal, as shown in the picture.



Step 5:

Place the gasket—with the adhesive side facing up—over the 4 studs around the port of the radio. Flatten the gasket ensuring there are no gaps. Remove the backing.

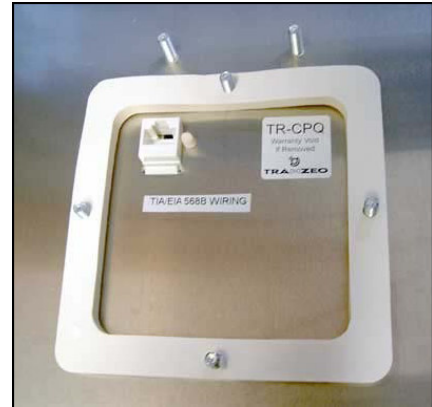**Step 6:**

Plug the Cat 5 cable inserted in the boot cover into the port. Remember to place the boot cover according to the desired polarization, so that the strain relief faces the ground.

**Step 7:**

Fit the boot cover over the 4 studs and the gasket. Secure with 4 keps nuts. Tighten with a 3/8" wrench until the gasket is at least 50% compressed.

**Step 8:**

Make sure the cap nut of the strain relief is tightened properly to ensure a weather-proof seal.

IMPORTANT! Hand tighten only. Do not over tighten as you may damage the weather-tight seal of the strain relief.



Mounting the Radio

Step 9:

Attach the mounting bracket to the pole using the U-bolt. Secure the U-bolt with the lock washers and the nuts. Align if necessary, and then tighten the nuts enough to prevent any movement.



Step 10:

Fit the radio to the mounting bracket. Secure the radio with keps nuts.

IMPORTANT! The strain relief must be always facing the ground.



Grounding the Antenna

Step 11:

Using a #6 green grounding wire, connect the grounding lug on the radio to a proper ground. See Appendix A: Grounding and Lighting Protection Information.




IMPORTANT: This device must be grounded. Connect the green grounding wire to a known good earth ground, as outlined in the National Electrical Code.

Connecting the Radio

Step 12:

Connect the Cat 5 cable from the radio into the RJ-45 jack marked “CPE” on the POE adapter. The POE adapter is not weather-proof and should be installed indoors.

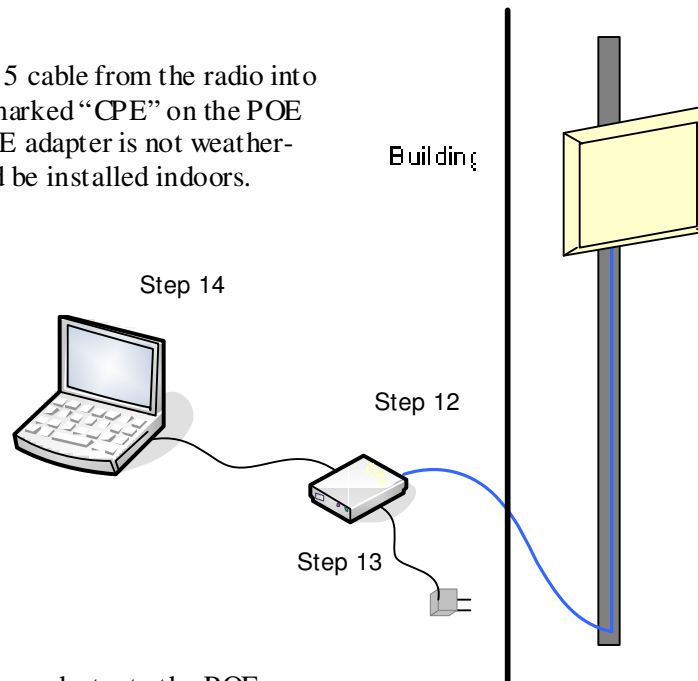

Step 13:

Connect the power adapter to the POE adapter and plug the other end to an outlet. The POE adapter will be powered on and the power indicator on the top panel will turn on. We recommend to connect the power adapter to an outlet with surge suppression capability with an uninterrupted power supply (UPS) for reduced outages.

IMPORTANT! Use the power adapter supplied with the radio. Otherwise, it may be damaged.

Step 14:

To configure the TR-Multi Series radio, connect the Ethernet cable to the POE adapter and to a computer. Ensure that the distance between the computer and the radio does not exceed 328 feet.

Note: If connecting to a hub or switch, a crossover cable may be required.

Best Practices

Follow these practices to ensure a correct installation and grounding.

- Always try to run long Cat 5 and LMR cables inside of the mounting pole. This helps to insulate the cable from any air surges.
- Keep all runs as straight as possible. Never put a loop into the cables.
- Test all grounds to ensure that you are using a proper ground. If using an electrical socket for ground, use a socket tester, such as Radio Shack 22-141.
- Keep a copy of the National Electrical Code Guide at hand and follow its recommendations.
- If you are in doubt about the grounding at the location, drive your own rod and bond it to the house ground. At least you will know that one rod is correct in the system.

Chapter 3: Configuration

The TR-Multi Series radios can be configured through an HTML configuration interface, accessible using any Internet browser. The configuration interface allows you to define and change settings, and also shows information about the performance of the device.

In this chapter we'll cover how to:


- Access the configuration interface
- Configure the TR-Multi Series radio
- Interpret the information displayed in the interface

Connecting to the Radio

Before accessing the configuration interface, you have to change the network connection settings in your computer to be on the same subnet as the radio.

Changing the IP Address - Windows XP


1. In your computer, open ControlPanel > Network Connections > Local Area Connection.
2. In Local Area Connection Status > General, click **Properties**.
3. In Local Area Connection Properties > General, select **Internet Protocol (TCP/IP)** and click **Properties**.
4. In Internet Protocol (TCP/IP) Properties > General, select **Use the following IP address**.
5. Enter your **IP address** and **Subnet Mask**. The default IP address of the radio is **192.168.1.100**, which cannot be used here.
6. Click **OK** and **Close**.

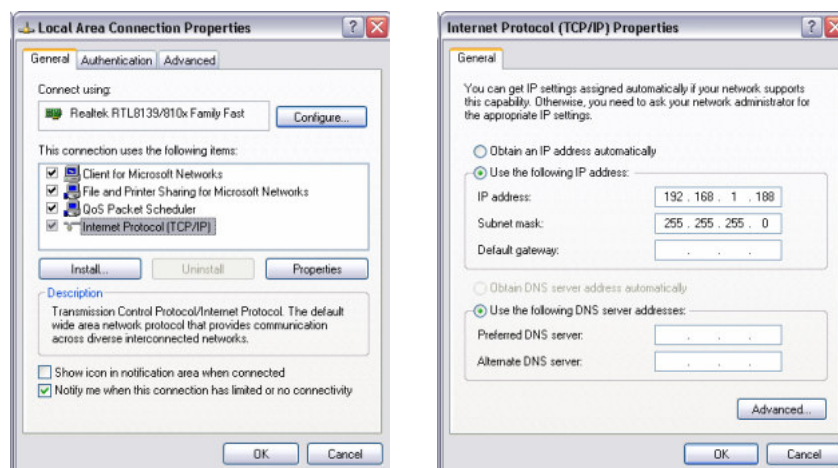

Changing the IP Address Using the Tranzeo Locator

The Tranzeo Locator is a utility that allows users to quickly change the IP address of the Tranzeo radios. It sends out a broadcast on the network and displays a list of other Tranzeo radios connected, from which you can configure the IP address for your device.

Note: The Locator cannot locate radios through routers.

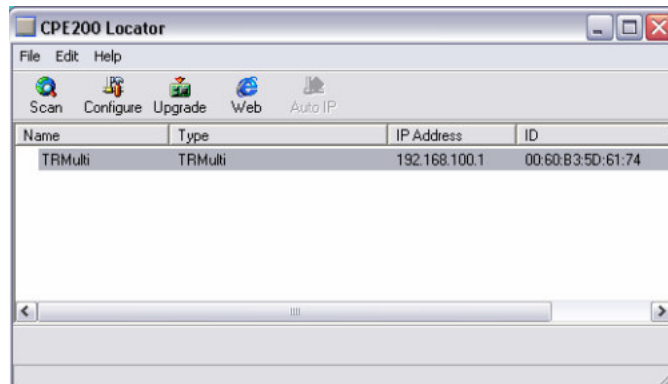

The Tranzeo Locator displays the following options:


Scan:	Locates Tranzeo radios connected to the network. A yellow icon appears before the name when the radio is not in the same subnet.
Configure:	Used to set a static IP address or set the radio into DHCP mode.
Upgrade:	Under development.
Web:	Opens a browser to access the configuration interface.
Auto IP:	To automatically set the radio to an IP address one number higher than the IP address of the computer.

Find the latest version of the Tranzeo Locator at www.tranzeo.com, under Tranzeo Support > Support Files > Radio Utilities.

Login into the Configuration Interface

After defining the network settings, follow these steps to login into the Tranzeo Configuration Interface.

1. Open your Internet browser (Internet Explorer, Netscape, or Firefox).
2. In the address bar, type **http://192.168.1.100**.
3. In the login dialog, enter your **Username** and **Password** (if you're a first-time user, follow the instructions below).
4. Click **OK**. You will then access the configuration interface.

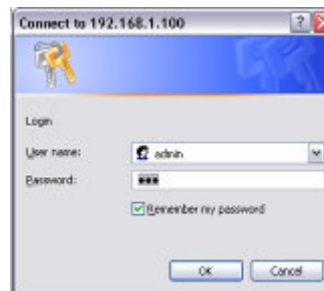

If you're a first-time user:

1. Enter username **admin** and password **default**.
2. In the Password Set/Reset window, change the **Administration** and **Recovery*** passwords. They cannot be left as default and must be different from each other. You can change the usernames too.
3. Click **Apply** to save the changes.
4. You will be prompted to enter your new username and password in the login dialog. You will then access the configuration interface.

Password Set/Reset

Use this screen to set or reset the passwords to your device if they've been lost or inadvertently changed. For security reasons, you must set both the normal administration password and the recovery passwords before accessing the administration interface.

The recovery password is available for 5 minutes after powering the device on. After 5 minutes the device must be power-cycled to reactivate the recovery password; this helps prevent abuse of the recovery password by users without physical access to the device.

Note: You must set both the normal administration and recovery passwords before using the administration interface.

Administration Password

Username: This is the normal account used to administer the device.

Password: This password is currently set to the factory default. You must set this password before using the administration interface.

Confirm:

Recovery Password

Username: This is a special account used to recover the administration password if it has been lost or inadvertently changed.

Password: This password is currently set to the factory default. You must set this password before using the administration interface.

Confirm:

* The recovery username and password are used to access the Password Set/Reset window if the administration password is lost.

Information Page

This is the first window of the configuration interface. It shows the main menu and information about the device settings, like wireless, network, and security settings.

The menu is divided in four sections:

- CPE Setup Menu
- Security
- Status
- Network

Each section contains navigation links to the configuration windows.



CPE Setup Menu

In this section you would be able to configure wireless and administrative settings for the TR-Multi Series radio.

Wireless Settings

This window displays the wireless configuration of the device.



Primary SSID:

The Service Set Identifier (SSID) is the name that identifies a specific wireless LAN. Devices must have the same SSID to communicate with each other.

Secondary SSID:

Used when the primary access point is unavailable.

Band:

The radio frequency range in which the radio operates.

TX Rate:

The transmission speed at which the radio communicates with the access point.

RTS Threshold:

When a packet exceeds the RTS threshold, the CPE sends first a 'request to send' (RTS) to the access point instead of sending the packet automatically.

Fragmentation Threshold:

This is the size at which packets are fragmented in order to be transmitted.

Link Distance:

This is the distance between the CPE and access point. This setting is necessary to define the correct ACK timing. Setting this value too low will result in low throughput and high retries.


ACK Timeout Tuning:

The time that the device waits for an acknowledgment from the access point accepting the transmission before re-attempting to send the data. This is an offset from the ACK timing set by the link distance.

Power Cap:	Is the maximum output power of the radio.
Country:	Select the country from where the device is operating. Setting an incorrect country may be considered a violation of the applicable law.
Antenna Gain:	Select the gain of the antenna used. This information MUST be entered by the installer at the time of installation.
Preamble:	Select type: Long uses long preamble only, Auto (recommended) tries short preamble first, then long.

Administrative Settings

Use this section to upgrade the software, change your password, and define SNMP parameters.

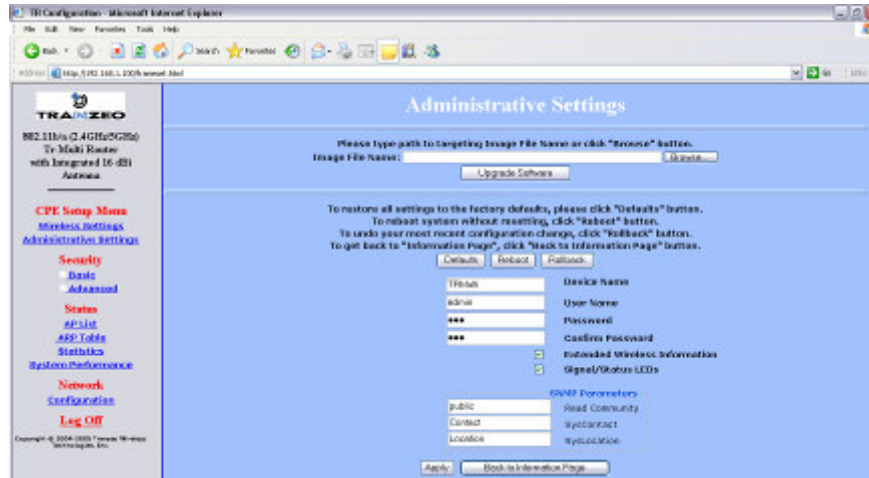


Upgrade Software:	Enter the location of the software update file or Browse to locate it in your computer. Click Upgrade Software . If the radio does not refresh the Information Page after 1 minute, press Refresh , Reload or F5 . Verify the new firmware is installed correctly.
Defaults:	Returns all settings to factory defaults, including passwords.
Reboot:	Restarts the system without changing settings.
Rollback:	To undo the most recent change.
Device Name:	This is the network name of the device.
User Name:	This is the login username.
Password:	Enter a new password if you want to change it.
Confirm Password:	Re-type the new password.
Extended Wireless Information:	Enables extended information (name and IP address), which is only displayed with Tranzeo access points.
Signal/Status LEDs:	Un-check to turn off the LED panel indicators.
SNMP Parameters:	Here you set the Read Community string and Contact/Location information. It's highly recommended that you change the Read Community string immediately to prevent unauthorized scanning of your network.

Security

In this section you can configure both basic and advanced security settings for your device.

Basic Security Settings


In this window you can define WEP parameters. WEP provides security by encrypting data so that it's protected when transmitted from one point to another.

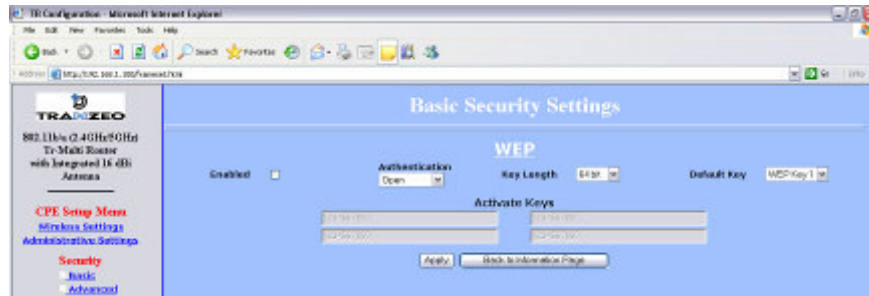

Enabled:	Check to turn on WEP security protocol.
Authentication:	Select your system to be open or shared. Open is always recommended.
Key Length:	This is the level of encryption. Note that 64 bit is referred to as 40 bit on some systems.
Default Key:	Select the default WEP key from the list.
Activate Keys:	Enter the four WEP keys you want to activate. Keys must be entered in HEX only.

Advanced Security Settings

In this window you can enter WPA parameters. WPA provides a higher level of security, enhancing the security features of WEP.

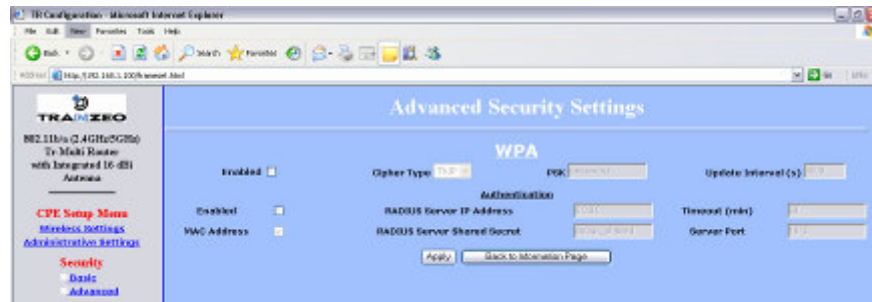

Enabled: Check to turn on WPA.

Cipher Type: Select the level of encryption.

PSK: Enter your PSK password.

Update Interval: This is the interval at which the PSK password will be updated.

Authentication: Ensures that only authorized network users can access the network. Enter the information about the RADIUS server from your Internet Service Provider.

Status

This section displays information about the status and performance of your radio. Most options and information cannot be modified in this section.

AP List

This window displays information about the access points associated with the CPE and the connection statistics.

You can set an access point's SSID as your primary SSID by clicking on the Mac address when it's displayed as a link. This will automatically reboot the radio.

AP List

Available Access Points

MAC Address	Name	IP Address	SSID	TxPower	Signal (dBm)	Channel	Location	Access Control	Authentication	BSS Loc	Status
000D33E0C00B	TRAP1	192.168.100.147	TRAP1	-100	-8.1	1	Off	Disabled	Off	Disabled	Scanned
000B5B40A37B	TRAP2	192.168.1.100	TRAP2	-100	-8.7	1	Off	Disabled	Off	Disabled	Scanned
000B5B37CFC2	localizing AP	192.168.103.155		-100	-94	1	WEP(54)	Enabled	Open	Disabled	Scanned


ARP Table

This table lists the devices that have communicated with your device. There should be a limited number of entries in this table, especially if the interstation blocking is turned on at the access point.

The screenshot shows a Windows XP desktop with a Microsoft Internet Explorer browser window open. The browser displays the MikroTik WinBox interface, which is used for managing network devices. The address bar shows the URL 'http://192.168.1.200/winbox.html'. The WinBox interface has a blue header with the text 'TRAEZE' and 'ARP Table'. On the left side, there is a sidebar menu with various options: 'CPE Setup Menu', 'Wireless Settings', 'Administration Settings', 'Security', 'Status', 'AP List', 'ARP Table', 'Statistics', 'System Performance', 'Network', and 'Configuration'. The main area of the WinBox displays an ARP table with three columns: 'ID', 'MAC Address', and 'IP Address'. The first row of the table shows '1' in the ID column, '00C09FEA0707' in the MAC Address column, and '192.168.1.5' in the IP Address column. The table has several empty rows below it.

Statistics

This section is divided in 3 windows: LMAC (Lower Mac), UMAC (Upper Mac), and Ethernet, which can be accessed from the Statistic Summary Page.

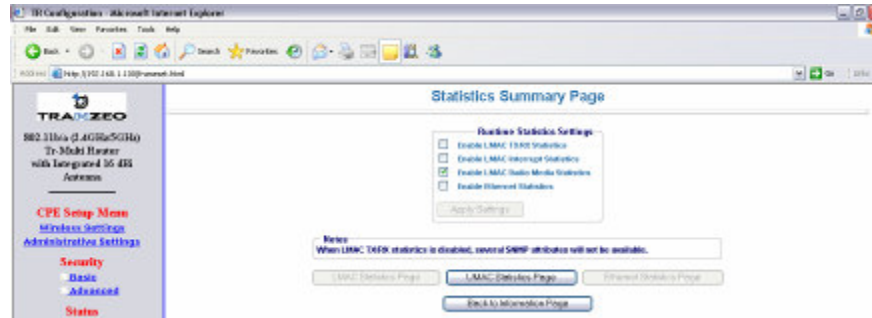


LMAC Statistics

The LMAC functions occur in the radio chipset. While the UMAC divides the statistics into clean and failed packets, LMAC defines why packets failed.

This window contains three tabs: TX, RX and INT. TX and RX values are useful to ISPs and other users. The INT (internal) statistics are intended for use by Tranzeo Wireless Technical Support.

You can click onto each speed level and see how the traffic breaks down. In the TX statistics, there should be little to no Tries at Series 2, 3 or 4. The radio will try to send a packet 4 times at Series 1 and then will try the next series 4 times. In the RX statistics, you should look for bad CRCs and bad decrypts for signs of RF interference or Fresnel interference links. Bad PHYs generally are caused when the radio is unable to decode the packets due to noise.

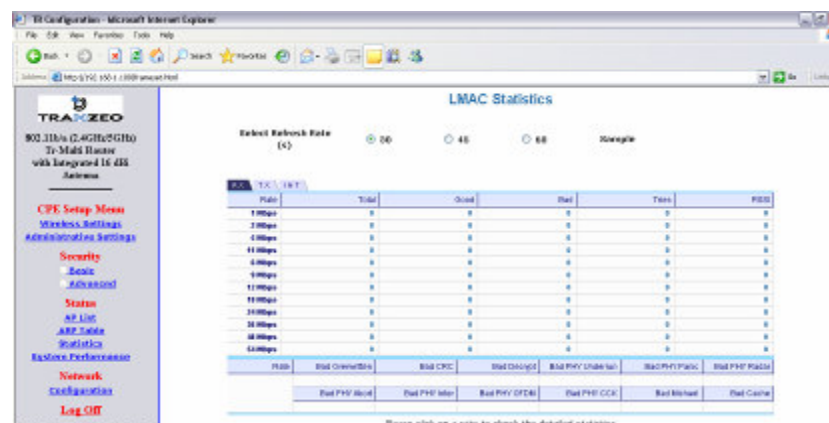


Note: Communication between access points and CPEs always occurs at the lowest rate. In a normal link, you should see a fair number of transactions at the lowest rate.

UMAC Statistics

The UMAC functions occur in the unit's processor. The UMAC statistics are likely the most useful for radio troubleshooting. This window breaks down the statistics into clean and failed packets.

The failed packets should be less than 10% in a normal operating environment. In the TX statistics, there should be little to no Retransmits at Series 2, 3 or 4. Life Statistics are reset on each reboot.

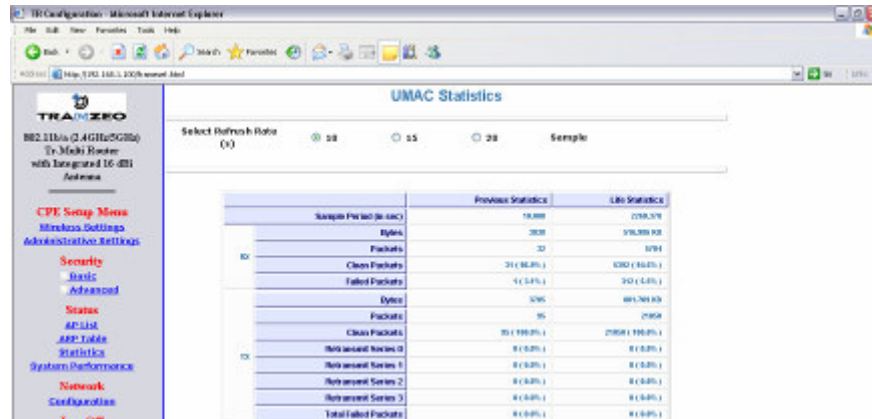


		Sample Period (in sec)	Previous Statistics	Life Statistics
TX	Bytes	18,888		2789,378
	Packets	2838		376,889 RX
	Clean Packets	21 (0.4%)		3282 (0.4%)
	Failed Packets	1 (0.4%)		242 (0.4%)
	Bytes	3295		485,769 RX
RX	Packets	95		27858
	Clean Packets	70 (100.0%)		27858 (100.0%)
	Retransmit Series 0	0 (0.0%)		0 (0.0%)
	Retransmit Series 1	0 (0.0%)		0 (0.0%)
	Retransmit Series 2	0 (0.0%)		0 (0.0%)
		Retransmit Series 3	0 (0.0%)	0 (0.0%)
		Total Failed Packets	0 (0.0%)	0 (0.0%)

Ethernet Statistics

In this window, excessive collisions are usually a sign that the radio and the device it is linked to are not on the same duplex settings. One is at full while the other is at half. Try locking both to the same values.

Collisions do normally occur on an Ethernet network and are generally handled by the Carrier Sense Multiple Access with Collision Detect (CSMA/CD) mechanism. Alignment, length and excessive FCS errors could be the result of a bad radio link, or a bad Ethernet cable.

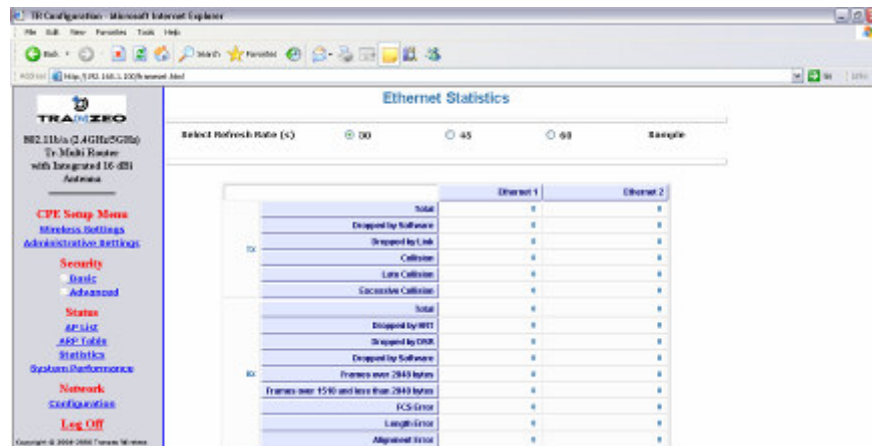

		Ethernet 1	Ethernet 2
TX	Total	0	0
	Dropped by Software	0	0
	Dropped by Link	0	0
	Collisions	0	0
	Late Collisions	0	0
RX	Successive Collisions	0	0
	Total	0	0
	Dropped by HW	0	0
	Dropped by CSMA	0	0
	Dropped by Software	0	0
Frames over 2048 bytes		0	0
Frames over 1536 and less than 2048 bytes		0	0
FCS Error		0	0
Length Error		0	0
Alignment Error		0	0

System Performance

This window shows information about the memory usage and the CPU. Many browsers do not allow infinite refreshes of a page through scripts, so this window may stop updating. If it does, simply change the refresh rate to another value to restart the process.



Network Configuration

In this window you can control the network configuration of the device. First, you must define if your radio will operate as a bridge or router. The content of the window varies slightly depending on your selection.

When changing modes, the radio may need to reboot before certain features become available.

Router

The screenshot shows the 'Network Configuration' window with 'Router' selected. It includes fields for MTU, Ping, Access to Web Server, MAC Address, WAN IP Mode (Static, DHCP Client, PPPoE), WAN IP Address, Subnet Mask, Gateway, DNS1, DNS2, Domain Name, Routing (NAT, UPnP), and Port Management (Port Selection, Port Forwarding). Ethernet (wired) Port A and B are also configured with Speed (Mbps) and Duplex (AUTO).

Bridge

The screenshot shows the 'Network Configuration' window with 'Bridge' selected. It includes fields for MAC Address, Cloning into, WAN IP Mode (Static, DHCP Client), WAN IP Address, Subnet Mask, Gateway, DNS1, DNS2, Domain Name, and Ethernet (wired) Port A and B. The Ethernet ports are configured with Speed (Mbps) and Duplex (AUTO).

The following are features common to bridge or router mode. Router specific features are described in the next page.

Cloning Mac Address:

This feature allows the radio to copy the Mac address of the device you have connected to the network. This is useful when you change your device and don't want to register a new Mac address, or when dealing with some PPPoE and Radius implementations. When the device is cloning a Mac address, it can only be managed from the LAN side. To clone a Mac address, check the **Mac Address** box and enter the Mac address in the field **Cloning into**. Uncheck to restore the original Mac address.

IP Mode:

You can select to use **Static IP**, **DHCP Client** (dynamic), or **PPPoE** (available only for router). **Note:** If a DHCP server is not available, the device will try to get an IP for up to 5 minutes. After that, it will fall back to a static IP.

WAN:

Enter the information related to the WAN interface: IP Address, Subnet Mask, Gateway, DNS1, DNS2, and Domain Name.

Ethernet Port Speed:

Set as **Auto** by default.

Router Mode

The following features are available if you select Router mode in the Network Configuration window.


From this window you can access specific windows to configure the DHCP Server, QoS, Static Routes, Port Filtering, and Port Forwarding. If the feature is available, it will appear like a link. To open an item, just click on it. These features are described in the next pages.

MTU:	The Maximum Transmission Unit (MTU) refers to the size of the largest packet that the router can pass. The default value is 1500 bytes. If PPPoE is used, you should change the MTU to match the PPPoE server, typically 1492 bytes.
Allow Pinging:	Enables ping responses on WAN interface.
Allow Access to Web Server:	Allows access from WAN interface or change the port the WAN server responds to web server requests. Note: Access to web server from LAN interface is always enabled and set at port 80.
IP Mode:	You can select to use Static IP , DHCP Client (dynamic), or PPPoE . If no PPPoE server is found, you may not be able to access the radio from the WAN side, but you will still be able to get access from the LAN interface.
LAN:	Enter the information related to the LAN interface: IP address and subnet mask.
DHCP Server:	Check the box and click Apply to enable this feature. Click on the item (which now appears in blue) to open the DHCP Server configuration window.
Routing:	Enables NAT, QoS, and Static Routes. NAT should always be enabled when using private addressing. Click on QoS or Static Routes to configure.
Port Management:	Check the box and click Apply to enable port filtering and port forwarding. Click on any item to open the configuration window.

Note: Many Ethernet devices do not auto-negotiate properly. If you see large numbers of dropped pings, you may have collisions. Try locking the device at 10 / Half as a troubleshooting step. If the packet losses stop, step up to 100 / Half. If the device the radio is connecting cannot support 100 / Half, you should replace the device or place a switch in line.

DHCP Configuration

This window shows the configuration of the DHCP server.

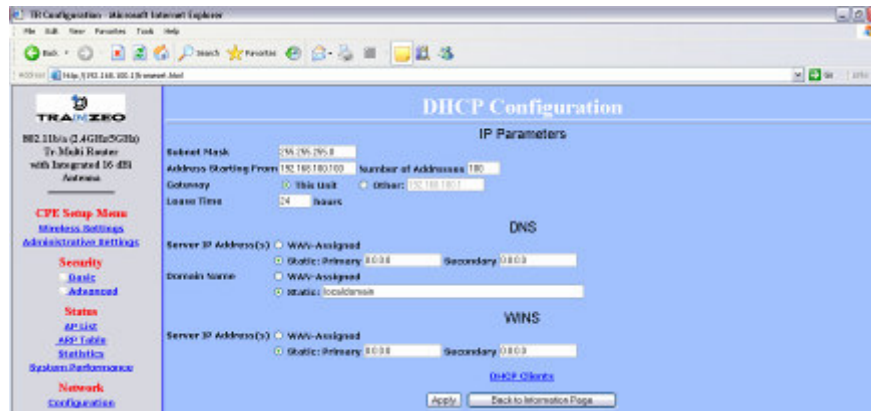

IP Parameters

Subnet Mask:	Enter your subnet mask in this field.
Address Starting from:	Indicates the first address in the DHCP pool.
Number of Addresses:	Indicates the number of addresses in the DHCP pool.
Gateway:	Select This Unit to use the gateway set on the WAN interface. Select Other to use a different gateway.
Lease Time:	Indicates the expiration time for the IP address assigned by the DHCP server.

DNS

Server IP Address:	Select WAN Assigned to use the DNS server IP addresses assigned on the WAN side. To use different DNS servers, select Static , in which case you must enter the Primary and Secondary IP addresses.
Domain Name:	Apply the same configuration as for Server IP Address .
WINS:	Apply the same configuration as for Server IP Address .

IP Routing

This window is intended for those users who have a strong understanding of IP routing. Here you can see the System Routes, create your User Routes, and set the Default Route. Be careful when making changes since misconfiguration could result in serious network problems and even the loss of functionality.

The screenshot shows the IP Routing configuration page in a web browser. The page has a sidebar on the left with navigation links: CPE Setup Menu, Wireless Settings, Administrative Settings, Security, Basic, Advanced, Status, AP List, API Tools, Statistics, System Performance, Network, Configuration, and Log Off. The main content area is titled 'IP Routing' and contains three sections: System Routes, User Routes, and Default Route.

System Routes

Interface	IP Address	Subnet Mask	Gateway	Metric
WAN	192.168.1.255	255.255.255.255	0.0.0.0	1
WAN	192.168.1.100	255.255.255.255	0.0.0.0	1
WAN	192.168.1.0	255.255.255.0	0.0.0.0	1
LAN	192.168.100.255	255.255.255.255	0.0.0.0	1
LAN	192.168.100.1	255.255.255.255	0.0.0.0	1
LAN	192.168.100.0	255.255.255.0	0.0.0.0	1

User Routes

Interface	IP Address	Subnet Mask	Gateway	Metric
Off	0.0.0	0.0.0	0.0.0	0
Off	0.0.0	0.0.0	0.0.0	0
Off	0.0.0	0.0.0	0.0.0	0
Off	0.0.0	0.0.0	0.0.0	0
Off	0.0.0	0.0.0	0.0.0	0
Off	0.0.0	0.0.0	0.0.0	0
Off	0.0.0	0.0.0	0.0.0	0
Off	0.0.0	0.0.0	0.0.0	0
Off	0.0.0	0.0.0	0.0.0	0
Off	0.0.0	0.0.0	0.0.0	0

Default Route

Select Interface: ☐ System WAN ☒ User


Gateway: 192.168.1.1

Buttons: Apply, Back to Interface Page

- Interface:** Specify if the interface is **WAN** or **LAN**. Select **Off** to disable the route.
- IP Address:** This is the IP address or network that the packets will be attempting to access.
- Subnet Mask:** Specifies the part of the destination IP that represents the network address and the part that represents the host address. Note: 255.255.255.255 represents only the host entered in the Destination IP field.
- Gateway:** Indicates the next hop if this route is used. A gateway of 0.0.0.0 means there is no next hop and the IP address matched is directly connected to the router on the interface specified.
- Metric:** This is the number of hops it will take to reach the destination. A hop occurs each time data passes through a router from one network to another. If there is only one router between your network and the destination network, then the metric value would be 1.
- Default Route:** This option allows you to change the default route of the radio. Make changes with extreme caution.

Quality of Service Configuration (QoS)

In this window you can use the QoS features and set rules to prioritize the traffic.

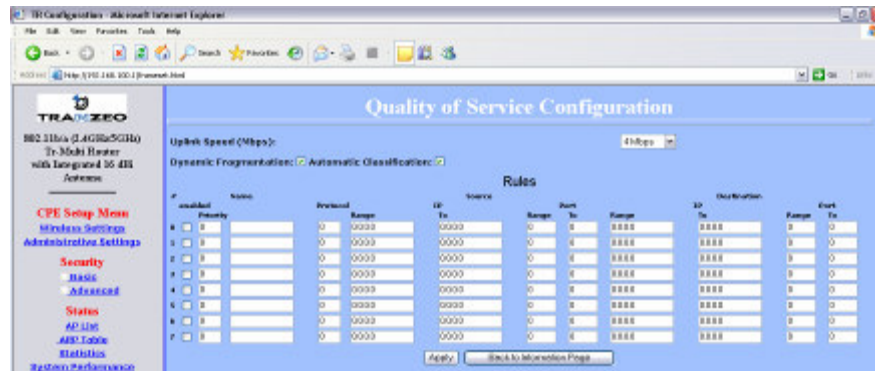

Uplink Speed:

This is the maximum speed of the uplink (from the source to the destination). The order and size of traffic is determined based on this value.

Dynamic Fragmentation:

Check to reduce delay for high-priority traffic and adaptive fragmentation where the fragmentation is determined by the uplink speed. This feature greatly improves the gaming and VOIP experience.

Automatic Classification:

This feature automatically classifies traffic and gives priority to certain applications. Applications such as VOIP and gaming are automatically given priority.

Enabled:

Check to activate a rule.

Priority:

Enter the priority of the rule between 0 and 255.

Name:

Enter the name of the rule here.

Protocol:

Enter the protocol number here. Common options are: 0 for ANY, 1 for ICMP, 6 for TCP, and 17 for UDP.

Source IP Range:

Enter the range of IP addresses on the LAN side where the rule would apply. To cover all LAN IPs, enter 0.0.0.0. For a single IP, enter the IP in both boxes.

Source Port Range:

Enter the range of ports on the LAN side where the rule would apply. To cover all ports, enter 0. For a single port, enter this port in both boxes.

Destination IP Range:

Enter the range of IP addresses on the WAN side where the rule would apply.


Destination Port Range:

Enter the range of ports on the WAN side where the rule would apply.

Port Forwarding

This feature allows the radio to forward requests for certain ports to devices behind a router. For example, you have a web server on a private IP that you want to be accessible to the world. You can forward all requests on port 80 to 192.168.1.2. For this to work, you have to change the management port of the radio from port 80 on the Network Configuration window.

In this window, you can create, edit, delete, and manage rules for port forwarding. A list of port forwarding rules appears at the bottom.

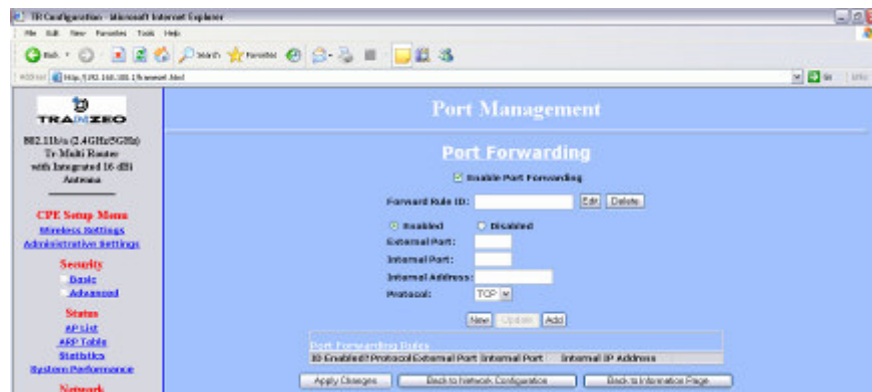

Enable Port Forwarding:	Click to apply rules from the Rules list.
Forward Rule ID:	Enter the rule ID here to retrieve its information.
Edit / Delete:	Click to modify or remove the selected rule.
Enabled / Disabled:	Activate or deactivate the selected rule.
External Port:	Enter the port to which requests will be forwarded.
Internal Port:	Enter your port here.
Internal Address:	Enter your IP address.
Protocol:	Select the protocol used for this rule.
New:	Click to create a new rule. Fields will be cleared.
Add:	After creating a rule, click this button to include the new rule in the Port Forwarding Rules list.
Update:	Click to apply changes after editing or deleting a rule.

Port Filtering

This feature allows the radio to block requests to and from devices behind the router. A list of the devices filtered appears at the bottom of the window.



Enable Port Filtering:

Click to apply the rules enabled from the Filter list.

WAN / LAN:

Select the network.

Filter Rule ID:

Enter the filter rule ID here to retrieve its information.

Edit / Delete:

Click to modify or eliminate the selected filter.

Allow / Deny:

The rule can either allow or deny ports.

New:

Click to create a new filter. Fields will be cleared and you may enter the information for the new filter.

Add:

After creating a filter, click this button to include the new filter in the Filter list.

Source IP Range:

Enter the range of IP addresses on the LAN side where the rule would apply.

Destination IP Range:

Enter the range of IP addresses on the WAN side where the rule would apply.

Source Port Range:

Enter the range of ports on the LAN side where the rule would apply.

Destination Port Range:

Enter the range of ports on the WAN side where the rule would apply.

ICMP Type:

This allows you to block certain types of ICMP as a prevention against port scanning and some viruses.

Protocol:

Select the protocol used for this rule.

Update:

Click to apply changes after editing or deleting a filter.

Appendix A: Grounding and Lightning Protection Information

What is a proper ground?

This antenna must be grounded to a proper earth ground. According to the National Electrical Code Sections 810-15s and 810-21, the grounding conductor shall be connected to the nearest accessible locations of the following:

- The building or structure grounding electrode
- The grounded interior metal water piping system
- The power service accessible means external to enclosure
- The metallic power service raceway
- The service equipment enclosure
- The grounding electrode conductor

Why is coiling the LMR or Cat 5 bad?

The myth is that lightning follows the path of least resistance. It actually follows the path of least impedance. Coiling cables creates an air-wound transformer, which lowers the impedance. This means you are in fact making your radios a more appealing target for surges.

What standard does Tranzeo Wireless equipment meet?

This radio exceeds International Standard IEC 61000-4-5 when properly grounded. For a copy of the full testing report, see Report Number TRL090904 - *Tranzeo Surge Protection board* located on the Tranzeo website (www.tranzeo.com).

Is lightning damage covered by the warranty?


No. Lightning is not covered by the warranty. If you follow the instructions, your chances of lightning damage are greatly reduced, but nothing can protect a radio from a direct lightning strike.

Where to ground the device?

This radio must be grounded at the pole and at the POE. This is because the radio is between the exterior antenna and the POE ground. See the examples below.


Grounded Radio

A grounded radio causes the surge to pass directly to ground, bypassing the radio.

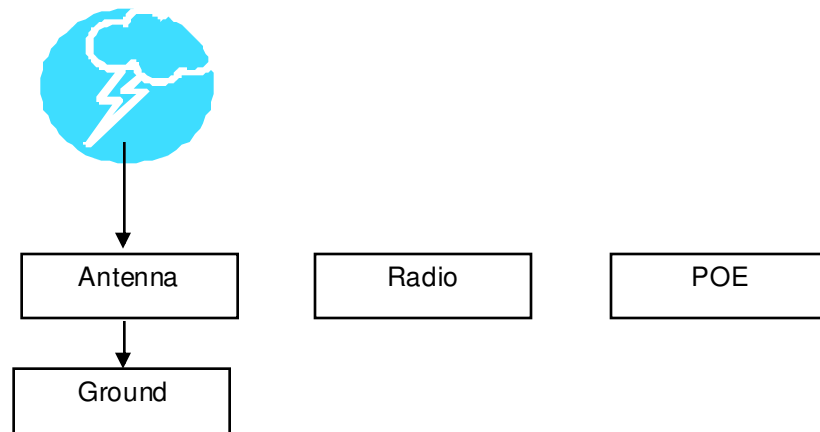


Ungrounded Radio

An ungrounded radio causes the surge to pass through the radio. In this case, the radio most likely will be damaged.

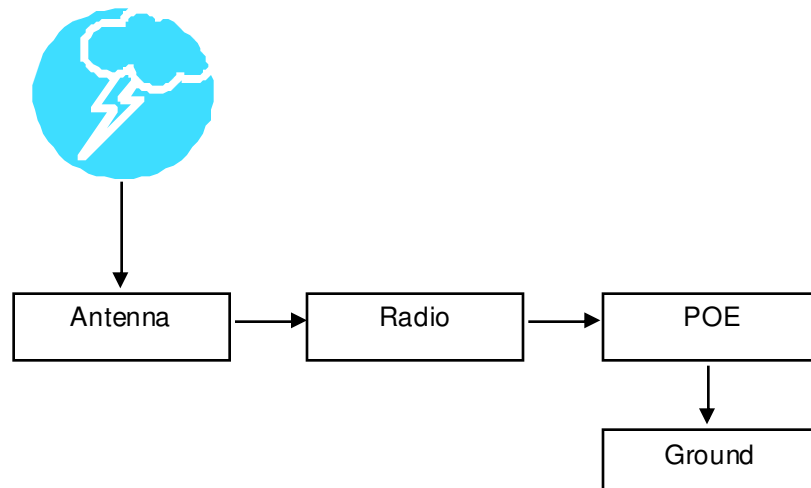


Grounded POE

In this case, the surge will be picked up by the Cat 5 cable and since the POE is grounded, the route for the surge is through the POE to ground.

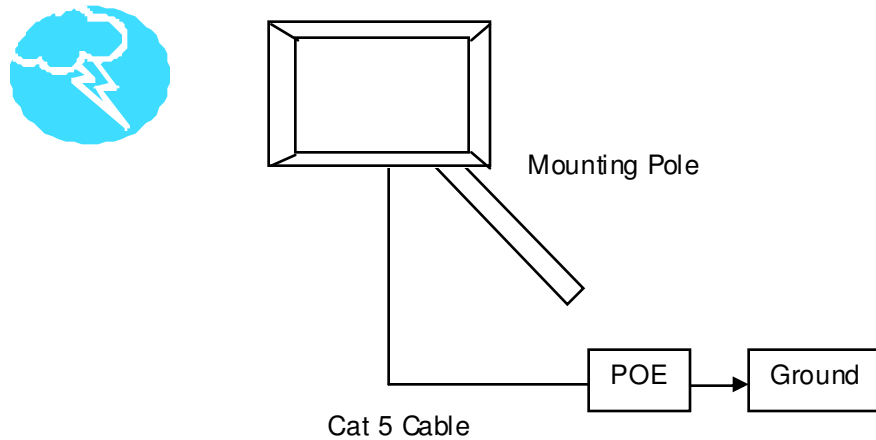**Ungrounded POE**

In this case, the surge will be picked up by the Cat 5 cable and since the POE is not grounded, the route for the surge is through the radio to the antenna, and out through the building.

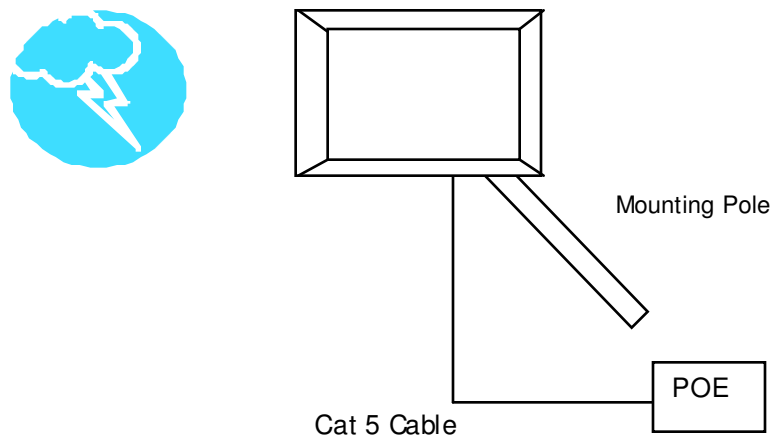

Appendix B: Product Specification

Features					
Standard		802.11ab			
Frequency Range		2412 – 2462 MHz; 5280 – 5320 MHz; 5745 – 5825 MHz			
Radio Mode		Customer Premise Equipment			
Data Range & Modulation		11Mbps & 5.5Mbps CCK, 2Mbps DQPSK, 1 Mbps DBPSK			
Communication Method		Half-Duplex			
Transmit Power		23 dBm (2.4 GHz), 17 dBm (5 GHz)			
Receiver Sensitivity		-90dBm @ 11Mbps (2.4GHz), -76dBm @ 54 Mbps (5 GHz)			
Polarization		Horizontal or Vertical			
Antennas					
Model	Type	Wind Load (N)		Beamwidth	
		100 mph	125 mph	Horizontal	Vertical
TR-Multi-N	N-Connector	105	165	N/A	N/A
TR-Multi-2	16dBi (2.4 GHz), 20dBi (5 GHz) Panel	182	285	18.2° (2.4 GHz) 10.5° (5 GHz)	18.2° (2.4 GHz) 10.5° (5 GHz)
Management					
Remote Configuration		Based on IP Address			
Device Management		Windows Utility, Web-Based Management, SNMP (MIB-II and 80211 mib compliant)			
Protocol Supported		TCP/IP			
Security		40 bits and 128 bits WEP encryption, Access Control address filter (MAC), WPA encryption			
Ethernet Connector		10/100 BaseT (water tight RJ-45)			
Operating Temperature		-65°C to +60°C			
Warranty		1 year depot			
Dimensions					
TR-Multi-N		13" X 10-1/8" (radio only)			
TR-Multi-2		16" X 14-1/4" (radio only)			
Power Supply					
Standard		AC Wall Plug Input: 120V 60Hz Output: 18V, 1000mA			
Optional		AC Wall Plug Input: 120V 60Hz Output: 24V, 1000mA			
Specifications are subject to change without notice. Subject to local regulations.					

Appendix C: Protocol List

Dec	Keyword	Protocol	Dec	Keyword	Protocol
0	HOPOPT	IPv6 Hop-by-Hop Option	51	AH	Authentication Header for IPv6
1	ICMP	Internet Control Message	52	I-NLSP	Integrated Net Layer Security
2	IGMP	Internet Group Management	53	SWIPE	IP with Encryption
3	GGP	Gateway-to-Gateway	54	NARP	NBMA Address Resolution
4	IP	IP in IP (encapsulation)	55	MOBILE	IP Mobility
5	ST	Stream	56	TLSP	Transport Layer Security using Kryptonet key management
6	TCP	Transmission Control	57	SKIP	SKIP
7	CBT	CBT	58	IPv6-ICMP	ICMP for IPv6
8	EGP	Exterior Gateway Protocol	59	IPv6-NoNxt	No Next Header for IPv6
9	IGP	private interior gateway	60	IPv6-Opts	Destination Options for IPv6
10	BRM	BBN RCC Monitoring	61		any host internal protocol
11	NVP-II	Network Voice Protocol	62	CFTP	CFTP
12	PUP	PUP	63		any local network
13	ARGUS	ARGUS	64	SAT-EXPAK	SATNET and Backroom EXPAK
14	EMCON	EMCON	65	KRYPTOLAN	Kryptolan
15	XNET	Cross Net Debugger	66	RVD	MIT Remote Virtual Disk
16	CHAOS	Chaos	67	IPPC	Internet Pluribus Packet Core
17	UDP	User Datagram	68		any distributed file system
18	MUX	Multiplexing	69	SAT-MON	SATNET Monitoring
19	DCN-MEAS	DCN Measurement	70	VISA	VISA Protocol
20	HMP	Host Monitoring	71	IPCV	Internet Packet Core Utility
21	PRM	Packet Radio Measurement	72	CPNX	Computer Protocol Network Executive
22	XNS-IDP	XEROX NS IDP	73	CPHB	Computer Protocol Heart Beat
23	TRUNK-1	Trunk-1	74	WSN	Wang Span Network
24	TRUNK-2	Trunk-2	75	PVP	Packet Video Protocol
25	LEAF-1	Leaf-1	76	BR-SAT-MON	Backroom SATNET Monitoring
26	LEAF-2	Leaf-2	77	SUN-ND	SUN ND PROTOCOL-Temporary
27	RDP	Reliable Data Protocol	78	WB-MON	WIDEBAND Monitoring
28	IRTP	Internet Reliable Transaction	79	WB-EXPAK	WIDEBAND EXPAK
29	ISO-TP4	ISO Transport Class 4	80	ISO-IP	ISO Internet Protocol
30	NETBLT	Bulk Data Transfer	81	VMTP	VMTP
31	MFE-NSP	MFE Network Services	82	SECURE-VMTP	SECURE-VMTP
32	MERIT-INP	MERIT Intemodal Protocol	83	VINES	VINES
33	SEP	Sequential Exchange	84	TTP	TTPord Protocol
34	3PC	Third Party Connect	85	NSFNET-IGP	NSFNET-IGP
35	IDPR	Inter-Domain Policy Routing Protocol	86	DGP	Dissimilar Gateway Protocol
36	XTP	XTP	87	TCF	TCF
37	DDP	Datagram Delivery	88	EIGRP	EIGRP
38	IDPR-CMTP	IDPR Control Message Transport Proto	89	OSPF-IGP	OSPF-IGP
39	TP++	TP++ Transport Protocol	90	Sprite-RPC	Sprite RPC Protocol
40	IL	IL Transport Protocol	91	LARP	Locus Address Resolution
41	IPv6	Ipv6	92	MTP	Multicast Transport Protocol
42	SDRP	Source Demand Routing	93	AX.25	AX.25 Frames
43	IPv6-Route	Routing Header for IPv6	94	IPIP	P-within-IP Encapsulation
44	IPv6-Frag	Fragment Header for IPv6	95	MICP	Mobile Internetworking Control
45	IDRP	Inter-Domain Routing	96	SCC-SP	Semaphore Communications Sec.
46	RSVP	Reservation Protocol	97	ETHERIP	Ethernet-within-IP Encapsulation
47	GRE	General Routing Encapsulation	98	ENCAP	Encapsulation Header
48	MHRP	Mobile Host Routing Protocol	99		any private encryption scheme
49	BNA	BNA	100	GMTP	GMTP
50	ESP	Encap Security Payload for IPv6			

Dec	Keyword	Protocol	Dec	Keyword	Protocol
101	IFMP	Ipsilon Flow Management	121	SMP	Simple Message Protocol
102	PNNI	PNNI over IP	122	SM	SM
103	PIM	Protocol Independent Multicast	123	PTP	Performance Transparency
104	ARIS	ARIS	124	ISIS	ISIS over IPv4
105	SCPS	SCPS	125	FIRE	
106	QNX	QNX	126	CRTP	Combat Radio Transport
107	A/N	Active Networks	127	CRUDP	Combat Radio User Datagram
108	IPComp	IP Payload Compression	128	SSCOPMCE	
109	SNP	Sitara Networks Protocol	129	IPLT	
110	Compaq-Peer	Compaq Peer Protocol	130	SPS	Secure Packet Shield
111	IPX-in-IP	IPX in IP	131	PIPE	Private IP Encapsulation within IP
112	VRRP	Virtual Router Redundancy	132	SCTP	Stream Control Transmission
113	PGM	PGM Reliable Transport	133	FC	Fibre Channel
114		any 0-hop protocol	134	RSVP-E2E-IGNORE	
115	L2TP	Layer Two Tunneling Protocol	135		Mobility header
116	DDX	D-II Data Exchange (DDX)	136	UDPLite	
117	IATP	Interactive Agent Transfer	137	MPLS-in-IP	
118	STP	Schedule Transfer Protocol	138-252		Unassigned
119	SRP	SpectraLink Radio Protocol	253		Use for experimentation and testing
120	UTI	UTI	254		Use for experimentation and testing
			255		Reserved

Appendix D: Common TCP Ports

Visit <http://www.iana.org/assignments/port-numbers> for a full list of well known port numbers.

Keyword	Port	Description
ECHO	7	Echo
SYSTAT	11	Active Users
QOTD	17	Quote of the day
MSP	18	Message Send Protocol
FTP-DATA	20	File Transfer (Data Channel)
FTP	21	File Transfer (Control)
TELNET	23	Telnet
SMTP	25	Simple Mail Transfer
NAME	42	TCP Nameserver
BOOTPS	67	Bootstrap Protocol Server
BOOTPC	68	Bootstrap Protocol Client
TFTP	69	Trivial File Transfer
WWW	80	World Wide Web
KERBEROS	88	Kerberos
POP3	110	TCP post office
NNTP	119	USENET
NFS	2049	Network File System
SIP	5060, 5061	SIP

