

TOMMY HILFIGER
WIRELESS SPEAKER
WATER RESISTANT
WIRELESS SPEAKER
USER MANUAL FOR TOMMY SPEAKER 100

Bluetooth

PRODUCT OVERVIEW

Micro USB Cable

AUX Cable

CHARGING YOUR SPEAKER

The battery recharges via USB. It is a quick charger. When the speaker is charged, the Red LED indicator keeps flashing when it is fully charged. It keeps it bright.

A Via AC Adapter/Wall Charger: Connect the provided Micro USB cable to the speaker. Connect the AC Adapter to the wall.

B Via Computer: Connect the provided Micro USB cable to the speaker. Connect the other end of the cable to the computer's USB port.

FM Radio

1st: Using the provided Micro USB cable, connect your speaker (Micro USB port) to the AC Adapter (USB port).

CHANGING MODES

Your speaker is equipped with a FM receiver. To switch between Bluetooth and FM modes, Press the button. A tone will indicate which mode the speaker is currently in. Press the button to auto search for radio channels. Press the button again to stay on this channel.

Noticing the provided Micro USB charging cable plugged into the USB port, an entrance signal the speaker will act as an antenna.

Go to next station Go to previous station

Press and hold to turn on the speaker. Press and hold to turn on the speaker.

CE FC

PAIRING THE SPEAKER TO BLUETOOTH DEVICE

Make sure the Bluetooth function is available on your cell phone. Specific pairing procedure will be different depending on different cell phones. For detailed information, please refer to your cell phone's User Guide.

- If no device is connected, when the LED indicator of the speaker is flashing, the speaker will automatically turn on and will start to play music.
- When it is successful pairing, double the indicator each other. Then the pairing will be finished and done.

1. Keep the distance between the cell phone and the speaker within 3 feet for pairing only.
2. Turn on the speaker by pressing the Power Button for 3 seconds.
3. The tone prompt will sound. The LED will automatically enter into pairing mode.
4. Activate the Bluetooth function of the cell phone to search for the Bluetooth device. After finishing the search, select "Tommy Speaker" in the device list displayed.
5. Your WS100 speaker is ready to use.

SPEAKER CONTROLS

ON/OFF

Press and hold button for 3 seconds to turn the unit ON. Press and hold the button again to turn it OFF. The unit will be shut off if it is not used for 10 minutes.

VOLUME

During a call when talking to make:

Volume + Press button

Volume - Press button

MUSIC

Go to next song Press and hold button

Go to previous song Press and hold button

PLAY/PAUSE/ANSWER/REFUSE THE CALL

Press to answer the call, press it again to hang up. Press and hold for 2 seconds to refuse the call. Double press to call back the last number.

CHARGING A DEVICE FROM A SPEAKER

Your speaker acts as a powerbank, so that you can charge your device. Connect your device to the USB powerbank port on the reverse of the speaker using your device's charging cord (not included). Your device will begin to charge automatically.

AUX MODE

Use the 3.5mm audio cable (included) to connect the speaker to an audio source (MP3, MP4, mobile phone, computer). The speaker will play the music from the audio source.

IMPORTANT SAFEGUARDS

- Place speaker away from the source of heat.
- Always adjust the speaker volume to a comfortable level to avoid hearing damage or the damage to the unit.
- If not using the speaker for a long period of time, keep the battery charged (charge once every 3 months). This will prevent the loss of your stored battery.

SPECIFICATIONS

Frequency: 20 Hz-20KHz
Battery: 1800 mAh Li-ion
Bluetooth version: 5.0
Distance: 33 ft (10m)
Charging time: 4 Hours
Playing time: 5 Hours

SUPPORT

please do not attempt to fix the product by yourself. If you are experiencing any problems with the product, you can contact a sales representative and they will assist you with any questions, problems or concerns you may have.

Visit our support page online at www.investelectronics.com

TOMMY HILFIGER
WIRELESS SPEAKER
WATER RESISTANT
WIRELESS SPEAKER
HAUT-PARLEUR SANS FIL
RÉSISTANT À L'EAU
HAUT-PARLEUR SANS FIL
MANUEL D'UTILISATION POUR TOMMY HAUT-PARLEUR 100

Bluetooth

PRODUIT DE PRODUIT

Micro USB Cable

AUX Cable

CHARGER VOTRE HAUT-PARLEUR

Le haut-parleur se recharge via USB. C'est un chargeur rapide. Lorsque le haut-parleur est chargé, l'indicateur LED rouge clignote lorsqu'il est complètement chargé. Il reste lumineux.

A Via adaptateur secteur / chargeur mural: Connectez le câble USB fourni au haut-parleur. Connectez l'adaptateur secteur à la prise murale.

B Via ordinateur: Connectez le câble USB fourni au haut-parleur. Connectez l'autre bout du câble à un port USB de l'ordinateur.

FM Radio

1er: Utilisez le câble USB fourni pour connecter votre haut-parleur (port USB) à l'adaptateur secteur (port USB).

CHANGEMENT DE MODES

Votre haut-parleur est équipé d'un récepteur FM. Pour passer du Bluetooth au FM, appuyez sur le bouton . Une tonalité indiquera le mode dans lequel se trouve le haut-parleur. Appuyez sur le bouton pour rechercher automatiquement des stations de radio. Appuyez à nouveau sur le bouton pour rester sur cette station.

En remarquant le câble USB de chargement branché dans le port USB, une entrée signale que le haut-parleur agit comme une antenne.

Allez à la station suivante Allez à la station précédente

Appuyez et maintenez pour allumer le haut-parleur. Appuyez et maintenez pour allumer le haut-parleur.

CE FC

ASSOCIANT LE HAUT-PARLEUR À UN APPAREIL BLUETOOTH

Assurez-vous que la fonction Bluetooth est disponible sur votre appareil portable. Les procédures de couplage spécifiques varient d'un appareil à l'autre. Pour plus d'informations, consultez le manuel d'utilisation de votre appareil portable.

- Si l'appareil portable n'est pas connecté, lorsque l'indicateur LED du haut-parleur clignote, le haut-parleur se mettra automatiquement en mode de couplage.
- Appuyez sur le bouton pour allumer le haut-parleur. Appuyez à nouveau sur le bouton pour allumer le haut-parleur.

1. Maintenez la distance entre l'appareil portable et le haut-parleur à moins de 3 mètres pour le couplage.
2. Appuyez sur le bouton pour allumer le haut-parleur. Appuyez à nouveau sur le bouton pour allumer le haut-parleur.
3. Le ton de signal indiquera que le haut-parleur est prêt à être utilisé.
4. Activez la fonction Bluetooth de l'appareil portable. Après avoir terminé la recherche, sélectionnez "Tommy Speaker 100" dans la liste des appareils trouvés.
5. Votre haut-parleur WS100 est prêt à être utilisé.

CHARGING YOUR SPEAKER

The battery recharges via USB. It is a quick charger. When the speaker is charged, the Red LED indicator keeps flashing when it is fully charged. It keeps it bright.

A Via AC Adapter/Wall Charger: Connect the provided Micro USB cable to the speaker. Connect the AC Adapter to the wall.

B Via Computer: Connect the provided Micro USB cable to the speaker. Connect the other end of the cable to the computer's USB port.

FM Radio

1st: Using the provided Micro USB cable, connect your speaker (Micro USB port) to the AC Adapter (USB port).

CHANGING MODES

Your speaker is equipped with a FM receiver. To switch between Bluetooth and FM modes, Press the button. A tone will indicate which mode the speaker is currently in. Press the button to auto search for radio channels. Press the button again to stay on this channel.

Noticing the provided Micro USB charging cable plugged into the USB port, an entrance signal the speaker will act as an antenna.

Go to next station Go to previous station

Press and hold to turn on the speaker. Press and hold to turn on the speaker.

CE FC

SPEAKER CONTROLS

ON/OFF

Press and hold button for 3 seconds to turn the unit ON. Press and hold the button again to turn it OFF. The unit will be shut off if it is not used for 10 minutes.

VOLUME

During a call when talking to make:

Volume + Press button

Volume - Press button

MUSIC

Go to next song Press and hold button

Go to previous song Press and hold button

PLAY/PAUSE/ANSWER/REFUSE THE CALL

Press to answer the call, press it again to hang up. Press and hold for 2 seconds to refuse the call. Double press to call back the last number.

CHARGING A DEVICE FROM A SPEAKER

Your speaker acts as a powerbank, so that you can charge your device. Connect your device to the USB powerbank port on the reverse of the speaker using your device's charging cord (not included). Your device will begin to charge automatically.

AUX MODE

Use the 3.5mm audio cable (included) to connect the speaker to an audio source (MP3, MP4, mobile phone, computer). The speaker will play the music from the audio source.

IMPORTANT SAFEGUARDS

- Place speaker away from the source of heat.
- Always adjust the speaker volume to a comfortable level to avoid hearing damage or the damage to the unit.
- If not using the speaker for a long period of time, keep the battery charged (charge once every 3 months). This will prevent the loss of your stored battery.

SPECIFICATIONS

Frequency: 20 Hz-20KHz
Battery: 1800 mAh Li-ion
Bluetooth version: 5.0
Distance: 33 ft (10m)
Charging time: 4 Hours
Playing time: 5 Hours

SUPPORT

please do not attempt to fix the product by yourself. If you are experiencing any problems with the product, you can contact a sales representative and they will assist you with any questions, problems or concerns you may have.

Visit our support page online at www.investelectronics.com

TOMMY HILFIGER
WIRELESS SPEAKER
WATER RESISTANT
WIRELESS SPEAKER
HAUT-PARLEUR SANS FIL
RÉSISTANT À L'EAU
HAUT-PARLEUR SANS FIL
MANUEL D'UTILISATION POUR TOMMY HAUT-PARLEUR 100

Bluetooth

PRODUIT DE PRODUIT

Micro USB Cable

AUX Cable

CHARGER VOTRE HAUT-PARLEUR

Le haut-parleur se recharge via USB. C'est un chargeur rapide. Lorsque le haut-parleur est chargé, l'indicateur LED rouge clignote lorsqu'il est complètement chargé. Il reste lumineux.

A Via adaptateur secteur / chargeur mural: Connectez le câble USB fourni au haut-parleur. Connectez l'adaptateur secteur à la prise murale.

B Via ordinateur: Connectez le câble USB fourni au haut-parleur. Connectez l'autre bout du câble à un port USB de l'ordinateur.

FM Radio

1er: Utilisez le câble USB fourni pour connecter votre haut-parleur (port USB) à l'adaptateur secteur (port USB).

CHANGEMENT DE MODES

Votre haut-parleur est équipé d'un récepteur FM. Pour passer du Bluetooth au FM, appuyez sur le bouton . Une tonalité indiquera le mode dans lequel se trouve le haut-parleur. Appuyez sur le bouton pour rechercher automatiquement des stations de radio. Appuyez à nouveau sur le bouton pour rester sur cette station.

En remarquant le câble USB de chargement branché dans le port USB, une entrée signale que le haut-parleur agit comme une antenne.

Allez à la station suivante Allez à la station précédente

Appuyez et maintenez pour allumer le haut-parleur. Appuyez et maintenez pour allumer le haut-parleur.

CE FC

ASSOCIANT LE HAUT-PARLEUR À UN APPAREIL BLUETOOTH

Assurez-vous que la fonction Bluetooth est disponible sur votre appareil portable. Les procédures de couplage spécifiques varient d'un appareil à l'autre. Pour plus d'informations, consultez le manuel d'utilisation de votre appareil portable.

- Si l'appareil portable n'est pas connecté, lorsque l'indicateur LED du haut-parleur clignote, le haut-parleur se mettra automatiquement en mode de couplage.
- Appuyez sur le bouton pour allumer le haut-parleur. Appuyez à nouveau sur le bouton pour allumer le haut-parleur.

1. Maintenez la distance entre l'appareil portable et le haut-parleur à moins de 3 mètres pour le couplage.
2. Appuyez sur le bouton pour allumer le haut-parleur. Appuyez à nouveau sur le bouton pour allumer le haut-parleur.
3. Le ton de signal indiquera que le haut-parleur est prêt à être utilisé.
4. Activez la fonction Bluetooth de l'appareil portable. Après avoir terminé la recherche, sélectionnez "Tommy Speaker 100" dans la liste des appareils trouvés.
5. Votre haut-parleur WS100 est prêt à être utilisé.

CHARGING YOUR SPEAKER

The battery recharges via USB. It is a quick charger. When the speaker is charged, the Red LED indicator keeps flashing when it is fully charged. It keeps it bright.

A Via AC Adapter/Wall Charger: Connect the provided Micro USB cable to the speaker. Connect the AC Adapter to the wall.

B Via Computer: Connect the provided Micro USB cable to the speaker. Connect the other end of the cable to the computer's USB port.

FM Radio

1st: Using the provided Micro USB cable, connect your speaker (Micro USB port) to the AC Adapter (USB port).

CHANGING MODES

Your speaker is equipped with a FM receiver. To switch between Bluetooth and FM modes, Press the button. A tone will indicate which mode the speaker is currently in. Press the button to auto search for radio channels. Press the button again to stay on this channel.

Noticing the provided Micro USB charging cable plugged into the USB port, an entrance signal the speaker will act as an antenna.

Go to next station Go to previous station

Press and hold to turn on the speaker. Press and hold to turn on the speaker.

CE FC

SPEAKER CONTROLS

ON/OFF

Press and hold button for 3 seconds to turn the unit ON. Press and hold the button again to turn it OFF. The unit will be shut off if it is not used for 10 minutes.

VOLUME

During a call when talking to make:

Volume + Press button

Volume - Press button

MUSIC

Go to next song Press and hold button

Go to previous song Press and hold button

PLAY/PAUSE/ANSWER/REFUSE THE CALL

Press to answer the call, press it again to hang up. Press and hold for 2 seconds to refuse the call. Double press to call back the last number.

CHARGING A DEVICE FROM A SPEAKER

Your speaker acts as a powerbank, so that you can charge your device. Connect your device to the USB powerbank port on the reverse of the speaker using your device's charging cord (not included). Your device will begin to charge automatically.

AUX MODE

Use the 3.5mm audio cable (included) to connect the speaker to an audio source (MP3, MP4, mobile phone, computer). The speaker will play the music from the audio source.

IMPORTANT SAFEGUARDS

- Place speaker away from the source of heat.
- Always adjust the speaker volume to a comfortable level to avoid hearing damage or the damage to the unit.
- If not using the speaker for a long period of time, keep the battery charged (charge once every 3 months). This will prevent the loss of your stored battery.

SPECIFICATIONS

Frequency: 20 Hz-20KHz
Battery: 1800 mAh Li-ion
Bluetooth version: 5.0
Distance: 33 ft (10m)
Charging time: 4 Hours
Playing time: 5 Hours

SUPPORT

please do not attempt to fix the product by yourself. If you are experiencing any problems with the product, you can contact a sales representative and they will assist you with any questions, problems or concerns you may have.

Visit our support page online at www.investelectronics.com

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.