
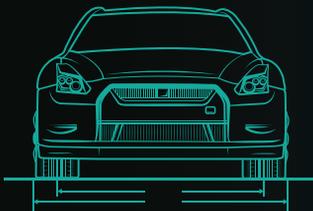
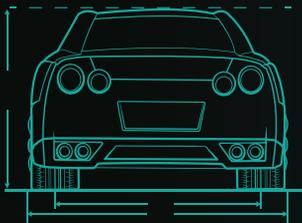
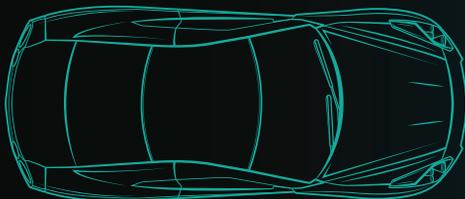


DRYFTER

REMOTE CONTROL RACE CAR

INSTRUCTION MANUAL

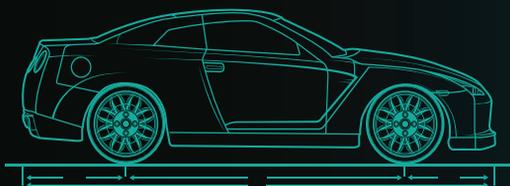

Box Contents





- RC car
- 2.4GHz remote control
- 500mAh rechargeable battery
- 2 AA remote batteries
- USB charging cable
- Rubber spare wheels
- 6 traffic cones

Getting Started

- Remove battery cover on remote control.
- Remove plastic from AA batteries
- Insert 2 AA batteries in correct orientation.
- Replace the battery cover on remote control.
- Remove the battery cover on the bottom of the RC car.
- Plug in the rechargeable battery to the cable inside the tray.
- Place the battery into the tray without bending the cables.
- Replace the battery cover on the bottom of the RC car.

Operation

- Set the ON/OFF switch of the car to “ON”
- Set the ON/OFF switch of the remote controller to on. The LED on the controller will flash and then turn off after a few seconds indicating the controller has successfully paired to the car. The LED will stay on when the controller is working.
- To drive forward, pull the throttle trigger slowly.
- To brake/reverse, push the throttle trigger.
- Release the throttle trigger to keep your vehicle still.
- Rotate the wheel on the remote controller counter clockwise to turn left.
- Rotate the wheel on the remote controller clockwise to turn right.

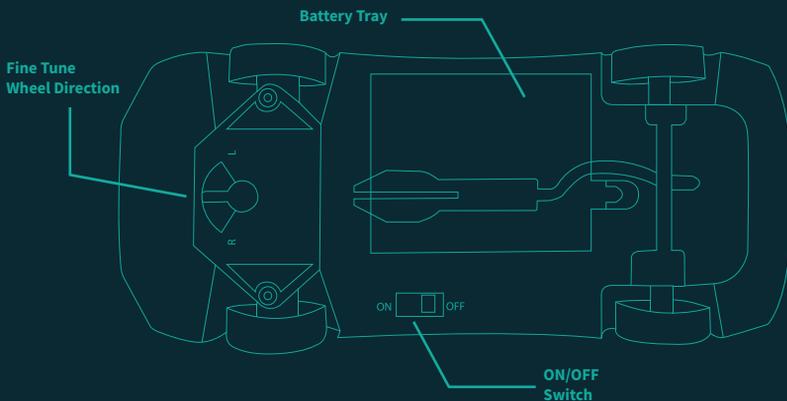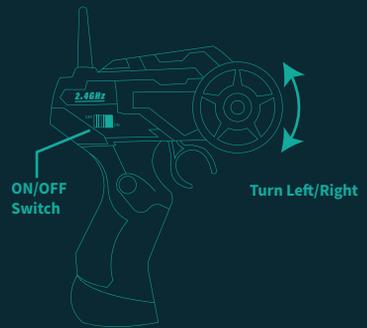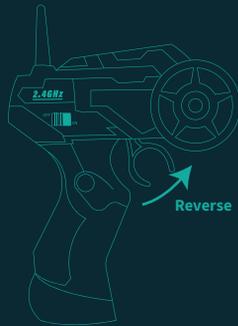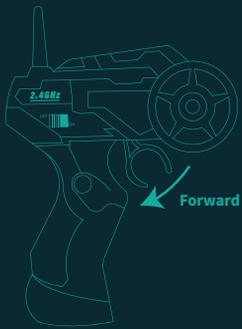

Running Tips

- Run your vehicle on a flat surface and always keep your vehicle in sight during operation.
- Always release the throttle trigger right away following a crash to prevent further damage.
- Do not run your vehicle in an area with people or property nearby.
- When you finish, always turn off your transmitter AFTER your vehicle power.
- Always keep the battery unplugged when you are not attempting to run the vehicle.

Troubleshooting

- If the lights on the RC car are flashing, the remote is not connected to the car.
- Turn off both devices and turn back on.
- When lights are solid, the remote has successfully connected to the car.

Charging guide

- Power off the RC car and the remote control.
- Remove the battery cover on the bottom of the RC car.
- Carefully unplug the battery by pinching the sides of the connection with one hand and top of the other connection with the other hand.
- Carefully plug the USB charger into the battery.
- Plug the USB charger into a USB adapter and allow to charge approximately 2-3 hours.
- Never let the battery charge more than 4 hours.
- While charging the USB charger red LED light will be solid.
- When charging is complete the red LED light will turn off.

Charging warnings

- The battery charger included with your RC car is designed to safely balance and charge the battery.
- CAUTION: All instructions and warnings must be followed exactly to the manufacturer's specifications. Mishandling of batteries can result in a fire, personal injury, and/or property damage.
- By handling, charging, or using the included battery, you assume all risks associated with lithium batteries. If at any time the battery begins to balloon or swell, while charging or discharging, discontinue and disconnect. Continue to use, charge, or discharge a battery that is ballooning, or swelling can result in fire.
- Always store the battery at room temperature in a dry area for best results.
- Always transport or temporarily store the battery in a temperature range of 40-120 °F (5-49 °C). Do not store battery or vehicle in a car or direct sunlight. If stored in a hot car, the battery can be damaged or even catch fire.
- Always charge batteries away from flammable materials. Always inspect the battery before charging and never charge damaged batteries.
- Always disconnect the battery after charging, and let the charge cool between charges.
- Always constantly monitor the temperature of the battery pack while charging.
- ONLY USE A CHARGER SPECIFICALLY DESIGNED TO CHARGE BATTERIES. Failure to charge the battery with a compatible charger may cause fire resulting in personal injury and/or property damage.
- Never discharge battery cells to below 3V under load.
- Never cover warning labels with hook and loop strips.
- Never leave charging batteries unattended.
- Never charge batteries outside recommended levels.
- Never attempt to dismantle or alter the charger. Never allow minors to charge battery packs.
- Never charge batteries in extremely hot or cold places (recommended between 40-120 °F (5-49 °C) or place in direct sunlight.

CAUTIONS

The following terms are used throughout the product literature to indicate various levels of potential harm when operating this product.

NOTICE: Procedures, which if not be properly followed, will create a possibility of physical property damage and/or possibility of injury.

WARNING: Read the ENTIRE instruction manual to become familiar with the features of the product before operating. Failure to operate the product correctly can result in damage to the product, personal property and cause serious injury. This is a sophisticated hobby product. It must be operated with caution and common sense and requires some basic mechanical ability. Failure to operate this product in a safe and responsible manner could result in injury or damage to the product or other property. This product is not intended for use by children without direct adult supervision. Do not use with incompatible components or alter this product in any way outside of the instructions. This manual contains instructions for safety, operation, and maintenance. It is essential to read and follow all the instructions and warnings in the manual, prior to assembly, setup, or use, in order to operate correctly and avoid damage or serious injury.

Safety Precautions and Warnings

- As the user of this product, you are solely responsible for operating in a manner that does not endanger yourself and others or result in damage to the product or property of others.
- Always keep a safe distance in all directions around your model to avoid collisions or injury. This model is controlled by a radio signal subject to interference from many sources outside your control. Interference can cause momentary loss of control.
- Always operate your vehicle in open space away from full-size vehicles, traffic, people, and animals.
- Always carefully follow the directions and warnings for this and any optional support equipment (chargers, rechargeable battery packs, etc.)
- Always keep all chemicals, small parts, and anything electrical out of the reach of children.
- Always avoid water exposure to all equipment not specially designed and protected for this purpose. Moisture causes damage to electronics.
- Never place any portion of the vehicle in your mouth as it could cause serious injury or even death.
- Never operate your vehicle with low transmitter batteries.
- Always keep your vehicle in sight and under control.
- Always use fully charged batteries.
- Always keep transmitter powered on while your vehicle is powered on.
- Always remove batteries before disassembly.
- Always keep moving parts clean.
- Always keep parts dry.
- Always let parts cool after use before touching.
- Always remove batteries after use.
- Never operate your vehicle with damaged wiring.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measure:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Compliance

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Responsible Party: Handstands Promo LLC

Company Name: HPG Brands

Address: 1770 S 5350 W Salt Lake City, UT 84104 USA

Tel: (801) 727-1400

<https://hpgbrands.com/handstands/>

*This product is not a toy or intended for children under 14 years old