

英文 规格：420*290MM

PROSCAN

PORTABLE SUITCASE STYLE BLUETOOTH CD PLAYER

MODEL NO. PRCD699BT

INSTRUCTION MANUAL



PLEASE READ BEFORE OPERATING THIS EQUIPMENT

This product has been manufactured and sold under the responsibility of CURTIS INTERNATIONAL LTD. PROSCAN, and the PROSCAN logo are trademarks used under license by CURTIS INTERNATIONAL LTD. – further information at www.proscan-brand.com.

All other products, services, companies, trademarks, trade or product names and logos referenced herein are the property of their respective owners.

Warnings and Precautions

TO PREVENT FIRE OR SHOCK HAZARDS, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.



This symbol, located on back or bottom of the unit, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol, located on back or bottom of the unit, is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



This product utilizes a Class 1 laser to read Compact Discs. This laser Compact Disc Player is equipped with safety switches to avoid exposure when the CD door is open and the safety interlocks are defeated. Invisible laser radiation is present when the CD Player’s lid is open and the system’s interlock has failed or been defeated. It is very important that you avoid direct exposure to the laser beam at all times. Please do not attempt to defeat or bypass the safety switches.



This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

To reduce the risk of electric shock, do not remove cover (or back). There are no user-serviceable parts inside. Please refer any servicing to qualified service personnel.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Important Safety Instructions

- Read Instructions** - All the safety and operating instruction should be read before the product is operated.
 - Read Instructions** - The safety and operating instruction should be retained for future reference.
 - Heat Warnings** - All warning on the product and in the operating instructions should be adhered to.
 - Fallow instructions** - All operating and use instructions should be followed.
 - Cleaning** - Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Clean only with a dry cloth.
 - Attachments** - Do not use attachments not recommended by the product manufacturer as they may cause hazards.
 - Water and Moisture** - Do not use this product near water - for example, near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, and the like. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.
 - Accessories** - Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer’s instructions, and should use a mounting accessory recommended by the manufacturer.
 - Product and cart combination** should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.
- See figure:
- 
- Ventilation** - Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer’s instruction have been adhered to.
 - Power Sources** - This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instruction.

18

3

Playing a CD

- Step 1. Open the player case door and place a CD or CD-R/RW or CD MP3 /WMA into the player.
- Step 2. Turn the turntable tonearm mode switch to the left hand side on top of the loaded CD position to activate the CD mode.
- Step 3. Press the Play/Pause Button to begin playing the loaded CD.

Using TF Card or USB Device

- Step 1. To insert a TF card, insert TF card into the TF card slot on back of the player with the metal contacts facing down, and push in until it clicks.
To insert a USB device, such as a USB flash drive containing audio files, insert the USB device into the USB device port on the back of the player.
- Step 2. Power on the unit by turning the volume dial.
- Step 3. Turn the turntable tonearm mode switch to vertical position. A voice prompt will be announced TF card/USB mode is activated. The speakers will automatically begin playing music off the device.
- Step 4. Adjust the volume to desired sound output.

Note: You must have a TF card or USB device inserted to switch to TF or USB input mode.

Using the Auxiliary Input

- Step 1. Inserted AUX in cable(Not included) to the Auxiliary input jack on of the player and the other end of the cable to your external device.
- Step 2. Power on the unit by turning the volume dial.
- Step 3. Turn the turntable tonearm mode switch to vertical position. A voice prompt will be announced Auxiliary mode is activated. The speakers will automatically begin playing music off the device.
- Step 4. Adjust the volume to desired sound output.

Specifications

Bluetooth Specification	Ver.5.3
Speaker Out Power	5W x 2
Built-in Battery	3.7V / 2000mAh 7.4Wh rechargeable battery
Charging Input Voltage	DC 5V ~ 1000mA USB Type-C port for charging

7

Features

- CD player: CD, CD-R/RW (MP3/WMA format)
- Support Bluetooth streaming
- Support USB/TF card playback (MP3/WMA/WAV format)
- Built-in dual speakers
- Headphone jack
- Auxiliary input
- Built-in rechargeable battery
- Power by USB type-C port


In the Box

- CD Player Unit
- USB type-C cable for charging
- User Manual

Powering the Unit

Charging the Player

Plug the small connector of the included USB type-C charging cable into the charging port on the back of the player. Plug the large connector into the USB port on a computer, or into a 5V USB adapter (not included) and plug into a wall outlet.

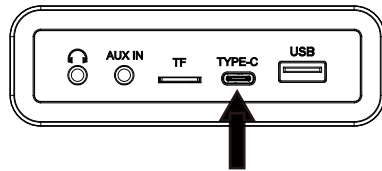


The charging LED indicator inside of the USB type-c port will turn RED while charging and turn GREEN when fully charged.

When the player is low on power, RED light flashing on the power/Bluetooth indicator that it needs to be recharged.


Please charge it completely before the first-time use.

4

Locations of Controls

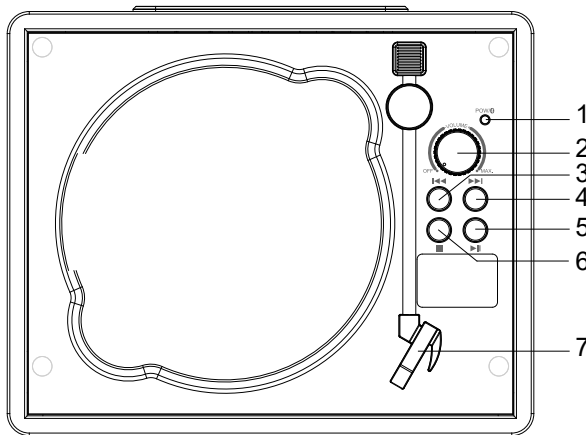

- 1 Power/Bluetooth Indicator
- 2 Power ON/OFF Volume Dial
- 3 Backward/Search- Button
- 4 Skip/Search+ Button
- 5 Play/Pause Button
- 6 Stop Button
- 7 Mode Switch (CD or Bluetooth/USB/TF/AUX mode)

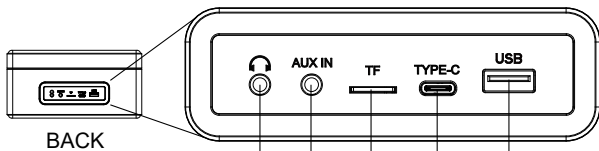

- 8 Headphone Jack
- 9 Auxiliary Input Port
- 10 TF Card Slot

- 11 USB Type-C Port
- 12 USB Port

5

Control Definitions

1. Power/Bluetooth Indicator - Blue light color on when the unit is powered on.
2. Power ON/OFF Volume Dial - Turn the volume dial to turn on the player and adjust the volume of the unit.
3. Backward/Search- Button - Press this button to backward between CD tracks. Press and hold this button to search through CD track backward.
4. Skip/Search+ Button - Press this button to skip between CD tracks. Press and hold this button to search through CD track forward.
5. Play/Pause Button - Press the Play/Pause Button to play or pause a loaded CD in CD mode.
6. Stop Button - Press the Stop button to stop a CD during play.
7. Mode Switch (CD or Bluetooth/USB/TF/AUX mode) - Turn the turntable tonearm mode switch to the left hand side on top of the loaded CD position to activate the CD mode. Turn back the turntable tonearm mode switch to the right hand side original position to activate the Bluetooth/USB/TF/AUX mode.
8. Headphone Jack - Insert the 3.5mm headphone or earphone (not included) for listening
9. Auxiliary Input Port - Connect the external device for music playing.
10. TF Card Slot - Insert TF card (not included) to play the music files stored in TF card.
11. USB Type-C Port - Insert the included USB Type-C cable for charging.
12. USB Port - Insert USB drive (not included) to play the music files stored in the USB drive.

Bluetooth Operation

- Step 1. Turn on the volume dial and the unit is automatically activated in Bluetooth pairing mode. The Power/Bluetooth indicator is flashing on blue light ready for pairing.
- Step 2. Turn on Bluetooth function of your device and select Pro PRCD699BT for pairing.
- Step 3. After successfully pairing, the Power/Bluetooth indicator is on blue light steadily during operation.
- Step 4. Long press the Play/Pause Button to disconnect the current connection and ready for pairing another device.

6

To make a warranty claim, please email support2@curtiscs.com or call 1-800-968-9853.

90 day Warranty

This product is warranted to be free from defects in material and workmanship for a period of ninety (90) days from the date of original delivery to the consumer. During this period, your exclusive remedy is repair or replacement of this product or component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us. If the product or component is no longer available, we will replace with a similar one of equal or greater value. Prior to a replacement being sent, the product must be rendered inoperable or returned to us.

This warranty does **not** cover glass, filters, wear from normal use, use not in conformity with the printed directions., or damage to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as on the specified rating on the label (e.g., 120V~60Hz).

We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. **Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty.** This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you.

For faster service, locate the model, type, and serial numbers on your appliance.

ATTACH YOUR PROOF OF PURCHASE HERE, PROOF OF PURCHASE IS REQUIRED TO OBTAIN WARRANTY SERVICE.

Please have the following information available when you contact the Support Team:

- Name, address and telephone number.
- Model number and serial number.
- A clear, detailed description of the problem.
- Proof of purchase including dealer or retailer name, address and date of purchase.

PROSCAN
STSTYLE VALISE PORTABLE LECTEUR
CD BLUETOOTH
MODÈLE NO. PRCD699BT

Ce produit a été fabriqué et vendu sous la responsabilité de CURTIS INTERNATIONAL LTD.
 PROSCAN, et le logo PROSCAN sont des marques utilisées sous licence par
 CURTIS INTERNATIONAL LTD. – pour plus d'informations : www.proscan-brand.com.
 Tous autres produits, services, dénominations sociales, marques, nom commerciaux, noms de
 produits et logos référencés ici sont la propriété de leurs titulaires respectifs.

Diagram illustrating the back of the device, showing the control panel and cable connections. The panel includes a power button (1), a volume knob (2), and four status LEDs (3, 4, 5, 6). A cable is connected to the bottom of the device (7).

-

- 5

- Nom, adresse et numéro de téléphone.
- Numéro de modèle et numéro de série.
- Une description claire et détaillée du problème.
- Preuve d'achat comprenant le nom, l'adresse et la date d'achat du revendeur ou du détaillant.