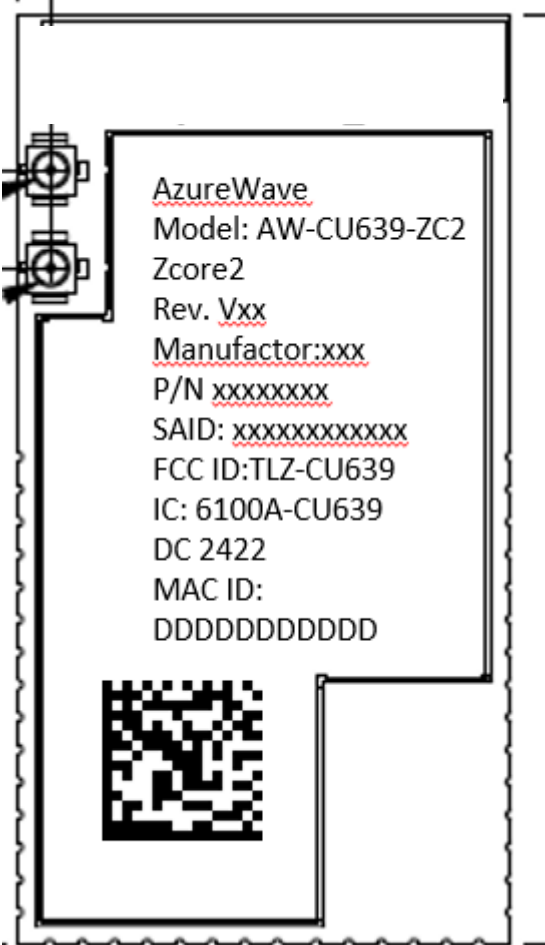
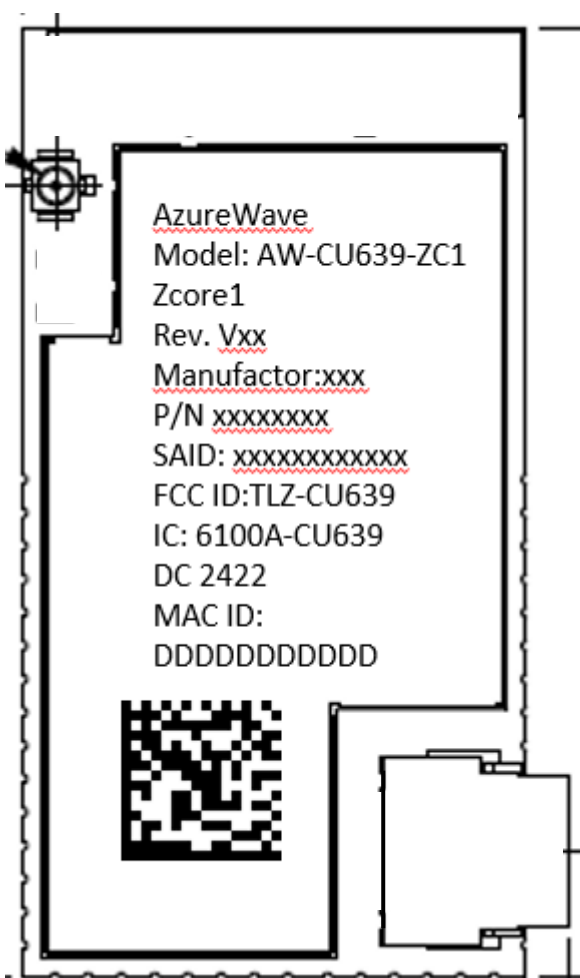


Label and location
On the top of the EUT

For AW-CU639-ZC2	For AW-CU639-ZC1
 <p>A diagram showing the label layout for the AW-CU639-ZC2 model. The label is rectangular with a dashed border. On the left side, there are two circular mounting holes. The text is aligned to the right of the mounting holes. At the bottom left, there is a square QR code. The text on the label is as follows:</p> <p>AzureWave Model: AW-CU639-ZC2 Zcore2 Rev. Vxx Manufactor:xxx P/N xxxxxxxx SAID: xxxxxxxxxxxx FCC ID:TLZ-CU639 IC: 6100A-CU639 DC 2422 MAC ID: DDDDDDDDDDDD</p>	 <p>A diagram showing the label layout for the AW-CU639-ZC1 model. The label is rectangular with a dashed border. On the left side, there is one circular mounting hole. The text is aligned to the right of the mounting hole. At the bottom left, there is a square QR code. The text on the label is as follows:</p> <p>AzureWave Model: AW-CU639-ZC1 Zcore1 Rev. Vxx Manufactor:xxx P/N xxxxxxxx SAID: xxxxxxxxxxxx FCC ID:TLZ-CU639 IC: 6100A-CU639 DC 2422 MAC ID: DDDDDDDDDDDD</p>