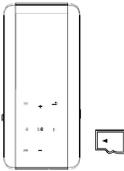
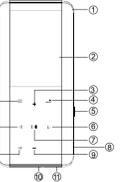


 <p>MB08 MP3 Player User Manual</p>	<p>WARNING</p> <ol style="list-style-type: none"> It is forbidden for children to play the machine alone, please do not drop it and rub it with hard objects, otherwise it may cause loss of data or other hardware damage. It is recommended not to use the headphones continuously at high volume, please adjust the volume to an appropriate volume, and control the use time to avoid damage to your hearing. Do not use chemical reagents or cleaning reagents to clean the machine, this will damage the machine surface corrosion. It is recommended not to use this machine when driving a motor vehicle or riding a bicycle, please ensure driving safety. Please back up the files and data stored in the machine in time. Our company does not guarantee the internal information. If there is data loss, our company will not be responsible. It is forbidden to use overloaded power supply, bend it forcibly, or squeeze the power cord with heavy objects to avoid causing heat and fire. 	<ol style="list-style-type: none"> Do not pull out the power supply with wet hands to prevent electric shock. Changes due to the performance and functions of this product may be notified without further notice, please understand. If the actual settings and usage of this product are inconsistent with this manual due to firmware program upgrade, please contact us. Thank you for your cooperation! <p>Tips 1: If the machine is not used for a long time, please charge and discharge the product every 3 months.</p> <p>Tips 2: Any question you meet, please get contact with support@alworthec.com We are always here to help you and you have our guarantee to get brand new replacement and refund.</p>	 <p>Please insert the TF card in the correct direction as shown in the figure. 32GB TF card has been inserted by default.</p>	<p>I. Product key diagram</p>  <p>Key definition</p> <ol style="list-style-type: none"> Lanyard hole Screen Volume + Back Turn on/off Next Play/Pause TF Slot Volume - Headphone Jack USB port Menu REC Previous Speaker A/B Repeat 	<p>II. Instructions</p> <p>Definition : Long press : Hold press for 3 seconds Short press : Click once First of all, turn On/Off the device</p> <ol style="list-style-type: none"> When the machine is in sleep state, long press the "power" button to turn on. When the machine is turned on, long press the "power" button to shut down. After 2 minutes without any operation, the machine will automatically save power and shut down. <p>FM Radio</p> <p>You need to use the earphone as an antenna. In the main interface of the system, click the "Previous/Next" button to select the "FM Radio" icon, and click the "Play" button to enter the main interface of the FM radio.</p> <ol style="list-style-type: none"> FM Settings 																								
<p>V2</p> <p>On the main interface of the FM radio, click the "Menu" button to enter, the following sub-menu pops up:</p> <ul style="list-style-type: none"> Home: Back to the main interface of the system. Start Fm radio recording: Recording the FM radio. Station list: displays preset radio frequency points, and can save up to 30 frequency points. Save to preset: Save current frequency points, up to 30 frequency points can be saved. Clear preset: Delete save preset. Auto tune: click the "play" button to enter auto-tuning, the player starts searching for radio stations automatically. Tuner region: select common frequency band(FM frequency band), Japanese frequency band(AM frequency band). <p>2. FM Recording: Click the "play" button to enter the FM recording library, if there is no recording, it will prompt "no voice recording found", if the file has been recorded, select the recorded file to play, or delete all the recorded files.</p>	<p>Bluetooth</p> <p>In the system main interface, click the "Previous/Next" button to select the "Bluetooth" icon, and then click the "Play" button to enter the Bluetooth main interface. The following menu pops up:</p> <ol style="list-style-type: none"> Bluetooth switch control: turn on/off Bluetooth (turn off Bluetooth by default) Search for Device: Search for Bluetooth devices Device list: List of paired Bluetooth devices. Note: The Bluetooth of this machine can only be connected to the Bluetooth speaker/Bluetooth headset, not the Bluetooth in the phone. <p>Recordings</p> <p>In the main interface of the system, click the "Previous/Next" button to select the "Recording" icon, you can select the "Recording Library" and recording settings" options, and then click the "Play" button to enter.</p>	<ol style="list-style-type: none"> Recordings library Recording settings Record from: <ul style="list-style-type: none"> Microphone: select this option when using the built-in microphone. Line in: Recording output sound of the external audio source device (either MP3 or other audio devices) via connected the line in cable. Recording format: ① WAV format, ② MP3 format Set rec bitrate: <ul style="list-style-type: none"> ① WAV format (512kbps/768kbps/1024kbps/1536kbps) ② MP3 format (32kbps/64kbps/128kbps/192kbps) Record sensitivity: select low, medium and high Note: The higher the recording sensitivity level, the greater the background sound of the recording, please adjust it appropriately. Monitor: You can select "Turn on/off monitor". When "monitor(on)" is selected, you can listen to the content being recorded by inserting headphones. 	<p>▶ VOR set: Choose "VOR ON/OFF". Note: When "VOR" is turned on, the machine will automatically detecting the surrounding sounds in the recording state. When the surrounding sounds reach a certain standard, the machine will automatically record. If it is lower than the standard, the recording will be automatically paused. In important environments, it is recommended not to use this feature.</p> <p>▶ AVR level: select "Grade1 to Grade5". Note: The higher the level of AVR, the higher the sensitivity, the higher VOR automatically record standard.</p> <p>Folder</p> <p>In the main interface of the system, click the "Previous/Next" button to select the "Folder" icon, and then click the "Play" button to enter the main interface of the folder.</p> <p>Delete files</p> <p>In the main interface of the system, click the "Previous/Next" button to select the "Folder" icon, and then click the "Play" button to enter the main interface of the folder.</p>	<p>When you need to delete a file, go to the folder list to select a file, click the "Menu" button, select the delete option, click the "Play" button to enter the delete file dialog box, click the "Previous/Next" button to select "Yes/No", click the "play" button to delete the file.</p> <p>Music</p> <p>In the main interface of the system, click the "Previous/Next" button to select the "Music" icon, and then click the "Play" button to enter the main interface of the music mode. The following menu pops up: All songs, Last play, Artist, Album, Genres, Play lists, Update play list. Click "All Songs", it will display all the audio files of this machine, select the music you need to play, click "Play" button to play the music file.</p> <p>▶ Play/Pause Play the recording file or music file, click the "play" button to start playing, during playback, click the "play" button to pause playback.</p>	<p>▶ Volume adjustment When the file is playing or pausing, click the "+" button to increase the volume, click the "-" button to decrease the volume</p> <p>▶ Previous/Next Fast Forward/Rewind In the state of playing, click the "Previous" button to be the next song, long press the "Previous" button to rewind, long press the "Next" button Fast Forward.</p> <p>▶ Touch key lock In the power-on state, short press the "power" key to turn off the screen backlight and lock the touch key, the touch key will not work, short press the "power" key to turn on the screen backlight to release the touch key (to prevent mis-operation, Please set the key lock to on during recording)</p> <p>▶ A-B Repeat On the interface for playing recordings or music, click the "A-B" button once, and the screen displays the "A-B" and character "B" flashing, indicating the starting point of</p>																								
<p>6</p> <p>repetition. Click the "A-B" button again to repeat the end of the paragraph and repeat the playback in the A-B interval. Click the "AB" button again to exit the repeat mode and resume normal playback.</p> <p>▶ Play settings</p> <p>On the interface for playing music, click the "Menu" button to enter the main menu, the following sub-menu options shows up:</p> <ol style="list-style-type: none"> Home: Back to the main interface of the system. Shuffle: Shuffle playing On/Off. Repeat: Repeat off/Repeat 1/Repeat. all/Preview(Note: Preview is that each audio file only plays for 10 seconds of browsing playback, from the current file to the last file in the recorder until the end, without looping.) Equalizer: select rock, pop, soft, jazz, classical, electronic music, a total of 6 modes, the default sound effect is off. Bookmarks: Add bookmark/Go to bookmark/Delete Bookmark. Variable Speed playback/Adjust playing speed. 	<p>7. Repeat Settings: Repeat mode/Replay times(Set the A-B repeat play times/Replay interval(Set the adjacent time of two A-B repeat play cycle)</p> <p>8. Delete: delete current file</p> <p>9. Add to playlist: add current song to your playlist</p> <p>10. Remove from playlist: remove current song from current playlist.</p> <p>11. Play music from: you can set play music from all songs or this artist or this album.</p> <p>Settings</p> <p>In the system main interface, click the "Previous/Next" button to select the "Settings" icon, and then click the "Play" button to enter the main interface of the tool. The following menu pops up:</p> <ol style="list-style-type: none"> Language The machine supports multi-language settings: simplified Chinese, English, Spanish, French and other 30 languages can be selected. Date and time 	<ol style="list-style-type: none"> Set the date and time. Display settings Can set the brightness of the screen, backlight timer, screen saver. Sound settings Equalizer: select rock, pop, soft, jazz, classical, electronic music, a total of 6 modes, the default sound effect is off. Volume limit: adjustable to limit the maximum volume. Button lights Option to turn on/off button light. Shutdown settings Power Off: can be set for 1-5 minutes without any operating system will automatically shut down. Sleep timer: Sleep timer is a forced shutdown in playback or recording state. After setting the shutdown time, the system will be forced to shut down after the time expires. Information 	<p>▶ Player information: View the information and software version of this machine.</p> <p>▶ Disk space: View disk space information.</p> <p>▶ Format internal memory</p> <p>▶ Please back up the data in the machine in advance, after formatting will delete all files in the device.</p> <p>9. Factory Settings</p> <p>▶ After selecting this menu, click the "Play" button to enter, the screen will prompt "Yes/No" to restore to the factory settings, and then click the "Previous" or "Next" button to choose between "Yes" or "No", if you want to restore the factory settings, select "Yes" and press "Play" button to confirm, click "Back" button to stop canceling the selection. Factory reset, machine restart, select appropriate language.</p> <p>Ebook</p> <p>In the main interface of the system, click the "Previous/Next" button to select the "eBook"</p>	<p>In the main interface of the system, click the "Previous/Next" button to select the "eBook" icon, and then click the "Play" button to enter the main interface of e-book reading, listing all TXT format e-books on this machine file.</p> <ol style="list-style-type: none"> Key Function Function Description Submenu description 	<p>▶ Auto play time setting: 0-30 available.</p> <p>▶ Page selection: select the number of pages in the e-book.</p> <p>▶ Bookmark selection: add bookmark, delete bookmark.</p> <p>▶ Background color: classic black, cowhide yellow, elegant blue, light pink available.</p> <p>Delete Ebook</p> <p>Videos</p> <p>In the main interface of the system, click the "Previous/Next" button to select the "Video" icon, and then click the "Play" button to enter the main interface of the video mode.</p> <p>▶ Click the "Play" button to enter the video file list, then click the "Previous/Next" button to select the video file to be played, and click the "Play" button to play.</p> <p>1. Video playback settings In the list of video files, click the "Menu" button to enter the following sub-menu options:</p>																								
<p>▶ Repeat play: Short press "play" button to enter repeat play, you can select "Repeat play, repeat play off, single repeat, repeat all"</p> <p>▶ Delete video: delete the currently playing video.</p> <p>▶ Brightness: press +/- key to adjust.</p> <p>Note: This machine needs to convert the format through the conversion tool to play the video, supports the movie format AMV/AVI, the resolution is 320*240.</p> <p>Tools</p> <p>In the main interface of the system, click the "Previous/Next" button to select the "Tool" icon, and then click the "Play" button to enter the main interface of the tool. The following menu pops up:</p> <ol style="list-style-type: none"> Calendar: Click the "Menu" button to switch the year, month and day options, click the "Previous/Next" button to adjust the year, month and day. Stop watch: Click the "Play" button to start timing (maximum timing is 99 hours: 59 minutes: 59 seconds, 99 milliseconds), and 	<p>then click the "Play" button to pause timing. Click the "Volume Down" button to count, and support up to 5 counts (recording a certain point in time as a count). Click the "Menu" button to stop the timing and clear it. Click the "Back" button to exit the stopwatch.</p> <p>3. Alarm: turn on/off the alarm and set the alarm.</p> <p>4. Pictures: In the state of browsing pictures, click the "Menu" button to enter the following sub-menu options:</p> <ol style="list-style-type: none"> Brightness Backlight timer Slideshow settings Delete picture 	<p>III. Technical specifications</p> <table border="1"> <tr><td>Dimensions</td><td>108*80*9MM</td></tr> <tr><td>Screen</td><td>2.4inch/320*240 Resolution TFT</td></tr> <tr><td>Storage</td><td>32GB(Subject to the actual product)</td></tr> <tr><td>Weight</td><td>72g</td></tr> <tr><td>Video format</td><td>AMV AVI</td></tr> <tr><td>Resolution</td><td>320*240</td></tr> <tr><td>Picture format</td><td>BMP JPEG</td></tr> <tr><td>Music format</td><td>MP3. WMA. FLAC. APE. OGG</td></tr> <tr><td>Recording format</td><td>WAV MP3</td></tr> <tr><td>Recording source</td><td>Built-in MIC</td></tr> <tr><td>Power supply</td><td>Built-in rechargeable Lithium battery</td></tr> <tr><td>Battery capacity</td><td>550MAH</td></tr> </table>	Dimensions	108*80*9MM	Screen	2.4inch/320*240 Resolution TFT	Storage	32GB(Subject to the actual product)	Weight	72g	Video format	AMV AVI	Resolution	320*240	Picture format	BMP JPEG	Music format	MP3. WMA. FLAC. APE. OGG	Recording format	WAV MP3	Recording source	Built-in MIC	Power supply	Built-in rechargeable Lithium battery	Battery capacity	550MAH	<p>FCC warning:</p> <ol style="list-style-type: none"> This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the 	<p>instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: —Reorient or relocate the receiving antenna. —Increase the separation between the equipment and receiver. —Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. —Consult the dealer or an experienced radio/TV technician for help.</p> <p>4. The devices must be installed and used in strict accordance with the manufacturer's instructions as described in the user documentation that comes with the product.</p>	<p>18</p>
Dimensions	108*80*9MM																												
Screen	2.4inch/320*240 Resolution TFT																												
Storage	32GB(Subject to the actual product)																												
Weight	72g																												
Video format	AMV AVI																												
Resolution	320*240																												
Picture format	BMP JPEG																												
Music format	MP3. WMA. FLAC. APE. OGG																												
Recording format	WAV MP3																												
Recording source	Built-in MIC																												
Power supply	Built-in rechargeable Lithium battery																												
Battery capacity	550MAH																												
<p>19</p>	<p>20</p>	<p>21</p>	<p>22</p>	<p>23</p>	<p>24</p>																								