



## **7368 Intelligent Services Access Manager ONT**

## **7368 ISAM ONT G-240W-F Product Guide**

**Edition 01**

**Issue: 01**

Nokia is a registered trademark of Nokia Corporation. Other products and company names mentioned herein may be trademarks or tradenames of their respective owners.

The information presented is subject to change without notice. No responsibility is assumed for inaccuracies contained herein.

© 2017 Nokia.

Contains proprietary/trade secret information which is the property of Nokia and must not be made available to, or copied or used by anyone outside Nokia without its written authorization. Not to be used or disclosed except in accordance with applicable agreements.

DRAFT

---

# 1 Preface

This preface provides general information about the documentation set for optical network terminals (ONTs).

## 1.1 Scope

This documentation set provides information about safety, features and functionality, ordering, hardware installation and maintenance, and software installation procedures for the current release.

## 1.2 Audience

This documentation set is intended for planners, administrators, operators, and maintenance personnel involved in installing, upgrading, or maintaining the ONTs.

## 1.3 Required knowledge

The reader must be familiar with general telecommunications principles.

## 1.4 Acronyms and initialisms

The expansions and optional descriptions of most acronyms and initialisms appear in the glossary.

## 1.5 Assistance and ordering phone numbers

Nokia provides global technical support through regional call centers. Phone numbers for the regional call centers are available at the following URL:  
<http://support.alcatel-lucent.com>.

For ordering information, contact your Nokia sales representative.

## 1.6 Nokia quality processes

Nokia's ONT quality practices are in compliance with TL 9000 requirements. These requirements are documented in the Fixed Networks Quality Manual 3FQ-30146-6000-QRZZA. The quality practices adequately ensure that technical requirements and customer end-point requirements are met. The customer or its representatives may be allowed to perform on-site quality surveillance audits, as agreed upon during contract negotiations

## 1.7 Safety information

For safety information, see the appropriate safety guidelines chapter.

## 1.8 Documents

Documents are available using ALED or OLCS.

### Procedure 1 To download a ZIP file package of the customer documentation

- 1 Navigate to <http://support.alcatel-lucent.com> and enter your user name and password. If you are a new user and require access to this service, please contact your Nokia sales representative.
- 2 From the Technical Content for drop-down menu, choose the product.
- 3 Click on Downloads: Electronic Delivery.
- 4 Choose Documentation from the drop-down menu and click Next.
- 5 Select the image from the drop-down menu and click Next.
- 6 Follow the on-screen directions to download the file.

---

## Procedure 2 To access individual documents

Individual PDFs of customer documents are also accessible through the Nokia Customer Support website.

- 1 Navigate to <http://support.alcatel-lucent.com> and enter your user name and password. If you are a new user and require access to this service, please contact your Nokia sales representative.
  - 2 From the Technical Content for drop-down menu, choose the product.
  - 3 Click on Manuals and Guides to display a list of customer documents by title and part number. You can filter this list using the Release drop-down menu.
  - 4 Click on the PDF to open or save the file.
- 

## 1.9 Special information

The following are examples of how special information is presented in this document.



**Danger** — Danger indicates that the described activity or situation may result in serious personal injury or death; for example, high voltage or electric shock hazards.



**Warning** — Warning indicates that the described activity or situation may, or will, cause equipment damage or serious performance problems.



**Caution** — Caution indicates that the described activity or situation may, or will, cause service interruption.



**Note** — A note provides information that is, or may be, of special interest.

---

## 1.9.1 Procedures with options or substeps

When there are options in a procedure, they are identified by letters. When there are required substeps in a procedure, they are identified by roman numerals.

### Procedure 3 Example of options in a procedure

At step 1, you can choose option a or b. At step 2, you must do what the step indicates.

- 
- |   |   |
|---|---|
| 1 | This step offers two options. You must choose one of the following: |
| a | This is one option.   |
| b | This is another option.   |
- 

- |   |                             |
|---|-----------------------------|
| 2 | You must perform this step. |
|---|-----------------------------|
- 

### Procedure 4 Example of required substeps in a procedure

At step 1, you must perform a series of substeps within a step. At step 2, you must do what the step indicates.

- 
- |     |   |
|-----|---|
| 1   | This step has a series of substeps that you must perform to complete the step. You must perform the following substeps: |
| i   | This is the first substep.  |
| ii  | This is the second substep.   |
| iii | This is the third substep.  |
- 

- |   |                             |
|---|-----------------------------|
| 2 | You must perform this step. |
|---|-----------------------------|
-

---

# 1.10 Multiple PDF document search

You can use Adobe Reader Release 6.0 and later to search multiple PDF files for a common term. Adobe Reader displays the results in a single display panel. The results are grouped by PDF file, and you can expand the entry for each file.



**Note** — The PDF files in which you search must be in the same folder.

## Procedure 5 To search multiple PDF files for a common term

- |   |   |
|---|---|
| 1 | Open Adobe Acrobat Reader.  |
| 2 | Choose Edit→Search from the Acrobat Reader main menu. The Search PDF panel appears. |
| 3 | Enter the search criteria.  |
| 4 | Click on the All PDF Documents In radio button.                                     |
| 5 | Select the folder in which to search using the drop-down menu.                      |
| 6 | Click on the Search button.   |
- Acrobat Reader displays the search results. You can expand the entries for each document by clicking on the + symbol.

DRAFT



# Table of contents

<b>1</b>	<b>Preface .....</b>	<b>3</b>
1.1	Scope .....	3
1.2	Audience.....	3
1.3	Required knowledge.....	3
1.4	Acronyms and initialisms .....	3
1.5	Assistance and ordering phone numbers.....	3
1.6	Nokia quality processes.....	4
1.7	Safety information.....	4
1.8	Documents .....	4
1.9	Special information .....	5
1.9.1	Procedures with options or substeps.....	6
1.10	Multiple PDF document search .....	7
<b>2</b>	<b>ETSI ONT safety guidelines .....</b>	<b>17</b>
2.1	Safety instructions .....	17
2.1.1	Safety instruction boxes .....	17
2.1.2	Safety-related labels.....	18
2.2	Safety standards compliance .....	19
2.2.1	EMC, EMI, and ESD compliance.....	19
2.2.2	Equipment safety standard compliance.....	19
2.2.3	Environmental standard compliance .....	20
2.2.4	Laser product standard compliance .....	20
2.2.5	Resistibility requirements compliance .....	20
2.2.6	Acoustic noise emission standard compliance .....	20
2.3	Electrical safety guidelines .....	20
2.3.1	Power supplies .....	21
2.3.2	Cabling .....	21
2.3.3	Protective earth .....	21
2.4	ESD safety guidelines .....	21
2.5	Laser safety guidelines.....	21
2.5.1	Laser classification .....	22
2.5.1.1	Laser warning labels.....	22
2.5.2	Transmit optical output .....	24
2.5.3	Normal laser operation .....	24
2.5.4	Location class.....	25
2.6	Environmental requirements.....	25
<b>3</b>	<b>ETSI environmental and CRoHS guidelines .....</b>	<b>27</b>
3.1	Environmental labels .....	27
3.1.1	Overview.....	27
3.1.2	Environmental related labels .....	27
3.1.2.1	Products below Maximum Concentration Value (MCV) label.....	27
3.1.2.2	Products containing hazardous substances above Maximum Concentration Value (MCV) label .....	28
3.2	Hazardous Substances Table (HST).....	29
3.3	Other environmental requirements .....	30

3.3.1	ONT environmental requirements .....	30
3.3.2	Storage .....	30
3.3.3	Transportation .....	30
3.3.4	Stationary use.....	30
3.3.5	Thermal limitations .....	30
3.3.6	Material content compliance.....	31
3.3.7	End-of-life collection and treatment.....	31
<b>4</b>	<b>ANSI ONT safety guidelines .....</b>	<b>33</b>
4.1	Safety instructions .....	33
4.1.1	Safety instruction boxes in customer documentation .....	33
4.1.2	Safety-related labels.....	34
4.2	Safety standards compliance .....	35
4.2.1	EMC, EMI, and ESD standards compliance.....	36
4.2.2	Equipment safety standard compliance.....	36
4.2.3	Environmental standards compliance.....	37
4.2.4	Laser product standards compliance.....	37
4.2.5	Resistibility requirements compliance.....	38
4.3	Laser safety guidelines.....	38
4.3.1	Laser warning labels.....	38
4.3.2	Laser classification .....	40
4.3.3	Transmit optical output.....	41
4.3.4	Normal laser operation .....	41
4.3.5	Location class.....	41
4.4	Electrical safety guidelines .....	42
4.4.1	Power supplies .....	42
4.4.2	Cabling .....	42
4.4.3	Protective earth .....	42
4.5	ESD safety guidelines .....	42
4.6	Environmental requirements.....	43
<b>5</b>	<b>G-240W-F unit data sheet.....</b>	<b>45</b>
5.1	G-240W-F part numbers and identification.....	46
5.2	G-240W-F general description .....	47
5.2.1	TR-069 support.....	48
5.2.2	TR-104 parameter extension support for voice service.....	49
5.2.3	TR-181 Wi-Fi objects adapted in TR-098 .....	49
5.2.4	Mobile offload support .....	49
5.2.5	Bridged Residential Gateway (BRG) support.....	50
5.2.6	Support for soft GRE tunnels.....	50
5.2.6.1	GRE.....	51
5.2.6.2	Soft GRE .....	51
5.3	G-240W-F software and installation feature support.....	52
5.4	G-240W-F interfaces and interface capacity .....	53
5.4.1	G-240W-F connections and components .....	53
5.5	G-240W-F LEDs .....	55
5.6	G-240W-F detailed specifications.....	57
5.7	G-240W-F GEM ports and T-CONTs .....	58
5.8	G-240W-F performance monitoring statistics .....	58
5.9	G-240W-F functional blocks .....	60

5.10	G-240W-F standards compliance .....	62
5.10.1	Energy-related products standby and off modes compliance .....	63
5.11	G-240W-F special considerations .....	63
5.11.1	Wi-Fi service .....	63
5.11.1.1	Wi-Fi physical features .....	64
5.11.1.2	Wi-Fi standards and certifications .....	64
5.11.1.3	Wi-Fi GUI features .....	64
5.11.2	G-240W-F ONT considerations and limitations .....	64
<b>6</b>	<b>Install a G-240W-F indoor ONT .....</b>	<b>67</b>
6.1	Purpose .....	67
6.2	General .....	67
6.3	Prerequisites .....	67
6.4	Recommended tools .....	67
6.5	Safety information .....	68
6.6	Procedure .....	69
<b>7</b>	<b>Replace a G-240W-F indoor ONT .....</b>	<b>75</b>
7.1	Purpose .....	75
7.2	General .....	75
7.3	Prerequisites .....	75
7.4	Recommended tools .....	75
7.5	Safety information .....	76
7.6	Procedure .....	77
<b>8</b>	<b>Configure a G-240W-F indoor ONT .....</b>	<b>83</b>
8.1	General .....	83
8.2	HGU mode GUI configuration .....	83
8.2.1	Login .....	83
8.2.2	Device and connection status .....	84
8.2.3	Network configuration .....	94
8.2.4	Security configuration .....	115
8.2.5	Application configuration .....	124
8.2.6	Maintenance .....	131
8.2.7	RG troubleshooting counters .....	143
8.3	SFU mode GUI configuration .....	145
8.3.1	Login .....	145
8.3.2	Device and connection status .....	146
8.3.3	Maintenance .....	148
8.4	Operator ID .....	150
<b>9</b>	<b>ONT configuration file over OMCI .....</b>	<b>153</b>
9.1	Purpose .....	153
9.2	Supported configuration file types .....	153
9.2.1	Filename conventions .....	155
9.3	ONT configuration file over OMCI .....	155

DRAFT

## List of figures

<b>2</b>	<b>ETSI ONT safety guidelines .....</b>	<b>17</b>
Figure 1	PSE certification .....	19
Figure 2	Laser product label .....	22
Figure 3	Laser classification label.....	23
Figure 4	Laser warning labels.....	24
<b>3</b>	<b>ETSI environmental and CRoHS guidelines.....</b>	<b>27</b>
Figure 5	Products below MCV value label.....	28
Figure 6	Products above MCV value label .....	29
Figure 7	Recycling/take back/disposal of product symbol .....	31
<b>4</b>	<b>ANSI ONT safety guidelines .....</b>	<b>33</b>
Figure 8	Sample safety label on the ONT equipment.....	35
Figure 9	Sample laser product label showing CDRH 21 CFR compliance.....	37
Figure 10	Laser product label .....	39
Figure 11	Laser classification label.....	39
Figure 12	Laser warning labels.....	40
Figure 13	Sample laser product safety label on the ONT equipment.....	41
<b>5</b>	<b>G-240W-F unit data sheet.....</b>	<b>45</b>
Figure 14	SoftGRE-based architecture.....	52
Figure 15	G-240W-F indoor ONT physical connections (back view).....	54
Figure 16	G-240W-F ONT Reset, LED, WLAN, and WPS buttons and fiber optic connection (bottom and side view) .....	54
Figure 17	G-240W-F indoor ONT LEDs .....	56
Figure 18	Single-residence Wi-Fi ONT with Gigabit Ethernet and POTS and without RF video.....	61
Figure 19	G-240W-F ONT hardware block.....	61
<b>6</b>	<b>Install a G-240W-F indoor ONT .....</b>	<b>67</b>
Figure 20	G-240W-F indoor ONT wall mounting holes (bottom view) .....	69
Figure 21	G-240W-F indoor ONT connections (back view).....	70
Figure 22	G-240W-F ONT Reset, LED, WLAN, and WPS buttons and fiber optic connection (bottom and side view) .....	71
Figure 23	G-240W-F indoor ONT with fiber cover open .....	72
<b>7</b>	<b>Replace a G-240W-F indoor ONT .....</b>	<b>75</b>
Figure 24	G-240W-F indoor ONT Reset, LED, WLAN, and WPS buttons (side).....	77
Figure 25	G-240W-F indoor ONT connections (back view).....	78
Figure 26	G-240W-F indoor ONT fiber optic port (bottom view).....	79
<b>8</b>	<b>Configure a G-240W-F indoor ONT .....</b>	<b>83</b>
Figure 27	Web login window.....	84
Figure 28	Device Information window.....	85
Figure 29	LAN status window .....	86
Figure 30	WAN status window.....	88
Figure 31	WAN status IPv6 window .....	89

Figure 32	Home networking information window .....	90
Figure 33	Optics module status window .....	91
Figure 34	Voice Information window .....	93
Figure 35	LAN network window .....	95
Figure 36	LAN IPv6 network window .....	97
Figure 37	WAN network window .....	98
Figure 38	WiFi network window .....	100
Figure 39	Wireless Schedule window .....	102
Figure 40	Routing network window .....	103
Figure 41	DNS network window .....	105
Figure 42	TR-069 network window .....	106
Figure 43	GRE Tunnel window .....	107
Figure 44	QoS Config window (L2) .....	109
Figure 45	QoS Config window (L3) .....	110
Figure 46	US Classifier Policy window .....	112
Figure 47	US Classifier window .....	113
Figure 48	US Classifier Rules window .....	114
Figure 49	Firewall window .....	116
Figure 50	MAC filter window .....	117
Figure 51	IP filter window .....	118
Figure 52	URL Filter window .....	119
Figure 53	Parental Control window .....	120
Figure 54	DMZ and ALG window .....	122
Figure 55	Access Control window .....	123
Figure 56	Port forwarding window .....	125
Figure 57	Port Triggering window .....	126
Figure 58	DDNS window .....	127
Figure 59	NTP window .....	128
Figure 60	USB storage window .....	129
Figure 61	UPnP and DLNA window .....	130
Figure 62	Password window .....	132
Figure 63	LOID Config window .....	133
Figure 64	SLID configuration window .....	134
Figure 65	Device management window .....	135
Figure 66	Backup and Restore window .....	136
Figure 67	Firmware upgrade window .....	137
Figure 68	Reboot window .....	138
Figure 69	Factory default window .....	139
Figure 70	Diagnose window .....	140
Figure 71	Log window .....	141
Figure 72	PPPoE Diagnostics window .....	142
Figure 73	PPPoE diagnostics results .....	143
Figure 74	RG Troubleshooting Counters window .....	144
Figure 75	Web login window .....	146
Figure 76	Device Information window .....	147
Figure 77	Password window .....	148
Figure 78	LOID configuration window .....	149
Figure 79	SLID configuration window .....	150

## List of tables

<b>2</b>	<b>ETSI ONT safety guidelines .....</b>	<b>17</b>
Table 1	Safety labels .....	18
<b>4</b>	<b>ANSI ONT safety guidelines .....</b>	<b>33</b>
Table 2	Safety labels .....	34
<b>5</b>	<b>G-240W-F unit data sheet.....</b>	<b>45</b>
Table 3	Identification of G-240W-F indoor ONTs .....	46
Table 4	G-240W-F indoor ONT interface connection capacity .....	53
Table 5	G-240W-F indoor ONT physical connections .....	55
Table 6	G-240W-F indoor ONT LEDs .....	56
Table 7	G-240W-F indoor ONT physical specifications.....	57
Table 8	G-240W-F indoor ONT power consumption specifications .....	57
Table 9	G-240W-F indoor ONT environmental specifications .....	58
Table 10	G-240W-F indoor ONT capacity for GEM ports and T-CONTs .....	58
Table 11	Package P ONTs ONTENET performance monitoring statistics .....	59
Table 12	Package P ONTs ONTL2UNI performance monitoring statistics .....	59
Table 13	Package P ONTs PONONTTC, PONONTMCTC, PONONTTCHSI, PONONTTCES, PONONTTCFLOW, PONONTTCVOIP performance monitoring statistics .....	59
Table 14	Package P ONTs PONONTTC aggregate performance monitoring statistics .....	60
Table 15	G-240W-F ONT considerations and limitations .....	64
<b>8</b>	<b>Configure a G-240W-F indoor ONT .....</b>	<b>83</b>
Table 16	Device Information parameters .....	85
Table 17	LAN status parameters.....	86
Table 18	WAN status parameters .....	88
Table 19	WAN status IPv6 parameters .....	89
Table 20	Home networking parameters .....	91
Table 21	Optics module status parameters.....	92
Table 22	Voice Information parameters .....	93
Table 23	LAN network parameters.....	95
Table 24	LAN IPv6 network parameters.....	97
Table 25	WAN network parameters .....	99
Table 26	WiFi network parameters.....	100
Table 27	Routing network parameters .....	104
Table 28	DNS network parameters .....	105
Table 29	TR-069 network parameters.....	106
Table 30	GRE Tunnel parameters.....	107
Table 31	QoS Config parameters.....	111
Table 32	US Classifier Policy parameters .....	112
Table 33	US Classifier parameters.....	113
Table 34	US Classifier Rules parameters .....	114
Table 35	Firewall parameters .....	116
Table 36	MAC filter parameters.....	117
Table 37	IP filter parameters .....	118

---

Table 38	URL Filter parameters .....	120
Table 39	Parental control parameters .....	121
Table 40	DMZ and ALG parameters .....	122
Table 41	Access control parameters .....	123
Table 42	Port forwarding parameters .....	125
Table 43	Port triggering parameters .....	126
Table 44	DDNS parameters .....	128
Table 45	NTP parameters .....	129
Table 46	USB storage parameters .....	130
Table 47	Password parameters.....	132
Table 48	LOID configuration parameters .....	133
Table 49	SLID configuration parameters.....	134
Table 50	Device management parameters .....	135
Table 51	PPPoE diagnostics results parameters .....	143
Table 52	RG Troubleshooting Counters parameters.....	144
Table 53	Device Information parameters .....	147
Table 54	Password parameters.....	148
Table 55	SLID configuration parameters.....	150
<b>9</b>	<b>ONT configuration file over OMCI .....</b>	<b>153</b>
Table 56	Supported configuration files .....	154



## 2 ETSI ONT safety guidelines

This chapter provides information about the mandatory regulations that govern the installation and operation of the optical network terminals (ONTs).

### 2.1 Safety instructions

This section describes the safety instructions that are provided in the ONT customer documentation and on the equipment.

#### 2.1.1 Safety instruction boxes

The safety instruction boxes are provided in the ONT customer documentation. Observe the instructions to meet safety requirements.

The following is an example of the Danger box.



**Danger** — Possibility of personal injury.

The Danger box indicates that the described activity or situation may pose a threat to personal safety. It calls attention to a situation or procedure which, if not correctly performed or adhered to, may result in death or serious physical harm.

Do not proceed beyond a Danger box until the indicated conditions are fully understood and met.

The following is an example of the Warning box.



**Warning 1** — Possibility of equipment damage.

**Warning 2** — Possibility of data loss.

The Warning box indicates that the described activity or situation may, or will, cause equipment damage, loss of data, or serious performance problems. It identifies a possible equipment-damaging situation or provides essential information to avoid the degradation of system operations or data.

Do not proceed beyond a warning until the indicated conditions are fully understood and met.

The following is an example of the Caution box.



**Caution 1** — Possibility of service interruption.

**Caution 2** — Service interruption.

The Caution box indicates that the described activity or situation may, or will, cause service interruption.

Do not proceed beyond a caution until the indicated conditions are fully understood and met.

The following is an example of the Note box.



**Note** — Information of special interest.

The Note box provides information that assists the personnel working with ONTs. It does not provide safety-related instructions.

### 2.1.2 Safety-related labels

The ONT equipment is labeled with the specific safety instructions and compliance information that is related to a variant of the ONT. Observe the instructions on the safety labels.


Table 1 provides sample safety labels on the ONT equipment.

**Table 1**      **Safety labels**

Description	Label text
ESD warning	Caution: This assembly contains an electrostatic sensitive device.
Laser classification	Class 1 laser product
PSE marking	These power supplies are Japan PSE certified and compliant with Japan VCCI emissions standards.

Figure 1 shows the PSE certification.

**Figure 1 PSE certification**

 Warning	This is a Class B product based on the standard of the Voluntary Control Council for Interference from Information Technology Equipment (VCCI). If this is used near a radio or television receiver in a domestic environment, it may cause radio interference. Install and use the equipment according to the instruction manual.
警告	VCCI準拠クラスB機器（日本） この機器は、Information Technology EquipmentのVoluntary Control Council for Interference（VCCI）の規格に準拠したクラスB製品です。この機器をラジオやテレビ受信機の近くで使用した場合、混信が発生する恐れがあります。本機器の設置および使用に際しては、取扱説明書に従ってください。

19841

## 2.2 Safety standards compliance

This section describes the ONT compliance with the European safety standards.

### 2.2.1 EMC, EMI, and ESD compliance

The ONT equipment complies with the following EMC, EMI, and ESD requirements:

- EN 300-328 v1.9.1 wide band data transmission standards for 2.4GHz bands
- EN 300-386 V1.5.1: Electromagnetic Compatibility and Radio Spectrum Matters (ERM): Telecommunications Network Equipment; Electromagnetic Compatibility (EMC) requirements; Electrostatic Discharge (ESD) requirements
- EN 55022 (2006): Class B, Information Technology Equipment, Radio Disturbance Characteristics, limits and methods of measurement
- EN 55024 (2010): Information Technology Equipment, Immunity Characteristics, limits and methods of measurement
- European Council Directive 2004/108/EC
- EN 300-386 V1.4.1: 2008
- EN 55022:2006 Class B (ONTs)

### 2.2.2 Equipment safety standard compliance

The ONT equipment complies with the requirements of EN 60950-1, Safety of Information Technology Equipment for use in a restricted location (per R-269).

### 2.2.3 Environmental standard compliance

The ONT equipment complies with the EN 300 019 European environmental standards.

### 2.2.4 Laser product standard compliance

For most ONTs, the ONT equipment complies with EN 60825-1 and IEC 60825-2 for laser products. If there is an exception to this compliance regulation, you can find this information in the standards compliance section of the unit data sheet in this Product Guide.

### 2.2.5 Resistibility requirements compliance

The ONT equipment complies with the requirements of ITU Recommendation K.21 for resistibility of telecommunication equipment installed in customer premises to over voltage and overcurrents.

### 2.2.6 Acoustic noise emission standard compliance

The ONT equipment complies with EN 300 753 acoustic noise emission limit and test methods.

## 2.3 Electrical safety guidelines

This section provides the electrical safety guidelines for the ONT equipment.



**Note 1** — The ONTs comply with the U.S. National Electrical Code. However, local electrical authorities have jurisdiction when there are differences between the local and U.S. standards.

**Note 2** — The ONTs comply with BS EN 61140.

## 2.3.1 Power supplies

The use of any non-Nokia approved power supplies or power adapters is not supported or endorsed by Nokia. Such use will void any warranty or support contract with Nokia. Such use greatly increases the danger of damage to equipment or property.

## 2.3.2 Cabling

The following are the guidelines regarding cables used for the ONT equipment:

- All cables must be approved by the relevant national electrical code.
- The cables for outdoor installation of ONTs must be suitable for outdoor use.
- POTS wiring run outside the subscriber premises must comply with the requirements of local electrical codes. In some markets, the maximum allowed length of the outside run is 140 feet (43 m). If the outside run is longer, NEC requires primary protection at both the exit and entry points for the wire.

## 2.3.3 Protective earth

Earthing and bonding of the ONTs must comply with the requirements of local electrical codes.

## 2.4 ESD safety guidelines

The ONT equipment is sensitive to ESD. Operations personnel must observe the following ESD instructions when they handle the ONT equipment.



**Caution —** This equipment is ESD sensitive. Proper ESD protections should be used when you enter the TELCO Access portion of the ONT.

During installation and maintenance, service personnel must wear wrist straps to prevent damage caused by ESD.

## 2.5 Laser safety guidelines

Observe the following instructions when you perform installation, operations, and maintenance tasks on the ONT equipment.

Only qualified service personnel who are extremely familiar with laser radiation hazards should install or remove the fiber optic cables and units in this system.



**Danger** — There may be invisible laser radiation at the fiber optic cable when the cable is removed from the connector. Avoid direct exposure to the laser beam.

Observe the following danger for laser hazard. Eyes can be damaged when they are exposed to a laser beam. Take necessary precautions before you plug in the optical modules.



**Danger** — Possibility of equipment damage. Risk of eye damage by laser radiation.

## 2.5.1 Laser classification


The ONT is classified as a Class 1 laser product based on its transmit optical output.

### 2.5.1.1 Laser warning labels

The following figures show the labels related to laser product, classification and warning.

Figure 2 shows a laser product label.

**Figure 2** Laser product label

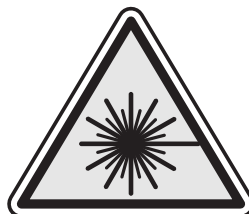

18455

Figure 3 shows a laser classification label. Laser classification labels may be provided in other languages.

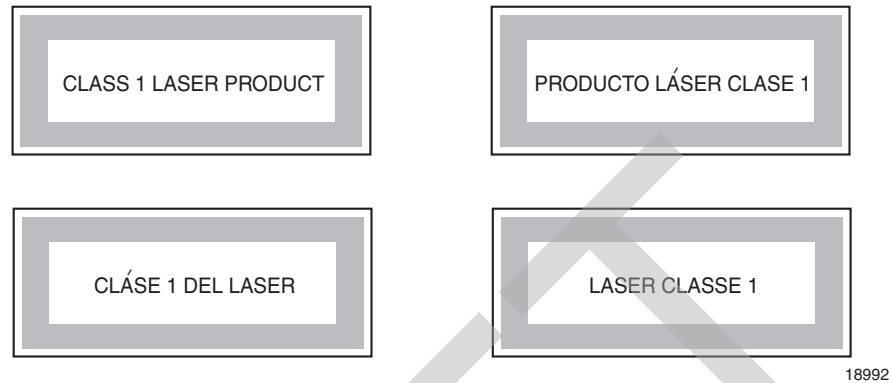
**Figure 3 Laser classification label**

Figure 4 shows a laser warning label and an explanatory label for laser products. Labels and warning may be provided in other languages. The explanatory label provides the following information:

- a warning that calls attention to the invisible laser radiation
- an instruction against staring into the beam or viewing directly with optical instruments
- wavelength
- normal output power
- maximum output power

**Figure 4 Laser warning labels**

18993

## 2.5.2 Transmit optical output

The maximum transmit optical output of an ONT is +5 dBm.

## 2.5.3 Normal laser operation

In normal operation, fiber cable laser radiation is always off until it receives signal from the line terminal card.

Eyes can be damaged when they exposed to a laser beam. Operating personnel must observe the instructions on the laser explanatory label before plugging in the optical module.



**Danger** — Risk of eye damage by laser radiation.



### **2.5.4 Location class**

Use cable supports and guides to protect the receptacles from strain.

## **2.6 Environmental requirements**

See the ONT technical specification documentation for more information about temperature ranges.

During operation in the supported temperature range, condensation inside the ONT caused by humidity is not an issue. To avoid condensation caused by rapid changes in temperature and humidity, Nokia recommends:

- The door of the ONT not be opened until temperature inside and outside the enclosure has stabilized.
- If the door of the ONT must be opened after a rapid change in temperature or humidity, use a dry cloth to wipe down the metal interior to prevent the risk of condensation.
- When high humidity is present, installation of a cover or tent over the ONT helps prevent condensation when the door is opened.

DRAFT

## 3 ETSI environmental and CRoHS guidelines

This chapter provides information about the ETSI environmental China Restriction of Hazardous Substances (CRoHS) regulations that govern the installation and operation of the optical line termination (OLT) and optical network termination (ONT) systems. This chapter also includes environmental operation parameters of general interest.

### 3.1 Environmental labels

This section describes the environmental instructions that are provided with the customer documentation, equipment, and location where the equipment resides.

#### 3.1.1 Overview

CRoHS is applicable to Electronic Information Products (EIP) manufactured or sold and imported in the territory of the mainland of the People's Republic of China. EIP refers to products and their accessories manufactured by using electronic information technology, including electronic communications products and such subcomponents as batteries and cables.

#### 3.1.2 Environmental related labels

Environmental labels are located on appropriate equipment. The following are sample labels.

##### 3.1.2.1 Products below Maximum Concentration Value (MCV) label

Figure 5 shows the label that indicates a product is below the maximum concentration value, as defined by standard SJ/T11363-2006 (Requirements for Concentration Limits for Certain Hazardous Substances in Electronic Information Products). Products with this label are recyclable. The label may be found in this documentation or on the product.

**Figure 5**      **Products below MCV value label**



18986

### **3.1.2.2    Products containing hazardous substances above Maximum Concentration Value (MCV) label**

Figure 6 shows the label that indicates a product is above the maximum concentration value, as defined by standard SJ/T11363-2006 (Requirements for Concentration Limits for Certain Hazardous Substances in Electronic Information Products). The number contained inside the label indicates the Environment-Friendly User Period (EFUP) value. The label may be found in this documentation or on the product.

**Figure 6** Products above MCV value label

18985

Together with major international telecommunications equipment companies, Nokia has determined it is appropriate to use an EFUP of 50 years for network infrastructure equipment and an EFUP of 20 years for handsets and accessories. These values are based on manufacturers' extensive practical experience of the design, manufacturing, maintenance, usage conditions, operating environments, and physical condition of infrastructure and handsets after years of service. The values reflect minimum values and refer to products operated according to the intended use conditions. See "[Hazardous Substances Table \(HST\)](#)" for more information.

## 3.2 Hazardous Substances Table (HST)

This section describes the compliance of the OLT and ONT equipment to the CRoHS standard when the product and subassemblies contain hazardous substances beyond the MCV value. This information is found in this user documentation where part numbers for the product and subassemblies are listed. It may be referenced in other OLT and ONT documentation.

In accordance with the People's Republic of China Electronic Industry Standard Marking for the Control of Pollution Caused by Electronic Information Products (SJ/T11364-2006), customers may access the Nokia Hazardous Substance Table, in Chinese, from the following location:

- <http://www.alcatel-sbell.com.cn/wwwroot/images/upload/private/1/media/ChinaRoHS.pdf>

---

## 3.3 Other environmental requirements

Observe the following environmental requirements when handling the P-OLT or ONT equipment.

### 3.3.1 ONT environmental requirements

See the ONT technical specification documentation for more information about temperature ranges.

### 3.3.2 Storage

According to ETS 300-019-1-1 - Class 1.1, storage of OLT equipment must be in Class 1.1, weather-protected, temperature-controlled locations.

### 3.3.3 Transportation

According to EN 300-019-1-2 - Class 2.3, transportation of the OLT equipment must be in packed, public transportation with no rain on packing allowed.

### 3.3.4 Stationary use

According to EN 300-019-1-3 - Class 3.1/3.2/3.E, stationary use of OLT equipment must be in a temperature-controlled location, with no rain allowed, and with no condensation allowed.

### 3.3.5 Thermal limitations

When the OLT is installed in the CO or CEV, install air filters on the P-OLT. The thermal limitations for OLT operation in a CO or CEV are:

- operating temperature: 5°C to 40°C (41°F to 104°F)
- short-term temperature: –5°C to 50°C (23°F to 122°F)
- operating relative humidity: 5% to 85%
- short-term relative humidity: 5% to 95%, but not to exceed 0.024 kg of water/kg

### 3.3.6 Material content compliance

European Union (EU) Directive 2002/95/EC, “Restriction of the use of certain Hazardous Substances” (RoHS), restricts the use of lead, mercury, cadmium, hexavalent chromium, and certain flame retardants in electrical and electronic equipment. This Directive applies to electrical and electronic products placed on the EU market after 1 July 2006, with various exemptions, including an exemption for lead solder in network infrastructure equipment. Nokia products shipped to the EU after 1 July 2006 comply with the EU RoHS Directive.

Nokia has implemented a material/substance content management process. The process is described in: Nokia process for ensuring RoHS Compliance (1AA002660031ASZZA). This ensures compliance with the European Union Directive 2011/65/EU on the Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment (RoHS2). With the process equipment is assessed in accordance with the Harmonised Standard EN50581:2012 (CENELEC) on Technical documentation for the assessment of electrical and electronic products with respect to the restriction of hazardous substances.

### 3.3.7 End-of-life collection and treatment

Electronic products bearing or referencing the symbol shown in Figure 7, when put on the market within the European Union (EU), shall be collected and treated at the end of their useful life, in compliance with applicable EU and local legislation. They shall not be disposed of as part of unsorted municipal waste. Due to materials that may be contained in the product, such as heavy metals or batteries, the environment and human health may be negatively impacted as a result of inappropriate disposal.



**Note** — In the European Union, a solid bar under the symbol for a crossed-out wheeled bin indicates that the product was put on the market after 13 August 2005.

**Figure 7**

**Recycling/take back/disposal of product symbol**



---

At the end of their life, the OLT and ONT products are subject to the applicable local legislations that implement the European Directive 2012/19EU on waste electrical and electronic equipment (WEEE).

There can be different requirements for collection and treatment in different member states of the European Union.

In compliance with legal requirements and contractual agreements, where applicable, Nokia will offer to provide for the collection and treatment of Nokia products bearing the logo shown in Figure 7 at the end of their useful life, or products displaced by Nokia equipment offers. For information regarding take-back of equipment by Nokia, or for more information regarding the requirements for recycling/disposal of product, contact your Nokia account manager or Nokia take back support at [sustainability.global@nokia.com](mailto:sustainability.global@nokia.com).

DRAFT



## 4 ANSI ONT safety guidelines

This chapter provides information about the mandatory regulations that govern the installation and operation of the optical network terminals or units (ONTs or ONUs) in the North American or ANSI market.

### 4.1 Safety instructions

This section describes the safety instructions that are provided in the ONT customer documentation and on the equipment.

#### 4.1.1 Safety instruction boxes in customer documentation

The safety instruction boxes are provided in the ONT customer documentation. Observe the instructions to meet safety requirements.

The following is an example of the Danger box.



**Danger** — Possibility of personal injury.

The Danger box indicates that the described activity or situation may pose a threat to personal safety. It calls attention to a situation or procedure which, if not correctly performed or adhered to, may result in death or serious physical harm.

Do not proceed beyond a Danger box until the indicated conditions are fully understood and met.

The following is an example of the Warning box.



**Warning 1** — Possibility of equipment damage.

**Warning 2** — Possibility of data loss.

The Warning box indicates that the described activity or situation may, or will, cause equipment damage, loss of data, or serious performance problems. It identifies a possible equipment-damaging situation or provides essential information to avoid the degradation of system operations or data.

Do not proceed beyond a warning until the indicated conditions are fully understood and met.

The following is an example of the Caution box.



**Caution 1** — Possibility of service interruption.

**Caution 2** — Service interruption.

The Caution box indicates that the described activity or situation may, or will, cause service interruption.

Do not proceed beyond a caution until the indicated conditions are fully understood and met.

The following is an example of the Note box.



**Note** — Information of special interest.

The Note box provides information that assists the personnel working with ONTs. It does not provide safety-related instructions.

## 4.1.2 Safety-related labels

The ONT equipment is labeled with specific safety compliance information and instructions that are related to a variant of the ONT. Observe the instructions on the safety labels.

Table 2 provides examples of the text in the various ONT safety labels.

**Table 2**      **Safety labels**

Description	Label text
UL compliance	Communication service equipment US listed. Type 3R enclosure - Rainproof.
TUV compliance	Type 3R enclosure - Rainproof.
ESD warning	Caution: This assembly contains electrostatic sensitive device.
Laser classification	Class 1 laser product
Laser product compliance	This laser product conforms to all applicable standards of 21 CFR 1040.10 at date of manufacture.
FCC standards compliance	Tested to comply with FCC standards for home or office use.
CDRH compliance	Complies with 21 CFR 1040.10 and 1040.11 except for deviations pursuant to Laser Notice No. 50, dated June 24, 2007


(1 of 2)

Description	Label text
Operation conditions	This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Canadian standard compliance (modular ONT)	This Class A digital apparatus complies with Canadian ICES-003.
Canadian standard compliance (outdoor ONT)	This Class B digital apparatus complies with Canadian ICES-003.
CE marking	There are various CE symbols for CE compliance.

(2 of 2)

Figure 8 shows a sample safety label on the ONT equipment.

**Figure 8** Sample safety label on the ONT equipment

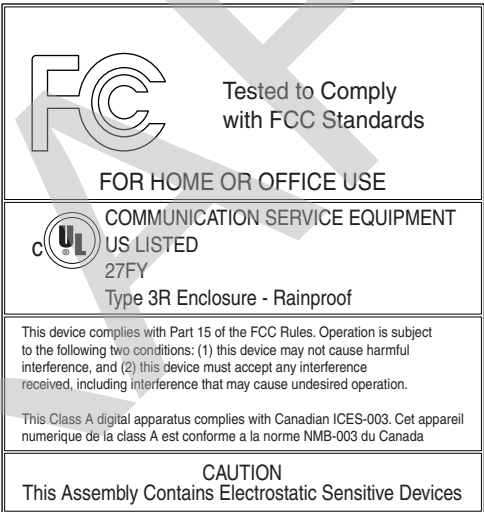

18533

## 4.2 Safety standards compliance

This section describes the ONT compliance with North American safety standards.



**Warning** — Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## 4.2.1 EMC, EMI, and ESD standards compliance

The ONT equipment complies with the following requirements:

- Federal Communications Commission (FCC) CFR 47, Part 15, Subpart B, Class A requirements for OLT equipment
- GR-1089-CORE requirements, including:
  - Section 3 Electromagnetic Interference, Emissions Radiated and Conducted
  - Section 3 Immunity, Radiated and Conducted
  - Section 2 ESD Discharge Immunity: System Level Electrostatic Discharge and EFT Immunity: Electrically Fast Transients

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.
- Consult the dealer or an experienced radio/TV technician for help.

## 4.2.2 Equipment safety standard compliance

The ONT equipment complies with the requirements of UL60950-1, Outdoor ONTs to “Communication Service Equipment” (CSE) and Indoor ONTs to Information Technology Equipment (ITE).

### 4.2.3 Environmental standards compliance

The ONT equipment complies with the following standards:

- GR-63-CORE (NEBS): requirements related to operating, storage, humidity, altitude, earthquake, office vibration, transportation and handling, fire resistance and spread, airborne contaminants, illumination, and acoustic noise
- GR-487-CORE: requirements related to rain, chemical, sand, and dust
- GR-487 R3-82: requirements related to condensation
- GR-3108: Requirements for Network Equipment in the Outside Plant (OSP)
- TP76200: Common Systems Equipment Interconnections Standards

### 4.2.4 Laser product standards compliance


The ONT equipment complies with 21 CFR 1040.10 and CFR 1040.11, except for deviations pursuant to Laser Notice No. 50, dated June 24, 2007” or to 21 CFR 1040.10 U.S. Center for Devices and Radiological Health (CDRH) of the Food and Drug Administration (FDA) Laser Notice 42 for ONTs containing Class 1 Laser modules certified by original manufactures.

Per CDRH 21 CFR 10.40.10 (h) (1) (iv) distributors of Class 1 laser products, such as Nokia ONTs shall leave the following Laser Safety cautions with the end user.

- “Class 1 Laser Product”
- “Caution – Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.”

Figure 9 shows a laser product label.

**Figure 9** Sample laser product label showing CDRH 21 CFR compliance

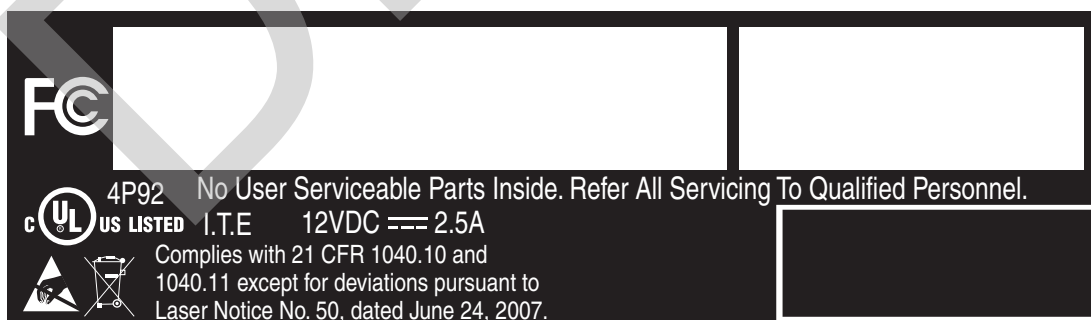

22813

### 4.2.5 Resistibility requirements compliance

The ONT equipment complies with the requirements of ITU Recommendation K.21 for resistibility of telecommunication equipment installed in customer premises to overvoltage and overcurrents.

## 4.3 Laser safety guidelines

Only qualified service personnel who are extremely familiar with laser radiation hazards should install or remove the fiber optic cables and units in this system.

Observe the following warnings when you perform installation, operations, and maintenance tasks on the ONT equipment.



**Danger** — There may be invisible laser radiation at the fiber optic cable when the cable is removed from the connector. Avoid direct exposure to beam.

Observe the following danger for a laser hazard. Eyes can be damaged when they are exposed to a laser beam. Take necessary precautions before you plug in the optical modules.



**Danger** — Possibility of equipment damage. Risk of eye damage by laser radiation.

Per CDRH 21 CFR 10.40.10 (h) (1) (iv) distributors of Class 1 laser products, such as Nokia ONTs shall leave the following Laser Safety cautions with the end user.


a) "Class 1 Laser Product"

b) "Caution – Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure."

### 4.3.1 Laser warning labels


The following figures show sample labels related to laser product, classification and warning.

Figure 10 shows a laser product label.

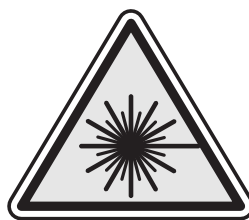**Figure 10 Laser product label**

18455

Figure 11 shows a laser classification label. Laser classification labels may be provided in other languages.

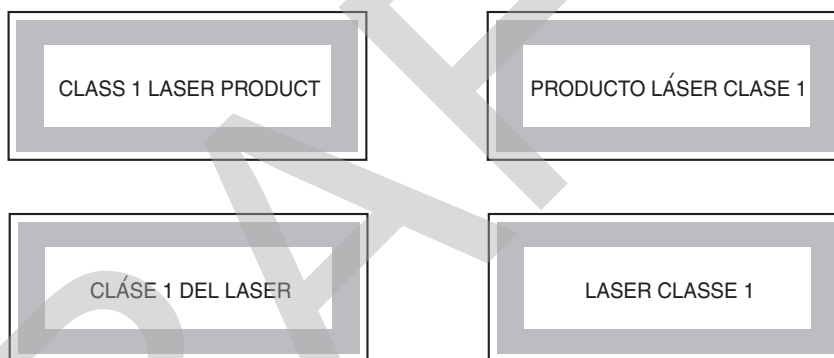**Figure 11 Laser classification label**

18992

Figure 12 shows a laser warning label and an explanatory label for laser products. Explanatory labels may be provided in other languages. The explanatory label provides the following information:

- a warning that calls attention to the invisible laser radiation
- an instruction against staring into the beam or viewing directly with optical instruments
- wavelength
- normal output power
- maximum output power

**Figure 12** Laser warning labels

18993


### 4.3.2 Laser classification

The ONT is classified as a Class 1 laser product based on its transmit optical output.

For Class 1 laser products, lasers are safe under reasonably foreseeable conditions of operation, including the use of optical instruments for intrabeam viewing.

Figure 13 shows a sample laser product safety label on the ONT equipment.

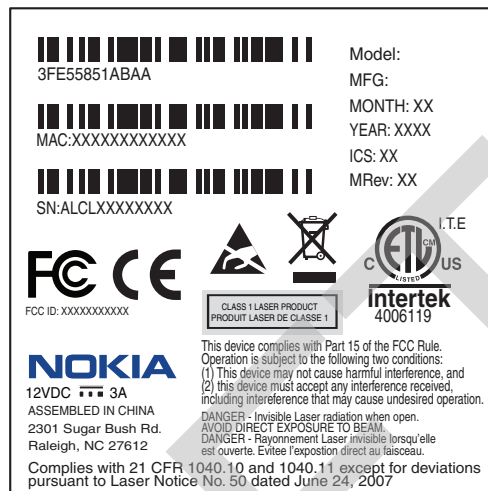

**Figure 13 Sample laser product safety label on the ONT equipment**

18532

### 4.3.3 Transmit optical output

The maximum transmit optical output of an ONT is +5 dBm.

### 4.3.4 Normal laser operation

In normal operation, fiber cable laser radiation is always off until it receives signal from the line terminal card.

Operating personnel must observe the instructions on the laser explanatory label before plugging in the optical module.



**Danger** — Risk of eye damage by laser radiation.

### 4.3.5 Location class

Use cable supports and guides to protect the receptacles from strain.

## 4.4 Electrical safety guidelines

This section provides the electrical safety guidelines for the ONT equipment.



**Note** — The ONTs comply with the U.S. National Electrical Code. However, local electrical authorities have jurisdiction when there are differences between the local and U.S. standards.

### 4.4.1 Power supplies

The use of any non-Nokia approved power supplies or power adapters is not supported or endorsed by Nokia. Such use will void any warranty or support contract with Nokia. Such use greatly increases the danger of damage to equipment or property.

### 4.4.2 Cabling

The following are the guidelines regarding cables used for the ONT equipment:

- Use only cables approved by the relevant national electrical code.
- Use cables suitable for outdoor use for outdoor installation of ONTs.
- The ONTs have been evaluated for use with external POTS wiring without primary protection that may not exceed 140 ft (43 m) in reach. However, the power cable must not exceed 100 ft (31 m).

### 4.4.3 Protective earth

Earthing and bonding of the ONTs must comply with the requirements of NEC article 250 or local electrical codes.

## 4.5 ESD safety guidelines

The ONT equipment is sensitive to ESD. Operations personnel must observe the following ESD instructions when they handle the ONT equipment.



**Caution** — This equipment is ESD sensitive. Proper ESD protections should be used when entering the TELCO Access portion of the ONT.

During installation and maintenance, service personnel must wear wrist straps to prevent damage caused by ESD.

Nokia recommends that you prepare the site before you install the ONT equipment. In addition, you must control relative humidity, use static dissipating material for furniture or flooring, and restrict the use of air conditioning.

## 4.6 Environmental requirements

See the ONT technical specification documentation for temperature ranges for ONTs.

During operation in the supported temperature range, condensation inside the ONT caused by humidity is not an issue. To avoid condensation caused by rapid changes in temperature and humidity, Nokia recommends:

- The door of the ONT not be opened until temperature inside and outside the enclosure has stabilized.
- If the door of the ONT must be opened after a rapid change in temperature or humidity, use a dry cloth to wipe down the metal interior to prevent the risk of condensation.
- When high humidity is present, installation of a cover or tent over the ONT helps prevent condensation when the door is opened.

DRAFT

## 5 G-240W-F unit data sheet

[5.1 G-240W-F part numbers and identification](#)

[5.2 G-240W-F general description](#)

[5.3 G-240W-F software and installation feature support](#)

[5.4 G-240W-F interfaces and interface capacity](#)

[5.5 G-240W-F LEDs](#)

[5.6 G-240W-F detailed specifications](#)

[5.7 G-240W-F GEM ports and T-CONTs](#)

[5.8 G-240W-F performance monitoring statistics](#)

[5.9 G-240W-F functional blocks](#)

[5.10 G-240W-F standards compliance](#)

[5.11 G-240W-F special considerations](#)

## 5.1 G-240W-F part numbers and identification

Table 3 provides part numbers and identification information for the G-240W-F indoor ONT.

**Table 3** Identification of G-240W-F indoor ONTs

Ordering kit part number	Provisioning part number	Description	CLEI	CPR	ECI/ Bar code
3FE 46649 AA	3FE 46597 AA	Package P GPON indoor ONT with two POTS ports, four 10/100/1000 Base-T Ethernet interfaces, and one 100 mW Wi-Fi radio with on/off switch. This ONT features two USB 2.0 ports and supports SC/APC optics. Includes two 5dBI indoor multi-directional external WiFi antenna (not detachable), one 1.5m CAT-5E Ethernet cable with RJ-45 endpoint, and one 1.5m RJ-11 cable. Also includes one 2-pin wall-mounted 12V AC/DC power adapter with US plug.	—	—	—
3FE 46649 AB	3FE 46597 AA	Package P GPON indoor ONT with two POTS ports, four 10/100/1000 Base-T Ethernet interfaces, and one 200 mW Wi-Fi radio with on/off switch. This ONT features two USB 2.0 ports and supports SC/APC optics. Includes two 5dBI indoor multi-directional external WiFi antenna (not detachable), one 1.5m CAT-5E Ethernet cable with RJ-45 endpoint, and one 1.5m RJ-11 cable. Also includes one 2-pin wall-mounted 12V AC/DC power adapter with US plug.	—	—	—
3FE 46649 AC Customer-specific	3FE 46597 AA	Package P GPON indoor ONT with two POTS ports, four 10/100/1000 Base-T Ethernet interfaces, and one 200 mW Wi-Fi radio with on/off switch. This ONT features two USB 2.0 ports and supports SC/APC optics. Includes two 5dBI indoor multi-directional external WiFi antenna (not detachable), one 1.5m CAT-5E Ethernet cable with RJ-45 endpoint, and one 1.5m RJ-11 cable. Also includes one 2-pin wall-mounted 12V AC/DC power adapter with US plug.	—	—	—
3FE 46649 BA	3FE 46597 AA	Package P GPON indoor ONT with two POTS ports, four 10/100/1000 Base-T Ethernet interfaces, and one 100 mW Wi-Fi radio with on/off switch. This ONT features two USB 2.0 ports and supports SC/APC optics. Includes two 5dBI indoor multi-directional WiFi external antenna (not detachable), one 1.5m CAT-5E Ethernet cable with RJ-45 endpoint, and one 1.5m RJ-11 cable. Also includes one 2-pin wall-mounted 12V AC/DC power adapter with EU (European) plug.	—	—	—

(1 of 2)

Ordering kit part number	Provisioning part number	Description	CLEI	CPR	ECI/ Bar code
3FE 46649 BB Customer-specific	3FE 46597 AB	Package P GPON indoor ONT with two POTS ports, four 10/100/1000 Base-T Ethernet interfaces, and one 100 mW Wi-Fi radio with on/off switch.  This ONT features two USB 2.0 ports and supports SC/APC optics.  Includes two 5dBI indoor multi-directional WiFi external antenna (not detachable), one 1.5m CAT-5E Ethernet cable with RJ-45 endpoint, and one 1.5m RJ-11 cable.  Also includes one 2-pin wall-mounted 12V AC/DC power adapter with EU (European) plug.	—	—	—
3FE 46649 CA	3FE 46597 AA	Package P GPON indoor ONT with two POTS ports, four 10/100/1000 Base-T Ethernet interfaces, and one 100 mW Wi-Fi radio with on/off switch.  This ONT features two USB 2.0 ports and supports SC/APC optics.  Includes two 5dBI indoor multi-directional WiFi external antenna (not detachable), one 1.5m CAT-5E Ethernet cable with RJ-45 endpoint, and one 1.5m RJ-11 cable.  Also includes one 3-pin wall-mounted 12V AC/DC power adapter with UK (British) plug.	—	—	—

(2 of 2)

For the G-240W-F indoor ONT power supply information, contact your Nokia technical support representative.

## 5.2 G-240W-F general description

G-240W-F indoor ONTs provide the subscriber interface for the network by terminating the PON interface and converting it to user interfaces that directly connect to subscriber devices. The ONT is compatible with all existing subscriber equipment, including analog phones with both tone and rotary dial capabilities, cordless phones, modems, fax machines, and caller ID boxes (Type I, Type II, and Type III).

G-240W-F indoor ONTs provide the following functions:

- single fiber GPON interface with 1.244Gbit/s upstream and 2.488Gbit/s downstream data rates
- 4 Ethernet LAN connections
- 2 POTS connections
- 2 USB 2.0 ports; voltage rate: 5V, current rate: 500mA per port
- reset button
- LED indicators on/off button
- WLAN enable/disable button
- WPS enable/disable button
- UPnP IGD2.0 support

- 2.4 GHz wireless interface
- 2 5dBI indoor multi-directional external WiFi antenna (not detachable)
- MIMO
- support for up to 20 concurrent wireless connections
- 802.11b/g/n compliant
- MDI/MDIX auto sensing
- auto-negotiation for speed and duplex
- multiple voice Codec
- echo cancellation
- Analog Telephone Adapter (ATA) function integrated based on SIP (RFC3261) and H.248, with various CLASS services supported, including Caller ID, Call Waiting, Call Forwarding, and Call Transfer
- auto reconnect when connection to server is lost
- Network Address Translation (NAT)
- 3 REN per line

### 5.2.1 TR-069 support

The ONT supports the reading of optical parameters via TR-069:

- laser bias current
- voltage
- temperature
- received signal levels
- lower thresholds

These are the same optical parameters supported in the GUI. For more information, see Table 21 in the chapter [“Configure a G-240W-F indoor ONT”](#).

The ONT supports the status retrieval and configuration of the following Wi-Fi parameters via TR-069:

- channel
- SSID
- password for WPA and WEP
- Tx power (transmission rate in dBm)

These are the same TR-069 object parameters that are supported in the GUI. For more information, see Tables 17 and 26 in the chapter [“Configure a G-240W-F indoor ONT”](#).

The ONT also supports TR-069 statistics and troubleshooting for LAN, WAN, and WiFi.



## 5.2.2 TR-104 parameter extension support for voice service

A proprietary attribute has been added to the TR-104 Voice Service object structure to enable the ACS to configure the name of the embedded GSIP XML file to be selected.

The TR-104 Voice Service Object is:  
InternetGatewayDevice.Services.VoiceService.{i}.Capabilities.SIP.

The proprietary attribute is: X\_ALU-COM\_XML\_File\_Name\_Path.

## 5.2.3 TR-181 Wi-Fi objects adapted in TR-098

TR-181 is the device data model for TR-069 Wi-Fi objects.

The following TR-181 Wi-Fi objects (and sub-objects) adapted in TR-098 are supported in this release:

- Device.WiFi
- Device.WiFi.Radio.{i}.
- Device.WiFi.Radio.{i}.Stats.
- Device.WiFi.SSID.{i}.
- Device.WiFi.SSID.{i}.Stats.
- Device.WiFi.AccessPoint.{i}.
- Device.WiFi.AccessPoint.{i}.Security.
- Device.WiFi.AccessPoint.{i}.WPS.
- Device.WiFi.AccessPoint.{i}.AssociatedDevice{i}.
- Device.WiFi.Endpoint.{i}.
- Device.WiFi.Endpoint.{i}.Stats.
- Device.WiFi.Endpoint.{i}.Security.
- Device.WiFi.Endpoint.{i}.Profile{i}.
- Device.WiFi.Endpoint.{i}.Profile{i}.Security.
- Device.WiFi.Endpoint.{i}.WPS.
- Device.WiFi.NeighboringWiFiDiagnostics.
- Device.WiFi.NeighboringWiFiDiagnostics.Result.{i}.

## 5.2.4 Mobile offload support

As part of the E2E solution supported by the ISAM 7750 service router, the G-240W-F ONT offers Mobile Offload support using a combination of EAP-SIM and ITU-T 802.11.

EAP-SIM is an authentication method that uses the user credentials on the SIM card and EAP to authenticate the user with the Wi-Fi network, removing the need for user input (username and password).

A dedicated public mobile offload SSID in the ONT enables mobile subscribers to connect to the Internet. Encryption is supported by 802.11, providing seamless Wi-Fi authentication for SIM-based user equipment.

The ONT acts as the RADIUS client and sends the encapsulated EAP messages to the AAA server via the WLAN Gateway, which acts as the RADIUS proxy server. The interaction between the ONT and the AAA server provides subscriber management for authenticated mobile users without adding authentication load to the 3G network.

### 5.2.5 Bridged Residential Gateway (BRG) support

The BRG receives IP addresses for the WAN interface using DHCP or PPPoE. The BRG can use either Ipv4 or Ipv6 addresses. BRG uses OpenFlow protocol version 1.3.1 to manage Access Control List entries and routing protocols. TR-069 can be used to manage the local DHCP server and the soft GRE tunnel.

The BRG supports the encapsulation of Ethernet frames from different bridges in the GRE tunnel to the access tunnel. Multiple bridges can map to the same GRE tunnel. Where encapsulated packets exceed the MTU (packet size), fragmentation is also supported.

Upstream QoS can reserve bandwidth for public and private Wi-Fi bridges, based on profiles defined for the access uplink speed. A unique VLAN tag can be configured for each SSID on the BRG. Unicast QoS adjustment can be enabled to support Multicast IPTV.

Liveness detection and redundancy, link failure notification, and DHCP local server fallback are provided to help manage potential problems with gateway access. Event notification via TR-069 reports when the PON link is up and the tunnel is unreachable.

### 5.2.6 Support for soft GRE tunnels

This section describes the support for soft GRE tunnels for integration with the 7750 Service Router WLAN gateway. The Nokia 7750 Service Router WLAN GW can accept soft GRE tunnels from any IP Source Address, in a preconfigured Subnet or Access Control List, or MPLS label.

### 5.2.6.1 GRE

Generic Routing Encapsulation (GRE) is a tunneling protocol that can encapsulate a wide variety of network layer protocols inside virtual point-to-point links over an Internet Protocol network. GRE provides a secure path for transporting packets through a public network. In essence, GRE creates a private P2P connection, similar to a VPN, between clients and servers. GRE is the preferred transport mechanism between the Carrier Wi-Fi access network and the WLAN GW.

GRE works by encapsulating a payload (an inner packet that needs to be delivered to a destination network) inside an outer IP packet. GRE tunnel endpoints send payloads through GRE tunnels by routing encapsulated packets through intervening IP networks. The inner packets are not parsed along the way; only the outer IP packets are parsed as they are forwarded towards the GRE tunnel endpoint, where the GRE encapsulation is removed, and the payload is forwarded to its final destination.


### 5.2.6.2 Soft GRE

In soft GRE, only one side of the tunnel needs to be configured; the other end learns the remote IP addresses of all remote tunnel endpoints by examining the incoming GRE packets.

GRE tunnels can be automatically created when devices attach to the AP, eliminating the need for each AP to be explicitly provisioned on the WLAN Gateway. Because this soft GRE is stateless and the tunnel contexts are created based on need, the WLAN Gateway does not need to maintain states for unused tunnels, which improves scalability.

The operator can restrict the traffic going through the GRE tunnel based on the SSIDs or LAN ports.

Figure 14 illustrates the soft GRE architecture.

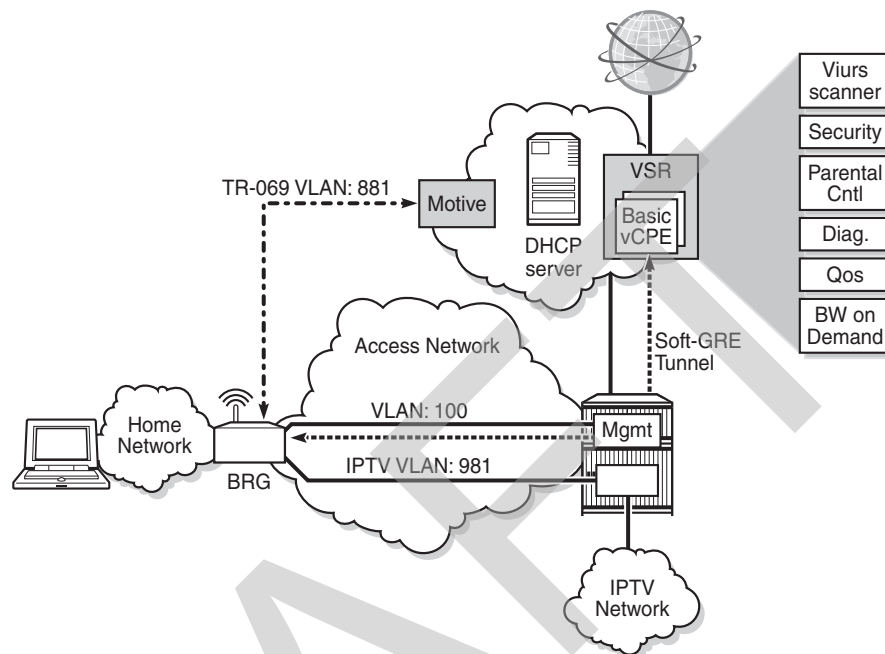**Figure 14** SoftGRE-based architecture

25265

For more information about soft GRE architecture and configuration procedures, see the *7368 Configuration, Management, and Troubleshooting guide*, which contains the vCPE User Guide.



**Note** — While the vCPE forwards all traffic over the GRE tunnel, the soft GRE architecture for the G-240W-F enables the operator to restrict the traffic over the GRE tunnel bases on SSIDs or LAN ports.

## 5.3 G-240W-F software and installation feature support

For information on installing or replacing the G-240W-F see:

- [Install a G-240W-F indoor ONT](#)
- [Replace a G-240W-F indoor ONT](#)

For information on the following topics, see the *7368 ISAM ONT Product Overview Guide*:

- ONT and MDU general descriptions of features and functions
- Ethernet interface specifications

- POTS interface specifications
- RSSI specifications
- Wi-Fi specifications
- ONT optical budget
- SLID entry via Ethernet port
- ONT management using an ONT interface

## 5.4 G-240W-F interfaces and interface capacity

Table 4 describes the supported interfaces and interface capacity for G-240W-F indoor ONTs.

**Table 4** G-240W-F indoor ONT interface connection capacity

ONT type and model	Maximum capacity								
	POTS	10/ 100 BASE-T	10/ 100/ 1000 BASE-T	RF video (CATV)	MoCA	VDSL2	E1/T1	Local craft	GPON SC/APC
G-240W-F (1)	2	—	4	—	—	—	—	—	1

Note

(1) The G-240W-F ONTs provide Wi-Fi service that is enabled and disabled using a Wi-Fi on/off switch.

### 5.4.1 G-240W-F connections and components

Figure 15 shows the physical connections on the back of the G-240W-F indoor ONTs: USB, LAN, POTS, power input, and on/off button.

**Figure 15** G-240W-F indoor ONT physical connections (back view)

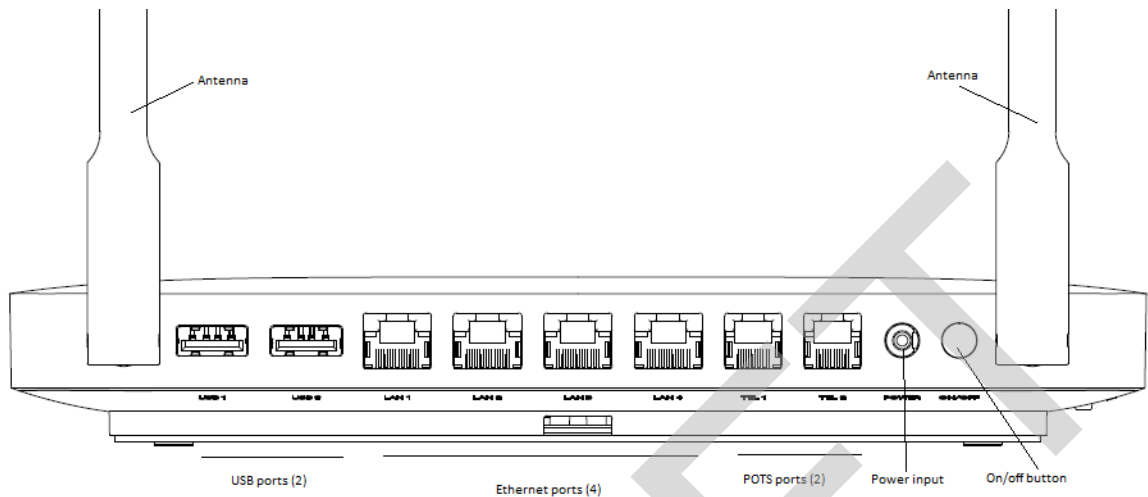


Figure 16 shows the buttons on the side of the G-240W-F indoor ONTs: reset, LED indicators on/off, WLAN enable/disable, and WPS enable/disable, as well as the fiber optic port on the bottom of the ONT.

**Figure 16** G-240W-F ONT Reset, LED, WLAN, and WPS buttons and fiber optic connection (bottom and side view)

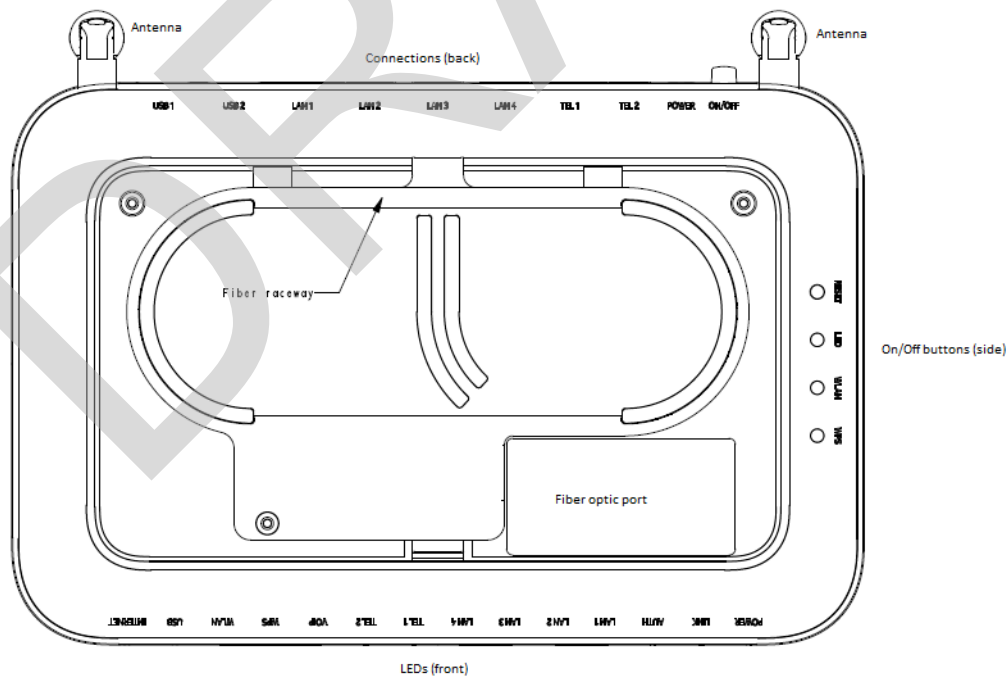


Table 5 describes the physical connections for G-240W-F indoor ONTs.

**Table 5 G-240W-F indoor ONT physical connections**

Connection <sup>(1)</sup>	Description
USB (USB port)s	This connection is provided through two USB 2.0 ports on the back of the ONT. The voltage rate is 5V, and the current rate is 500mA per port.
LAN1-LAN4 (RJ-45 Ethernet ports)	This connection is provided through Ethernet RJ-45 connectors on the back of the ONT. Up to four 10/100/1000 Base-T Ethernet interfaces are supported. The Ethernet ports can support both data and in-band video services on all four interfaces.
TEL1, TEL2 (RJ-11 POTS ports)	This connection is provided through RJ-11 ports on the back of the ONT. Up to two POTS connections are supported. The POTS ports support voice services.
POWER (Power input)	This connection is provided through the power connector on the back of the ONT. A power cable fitted with a barrel connector is used to make the connection.
ON/OFF	This button on the side of the ONT turns the ONT on or off.
RESET	Pressing the Reset button, located on the side of the ONT, for less than 10 seconds reboots the ONT; pressing the Reset button for 10 seconds resets the ONT to the factory defaults, except for the LOID and SLID.
LED (LED indicator button)	This button, located on the side of the ONT, turns all LED indicators on or off.
WLAN (Wireless On/Off button)	Wi-Fi service is compliant with IEEE 802.11 standards and is enabled or disabled using the WLAN button on the side of the ONT.
WPS (Wi-Fi security button)	The Wi-Fi Protected Setup (WPS) button, located on the side of the ONT, enables and disables WLAN data encryption.
PON (Fiber optic port)	This connection, on the bottom of the ONT, is provided through an SC/APC fiber optic connector.

Note

<sup>(1)</sup> The primary path for the earth ground for these ONTs is provided by the 12V Return signal in the power connector.

## 5.5 G-240W-F LEDs

Figure 17 shows the G-240W-F indoor ONT LEDs.

**Figure 17 G-240W-F indoor ONT LEDs**

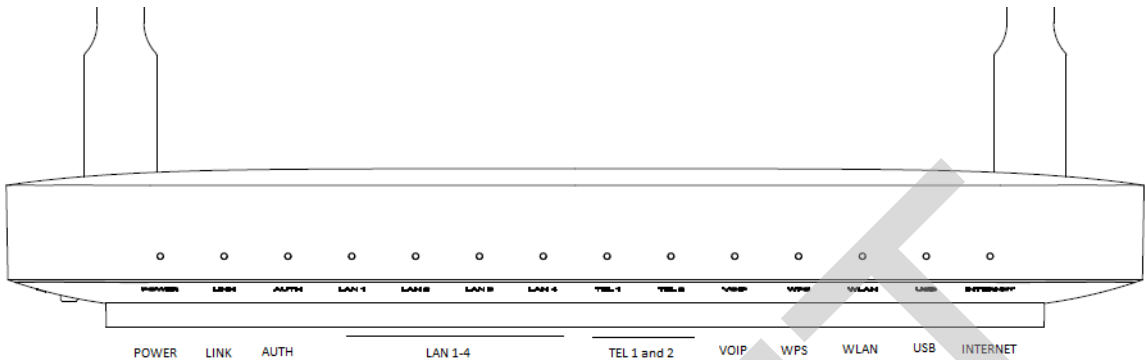


Table 6 provides LED descriptions for G-240W-F indoor ONTs.

**Table 6 G-240W-F indoor ONT LEDs**

Indicator	LED color and behavior	LED behavior description
Power	Green solid Red solid Off	Power on Light failed on startup (for example corrupt flash), or self test failed on startup, or self test failed during regular operation or when executed over OMCI Power off
Link	Green solid Off	GPON link between ONT and OLT is operating normally GPON link is down or no link connected
Auth	Green solid Green flashing Off	ONT is authorized ONT is In process of ranging or synchronizing on OMCI ONT is not authorized
LAN 1 to 4	Green solid Green flashing Off	Ethernet is linked LAN activity is present (in either direction) ONT power off or Ethernet not connected
TEL 1 to 2	Green solid Green flashing Off	Phone off hook Phone in 'call in' or 'talking' condition Phone on hook
VOIP	Green solid Off	VOIP service is built up and can provide service VOIP service is not built up or out of service
WPS	Green solid Green flashing Off	WiFi protected setup link is up (negotiation and auto-configuration successful) WiFi protected setup link activity (negotiation and auto-configuration ongoing) WiFi protected setup link down or no link connected (negotiation has not started or has failed)
WLAN	Green solid Green flashing Off	WLAN link is up (wireless enabled) WLAN activity (traffic on wireless link) WLAN link is down or no link is connected

(1 of 2)



Indicator	LED color and behavior	LED behavior description
USB	Green solid Green flashing Off	At least one USB device is connected Traffic activity on at least on USB device No USB device connected
INTERNET	Green solid  Green flashing  Off	HSI WAN is connected: a) the device has an IP address assigned from IPCP, DHCP, or static, and no traffic has been detected; b) the session is dropped due to idle timeout but the PON link is still present. PPPoE or DHCP connection in progress HSI WAN is not connected: a) there is no physical interface connection; b) the device is in bridged mode without an assigned IP address; c) the session has been dropped for reasons other than idle timeout.

(2 of 2)

## 5.6 G-240W-F detailed specifications

Table 7 lists the physical specifications for G-240W-F indoor ONTs.

**Table 7 G-240W-F indoor ONT physical specifications**

Description	Specification
Width	8.1 in. (205 mm)
Length	6 in. (152 mm) 7 in. (176 mm with antenna)
Height	1.3 in. (33 mm)
Weight [within $\pm 0.5$ lb (0.23 kg)]	0.88 lb (0.4 kg)

Table 8 lists the power consumption specifications for G-240W-F indoor ONT.

**Table 8 G-240W-F indoor ONT power consumption specifications**

Maximum power (Not to exceed)	Condition	Minimum power	Condition
13.6 W	2 POTS off-hook, 4 10/100/1000 Base-T Ethernet, Wi-Fi operational	3.06 W	2 POTS on-hook, other interfaces/services not provisioned

Table 9 lists the environmental specifications for G-240W-F indoor ONT.

**Table 9** G-240W-F indoor ONT environmental specifications

Temperature range and humidity	Altitude
Operating: 23°F to 113 F (-5°C to 45°C) ambient temperature 5% to 95% relative humidity, non-condensing	Contact your Nokia technical support representative for more information
Storage: -4°F to 158°F (-20°C to 70C)	

## 5.7 G-240W-F GEM ports and T-CONTs

Table 10 lists the maximum number of supported T-CONTs and GEM ports.

**Table 10** G-240W-F indoor ONT capacity for GEM ports and T-CONTs

GEM ports or TCONTs	Maximum	Notes
GEM ports per indoor or outdoor ONT	256	254 are present; 122 are available, and 2 are reserved for multicast and debugging
T-CONTs per indoor or outdoor ONT	32	32 are present; 31 are available, and 1 is reserved for OMCI

## 5.8 G-240W-F performance monitoring statistics

The following section identifies the supported performance monitoring statistics for G-240W-F ONTs. A check mark indicates the statistic is supported on that ONT. An empty cell indicates the statistic is not supported. The following tables are categorized by supported alarm types:

- Table 11 provides statistics for ONTENET type counters
- Table 12 provides statistics for ONTL2UNI type counters
- Table 13 provides statistics for PONONTTC, PONONTMCTC, PONONTTCHSI, PONONTTCES, PONONTTCFLOW, and PONONTTCVOIP type counters
- Table 14 provides statistics for PONONTTC aggregate type counters



**Note** — If you have trouble accessing G-240W-F ONTs performance monitoring statistics using TL1, please contact your Nokia support representative for more information about how to access and retrieve performance monitoring type counters.

**Table 11** Package P ONTs ONTENET performance monitoring statistics

ONT	ONTENET statistics													
	FCSE	EC	LC	RBO	SCF	MCF	DT	IMTE	CSE	AE	IMRE	FTL	TBO	SQE
G-240W-F <sup>(1)</sup>	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓

Note

(1) A 5 second polling window limitation exists on the ONT, therefore the margin of error for each 15-min window is 5 seconds

**Table 12** Package P ONTs ONTL2UNI performance monitoring statistics

ONT	ONTL2UNI statistics										
	FRAMES	BYTES	MCFRAMES	DSDRPFDRMS	USDRPFDRMS	USFRAMES	DSFRAMES	USBYTES	DSBYTES	USMCFRAMES	DSMCFRAMES
G-240W-F <sup>(1)</sup>	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓

Note

(1) A 5 second polling window limitation exists on the ONT, therefore the margin of error for each 15-min window is 5 seconds

**Table 13** Package P ONTs PONONTTC, PONONTMCTC, PONONTTCHSI, PONONTTCES, PONONTTCFLOW, PONONTTCVOIP performance monitoring statistics

ONT	PONONTTC, PONONTMCTC, PONONTTCHSI, PONONTTCES, PONONTTCFLOW, PONONTTCVOIP statistics					
	TXBLOCKS	TXFRAGS	RXBLOCKS	RXFRAGS	LOSTFRAGS	BADGEMHDRS
G-240W-F <sup>(1)</sup>	✓	✓	✓	✓	✓	

Note

(1) A 5 second polling window limitation exists on the ONT, therefore the margin of error for each 15-min window is 5 seconds

**Table 14**      **Package P ONTs PONONTTC aggregate performance monitoring statistics**

ONT	PONONTTC (aggregate) statistics					
	TXBLOCKS	TXFRAGS	RXBLOCKS	RXFRAGS	LOSTFRAGS	BADGEMHDRS
G-240W-F <sup>(1)</sup>	✓	✓	✓	✓	✓	


Note  
(1) A 5 second polling window limitation exists on the ONT, therefore the margin of error for each 15-min window is 5 seconds

## 5.9 G-240W-F functional blocks

G-240W-F indoor ONTs are single-residence ONTs that support Wireless (Wi-Fi) service. Wi-Fi services on these ONTs are compliant with the IEEE 802.11 standard and enabled or disabled using a WLAN button. In addition to the Wi-Fi service, these ONTs transmit Ethernet packets to four RJ-45 Ethernet ports and voice traffic to two RJ-11 POTS ports. These ONTs also feature fiber optic, USB, and power connectors.


Figure 18 shows the functional blocks for G-240W-F indoor ONT.

**Figure 18** Single-residence Wi-Fi ONT with Gigabit Ethernet and POTS and without RF video

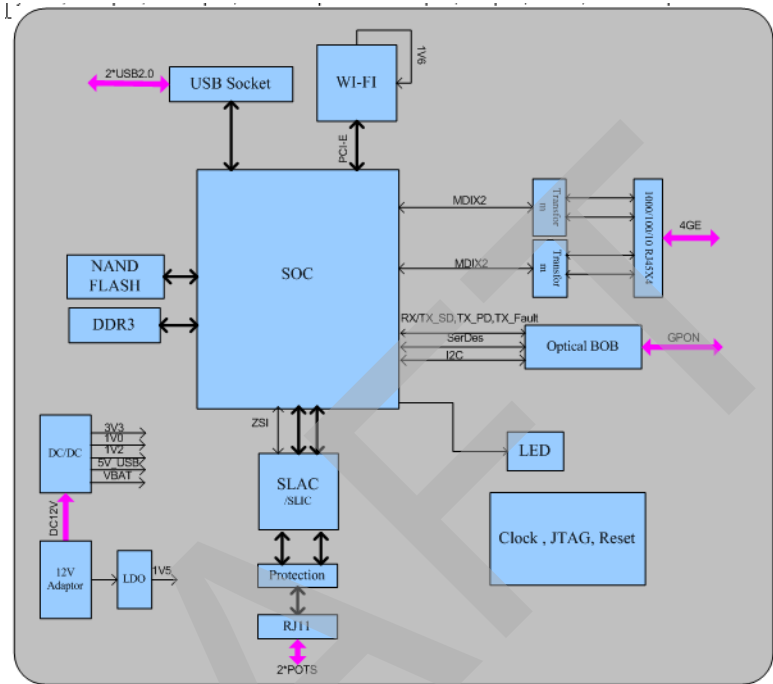

ONT SoC technology serves as the main hardware block for these ONTs; see Figure 19.

**Figure 19** G-240W-F ONT hardware block

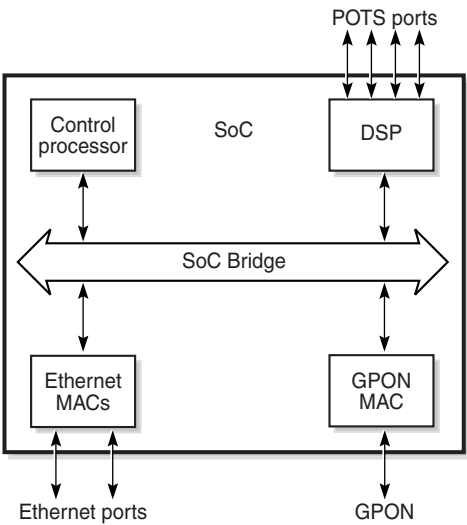

19421

ONT SoC technology consists of five key elements:

- **GPON MAC**  
The Gigabit Passive Optical Network Media Access Control (GPON MAC) element on the SoC terminates the GPON interface using an optical diplexer. This interface supports GPON as described in G.984.3 (GPON TC Layer) ITU specification.
- **Ethernet MAC**  
The SoC provides up to four GE MACs.
- **DSP interface**  
The Digital Signal Processor (DSP) provides voice processing for 2 POTS lines with 3-way calling. The DSP has a dedicated 64 kbyte instruction cache and shares a 32 kbyte data cache with the Control Processor. It provides up to 4 network processor cores, each at 800MHz.
- **Control Processor**  
The Control Processor features an integral memory management unit that supports a dedicated 64 kbyte instruction cache and shares a single 32 kbyte data cache with the DSP. The Control Processor and DSP also include a single channel Data Management Application (DMA) controller with a 4 kbyte read ahead low-latency Dynamic Random Access Memory (DRAM) access port. The processors typically run at 600 MHz.
- **Switch matrix**  
The Switch matrix provides an integrated data channel between the four GE MACs, the GPON MAC, the DSP, the control processor, and the other integrated elements such as flash memory, DRAM, and the local bus controller.

These ONTs can also interact with additional hardware components to support functionality not provided by the SoC technology.

## 5.10 G-240W-F standards compliance

G-240W-F indoor ONTs are compliant with the following standards:

- 802.1p QoS
- 802.1q VLANs
- 802.3 auto negotiation, flow control
- 802.11 b/g/n at 2.4 GHz
- Codec G.711 a/u, G.722, G.723, G.726, G.729
- EN 300-328 v1.9.1 wide band data transmission standards for 2.4GHz bands
- Energy Star standards. Level 6
- EU CoC v5 broadband communication
- G.984 support GPON interface (framing)
- G.984.2 support for Amd1, class B+
- G.984.3 support for activation and password functions
- G.984.3 support for AES with operator enable/disable on per port-ID level

- G.984.3 support for FEC in both upstream and downstream directions
- G.984.3 support for multicast using a single GEM Port-ID for all video traffic
- G.984.4 and G.983.2 support for OMCI v1 and v2 interface for ONT management and provisioning
- SIPv2 RFC 3261 signaling

### 5.10.1 Energy-related products standby and off modes compliance

Hereby, Nokia declares that the G-240W-F ONTs are in compliance with the essential requirements and other relevant provisions of Directive 2009/125/EC together with Commission Regulation (EC) No 1275/2008 and Commission Regulation (EC) No 801/2013.

The G-240W-F ONTs qualify as equipment with high network availability (HiNA) functionality. Since the main purpose of G-240W-F ONTs is to provide network functionality with HiNA 7 days /24 hours, the modes Off/Standby, Power Management, and Networked Standby are inappropriate.

For information about the type and number of network ports, see [“G-240W-F interfaces and interface capacity”](#) in this chapter.

For information about power consumption, see [“G-240W-F detailed specifications”](#) in this chapter.

## 5.11 G-240W-F special considerations

G-240W-F is a package P ONT.

### 5.11.1 Wi-Fi service

G-240W-F indoor ONTs feature Wi-Fi service as well as voice and data services. Wi-Fi is a wireless networking technology that uses radio waves to provide wireless HSI and network connections. This ONT complies with the IEEE 802.11 standards, which the Wi-Fi Alliance defines as the basis for Wi-Fi technology.

### 5.11.1.1 Wi-Fi physical features

G-240W-F indoor ONTs have the following physical features that assist in providing Wi-Fi service:

- WLAN button for enabling and disabling Wi-Fi service
- two external multi-directional antennae
- Wi-Fi Protected Setup (WPS) push button for enabling and disabling wireless protective services

### 5.11.1.2 Wi-Fi standards and certifications

The Wi-Fi service on G-240W-F indoor ONTs supports the following IEEE standards and Wi-Fi Alliance certifications:

- certified for IEEE 802.11b/g/n standards
- WPA support including WPA-PSK
- certified for WPA2-Personal and WPA2-Enterprise

### 5.11.1.3 Wi-Fi GUI features

G-240W-F indoor ONTs have HTML-based Wi-Fi configuration GUIs.

## 5.11.2 G-240W-F ONT considerations and limitations

Table 15 lists the considerations and limitations for Package P G-240W-F ONTs.

**Table 15 G-240W-F ONT considerations and limitations**

Considerations and limitations
Do not put the metallic material plate on top of the enclosure.
There is a limit of 3 RENs for each POTS line.
Call History Data collection (ONTCALLHST) is supported, except for the following parameters: RTP packets (discarded), far-end RTCP and RTCP-XR participation, RTCP average and peak round trip delay, MOS, average jitter, number of jitter-buffer over-runs and under runs.
Some voice features are configurable on a per ONT basis, including Call Waiting, Call Hold, 3-Way Calling, and Call Transfer.

(1 of 2)



**Considerations and limitations**

The following voice features / GSIP parameters are configurable on a per-Client/ per-ONT basis (not per-Subscriber):

- Enable Caller ID and Enable Caller Name ID
- Digitmap and the associated Interdigit and Critical timers and Enter key parameters
- Warmline timer is enabled per subscriber, but the warmline timer value is configured per ONT and must have a lower value than the Permanent time
- Miscellaneous timers: Permanent, Timed-release, Reanswer, Error-tone, and CW-alert timers
- Features / functions: Message waiting mode, WMWI refresh interval, DTMF volume level
- Service Codes for the following features: CCW, Call Hold and Warmline

(2 of 2)

DRAFT

---

## 6 Install a G-240W-F indoor ONT

### 6.1 Purpose

### 6.2 General

### 6.3 Prerequisites

### 6.4 Recommended tools

### 6.5 Safety information

### 6.6 Procedure

## 6.1 Purpose

This chapter provides the steps to install a G-240W-F indoor ONT.

## 6.2 General

The steps listed in this chapter describe mounting and cabling for G-240W-F indoor ONTs.

## 6.3 Prerequisites

You need the following items before beginning the installation:

- all required cables

## 6.4 Recommended tools

You need the following tools for the installation:

- #2 Phillips screwdriver
- 1/4 in. (6 mm) flat blade screwdriver
- wire strippers
- fiber optic splicing tools
- RJ-45 cable plug crimp tool
- voltmeter or multimeter
- optical power meter

- drill and drill bits
- paper clip

## 6.5 Safety information

Read the following safety information before installing the unit.



**Danger 1** — Hazardous electrical voltages and currents can cause serious physical harm or death. Always use insulated tools and follow proper safety precautions when connecting or disconnecting power circuits.

**Danger 2** — Make sure all sources of power are turned off and have no live voltages present on feed lines or terminals. Use a voltmeter to measure for voltage before proceeding.

**Danger 3** — Always contact the local utility company before connecting the enclosure to the utilities.



**Warning** — This equipment is ESD sensitive. Proper ESD protections should be used when removing the fiber access cover of the indoor ONT.



**Caution** — Keep indoor ONTs out of direct sunlight. Prolonged exposure to direct sunlight can damage the unit.



**Note 1** — Observe the local and national laws and regulations that may be applicable to this installation.

**Note 2** — Observe the following:

- The indoor ONT should be installed in accordance with the applicable requirements of the NEC or CEC. Local authorities and practices take precedent when there is conflict between the local standard and the NEC or CEC.
- The indoor ONT must be installed by qualified service personnel.
- Indoor ONTs must be installed with cables that are suitably rated and listed for indoor use.
- See the detailed specifications in the [G-240W-F unit data sheet](#) for the temperature ranges for these ONTs.

## 6.6 Procedure

Use this procedure to install a G-240W-F indoor ONT.

- 1 Place the indoor ONT unit:
  - a On the flat surface, such as a desk; go to step 3.



**Note —** The G-240W-F cannot be stacked with another ONT or with other equipment. The ONT mounting requirements are:


- allow a minimum 100 mm clearance above the top cover
- allow a minimum 50 mm clearance from the side vents
- do not place any heat source directly above the top cover or below the bottom cover

- b On a wall, go to step 2.

- 2 Mount the G-240W-F indoor ONT on a wall.
  - i The G-240W-F indoor ONT can be mounted in either a horizontal or vertical position.

Figure 20 shows the wall mounting holes for the G-240W-F ONTs.

**Figure 20** G-240W-F indoor ONT wall mounting holes (bottom view)

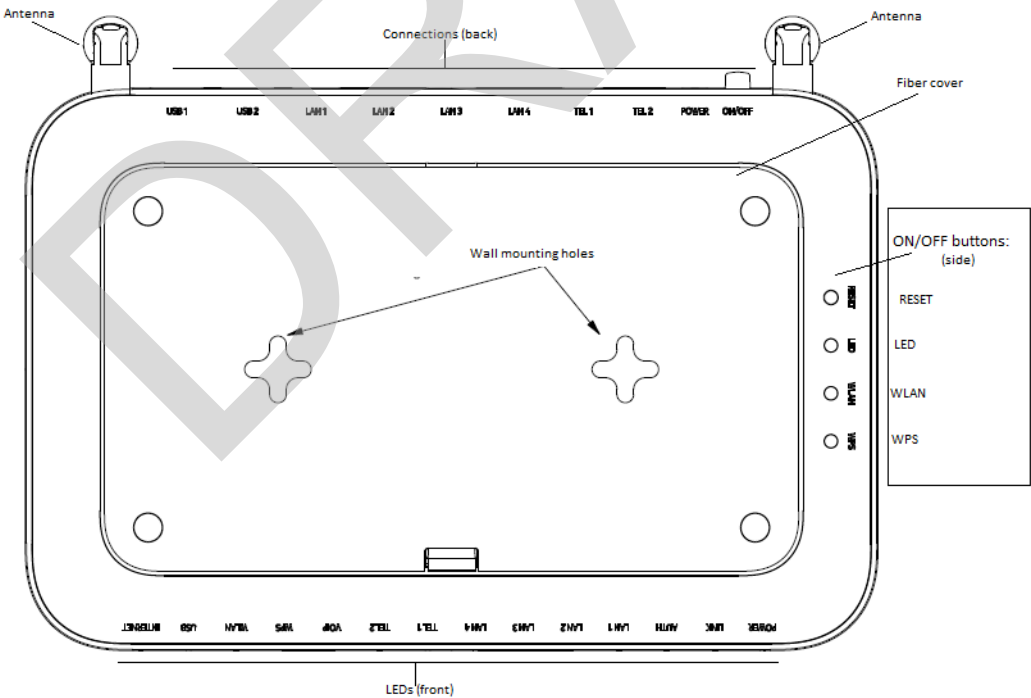

If possible, mount the ONT on a wall stud

- ii Mark the wall with the location of the mounting holes. These holes should be the same distance apart as the distance between the centers of the keyholes on the ONT.
- iii Drill the two holes in the wall where the ONT will be mounted and then drive the mounting screws into the holes.


The recommended length of mounting screw is 1.15 in. (3.8 cm).

Do not drive the screw into the wall completely. Leave approximately 1/8 in. (6 mm) between the screw head and the wall surface.


- iv Slide the wall mount keyholes on the ONT enclosure down over the mounting screws until the ONT is securely seated.

3 Review the connection locations as shown in Figures 21 and 22.


**Figure 21 G-240W-F indoor ONT connections (back view)**

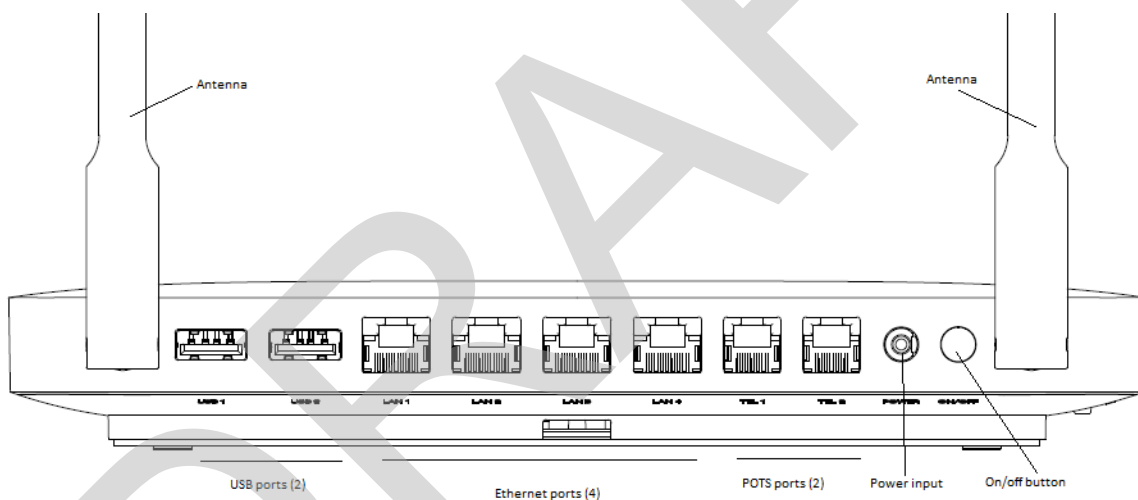

**Figure 22** G-240W-F ONT Reset, LED, WLAN, and WPS buttons and fiber optic connection (bottom and side view)

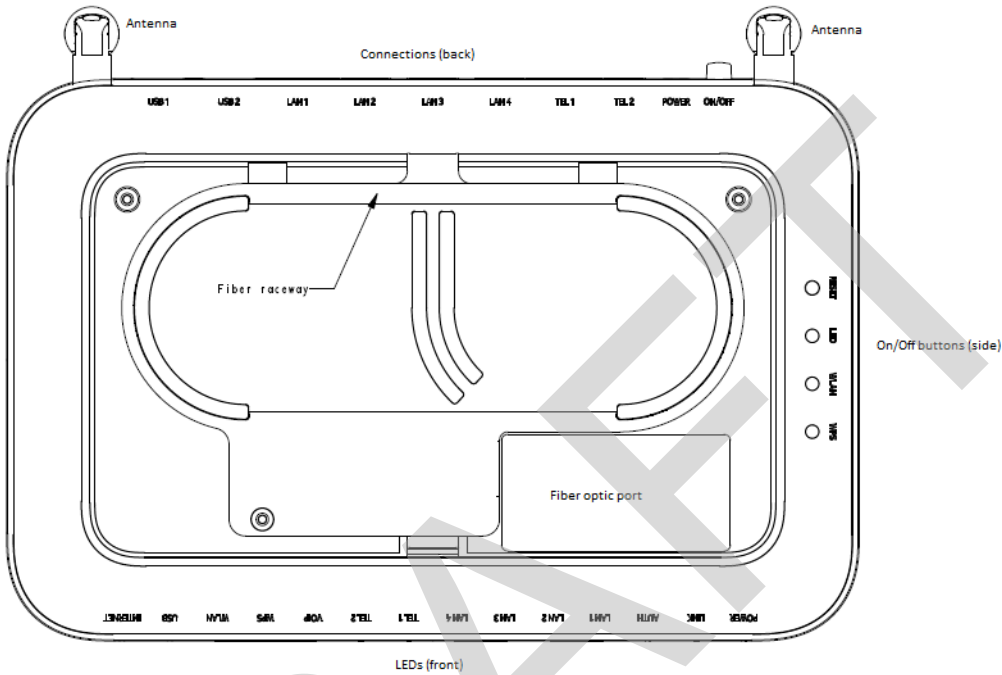

The G-240W-F ONT features a fiber cover to protect the fiber optic cable and connection, as shown in Figure 23.

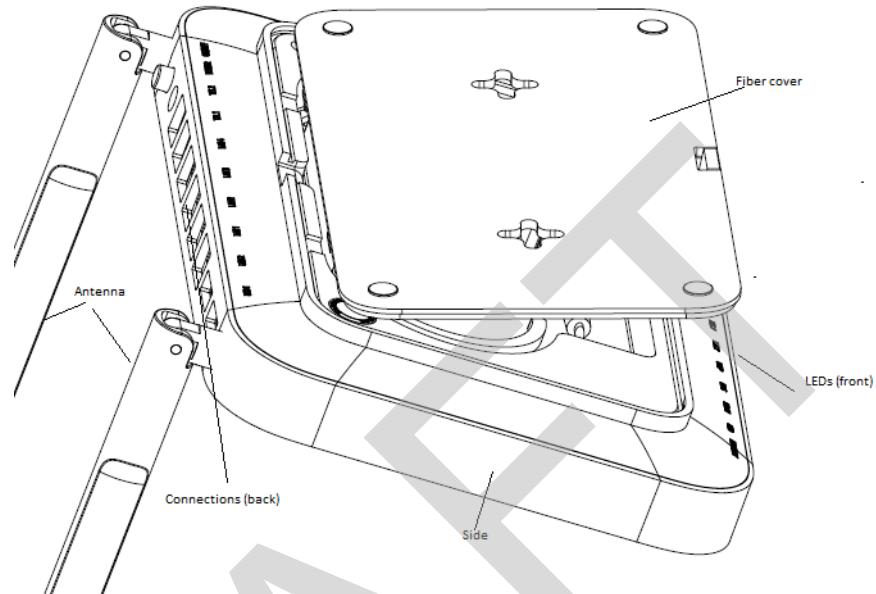**Figure 23** G-240W-F indoor ONT with fiber cover open

- 4 Connect the Ethernet cables to the RJ-45 ports; see Figure 21 for the location of the RJ-45 ports.
- 5 Route the POTS cables directly to the RJ-11 ports as per local practices.  
The POTS port to the left is labeled 1 for Line 1 while the port on the right is labeled 2 for Line 2, as shown in Figure 21.
- 6 Connect the fiber optic cable with SC/APC adapter into the SC/APC connector on the bottom of the ONT; see Figure 22 for the location of the SC/APC connector.



**Danger** — Fiber cables transmit invisible laser light. To avoid eye damage or blindness, never look directly into fibers, connectors, or adapters.



**Warning** — Be careful to maintain a bend radius of no less than 1.5 in. (3.8 cm) when connecting the fiber optic cable. Too small of a bend radius in the cable can result in damage to the optic fiber.





**Note** — Fiber cable preparation varies depending on the type and size of the inside or outside plant fiber cable being spliced to the SC/APC (SC/UPC) fiber optic pigtail cable.

---

7 Install the power supply according to manufacturer specifications.



**Note** — Observe the following:

- Units must be powered by a Listed or CE approved and marked limited power source power supply with a minimum output rate of 12 V dc, 1.25 A.

---

8 Connect the power cable to the power connector.

---

9 Power up the ONT unit by using the power switch.

---

10 If used, enable the Wi-Fi service.

- Locate the WLAN button on the side of the ONT; see Figure 22 for location of the WLAN button.
- Press the WLAN button to change the status of the Wi-Fi service.

---

11 If used, enable the WPS.

- Locate the WPS button on the side of the ONT; see Figure 22 for location of the WPS button.
- Press the WPS button to change the status of the WPS.

---

12 Verify the ONT LEDs, voltage status, and optical signal levels; see the *7368 Hardware and Cabling Installation Guide*.

---

13 Activate and test the services; see the *7368 Hardware and Cabling Installation Guide*.

---

14 If used, configure the SLID; see the *7368 ISAM ONT Configuration, Management, and Troubleshooting Guide*.

---

15 If necessary, reset the ONT.

- Locate the Reset button on the side of the G-240W-F indoor ONT as shown in Figure 22.
- Insert the end of a straightened paper clip or other narrow object into the hole in the Reset button to reset the ONT.

---

16 STOP. This procedure is complete.

DRAFT

---

## 7 Replace a G-240W-F indoor ONT

### 7.1 Purpose

### 7.2 General

### 7.3 Prerequisites

### 7.4 Recommended tools

### 7.5 Safety information

### 7.6 Procedure

## 7.1 Purpose

This chapter provides the steps to replace G-240W-F indoor ONTs.

## 7.2 General

The steps listed in this chapter describe mounting and cabling for G-240W-F indoor ONTs.

## 7.3 Prerequisites

You need the following items before beginning the installation:

- all required cables

## 7.4 Recommended tools

You need the following tools for replacing the ONT:

- #2 Phillips screwdriver
- 1/4 in. (6 mm) flat blade screwdriver
- wire strippers
- fiber optic splicing tools
- RJ-45 cable plug crimp tool
- voltmeter or multimeter

- optical power meter
- drill and drill bits

## 7.5 Safety information

Read the following safety information before replacing the unit.



**Danger 1** — Hazardous electrical voltages and currents can cause serious physical harm or death. Always use insulated tools and follow proper safety precautions when connecting or disconnecting power circuits.

**Danger 2** — Make sure all sources of power are turned off and have no live voltages present on feed lines or terminals. Use a voltmeter to measure for voltage before proceeding.

**Danger 3** — Always contact the local utility company before connecting the enclosure to the utilities.



**Warning** — This equipment is ESD sensitive. Proper ESD protections should be used when removing the fiber access cover of the indoor ONT.



**Caution** — Keep indoor ONTs out of direct sunlight. Prolonged exposure to direct sunlight can damage the unit.



**Note 1** — Observe the local and national laws and regulations that may be applicable to this installation.

**Note 2** — Observe the following:

- The indoor ONT should be installed in accordance with the applicable requirements of the NEC or CEC. Local authorities and practices take precedent when there is conflict between the local standard and the NEC or CEC.
- The indoor ONT must be installed by qualified service personnel.
- Indoor ONTs must be installed with cables that are suitably rated and listed for indoor use.
- See the detailed specifications in the [G-240W-F unit data sheet](#) for the ONT temperature ranges for these ONTs.

## 7.6 Procedure

Use this procedure to replace a G-240W-F indoor ONT.

- 1 Deactivate the ONT services at the P-OLT.

If you are using the SLID feature, this step is not required. The ONT and the services can remain in service (IS).

- i Use the RTRV-ONT command to verify the ONT status and the associated services. Record the serial number or the SLID of the ONT displayed in the command output.

Example:

RTRV-ONT::ONT-1-1-1-1-1;


- ii If the ONT is in service, place the ONT in OOS state.

Example:

ED-ONT::ONT-1-1-1-1-1;


- 2 If used, disable the Wi-Fi service by pressing the WLAN button; see Figure 24 for the location of the WLAN button on the side of the ONT.

**Figure 24** G-240W-F indoor ONT Reset, LED, WLAN, and WPS buttons (side)

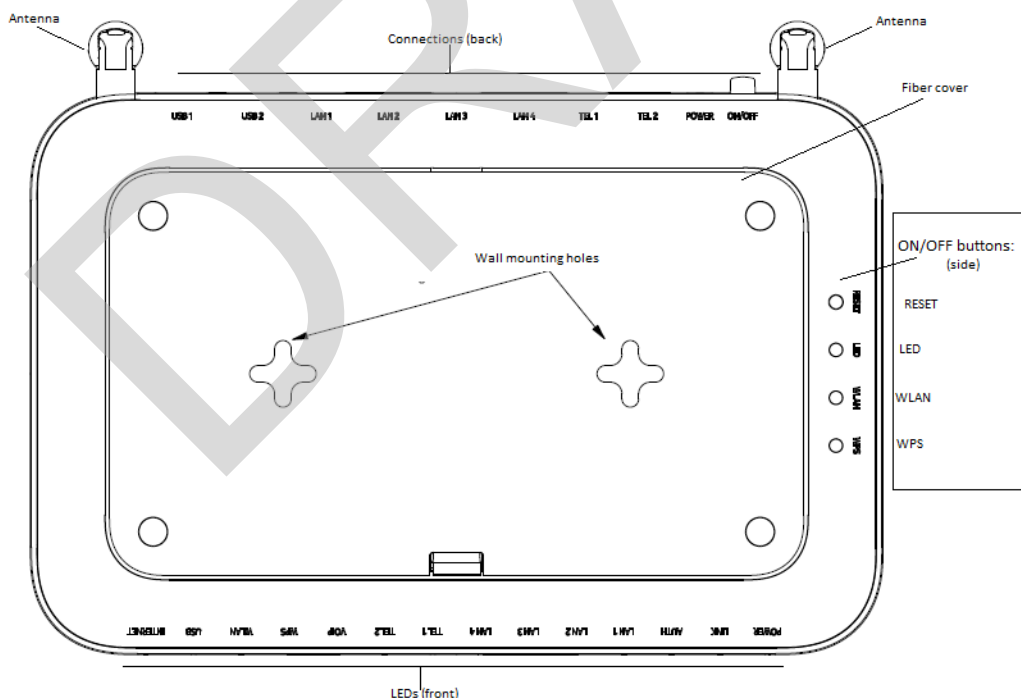


- 3 Power down the unit by using the on/off power switch; see Figure 25 for the location of the power switch.

**Figure 25** G-240W-F indoor ONT connections (back view)

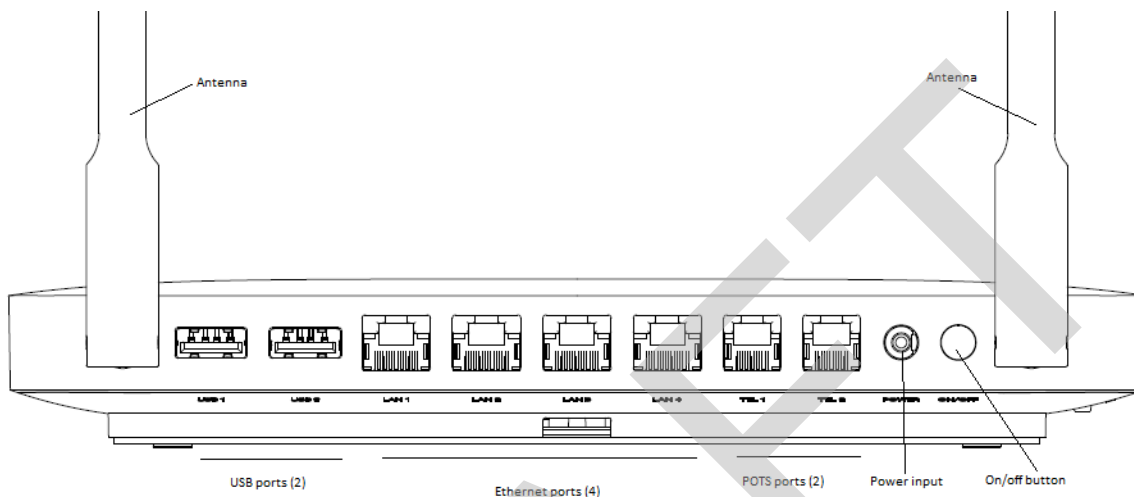

- 4 Disconnect the POTS, Ethernet, and power cables from the ONT; see Figure 25 for the connector locations on the G-240W-F indoor ONT.
- 5 Disconnect the fiber optic cable; see Figure 26 for the location of the fiber optic port on the bottom of the ONT..

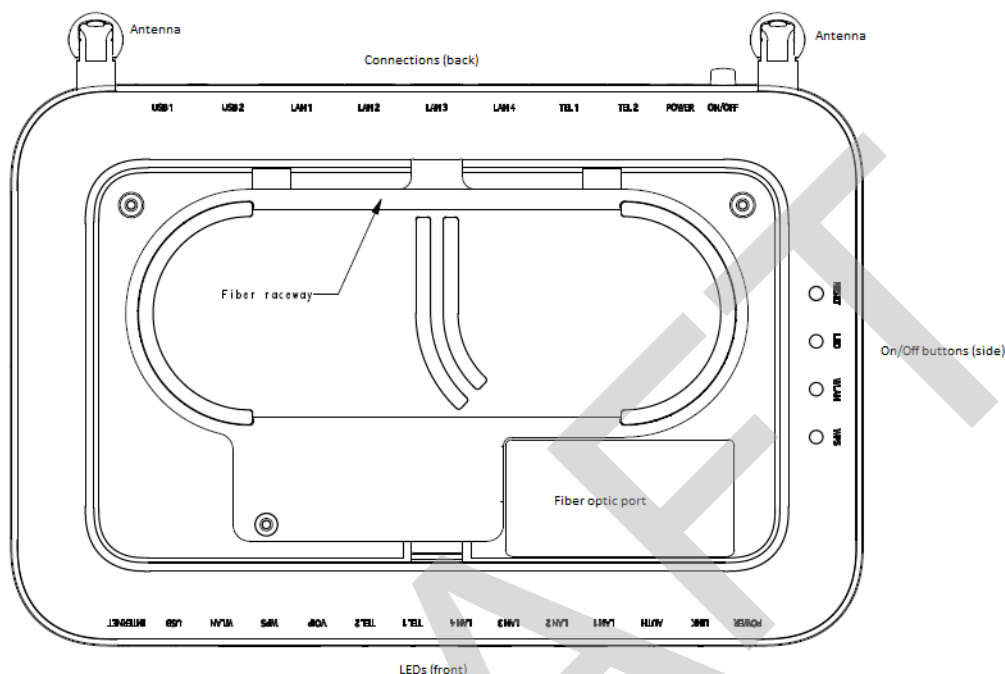**Figure 26** G-240W-F indoor ONT fiber optic port (bottom view)

**Danger** — Fiber cables transmit invisible laser light. To avoid eye damage or blindness, never look directly into fibers, connectors, or adapters.

- i Unplug the fiber optic cable with SC/APC connector from the fiber optic port on the bottom of the ONT; see Figure 26 for the location of the fiber optic port.
- ii Attach a fiber dust cover to the end of the SC/APC (SC/UPC) connector.

#### 6 Replace the ONT with a new unit:

- a On a flat surface, such as a desk, substitute the new ONT for the old ONT on a flat surface, horizontally resting on its four feet.
- b On a wall.
  - i Slide the old ONT off of the mounting screws until the ONT is free of the wall.
  - ii Slide the wall mount holes on the ONT enclosure over the mounting screws until it is securely seated.

#### 7 Connect the Ethernet cables directly to the RJ-45 ports; see Figure 25 for the location of the RJ-45 ports.

- 
- 8 Connect the POTS cables directly to the RJ-11 ports as per local practices; see Figure 25 for the location of the RJ-11 ports.

The RJ-11 port to the left is labeled 1 for Line 1 while the port on the right is labeled 2 for Line 2.

- 
- 9 If required, have approved service personnel who are trained to work with optic fiber clean the fiber optic connection. See the *7368 ISAM ONT Configuration, Management, and Troubleshooting Guide* for more information about fiber optic handling, inspection, and cleaning.

- 
- 10 Connect the fiber optic cable with SC/APC adapter into the SC/APC connector on the bottom of the ONT. Figure 26 shows the location of the SC/APC connector.



**Danger** — Fiber cables transmit invisible laser light. To avoid eye damage or blindness, never look directly into fibers, connectors, or adapters.



**Warning** — Be careful to maintain a bend radius of no less than 1.5 in. (3.8 cm) when connecting the fiber optic cable. Too small of a bend radius in the cable can result in damage to the optic fiber.



**Note** — Fiber cable preparation varies depending on the type and size of the inside or outside plant fiber cable being spliced to the SC/APC fiber optic pigtail cable.

- 
- 11 Install the power supply according to manufacturer specifications.



**Note** — Observe the following:

- Units must be powered by a Listed or CE approved and marked limited power source power supply with a minimum output rate of 12 V dc, 1.25 A.

- 
- 12 Connect the power cable to the power connector.

- 
- 13 Power up the unit by using the power switch.

- 
- 14 If used, enable the Wi-Fi service by pressing the WLAN button on the side of the ONT; see Figure 24 for the location of the WLAN button.

- 
- 15 If used, enable the WPS by pressing the WPS button on the side of the ONT; see Figure 24 for the location of the WPS button.



- 
- 16** If used, configure the SLID; see the *7368 ISAM ONT Configuration, Management, and Troubleshooting Guide* for more information.



**Note —** A new SLID or the old SLID may be used with the replacement ONT. If a new SLID is used, the new SLID must also be programmed at the P-OLT using TL1 or a network manager. If the old SLID is used, no changes need to be made at the P-OLT; see the operations and maintenance documentation for the OLT for more details.

- 
- 17** Verify the ONT LEDs, voltage status, and optical signal levels; see the *7368 Hardware and Cabling Installation Guide*.

- 
- 18** Activate and test the services; see the *7368 Hardware and Cabling Installation Guide*.

- 
- 19** If necessary, reset the ONT.

- i Locate the Reset button on the side of the G-240W-F indoor ONT as shown in Figure 24.
- ii Insert the end of a straightened paper clip or other narrow object into the hole in the Reset button to reset the ONT.

- 
- 20** STOP. This procedure is complete.

DRAFT

## 8 Configure a G-240W-F indoor ONT

### 8.1 General

### 8.2 HGU mode GUI configuration

### 8.3 SFU mode GUI configuration

### 8.4 Operator ID

## 8.1 General

Please refer to the configuration information provided with your OLT for the software configuration procedure for a G-240W-F ONT.

For HTTP configuration procedures, please refer to the *7368 ISAM ONT Configuration, Management, and Troubleshooting Guide*.

## 8.2 HGU mode GUI configuration

Use the procedures below to utilize the web-based GUI for the G-240W-F in HGU mode. This mode is preset at delivery.

A home gateway unit (HGU) is a home networking device, used as a gateway to connect devices in the home through fiber to the Internet. An HGU provides a variety of features for the home network including routing and firewall capability. By using the HGU, users can connect all smart equipment in their home, including personal computers, set-top boxes, mobile phones, and other consumer electronics devices, to the Internet.

### 8.2.1 Login

Use the procedure below to login to the web-based GUI for the G-240W-F.

#### Procedure 6 Login to web-based GUI

- 1 Open a web browser and enter the IP address of the ONT in the address bar.


The login window appears.

The default gateway IP address is `http://192.168.1.254`. You can connect to this IP address using your web browser after connecting your PC to one of Ethernet ports of the ONT. The static IP address of your PC must be in the same subnet as the ONT.

- 2 Enter your username and password in the Log in window, as shown in Figure 27.

The default user name is `userAdmin`. The default password is a random number, which is included in the ONT kit.

**Figure 27** Web login window

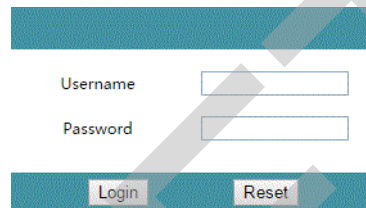A screenshot of the web login window. It features a teal header bar. Below the header, there are two input fields: 'Username' and 'Password'. At the bottom, there are two buttons: 'Login' and 'Reset'.

**Caution** — Pressing the Reset button for less than 10 seconds reboots the ONT; pressing the Reset button for 10 seconds resets the ONT to the factory defaults, except for the LOID and SLID.



**Note** — If you forget the current username and password, press the reset button for 10 s and the default values for the username and password will be recovered at startup.

- 3 Click Login.
- 4 STOP. This procedure is complete.

## 8.2.2 Device and connection status

G-240W-F ONTs support the retrieval of a variety of device and connection information, including:

- device information
- LAN status
- WAN status
- WAN status IPv6
- Home networking information

- Optics module status
- Voice information

Procedure 7    Device information retrieval

- 1    Select Status > Device Information from the top-level menu in the GPON Home Gateway window, as shown in Figure 28.

Figure 28    Device Information window

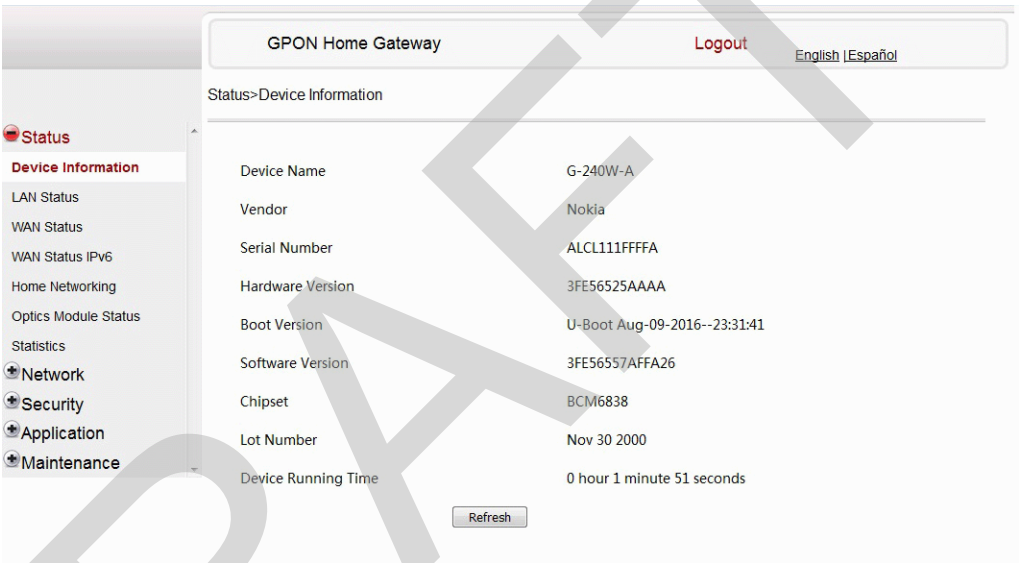


Table 16 describes the fields in the Device Information window.

Table 16    Device Information parameters

Field	Description
Device Name	Name on the ONT
Vendor	Name of the vendor
Serial Number	Serial number of the ONT
Hardware version	Hardware version of the ONT
Boot version	Boot version of the ONT
Software version	Software version of the ONT
Chipset	Chipset of the ONT
Lot Number	Production date of the ONT

(1 of 2)

Field	Description
Device Running Time	Amount of time the device has run since last reset in hours, minutes, and seconds

(2 of 2)

2 Click Refresh to update the displayed information.

3 STOP. This procedure is complete.

Procedure 8 LAN status retrieval

- 1 Select Status > LAN Status from the top-level menu in the GPON Home Gateway window, as shown in Figure 29.

Figure 29 LAN status window

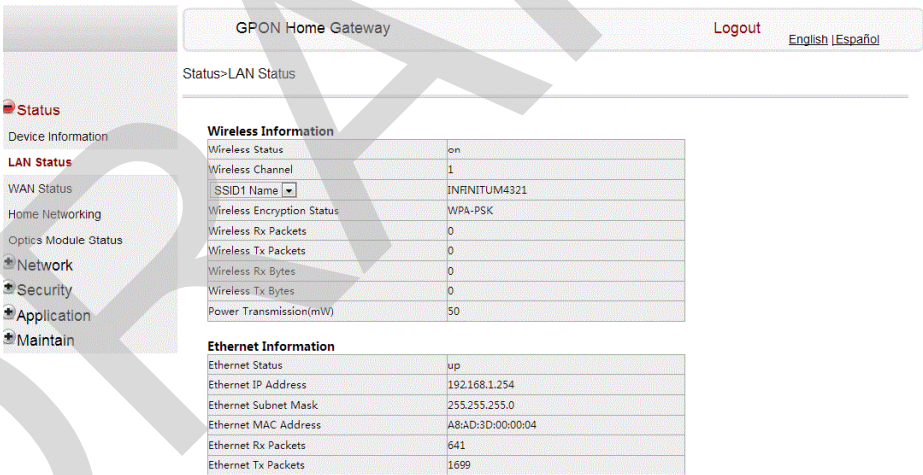


Table 17 describes the fields in the LAN status window.

Table 17 LAN status parameters

Field	Description
<b>Wireless Information</b>	
Wireless Status	Indicates whether the wireless is on or off
Wireless Channel	Wireless channel number

(1 of 2)

---

Field	Description
SSID Name	Name of each SSID
Wireless Encryption Status	Encryption type used on the wireless connection
Wireless Rx Packets	Number of packets received on the wireless connection
Wireless Tx Packets	Number of packets transmitted on the wireless connection
Wireless Rx Bytes	Number of bytes received on the wireless connection
Wireless Tx Bytes	Number of bytes transmitted on the wireless connection
Power Transmission (mW)	Power of the wireless transmission, in mW
<b>Ethernet Information</b>	
Ethernet Status	Indicates whether the Ethernet connection is on or off
Ethernet IP Address	IP address of the Ethernet connection
Ethernet Subnet Mask	Subnet Mask of the Ethernet connection
Ethernet MAC Address	MAC address of the Ethernet connection
Ethernet Rx Packets	Number of packets received on the Ethernet connection
Ethernet Tx Packets	Number of packets transmitted on the Ethernet connection
Ethernet Rx Bytes	Number of bytes received on the Ethernet connection
Ethernet Tx Bytes	Number of bytes transmitted on the Ethernet connection

(2 of 2)

---

**2** Click Refresh to update the displayed information.

---

**3** STOP. This procedure is complete.

---

Procedure 9 WAN status retrieval

- 1 Select Status > WAN Status from the top-level menu in the GPON Home Gateway window, as shown in Figure 30.

Figure 30 WAN status window

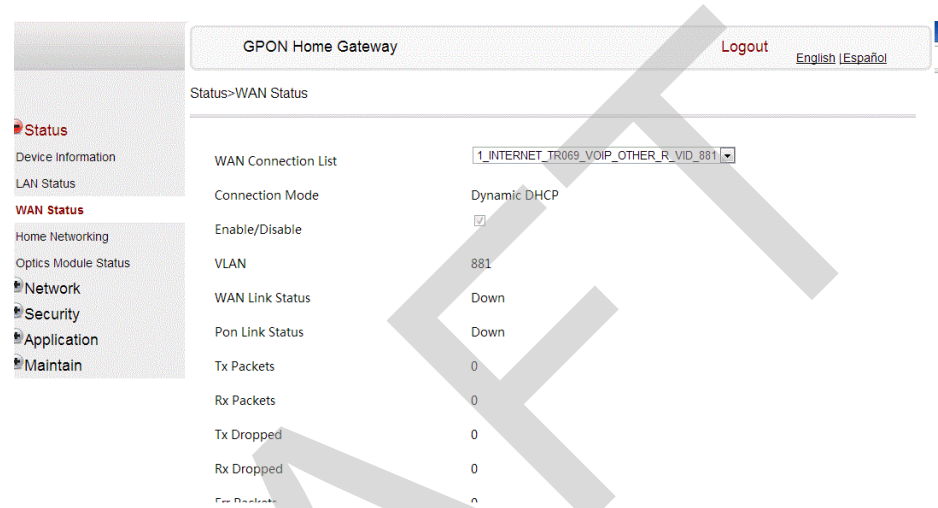


Table 18 describes the fields in the WAN status window.

Table 18 WAN status parameters

Field	Description
WAN connection list	Drop-down menu listing all WAN connections. The connection shown is the connection for which WAN status will be shown.
Connection Mode	Connection mode of the WAN connection
Enable/Disable	Select this checkbox to enable the WAN connection
VLAN	VLAN ID
WAN Link Status	Whether the WAN link is up or down
PPPoE Concentrator	Displays the PPPoE Access Concentrator (AC) name This field applies only if the Connection Mode is set to PPPoE
Pon Link Status	Whether the PON link is up or down
Tx Packets	Number of packets transmitted on the WAN connection
Rx Packets	Number of packets received on the WAN connection
Tx Dropped	Number of packets dropped on the transmit WAN connection
Rx Dropped	Number of packets dropped on the receive WAN connection

(1 of 2)



Field	Description
Err Packets	Number of errored packets on the WAN connection

(2 of 2)

- 2 Click Refresh to update the displayed information.
- 3 STOP. This procedure is complete.

Procedure 10 WAN status IPv6 retrieval

- 1 Select Status > WAN Status IPv6 from the top-level menu in the GPON Home Gateway window, as shown in Figure 31.

Figure 31 WAN status IPv6 window

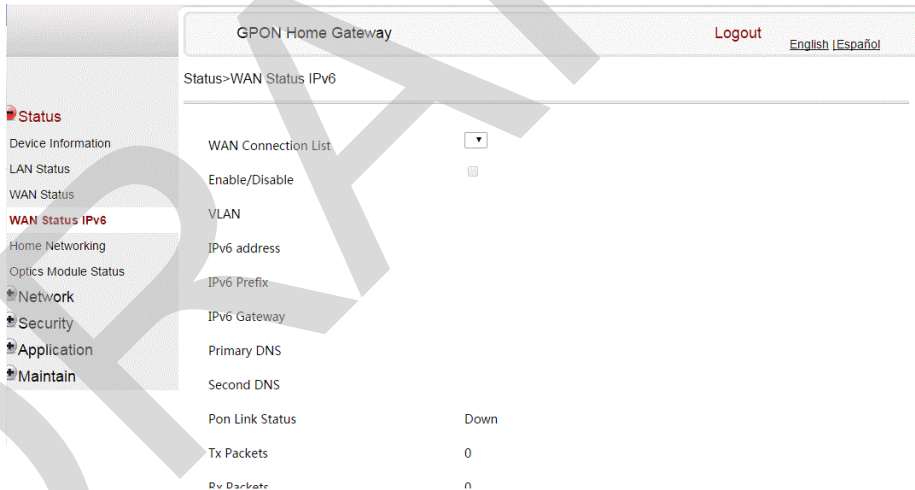


Table 19 describes the fields in the WAN status IPv6 window.

Table 19 WAN status IPv6 parameters

Field	Description
WAN connection list	Drop-down menu listing all WAN connections. The connection shown is the connection for which WAN status will be shown.
Enable/Disable	Select this checkbox to enable the WAN connection

(1 of 2)

Field	Description
VLAN	VLAN ID
IPv6 Address	IPv6 Address that identifies the device and its location
IPv6 Prefix	IPv6 prefix
IPv6 Gateway	IPv6 gateway address
Primary DNS	Primary Domain Name Server
Second DNS	Secondary Domain Name Server
Pon Link Status	Whether the PON link is up or down
Tx Packets	Number of packets transmitted on the WAN connection
Rx Packets	Number of packets received on the WAN connection
Tx Dropped	Number of packets dropped on the transmit WAN connection
Rx Dropped	Number of packets dropped on the receive WAN connection
Err Packets	Number of errored packets on the WAN connection

(2 of 2)

2 Click Refresh to update the displayed information.

3 STOP. This procedure is complete.

## Procedure 11 Home networking information retrieval

- 1 Select **Status > Home Networking** from the top-level menu in the GPON Home Gateway window, as shown in Figure 32.

**Figure 32 Home networking information window**

GPON Home Gateway Logout English (Español)

Status>Home Networking

**Local Interface**

Connection Type	Connectd Devices	Setting
Ethernet	1	
Wireless(2.4G)	0	<a href="#">setting</a>

**Wireless Settings(2.4G)**

Network Name	ALHN-5678	ALHN-5678-2	ALHN-5678-3	ALHN-5678-4
Access Point	ac9ce4aa0cf1	ac9ce4aa0cf2	ac9ce4aa0cf3	ac9ce4aa0cf4

**Local Devices**

Connection Type	Device Name Other	IPv4 Address	Hardware Address	IP Address Allocation	Delete
Ethernet	CV0035257N0	192.168.1.100	00:90:9e:9a:a0:e7	Static	<a href="#">Delete</a>

[Refresh](#)

Table 20 describes the fields in the Home networking window.

**Table 20** Home networking parameters

Field	Description
<b>Local Interface</b>	
Ethernet	Table displays the number of Ethernet connections and their settings
Wireless (2.4G)	Table displays the number of wireless connections and their settings
<b>Wireless Settings (2.4G)</b>	
Network Name	Name of the wireless network
Access Point	Hexadecimal address of the wireless access point
<b>Local Devices</b>	
Table entry	Each entry indicates the connection type, device name, IPv4 address, hardware address, and IP address allocation of each connected local device.

- 2 Click Delete to delete a particular local device connection.
- 3 Click Refresh to update the displayed information.
- 4 STOP. This procedure is complete.

**Procedure 12** Optics module status retrieval

- 1 Select Status > Optics Module Status from the top-level menu in the GPON Home Gateway window, as shown in Figure 33.

**Figure 33** Optics module status window

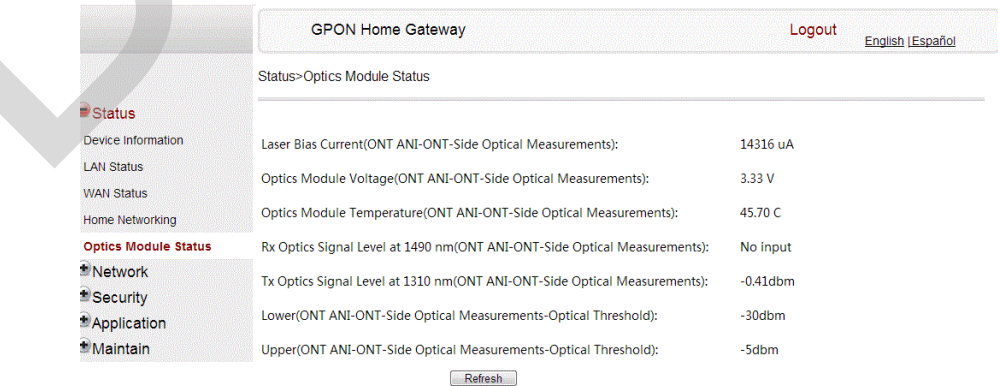


Table 21 describes the fields in the Optics module status window.

**Table 21      Optics module status parameters**

Field	Description
Laser Bias Current (ONT ANI-ONT-Side Optical Measurements)	Laser bias current, measured in uA
Optics Module Voltage (ONT ANI-ONT-Side Optical Measurements)	Optics module voltage, measured in V
Optics Module Temperature (ONT ANI-ONT-Side Optical Measurements)	Optics module temperature, measured in C
Rx Optics Signal Level at 1490 nm (ONT ANI-ONT-Side Optical Measurements)	Received optics signal level at 1490 nm, measured in dBm
Tx Optics Signal Level at 1310 nm (ONT ANI-ONT-Side Optical Measurements)	Transmitted optics signal level at 1310 nm, measured in dBm
Lower (ONT ANI-ONT-Side Optical Measurements-Optical Threshold)	Lower optical threshold, measured in dBm
Upper (ONT ANI-ONT-Side Optical Measurements-Optical Threshold)	Lower optical threshold, measured in dBm

2      Click Refresh to update the displayed information.

3      STOP. This procedure is complete.

Procedure 13    Voice information retrieval

- 1
- Select Status > Voice Information from the top-level menu in the GPON Home Gateway window, as shown in Figure 34.

Figure 34    Voice Information window

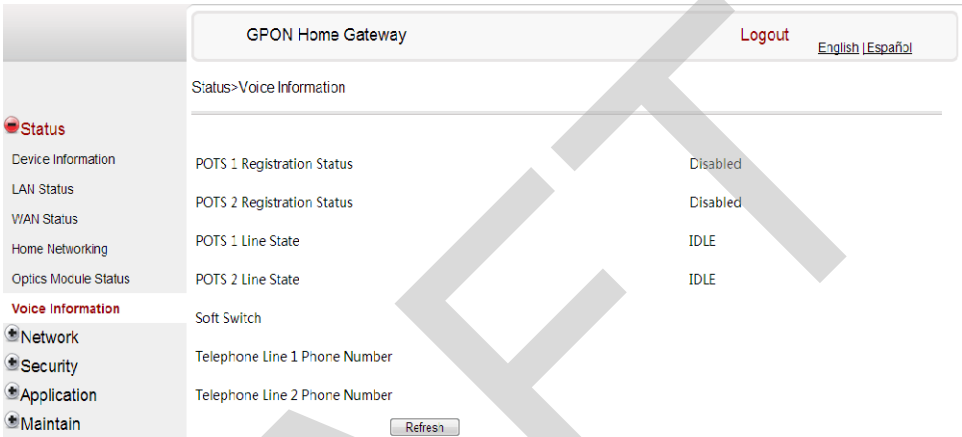


Table 22 describes the fields in the Voice Information window.

Table 22    Voice Information parameters

Field	Description
POTS 1 Registration Status	Status of POTS port 1: registered or unregistered
POTS 2 Registration Status	Status of POTS port 2: registered or unregistered
POTS 1 Line State	State of POTS line 1: IDLE, Off Hook, or On Hook
POTS 2 Line State	State of POTS line 2: IDLE, Off Hook, or On Hook
Softswitch <sup>(1)</sup>	Proxy IP address; blank if the line is not registered
Telephone line 1 phone number <sup>(1)</sup>	Phone number configured for telephone line 1
Telephone line 2 phone number <sup>(1)</sup>	Phone number configured for telephone line 2

Note  
<sup>(1)</sup> This field is only visible at the adminGPON level; it is not visible at the userAdmin level.

- 2
- Click Refresh to update the displayed information.
- 3
- STOP. This procedure is complete.

### 8.2.3 Network configuration

G-240W-F ONTs also support network configuration, including:

- LAN
- LAN IPv6
- WAN
- WiFi
- Wireless schedule
- Routing
- DNS
- TR-069
- GRE tunnel
- QoS
- US (upstream) classification

DRAFT

Procedure 14 LAN networking configuration

- 1 Select Network > LAN from the top-level menu in the GPON Home Gateway window, as shown in Figure 35.

Figure 35 LAN network window

GPON Home Gateway

Logout English | Español

Network > LAN

**Port Mode**  
All Ports to Bridge Mode ☐

Port1

Port2

Port3

Port4

Save

IPv4 Address

Subnet Mask

DHCP Enable ☒

DHCP Start IP Address

DHCP End IP Address

DHCP Lease Time  (2~129600 mins, or 0 means 1 day)

Primary DNS

Secondary DNS

Save

**Static DHCP Entry**

MAC Address

IPv4 Address

Add

MAC Address	IPv4 Address	Delete
-------------	--------------	--------

Table 23 describes the fields in the LAN network window.

Table 23 LAN network parameters

Field	Description
Port Mode: All Port to L2 Mode	Select this checkbox to set all ports to L2 mode
Port Mode: Port 1 - 4	Drop-down port mode for each port: Route mode or bridge mode
IPv4 Address	IP Address of the ONT
Subnet Mask	Subnet mask of the ONT

(1 of 2)

---

Field	Description
DHCP enable	Select this checkbox to enable DHCP
DHCP Start IP Address	Starting DHCP IP address
DHCP End IP Address	Ending DHCP IP address
DHCP Lease Time	DHCP lease time (in min)
Bind MAC Address	MAC address to associate to the LAN
Bind IP Address	IP address to associate to the bound MAC address

(2 of 2)

- 
- 2 Select the mode for each port.
  - 3 Click Save.
  - 4 Enter the DHCP configuration information.
  - 5 Click Save.
  - 6 Bind a MAC address to the LAN by entering the MAC and IP addresses and then clicking Add. Repeat for all MAC addresses to be bound.
  - 7 STOP. This procedure is complete.
-



Procedure 15 LAN IPv6 networking configuration

- 1
- Select Network > LAN\_IPv6 from the top-level menu in the GPON Home Gateway window, as shown in Figure 36.

Figure 36 LAN IPv6 network window

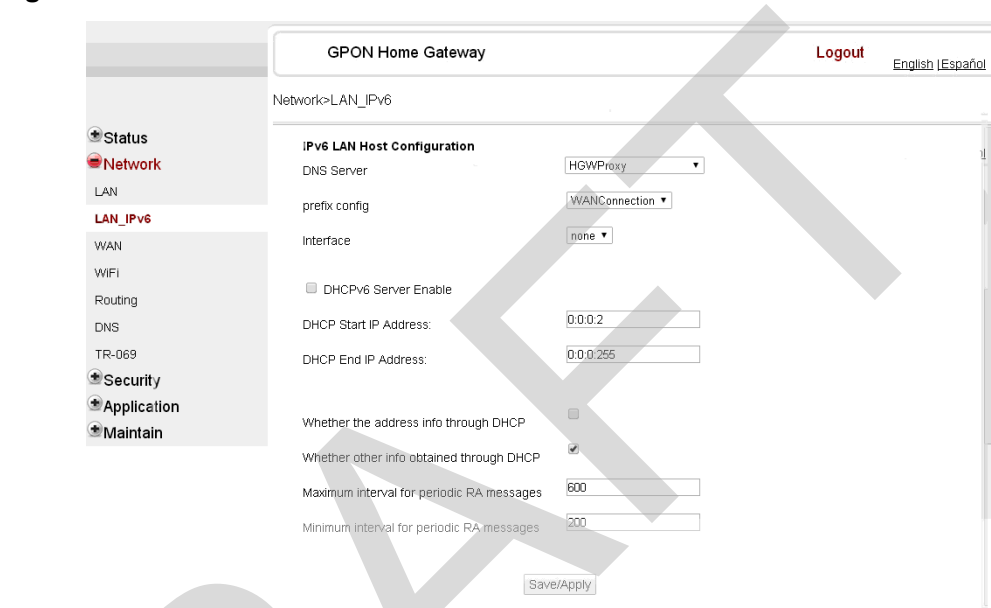


Table 24 describes the fields in the LAN IPv6 network window.

Table 24 LAN IPv6 network parameters

Field	Description
DNS Server	Choose a DNS server from the drop-down menu.
prefix config	Choose a prefix config option from the drop-down menu, either WANConnection (prefix will be obtained from the WAN) or Static (enables you to enter the prefix).
prefix	This field appears if you selected the “Static” option for the “prefix config” field. Type a connection.
Interface	This field appears if you selected the Wan Connection option for the “prefix config” field. Choose a WAN connection interface from the drop-down menu.
DHCPv6 Server Enable	Select this checkbox to enable DHCP IPv6 server.
DHCP Start IP Address	Enter the starting DHCP IP address.
DHCP End IP Address	Enter the ending DHCP IP address.
Whether the address info through DCHP	Select this checkbox to enable address information retrieval through DHCP.

(1 of 2)

Field	Description
Whether other info obtained through DHCP	Select this checkbox to enable retrieval of other information through DHCP.
Maximum interval for periodic RA messages	Enter the maximum interval (in seconds) for periodic Router Advertisement messages. The interval range is from 4 to 1800.
Minimum interval for periodic RA messages	Enter the minimum interval (in seconds) for periodic Router Advertisement messages. The interval range is from 4 to 1800.

(2 of 2)

- 2 Choose a DNS server, prefix config, and interface.
- 3 Select or enter the DHCP configuration information.
- 4 Enter the maximum and minimum intervals for RA messages.
- 5 Click Save/Apply.
- 6 STOP. This procedure is complete.

## Procedure 16 WAN networking configuration

- 1 Select Network > WAN from the top-level menu in the GPON Home Gateway window, as shown in Figure 37.

**Figure 37 WAN network window**

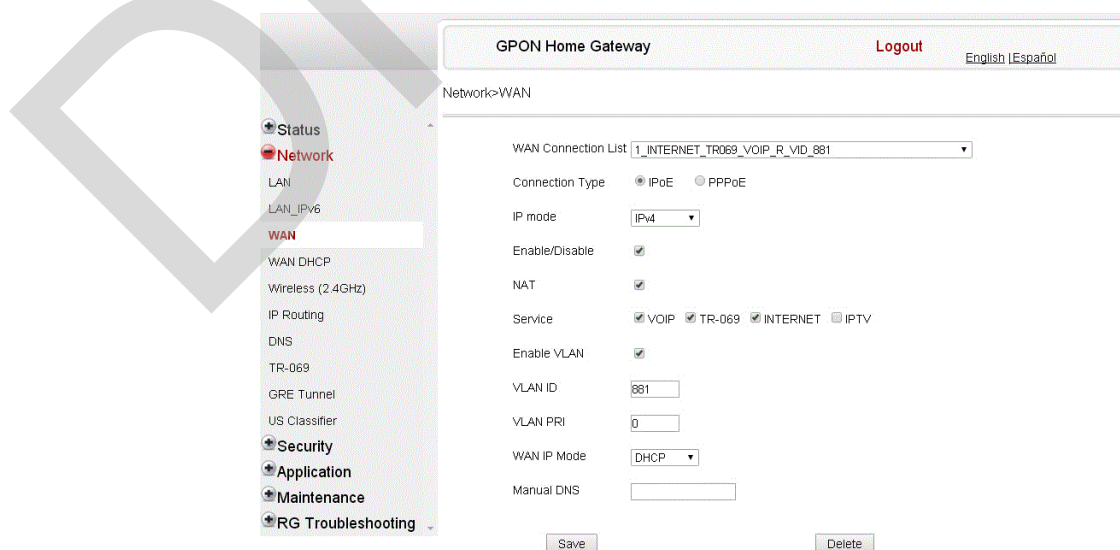


Table 25 describes the fields in the WAN network window.

**Table 25 WAN network parameters**

Field	Description
WAN Connection List	Choose a WAN connection from the drop-down menu to set the connection parameters
Connection Type	Select a connection type: IPoE or PPPoE
IP Mode	Choose an IP mode from the drop-down menu: IPv4 or IPv6
Enable/Disable	Select this checkbox to enable the WAN connection
NAT	Select this checkbox to enable NAT
Service	Select the checkboxes to enable service types for this connection
Enable VLAN	Select this checkbox to enable VLAN
VLAN ID	Enter the VLAN ID
VLAN PRI	Enter the VLAN PRI
WAN IP Mode	Choose an IP mode from the drop-down menu
Connection Trigger	Choose a connection type from the drop-down menu
Username	Enter the username
Password	Enter the password
Keep Alive Time	Enter the Keep Alive Time (from 5 to 60 seconds)

---

**2** Configure a specific WAN connection.

---

**3** Click Save.

---

**4** STOP. This procedure is complete.

---

Procedure 17    WiFi networking configuration

- 1    Select Network > WiFi from the top-level menu in the GPON Home Gateway window, as shown in Figure 38.

Figure 38    WiFi network window

Table 26 describes the fields in the WiFi network window.

Table 26    WiFi network parameters

Field	Description
Enable	Select this checkbox to enable WiFi
Mode	Choose a wi-fi mode from the drop-down menu: <ul style="list-style-type: none"><li>• auto (b/g/n)</li><li>• b</li><li>• g</li><li>• n</li><li>• b/g</li></ul>

(1 of 2)

Field	Description
Bandwidth	Choose a channel from the drop-down menu or choose Auto to have the channel automatically assigned
Channel	Choose a bandwidth option from the drop-down menu
Transmitting Power	Choose the percentage transmitting power from the drop-down menu
SSID Select	Choose the SSID from the drop-down menu
SSID Name	Enter the SSID name
Enable SSID	Enable or disable SSID from this drop-down menu
SSID Broadcast	Enable or disable SSID broadcast from this drop-down menu
Port Mode	Choose a port mode from the drop-down menu: <ul style="list-style-type: none"> <li>• Route</li> <li>• Bridge</li> </ul>
Encrypt Mode	Choose an encryption mode from the drop-down menu: <ul style="list-style-type: none"> <li>• OPEN</li> <li>• WEP</li> <li>• WPA/WPA2 Personal</li> <li>• WPA/WPA2 Enterprise <sup>(1)(2)</sup></li> </ul>
WPA Version	Choose a WPA version from the drop-down menu: <ul style="list-style-type: none"> <li>• WPA1</li> <li>• WPA2</li> <li>• WPA1/WPA2</li> </ul>
WPA Encryption Mode	Choose a WPA encryption mode from the drop-down menu: <ul style="list-style-type: none"> <li>• TKIP</li> <li>• AES</li> <li>• TKIP/AES</li> </ul>
WPA Key	Enter the WPA key
Enable WPS	Enable or disable WPS from this drop-down menu
WPS Mode	Choose a WPS mode from the drop-down menu: <ul style="list-style-type: none"> <li>• PBC</li> <li>• PIN</li> </ul>
PIN Code Number	Enter the WPS PIN

**(2 of 2)****Notes**

- (1) When Encryption Mode is set to "WPA/WPA2 Enterprise", the following options are no longer available: WPA version, WPA encryption mode, WPA key, Enable WPS, WPS mode.
- (2) When Encryption Mode is set to "WPA/WPA2 Enterprise", the following options become available: Primary RADIUS server, port and password; Secondary RADIUS server, port, and password; RADIUS accounting port.

---

**2** Configure the WiFi connection.

---


**3** If you have enabled and configured WPS, click WPS connect.

- 4 Click Save.
- 5 STOP. This procedure is complete.

## Procedure 18 Wireless scheduling

- 1 Select Network > Wireless Schedule from the top-level menu in the GPON Gateway window, as shown in Figure 39.

**Figure 39 Wireless Schedule window**

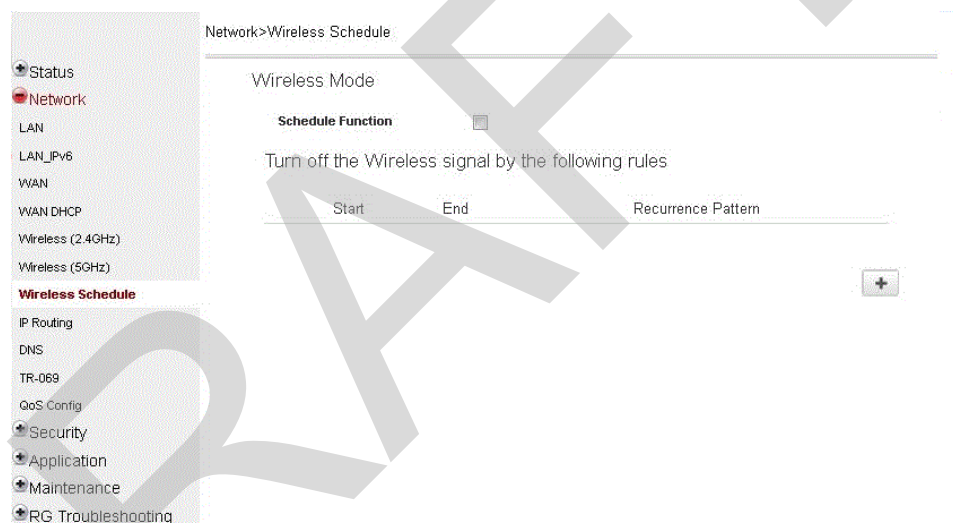

- 2 Select the Schedule Function checkbox to turn the wireless signal off for the configured period.
- 3 Click the plus sign (+) to add a scheduling rule.  
A separate panel displays for configuring wireless schedule rules.
- 4 Enter a start time and end time for the period in which you want the wireless signal off.
- 5 Choose Everyday or Individual Days from the drop-down menu.
- 6 If you chose Individual Days, select the checkboxes for the desired days.

The Recurrence Pattern shows the rules created to date.

- 7 If desired, click the plus sign (+) to add more rules.
- 8 Click Save Changes.
- 9 STOP. This procedure is complete.

## Procedure 19 Routing configuration

- 1 Select Network > Routing from the top-level menu in the GPON Home Gateway window, as shown in Figure 40.

**Figure 40**      **Routing network window**

GPON Home Gateway
Logout
[English](#) / [Español](#)

---

- Status
- Network**
- LAN
- LAN\_IPv6
- WAN
- WAN DHCP
- Wireless (2.4GHz)
- Wireless (5GHz)
- Wireless Schedule
- IP Routing**
- DNS
- GRE Tunnel
- US Classifier
- QoS Config
- Security
- Application
- Maintenance

### Network > IP Routing

Enable Routing ☒

Destination IP Address

Destination Netmask

Gateway

IPv4 Interface  ▼

Forwarding Policy  ▼ Help

ID	Source MAC	Source MAC Exclude	Protocol	Protocol Exclude	Source Port	Source Max	SExclude	Dest Port	Dest Max	DExclude	Source IP	Source IP Mask	SExclude	D	U
<div style="display: flex; justify-content: space-between; width: 100%;"> <span>&lt;</span> <span>Add</span> <span>&gt;</span> </div>															

#### IP Routing Table

Destination IP Address	Destination Netmask	Gateway	Interface	Forwarding Policy	Enable	Delete
135.251.207.92	255.255.255.255	0.0.0.0	1_VOIP_TR069_INTERNET_OTHER_R_VID_881	1	TRUE	<a href="#">Delete</a>

Table 27 describes the fields in the Routing network window.

**Table 27**      **Routing network parameters**

Field	Description
Enable Routing	Select this checkbox to enable routing
Destination IP Address	Enter the destination IP address
Destination Netmask	Enter the destination network mask
Gateway	Enter the gateway address
IPv4 Interface	Choose a WAN connection previously created in the WAN network window from the drop-down menu
Forwarding Policy	Choose a forwarding policy from the drop-down menu

---

**2**    Enter the routing information.

---

**3**    Click Add.

---

**4**    STOP. This procedure is complete.

---



Procedure 20    DNS configuration

- 1
- Select Network > DNS from the top-level menu in the Home Gateway window, as shown in Figure 41.

Figure 41    DNS network window

Status

Network

LAN

LAN\_IPv6

WAN

WAN\_DHCP

Wireless\_2.4GHz

Wireless\_5GHz

Wireless\_Schedule

IP\_Routing

DNS

TR-069

QoS\_Config

Security

Application

Maintenance

RG\_Troubleshooting

GPON Home Gateway

Logout

English |

Network>DNS

Enable DNS

☒ Enabled

Save

Domain Name

IPv4 Address

Add

Origin Domain

New Domain

Add

Domain Name	New Domain	IPv4 Address	Delete	Origin Domain	New Domain	Delete
dslddevice.lan	dslddevice.lan	192.168.1.254	Delete	dslddevice.lan	dslddevice.lan	Delete

Refresh

Table 28 describes the fields in the DNS network window.

Table 28    DNS network parameters

Field	Description
Enable DNS	Select the Enabled checkbox to enable DNS proxy
Domain Name	Enter the domain name
IPv4 Address	Enter the IPv4 address
OriginalDomain	Enter the original domain name
New Domain	Enter the new domain name

- 2
- Select the Enabled checkbox and click Save to enable DNS proxy.
- 3
- Enter the domain name and IPv4 address and click Add.

- 4

If required, associate an original domain with a new domain, click Add.
- 5

STOP. This procedure is complete.

Procedure 21 TR-069 configuration

- 1

Select Network > TR-069 from the top-level menu in the GPON Home Gateway window, as shown in Figure 42.

Figure 42 TR-069 network window

The screenshot shows the 'GPON Home Gateway' web interface. At the top, there's a header with 'GPON Home Gateway', a 'Logout' link, and a language selector 'English | Español'. A sidebar menu on the left lists various configuration categories: Status, Network (highlighted in red), LAN, WAN, WiFi, Routing, DNS, TR-069 (highlighted in red), Security, Application, and Maintain. The main content area is titled 'Network>TR-069'. It contains several configuration fields: 'Periodic Inform Enable' with a checked checkbox, 'Periodic Inform Interval(s)' with a text box containing '5', 'URL' with a text box containing 'https://acsgpon.alu.net', 'Username' with a text box containing 'AdminGPON', 'Password' with a masked text box (four dots), 'Connect Request Username' with a text box containing 'itms', and 'Connect Request Password' with a masked text box (four dots). At the bottom right of the form area, there are 'Save' and 'Refresh' buttons.

Table 29 describes the fields in the TR-069 network window.

Table 29 TR-069 network parameters

Field	Description
Periodic Inform Enable	Select this checkbox to enable periodic inform updates
Periodic Inform Interval(s)	Time between periodic inform updates, in seconds
URL	URL of the auto-configuration server
Username	Username used to log in to the ONT
Password	Password used to log in to the ONT
Connect Request Username	Username used to log in to the auto-configuration server
Connect Request Password	Password used to log in to the auto-configuration server

- 2

Configure TR-069 by entering the required information.

- 3 Click Save.
- 4 STOP. This procedure is complete.

Procedure 22 GRE Tunnel configuration

- 1 Select Network > GRE Tunnel from the top-level menu in the GPON Home Gateway window, as shown in Figure 43.

Figure 43 GRE Tunnel window

GPON Home Gateway

Logout

English (Español)

Network>GRE Tunnel

Status

Network

LAN

LAN\_IPv6

WAN

WAN\_DHCP

Wireless (2.4GHz)

Wireless (5GHz)

IP Routing

DNS

TR-069

GRE Tunnel

US Classifier

Security

Application

Maintenance

Tunnel Name

1\_GRE\_TUNNEL

WAN Interface

1\_INTERNET\_TR069\_VOIP\_R\_VID\_881

Primary Remote End

192.168.5.140

Secondary Remote End

Connected Remote End

Fallover mechanism

☒

Traffic timeout to start pings

10

(2 to 1024)

No. of retries before unreachable

3

(0 to 100 sec)

Save

Delete

Table 30 describes the fields in the GRE Tunnel window.

Table 30 GRE Tunnel parameters

Field	Description
Tunnel Name	Select Create new GRE Tunnel, or select an existing tunnel from the drop-down menu. The tunnel name is automatically assigned by the system. Up to 3 GRE tunnels are supported.
WAN Interface	Select a WAN interface from the drop-down menu. GRE tunnels can only be created on HSI-enabled WAN interfaces.

(1 of 2)

Field	Description
Primary Remote End Secondary Remote End (optional)	Enter an IP address or FQDN that is unique in the system. If the primary remote endpoint is down or unreachable, the secondary remote endpoint becomes active, if configured. The secondary remote endpoint remains active until it becomes unreachable, in which case the primary remote endpoint becomes active again. Revertive mode is not supported. If both endpoints are unreachable, the GRE tunnel is declared down.
Connected Remote End	This field displays the current data traffic path for the GRE tunnel.
Failover mechanism	This feature is automatically selected by the system.
Traffic timeout to start pings	Enter the traffic timeout in seconds (0 to 100).
No. of retries before unreachable	Enter the number of retries before the tunnel is declared down (2 to 1024).

(2 of 2)

**2** Configure the GRE tunnel by entering or selecting the required information.

**3** Click Save.

**4** STOP. This procedure is complete.

## Procedure 23 QoS configuration

**1** Select Network > QoS Config from the top-level menu in the Home Gateway window.

Figure 44 shows the window for configuring QoS L2 (Layer 2 packet sizes).

Figure 44 QoS Config window (L2)

Status

Network

LAN

LAN\_IPv6

WAN

WAN\_DHCP

Wireless\_2.4GHz

Wireless\_5GHz

Wireless\_Schedule

IP\_Routing

DNS

GRE\_Tunnel

US\_Classifier

QoS\_Config

Security

Application

Maintenance

GPON Home Gateway

Logout

English (Español)

Network-QoS Config

QoS Setting

ID	Source MAC	Source MAC Exclude	Protocol	Protocol Exclude	Source Port	Source Max	SExclude	Dest Port	Dest Max	DExclud
0		0	None	0	-1	-1	0	-1	-1	0
1		0	None	0	-1	-1	0	-1	-1	0
2		0	None	0	-1	-1	0	-1	-1	0
3		0	None	0	-1	-1	0	-1	-1	0
4		0	None	0	-1	-1	0	-1	-1	0
5		0	None	0	-1	-1	0	-1	-1	0
6		0	None	0	-1	-1	0	-1	-1	0

Type

L2 QoS

Classification Criteria

Source MAC

Exclude

Interface

select an option

Classification Result

802.1p Remark

Range:0~7

DSCP Remark

Range:0~63

Forwarding Policy

Range:1~7

Add

Figure 45 shows the window for configuring QoS L3 (Layer 3 packet sizes).

Figure 45 QoS Config window (L3)

Status

Network

LAN

LAN\_IPv6

WAN

WAN\_DHCP

Wireless\_2.4GHz

Wireless\_5GHz

Wireless\_Schedule

IP\_Routing

DNS

GRE\_Tunnel

US\_Classifier

QoS Config

Security

Application

Maintenance

GPON Home Gateway

Logout

English (Español)

Network>QoS Config

QoS Setting

ID	Source MAC	Source MAC Exclude	Protocol	Protocol Exclude	Source Port	Source Port Max	SExclude	Dest Port	Dest Port Max	DExclud
0	0	0	None	0	-1	-1	0	-1	-1	0
1	0	0	None	0	-1	-1	0	-1	-1	0
2	0	0	None	0	-1	-1	0	-1	-1	0
3	0	0	None	0	-1	-1	0	-1	-1	0
4	0	0	None	0	-1	-1	0	-1	-1	0
5	0	0	None	0	-1	-1	0	-1	-1	0
6	0	0	None	0	-1	-1	0	-1	-1	0

<

>

Type

L3 QoS

Classification Criteria

Protocol

None

Exclude

Application

Customer setting

Source Ip

Source Ip Mask

Exclude

Dest Ip

Dest Ip Mask

Exclude

Source Port

Source Port Max

Exclude

Dest Port

Dest Port Max

Exclude

DSCP

802.1p

(Range:0~63)

(Range:0~7)

Interface

-- select an option

Classification Result

802.1p Remark

(Range:0~7)

DSCP Remark

(Range:0~63)

Forwarding Policy

(Range:1~7)

Add

Table 31 describes the fields in the QoS Config window.

**Table 31 QoS Config parameters**

Field	Description
Type	Choose a QoS service layer type from the drop-down menu L2 or L3.
Source MAC	Enter the source MAC. Select the Exclude checkbox to exclude the source MAC
Interface	Choose an interface from the drop-down menu
802.1p Mark	Enter the value for the 802.1p (range: 0-7)
DSCP Mark	Enter the value for the DSCP mark (range: 0-63)
Forwarding Policy	Enter the number for the forwarding policy (range: 1-7)
Additional fields for L3	
Protocol	Choose a protocol from the drop-down menu, or select the Exclude checkbox
Application	Choose an application from the drop-down menu
Source IP and Source IP Mask	Enter the values for the source IP and IP mask, or select the Exclude checkbox
Destination IP and Destination IP Mask	Enter the values for the destination IP and IP mask, or select the Exclude checkbox
Source Port and Source Port Max	Enter the values for the source port and port max (highest port number) or select the Exclude checkbox
Destination Port and Destination Port Max	Enter the values for the destination port and port max (highest port number), or select the Exclude checkbox

---

**2** Choose a QoS type from the drop-down menu: L2 or L3.

---

**3** Configure a QoS policy.

---

**4** Click Add to add a QoS policy.

---

**5** STOP. This procedure is complete.

---

## Procedure 24 Upstream (US) Classifier configuration

The US Classifier feature is used to create policies, classifiers, and classifier rules for upstream traffic handling. This feature is available to admin users (super users) only.

A policy defines an action to be performed on a set of LAN or WAN packets. A policy can be created at any time and then subsequently assigned to one or more classifiers.

A classifier is used to select key fields for which the classifier rules will be written. A classifier can be created at any time and then subsequently assigned to one or more classifier rules.

A classifier rule is used to assign actions to a group of packets based on a set of parameters. A classification rule must be created against a pre-defined classifier.

Up to 16 policies can be created, with up to 8 classifiers and 32 classifier rules.

- 1 Select Network > US Classifier from the top-level menu in the GPON Home Gateway window, and select the Policy tab, as shown in Figure 46.

All classifier policies are displayed in the policy table in the window.

**Figure 46 US Classifier Policy window**

The screenshot shows the 'US Classifier Policy' window. On the left is a sidebar with navigation links: Status, Network (selected), LAN, LAN\_IPV6, WAN, WAN\_DHCP, Wireless (2.4GHz), Wireless (5GHz), IP\_Routing, DNS, TR-069, GRE Tunnel, and US Classifier. The main area is titled 'GPON Home Gateway' with 'Logout' and 'English | Español' links. Below the title is 'Network > US Classifier'. The 'Policy' tab is active. Configuration fields include: Tunnel Type (GRE), Tunnel Interface (1\_GRE\_TUNNEL), VLAN Id (0 - 4093), VLAN Tag (8100 (hex)), VLAN Priority (0 - 7), IP TOS / DSCP (0 - 63), and a Drop checkbox. 'Save' and 'Reset' buttons are present. A table at the bottom lists the policy:

Name	Tunnel Type	Tunnel Interface	VLAN Id	VLAN Tag	VLAN Priority	IP TOS/DSCP	Drop	No. of Rules	Delete
1_POLICY	GRE	1_GRE_TUNNEL	10	8100	1	0	No	0	Delete

Table 32 describes the fields in the US Classifier Policy window.

**Table 32 US Classifier Policy parameters**

Field	Description
Tunnel Type	The tunnel type is set to GRE and cannot be modified.
Tunnel Interface	Select a tunnel interface from the drop-down menu: No Tunnel, GRE Tunnel, or LAN traffic.
VLAN ID	Enter a VLAN ID (0-4094).
VLAN Tag	This field is not configurable. The VLAN tag is set to 8100.
VLAN Priority	Enter a VLAN priority level (0 to 7). A lower number indicates a higher priority.
IP TOS/DSCP	This field is not configurable. All tunnel packets are generated with a default DSCP value (usually 0).

- 2 Select a tunnel interface.
- 3 Enter a VLAN ID and priority level.



- 4

Click Save.
- 5

To delete a policy, click the Delete option for the applicable policy in the policy table.

A policy can only be deleted if it is not associated with any classifier rules.
- 6

Select Network > US Classifier from the top-level menu in the GPON Home Gateway window, and select the Classifier tab, as shown in Figure 47.

All classifiers are displayed in the classifier table in the window.

Figure 47 US Classifier window

GPON Home Gateway

Logout

English | Español

Network>US Classifier

[+] Policy

[-] Classifier

Interface

Source MAC

Source IP

Source Port

Protocol

Priority

NONE

☐

☐

☐

☐

2

☐

☐

☐

Save

Reset

Name	Interface	Source MAC	Destination MAC	Source IP	Destination IP	Source Port	Destination Port	Protocol	Priority	No. of Rules	Delete
1_CLASSIFIER	WiFi 2.4GHz	No	No	No	No	No	No	No	1	0	Delete

Table 33 describes the fields in the US Classifier window.

Table 33 US Classifier parameters

Field	Description
Interface	Select an interface from the drop-down menu, for example: None, LAN, 2.4G SSID, 5G SSID.
Source MAC	Click to enter a source MAC.
Destination MAC	Click to enter a destination MAC.
Source IP	Click to enter a source IP.
Destination IP	Click to enter a destination IP.
Source Port	Click to enter a source port.
Destination Port	Click to enter a destination port.
Protocol	Click to enter a protocol.

(1 of 2)

Field	Description
Priority	Select a priority level from 1 to 8. The lower the number, the higher the priority. No more than 1 classifier can be created with the same priority.

(2 of 2)

## 7 Configure the US classifier.

At least one field must be selected to create a classifier. A maximum of four fields may be selected to create a classifier; this includes the interface field.

## 8 Click Save.

## 9 To delete a classifier, click the Delete option for the applicable classifier in the classifier table. A classifier can only be deleted if it is not associated with any classifier rules.

## 10 Select the Classifier Rules tab, as shown in Figure 48.

All classifier rules are displayed in the classifier rules table in the window.

**Figure 48 US Classifier Rules window**

The screenshot shows the 'US Classifier Rules' configuration window. On the left is a sidebar with navigation links: Status, Network (selected), LAN, LAN\_IPV6, WAN, WAN\_DHCP, Wireless (2.4GHz), Wireless (5GHz), IP Routing, DNS, TR-069, GRE Tunnel, US Classifier (highlighted), Security, and Application. The main area has a header 'GPON Home Gateway' with 'Logout' and 'English | Español' links. Below the header is 'Network > US Classifier'. The configuration section includes a 'Classifier' dropdown set to '1\_CLASSIFIER' and a 'Policy' dropdown set to '1\_POLICY'. Below these are input fields for Interface (SSID1), Source MAC, Destination MAC, Source IP, Destination IP, Source Port, Destination Port, and IP Protocol Type (0 - 254). 'Save' and 'Reset' buttons are at the bottom. A table at the bottom lists existing rules:

Name	Interface	Source MAC	Destination MAC	Source IP	Destination IP	Source Port	Destination Port	IP Protocol	Policy	Classifier	Delete
1_CLASSIFICATION	SSID1			0.0.0.0	0.0.0.0	-	-	-	1_POLICY	1_CLASSIFIER	Delete

Table 34 describes the fields in the US Classifier Rules window.

**Table 34 US Classifier Rules parameters**

Field	Description
Policy	Select a policy from the drop-down menu.
Classifier	Select a classifier from the drop-down menu.

(1 of 2)

Field	Description
Interface	Select an interface from the drop-down menu, for example: None, LAN, 2.4G SSID, 5G SSID.
Source MAC	Enter a source MAC.
Destination MAC	Enter a destination MAC.
Source IP	Enter a source IP.
Destination IP	Enter a destination IP.
Source Port	Enter a source port.
Destination Port	Enter a destination port.
IP Protocol type	Enter a value between 0 and 254.

(2 of 2)

**11** Configure the classifier rule.

**12** Click Save.

**13** To delete a classifier rule, click the Delete option for the applicable classifier rule in the classifier rules table.

**14** STOP. This procedure is complete.

## 8.2.4 Security configuration


G-240W-F ONT also supports security configuration, including:

- firewall
- MAC filter
- IP filter
- URL filter
- parental control
- DMZ and ALG
- access control

Procedure 25 Firewall configuration

- 1 Select Security > Firewall from the top-level menu in the GPON Home Gateway window, as shown in Figure 49.

Figure 49 Firewall window

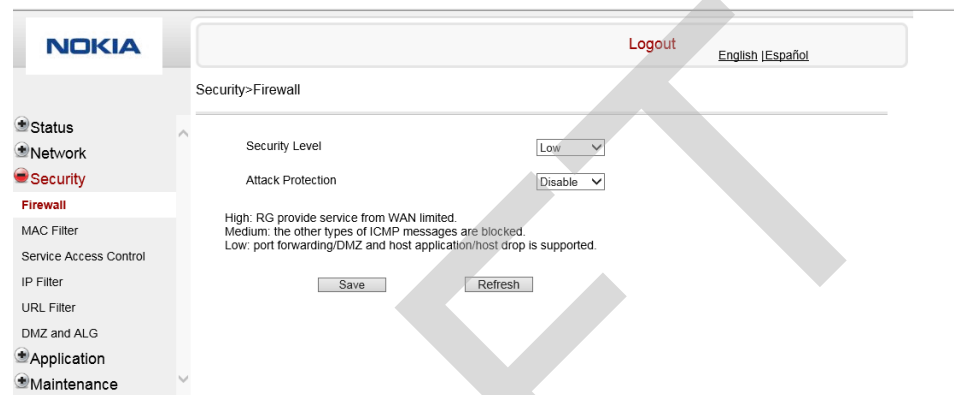

Firewall security applies only to services provided by the ONT. Internet access from the LAN side is not affected by this firewall.

Three security levels are available: Low, Medium, and High.

At the Low level, pre-routing is supported: port forwarding, DMZ, host application, and host drop. Also supported are application services: DDNS, DHCP, DNS, H248, IGMP, NTP client, SSH, Telnet, TFTP, TR-069, and VoIP.

At the Medium level, pre-routing is supported: port forwarding, DMZ, host application, and host drop. Also supported are application services: DDNS, DHCP, DNS, H248, IGMP, NTP client, TFTP, TR-069, and VoIP. The following types of ICMP messages are permitted: echo request and reply, destination unreachable, and TTL exceeded. Other types of ICMP messages are blocked. DNS proxy is supported from LAN to WAN but not from WAN to LAN.

At the High level, pre-routing and application services are not supported. UDP Port 8000 can be used to access the services, for example FTP can use 8021 and Telnet can use 8023. Regular UDP cannot be used. RG access is permitted via the LAN side but not via the WAN side.

Table 35 describes the fields in the firewall window.

Table 35 Firewall parameters

Field	Description
Security level	Choose the security level from the drop-down menu: low, medium, or high

(1 of 2)

Field	Description
Attack Protect (Protection against DoS or DDoS attacks)	Choose enable or disable attack protect from the drop-down menu The default is disable

(2 of 2)

- 2
- Configure the firewall.
- 3
- Click Save.
- 4
- STOP. This procedure is complete.

Procedure 26    **MAC filter configuration**

- 1
- Select Security > Mac Filter from the top-level menu in the GPON Home Gateway window, as shown in Figure 50.

**Figure 50    MAC filter window**

Table 36 describes the fields in the MAC filter window.

**Table 36    MAC filter parameters**

Field	Description
Enable MAC filter	Select this checkbox to enable the MAC filter
Mac Address	Select a MAC address from the drop-down menu or enter the address in the text field
Mac Filter Mode	Choose the MAC filter mode from this drop-down menu: Blocked or Allowed

- 2

Click Refresh to update the information.
- 3

Configure a MAC filter.
- 4

Click Add.
- 5

STOP. This procedure is complete.

Procedure 27 IP filter configuration

- 1

Select Security > IP filter from the top-level menu in the GPON Home Gateway window, as shown in Figure 51.

Figure 51 IP filter window

GPON Home Gateway

Logout

English | Español

Security>IP Filter

Enable IP Filter

☐

Mode

Drop for upstream

Internal Client

Customer setting

Local IP Address

Source Subnet Mask

Remote IP Address

Destination Subnet Mask

Protocol

ALL

Mode	Internal Client	Protocol	Local IP Address	Source Subnet Mask	Remote IP Address	Destination Subnet Mask	Wan Port Range	Lan Port Range	Delete
------	-----------------	----------	------------------	--------------------	-------------------	-------------------------	----------------	----------------	--------

Table 37 describes the fields in the IP filter window.

Table 37 IP filter parameters

Field	Description
Enable IP Filter	Select this checkbox to enable an IP filter
Mode	Choose an IP filter mode from the drop-down menu: <ul style="list-style-type: none"><li>Drop for upstream</li><li>Drop for downstream</li></ul>

(1 of 2)

Field	Description
Internal Client	Choose an internal client from the drop-down menu: <ul style="list-style-type: none"><li>Customer setting - uses the IP address input below</li><li>IP - uses the connecting devices' IP to the ONT</li></ul>
Local IP Address	Local IP address
Source Subnet Mask	Source subnet mask
Remote IP Address	Remote IP address
Destination Subnet Mask	Destination subnet mask
Protocol	Choose an application protocol or all from the drop-down menu

(2 of 2)

- 2
- Configure the IP filter.
- 3
- Click Add.
- 4
- STOP. This procedure is complete.

Procedure 28    URL filter configuration

- 1
- Select Security > URL Filter from the top-level menu in the GPON Home Gateway window, as shown in Figure 52.

Figure 52    URL Filter window

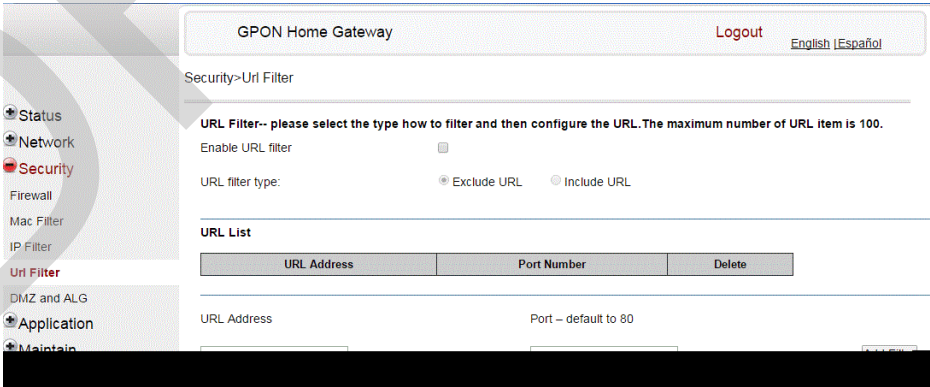


Table 38 describes the fields in the URL Filter window.

Table 38 URL Filter parameters

Field	Description
Enable URL filter	Select the checkbox to enable the URL filter
URL filter type	Select the checkbox for Exclude URL or Include URL
URL Address	Type the URL address
Port Number	Type the port number; the default is 80

- 2
- Configure the URL Filter.
- 3
- Click Add Filter.
- 4
- STOP. This procedure is complete.

Procedure 29 Parental control

- 1
- Select Security > Parent Control from the top-level menu in the GPON Gateway window, as shown in Figure 53.

Figure 53 Parental Control window

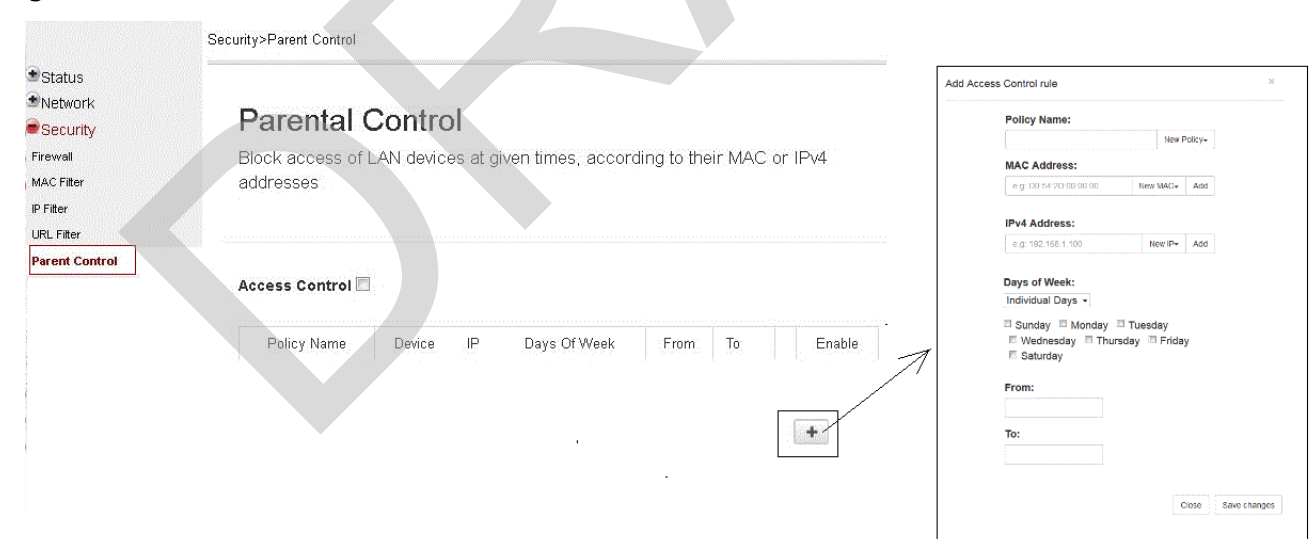


Table 39 describes the fields in the Parental Control window.



**Table 39** Parental control parameters

Field	Description
Policy Name	Enter a name for the parental control policy or choose a policy from the list
MAC Address	Enter the MAC address or choose a MAC address from the list
IPv4 Address	Enter the IPv4 address for the device or choose an IPv4 address from the list
Days of the week	Choose Every Day, or Individual Days and select the checkboxes for the days of the week for which the policy applies
From/To	Enter the times for the policy to be in effect

---

**2** Select the Access Control checkbox.

---

**3** Click the plus sign (+) to add a policy.

A separate panel displays for configuring the policy name, IP address of the device, and dates and times for the policy.

---

**4** Configure the parental control policy.

---

**5** Click Enable to activate the policy.

---

**6** STOP. This procedure is complete.

---

Procedure 30 DMZ and ALG configuration

- 1
- Select Security > DMZ and ALG from the top-level menu in the GPON Home Gateway window, as shown in Figure 54.

Figure 54 DMZ and ALG window

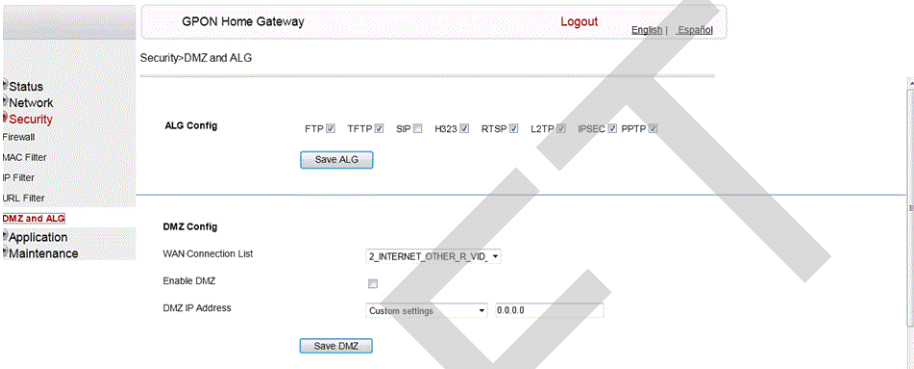


Table 40 describes the fields in the DMZ and ALG window.

Table 40 DMZ and ALG parameters

Field	Description
ALG Config	Select the checkboxes to enable the protocols to be supported by the ALG: FTP, TFTP, SIP, H323, RTSP, L2TP, IPSEC, PPTP
<b>DMZ Config</b>	
WAN Connection List	Choose a WAN connection from the drop-down menu
Enable DMZ	Select this checkbox to enable DMZ on the chosen WAN connection
DMZ IP Address	Choose Customer Setting and enter the DMZ IP address or choose the IP address of a connected device from the drop-down menu

- 2
- Configure ALG.

- 3
- Click Save ALG.

- 4
- Configure DMZ.

- 5

Click Save DMZ.
- 6

STOP. This procedure is complete.

Procedure 31    Access control configuration

This procedure describes how to configure the access control level (ACL).



- Note 1

— ACL takes precedence over the firewall policy.
- Note 2

— The trusted network object will be shared for all WAN connections; it is not applied individually to a WAN connection.

- 1

Select Security > Access Control from the top-level menu in the GPON Home Gateway window, as shown in Figure 55.

Figure 55    Access Control window

Status

Network

Security

Firewall

MAC Filter

IP Filter

URL Filter

DMZ and ALG

Access Control

Application

Maintenance

RG Troubleshooting

Security>Access Control

WAN

3\_VOIP\_TR069\_INTERNET\_I

LAN

Trusted Network Enable

☒

ICMP

Trusted NetWork Only

Allow

SSH

Trusted NetWork Only

Deny

HTTP

Trusted NetWork Only

Allow

TR-069

Trusted NetWork Only

Deny

Save

Refresh

Trusted Network

Source IP Start

Source IP End

Add

Table 41 describes the fields in the Access Control window.

Table 41    Access control parameters

Field	Description
WAN	Choose a connection from the drop-down menu

(1 of 2)

Field	Description
Trusted Network Enable	Click to enable or disable
ICMP, SSH, HTTP, TR-069	Select an access control level for each protocol: WAN side: Allow, Deny, or Trusted Network Only LAN side: Allow or Deny
Source IP Start	Enter a start IP address for the new subnet trusted network
Source IP End	Enter an end IP address for the new subnet trusted network

(2 of 2)

- 2 Select a WAN connection from the drop-down menu.
- 3 Click to enable or disable Trusted Network.
- 4 Select an access control level for each of the four protocols: ICMP, SSH, HTTP, and TR-069 for both the WAN and the LAN side.
- 5 Click Save.
- 6 Optionally, add one or more subnet trusted networks.  
  
The maximum number of entries is 32.  
  
You can also use the Source IP fields to delete a previously created entry for a subnet trusted network.
- 7 STOP. This procedure is complete.

## 8.2.5 Application configuration

G-240W-F ONT also supports application configuration, including:

- port forwarding
- port triggering
- DDNS
- NTP
- USB storage
- UPnP and DLNA

Procedure 32 Port forwarding configuration

- 1 Select Application > Port forwarding from the top-level menu in the GPON Home Gateway window, as shown in Figure 56.

Figure 56 Port forwarding window

Application Name	WAN Connection	WAN Port	LAN Port	Device Name	Internal Client	Protocol	Status	Delete
------------------	----------------	----------	----------	-------------	-----------------	----------	--------	--------

Table 42 describes the fields in the port forwarding window.

Table 42 Port forwarding parameters

Field	Description
APPName	Choose an application name from the drop-down menu
WAN Port	WAN port range
LAN Port	LAN port range
Internal Client	Choose a connected device from the drop-down menu and enter the associated IP address
Protocol	Choose the port forwarding protocol from the drop-down menu: <ul style="list-style-type: none"><li>TCP</li><li>UDP</li><li>TCP/UDP</li></ul>
Enable Mapping	Select this checkbox to enable mapping
WAN Connection List	Choose a WAN connection from the drop-down menu Note: only active devices are shown on this menu

- 2 Configure port forwarding.

- 3

Click Add.
- 4

STOP. This procedure is complete.

Procedure 33    Port triggering

- 1

Select Application > Port Triggering from the top-level menu in the GPON Gateway window, as shown in Figure 57.

Figure 57    Port Triggering window

GPON Home Gateway

Logout

English | Español

Application>Port Triggering

Status

Network

Security

Application

Port Forwarding

Port Triggering

DDNS

NTP

USB Storage

UPNP and DLNA

VPN

Voice Setting

Maintenance

Application Name

Open Port

Triggering Port

Expire Time

Open Protocol

Trigger Protocol

Enable Triggering

WAN Connection List

Custom settings

~

~

600

(Second)

TCP

TCP

☐

1\_INTERNET\_TR069\_VOIP\_R\_VID\_881

Add

Table 43 describes the fields in the Port Triggering window.

Table 43    Port triggering parameters

Field	Description
Application Name	Choose an application name from the drop-down menu
Open Port	Enter the open port range
Triggering Port	Enter the triggering port range
Expire Time	Enter the expiration time in seconds

(1 of 2)

Field	Description
Open Protocol	Choose the open port protocol from the drop-down menu: <ul style="list-style-type: none"> <li>TCP</li> <li>UDP</li> <li>TCP/UDP</li> </ul>
Trigger Protocol	Choose the triggering port protocol from the drop-down menu: <ul style="list-style-type: none"> <li>TCP</li> <li>UDP</li> <li>TCP/UDP</li> </ul>
Enable Triggering	Select this checkbox to enable port triggering
WAN Connection List	Choose a WAN connection from the drop-down menu Note: only active devices are shown on this menu

(2 of 2)

- 2 Configure port triggering.
- 3 Click Add.
- 4 STOP. This procedure is complete.

## Procedure 34 DDNS configuration

- 1 Select Application > DDNS from the top-level menu in the GPON Home Gateway window, as shown in Figure 58.

**Figure 58 DDNS window**

Table 44 describes the fields in the DDNS window.

**Table 44** DDNS parameters

Field	Description
WAN Connection List	Choose a WAN connection from the drop-down menu
Enable DDNS	Select this checkbox to enable DDNS on the chosen WAN connection
ISP	Choose an ISP from the drop-down menu.
Domain Name	Domain name
Username	Username
Password	Password

- 2
- Configure DDNS.
- 3
- Click Save.
- 4
- STOP. This procedure is complete.

**Procedure 35** NTP configuration

- 1
- Select Application > NTP from the top-level menu in the GPON Home Gateway window, as shown in Figure 59.

**Figure 59** NTP window

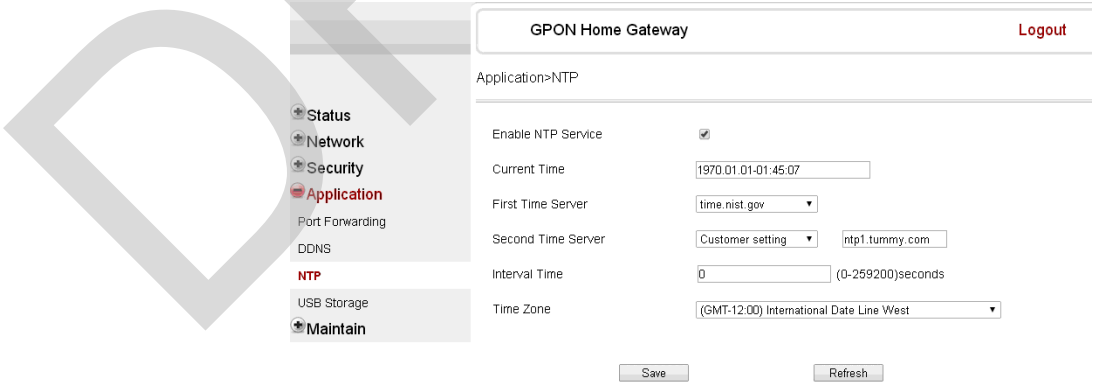


Table 45 describes the fields in the NTP window.



Table 45 NTP parameters

Field	Description
Enable NTP Service	Select this checkbox to enable NTP service
Current Time	Enter the current local date and time
First Time Server	Choose a time server from the drop-down menu or choose Customer setting and enter the address of the time server.
Second Time Server	Choose a time server from the drop-down menu or choose Customer setting and enter the address of the time server.
Interval Time	Interval at which to get the time from the time server, in seconds
Time Zone	Choose the local time zone from the drop-down menu

- 2
- Configure NTP.
- 3
- Click Save.
- 4
- STOP. This procedure is complete.

Procedure 36 USB storage configuration

- 1
- Select Application > USB storage from the top-level menu in the GPON Home Gateway window, as shown in Figure 60.

Figure 60 USB storage window

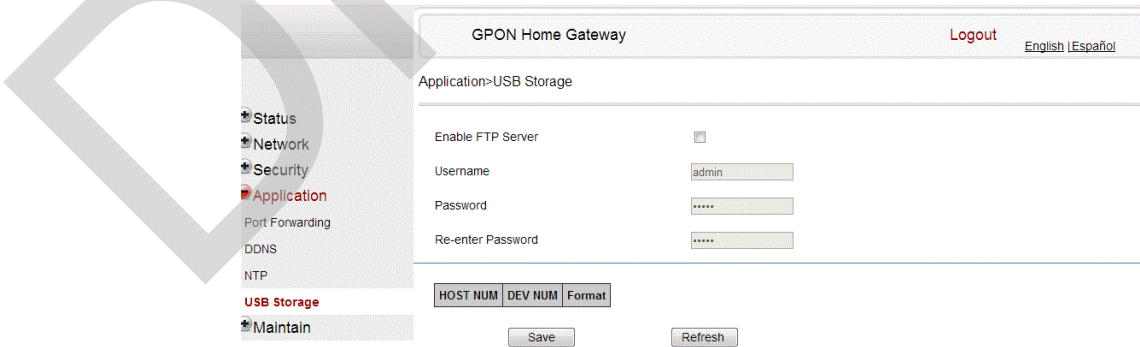


Table 46 describes the fields in the USB storage window.

**Table 46** USB storage parameters


Field	Description
Enable FTP server	Select this checkbox to enable using an FTP server for data storage
Username	Username for FTP server
Password	Password for FTP server
Re-enter Password	Password for FTP server

- 2
- Configure USB storage.
- 3
- Click Save.
- 4
- STOP. This procedure is complete.

**Procedure 37** UPnP and DLNA configuration

- 1
- Select **Application > UPnP and DLNA** from the top-level menu in the GPON Home Gateway window, as shown in Figure 61.

**Figure 61** UPnP and DLNA window

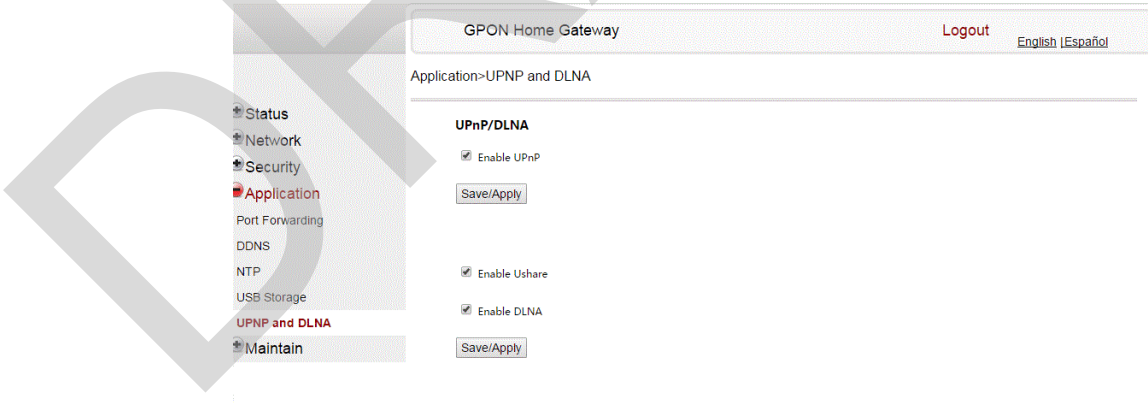

- 2
- Select the **Enable UPnP** checkbox to enable UPnP.
- 3
- Click **Save/Apply**.

- 
- 4 Select the Enable Ushare checkbox to enable Ushare (the UPnP/DLNA media server).
  - 5 Select the Enable DLNA checkbox to enable DLNA.
  - 6 Click Save/Apply.
  - 7 STOP. This procedure is complete.
- 

## 8.2.6 Maintenance

G-240W-F ONT also supports maintenance tasks, including:

- change password
- configure LOID
- configure SLID
- manage device
- backup and restore
- upgrade firmware
- reboot device
- restore factory defaults
- diagnose WAN connections
- log
- diagnose PPPoE connectivity

Procedure 38 Password configuration

- 1
- Select Maintain > Password from the top-level menu in the GPON Home Gateway window, as shown in Figure 62.

Figure 62 Password window



Table 47 describes the fields in the password window.

Table 47 Password parameters

Field	Description
New Password	New password
Re-enter password	Password must match password entered above
Prompt message	Password prompt message

- 2
- Configure the new password.
- 3
- Click Save.
- 4
- STOP. This procedure is complete.

Procedure 39    LOID configuration

- 1
- Select Maintain > LOID Config from the top-level menu in the GPON Home Gateway window, as shown in Figure 63.

Figure 63    LOID Config window

Table 48 describes the fields in the LOID configuration window.

Table 48    LOID configuration parameters

Field	Description
LOID	Type the LOID; the maximum number of characters is 24 If the password is null, this field may be left blank
Password	Type the password; the maximum number of characters is 12

- 2
- Configure the LOID.
- 3
- Click Save/Apply.
- 4
- STOP. This procedure is complete.

Procedure 40 SLID configuration

- 1
- Select Maintain > SLID Configuration from the top-level menu in the GPON Home Gateway window, as shown in Figure 64.

Figure 64 SLID configuration window

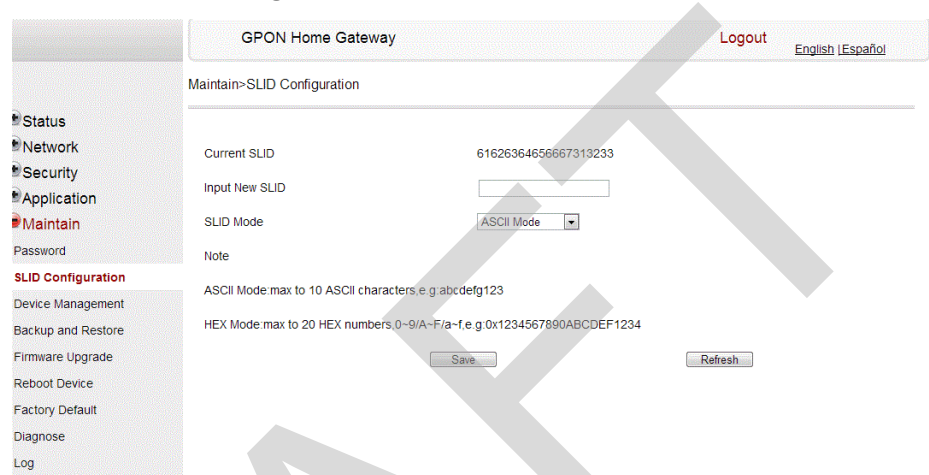


Table 49 describes the fields in the SLID configuration window.

Table 49 SLID configuration parameters

Field	Description
Current SLID	Displays current SLID
Input new SLID	Enter new SLID
SLID Mode	Choose a SLID mode from the drop-down menu.

- 2
- Configure the new SLID.
- 3
- Click Save.
- 4
- STOP. This procedure is complete.

Procedure 41    Device management

- 1
- Select Maintain > Device Management from the top-level menu in the GPON Home Gateway window, as shown in Figure 65.

Figure 65    Device management window

GPON Home Gateway    Logout    English (Español)

Maintain>Device Management

Host Name    CV0023587N1

Host Alias   

Add

Host Name    Host Alias    Delete

Refresh

Table 50 describes the fields in the Device management window.

Table 50    Device management parameters

Field	Description
Host name	Choose a host from the drop-down menu
Alias	Enter an alias for the chosen host


- 2
- Configure an alias for a specific host.
- 3
- Click Add.
- 4
- STOP. This procedure is complete.

---

## Procedure 42 Backup and restore

- 1 Select Maintain > Backup and Restore from the top-level menu in the GPON Home Gateway window, as shown in Figure 66.

**Figure 66 Backup and Restore window**

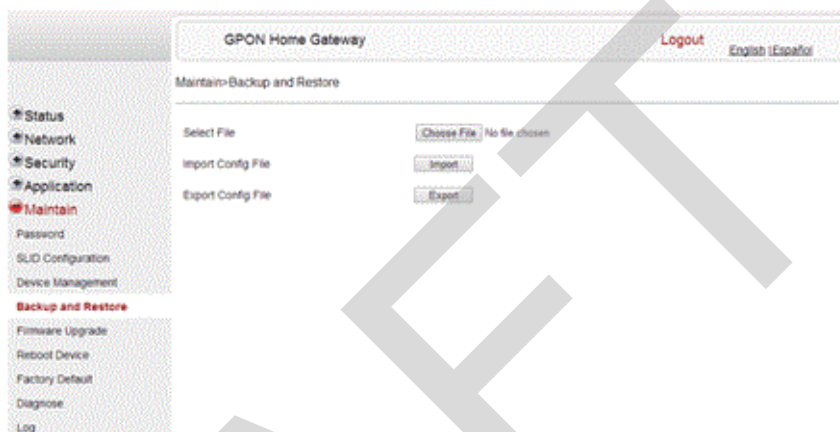

- 2 Click Select File and choose the backup file.
  - 3 Click Import Config File to restore the ONT to the saved backup or click Export Config File to export the current ONT configuration to the backup file.
  - 4 STOP. This procedure is complete.
-



---

**Procedure 43    Upgrade firmware**

- 1    Select Maintain > Firmware Upgrade from the top-level menu in the GPON Home Gateway window, as shown in Figure 67.

**Figure 67    Firmware upgrade window**



- 2    Click Select File and choose the firmware file.
  - 3    Click Upgrade to upgrade the firmware.
  - 4    STOP. This procedure is complete.
-

---

**Procedure 44    Reboot ONT**

- 
- 1    Select Maintain > Reboot Device from the top-level menu in the GPON Home Gateway window, as shown in Figure 68.

**Figure 68    Reboot window**




- 
- 2    Click Reboot to reboot the ONT.
  - 3    STOP. This procedure is complete.
-

---

**Procedure 45    Restore factory defaults**

- 
- 1    Select Maintain > Factory Default from the top-level menu in the GPON Home Gateway window, as shown in Figure 69.

**Figure 69    Factory default window**

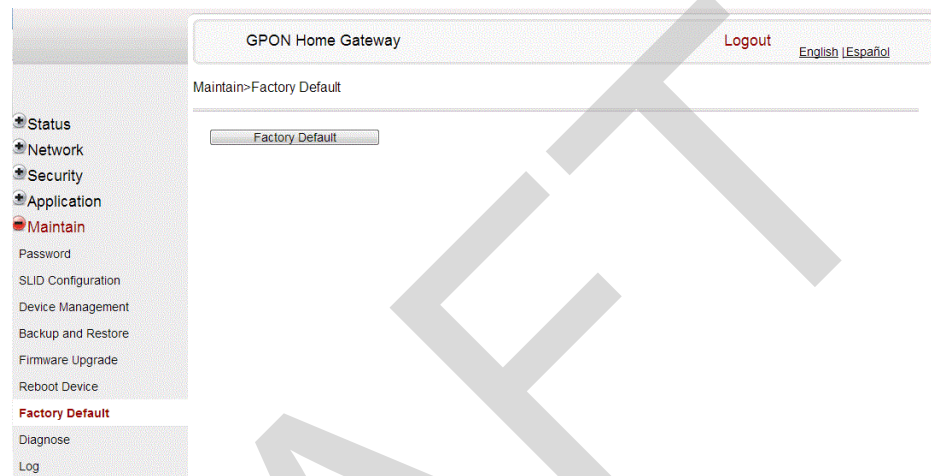

- 
- 2    Click Factory Default to reset the ONT to its factory default settings.
- 
- 3    STOP. This procedure is complete.
-

## Procedure 46 Diagnose WAN connections

- 1 Select Maintain > Diagnose from the top-level menu in the GPON Home Gateway window, as shown in Figure 70.

**Figure 70** Diagnose window

GPON Home Gateway Logout English [Español]

Maintain>Diagnose

WAN Connect List LAN/WAN Interface

IP or Domain Name

Test ☐ ping ☐ traceroute

Ping Try Times 4 (1 ~ 1000)

Packet Length 64 (64 ~ 1500)

Max no. of trace hops 30 (1 ~ 255)

Start Test Cancel

```

hostname 192.168.1.67
opt = 44, typeInter = 0.
PING 192.168.1.67 (192.168.1.67): 64 data bytes
44 bytes from 192.168.1.67: seq=0 ttl=128 time=1.167 ms
44 bytes from 192.168.1.67: seq=1 ttl=128 time=0.806 ms
44 bytes from 192.168.1.67: seq=2 ttl=128 time=0.961 ms
44 bytes from 192.168.1.67: seq=3 ttl=128 time=0.803 ms

--- 192.168.1.67 ping statistics ---
4 packets transmitted, 4 packets received, 0% packet loss
round-trip min/avg/max = 0.803/0.934/1.167 ms

hostname is 192.168.1.67, the wan type of interface is unknown.
traceroute with internet path .
traceroute to 192.168.1.67 (192.168.1.67): 30 hops max, 64 bytes packets
  0  *  192.168.1.1 <-- 192.168.1.67  0.000 ms  0.000 ms  0.000 ms
  1  *  192.168.1.1 <-- 192.168.1.67  0.000 ms  0.000 ms  0.000 ms
  2  *  192.168.1.1 <-- 192.168.1.67  0.000 ms  0.000 ms  0.000 ms
  3  *  192.168.1.1 <-- 192.168.1.67  0.000 ms  0.000 ms  0.000 ms
  4  *  192.168.1.1 <-- 192.168.1.67  0.000 ms  0.000 ms  0.000 ms
  5  *  192.168.1.1 <-- 192.168.1.67  0.000 ms  0.000 ms  0.000 ms
  6  *  192.168.1.1 <-- 192.168.1.67  0.000 ms  0.000 ms  0.000 ms
  7  *  192.168.1.1 <-- 192.168.1.67  0.000 ms  0.000 ms  0.000 ms
  8  *  192.168.1.1 <-- 192.168.1.67  0.000 ms  0.000 ms  0.000 ms
  9  *  192.168.1.1 <-- 192.168.1.67  0.000 ms  0.000 ms  0.000 ms
 10  *  192.168.1.1 <-- 192.168.1.67  0.000 ms  0.000 ms  0.000 ms
 11  *  192.168.1.1 <-- 192.168.1.67  0.000 ms  0.000 ms  0.000 ms
 12  *  192.168.1.1 <-- 192.168.1.67  0.000 ms  0.000 ms  0.000 ms
 13  *  192.168.1.1 <-- 192.168.1.67  0.000 ms  0.000 ms  0.000 ms
 14  *  192.168.1.1 <-- 192.168.1.67  0.000 ms  0.000 ms  0.000 ms
 15  *  192.168.1.1 <-- 192.168.1.67  0.000 ms  0.000 ms  0.000 ms
 16  *  192.168.1.1 <-- 192.168.1.67  0.000 ms  0.000 ms  0.000 ms
 17  *  192.168.1.1 <-- 192.168.1.67  0.000 ms  0.000 ms  0.000 ms
 18  *  192.168.1.1 <-- 192.168.1.67  0.000 ms  0.000 ms  0.000 ms
 19  *  192.168.1.1 <-- 192.168.1.67  0.000 ms  0.000 ms  0.000 ms
 20  *  192.168.1.1 <-- 192.168.1.67  0.000 ms  0.000 ms  0.000 ms
 21  *  192.168.1.1 <-- 192.168.1.67  0.000 ms  0.000 ms  0.000 ms
 22  *  192.168.1.1 <-- 192.168.1.67  0.000 ms  0.000 ms  0.000 ms
 23  *  192.168.1.1 <-- 192.168.1.67  0.000 ms  0.000 ms  0.000 ms
 24  *  192.168.1.1 <-- 192.168.1.67  0.000 ms  0.000 ms  0.000 ms
 25  *  192.168.1.1 <-- 192.168.1.67  0.000 ms  0.000 ms  0.000 ms
 26  *  192.168.1.1 <-- 192.168.1.67  0.000 ms  0.000 ms  0.000 ms
 27  *  192.168.1.1 <-- 192.168.1.67  0.000 ms  0.000 ms  0.000 ms
 28  *  192.168.1.1 <-- 192.168.1.67  0.000 ms  0.000 ms  0.000 ms
 29  *  192.168.1.1 <-- 192.168.1.67  0.000 ms  0.000 ms  0.000 ms
 30  *  192.168.1.1 <-- 192.168.1.67  0.000 ms  0.000 ms  0.000 ms
  
```


- 2 Choose a WAN connection to diagnose from the drop-down menu.
- 3 Enter the IP address or domain name.
- 4 Select the test type: ping, traceroute, or both.
- 5 Enter the number of ping attempts to perform (1 - 1000); the default is 4.
- 6 Enter a ping packet length (64-1024); the default is 64.
- 7 Enter the maximum number of trace hops (1-255); the default is 30.
- 8 Click Start Test. Results will be displayed at the bottom of the window.

- 
- 9 Click Cancel to cancel the test.
  - 10 STOP. This procedure is complete.
- 

## Procedure 47 View log files

- 
- 1 Select Maintain > Log from the top-level menu in the GPON Home Gateway window, as shown in Figure 71.
- 

**Figure 71** Log window

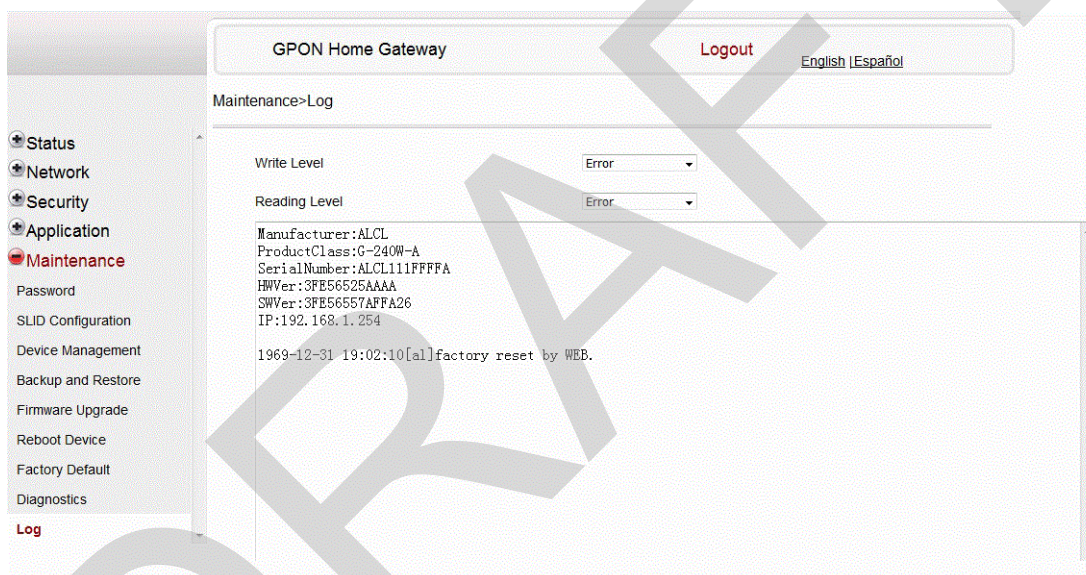

- 
- 2 Choose a write level from the drop-down menu to determine which types of events are recorded in the log file:
  - 3 Choose a reading level from the drop-down menu to determine which types of events to display from the log file:
    - Emergency
    - Alert
    - Critical
    - Error
    - Warning
    - Notice
    - Informational
    - Debug
-

---

4 The log file is displayed at the bottom of the window.

---


5 STOP. This procedure is complete.

---

## Procedure 48 Diagnose PPPoE connections

- 
- 1 Select Maintain > PPPoE Diagnostics from the top-level menu in the GPON Home Gateway window, as shown in Figure 72.

**Figure 72 PPPoE Diagnostics window**

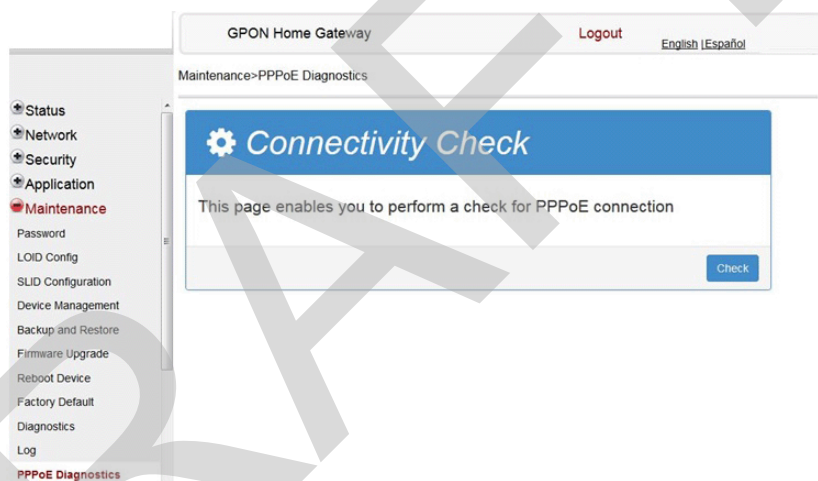

- 
- 2 Click Check to view the results for the PPPoE diagnostics, as shown in Figure 73.
-

Figure 73 PPPoE diagnostics results

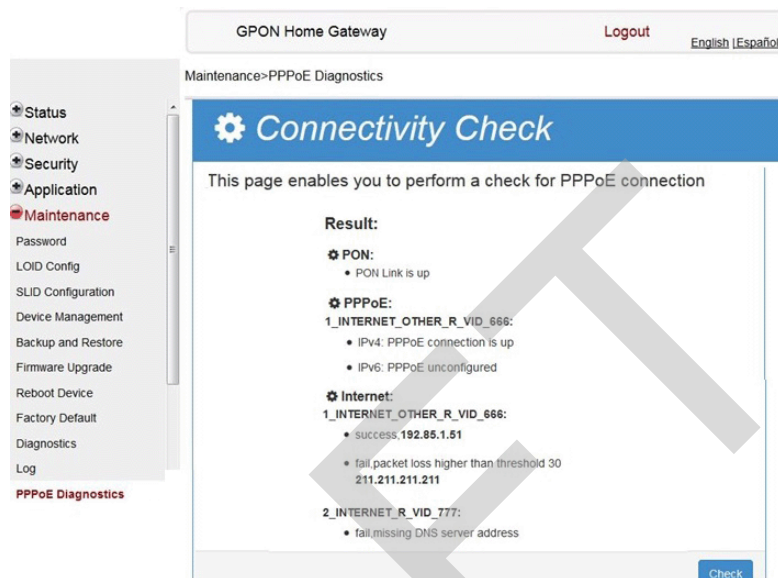


Table 51 describes the fields on the PPPoE diagnostics results window.

Table 51 PPPoE diagnostics results parameters

Field	Description
PON	Reports whether the PON link is up or down
PPPoE	Reports whether the PPPoE IPv4 or IPv6 connection is up, connecting, down, not configured, or not found
Internet	For each Internet connection, reports whether the connection succeeded, failed (missing DNS address), or was not found; also reports failures due to packet loss higher than the threshold of 30

3 STOP. This procedure is complete.

## 8.2.7 RG troubleshooting counters

The Troubleshooting Counters feature enables service providers and end users to monitor the performance of their broadband connection.

Tests are run to retrieve upstream and downstream throughput, latency, and DNS response time. The Troubleshooting Counters window also displays upstream and downstream packet loss and Internet status.



Procedure 49    Retrieve Residential Gateway (RG) troubleshooting counters

- 1    Select RG Troubleshooting Counters from the left menu in the GPON Home Gateway window.

The RG Troubleshooting Counters window appears; see Figure 74.

Figure 74    RG Troubleshooting Counters window

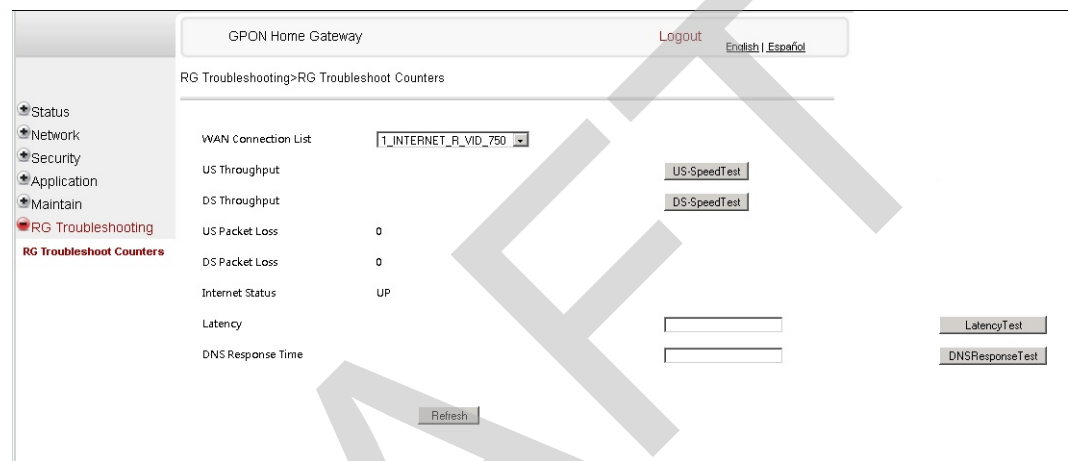


Table 52 describes the fields in the RG Troubleshooting Counters window.

Table 52    RG Troubleshooting Counters parameters

Field	Description
WAN Connection List	Select a WAN connection from the list
US Throughput	Click US Speed Test to specify the time for the upstream test The default is weekly, performed at idle to a public server
DS Throughput	Click DS Speed Test to specify the time for the downstream test The default is weekly, performed at idle to a public server
US Packet Loss	The number of upstream packages lost
DS Packet Loss	The number of downstream packages lost
Internet Status	Whether the broadband connections is active (UP) or not (DOWN)
Latency	Click Latency Test to specify the time for the test The default is weekly, performed at idle to a public server
DNS Response Time	Click DNS Response Test to specify the time for the test The default is weekly, performed at idle to a public server

- 2    Configure the test times if desired.



- 
- 3 Click Refresh to update the data.
  - 4 STOP. This procedure is complete.
- 

## 8.3 SFU mode GUI configuration

Use the procedures below to utilize the web-based GUI for the G-240W-F in SFU mode. This mode is preset at delivery.

SFU customer premise devices are designed for single indoor residential applications. These ONTs address the demand for bandwidth intensive services, such as high definition television (HDTV), video-on-demand (VOD) and online games. The ONT can be configured to seamlessly deliver voice-over-IP and high speed Internet access via a single fiber optic connection to the home.

### 8.3.1 Login

Use the procedure below to login to the web-based GUI for the G-240W-F.

#### Procedure 50 Login to web-based GUI

- 
- 1 Open a web browser and enter the IP address of the ONT in the address bar.


The login window appears.

The default gateway IP address is <http://192.168.1.254>. You can connect to this IP address using your web browser after connecting your PC to one of Ethernet ports of the ONT. The static IP address of your PC must be in the same subnet as the ONT.

- 
- 2 Enter your username and password in the Log in window, as shown in Figure 75.

The default username is adminadmin. The default password is ALC#FGU.

**Figure 75**      **Web login window**

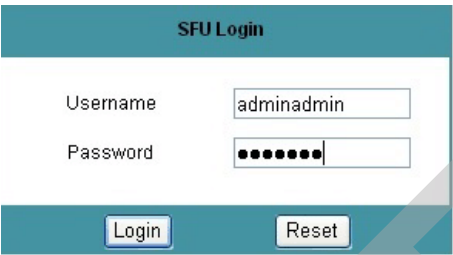

**Caution** — Pressing the Reset button for less than 10 seconds reboots the ONT; pressing the Reset button for 10 seconds resets the ONT to the factory defaults, except for the LOID and SLID.



**Note** — If you forget the current username and password, press the reset button for 10 s and the default values for the username and password will be recovered at startup.

- 
- 3      Click Login.
- 
- 4      STOP. This procedure is complete.
- 

### 8.3.2      **Device and connection status**

G-240W-F ONTs support the retrieval of a variety of device information.

Procedure 51 Device information retrieval

- 1
- Select Status > Device Information from the top-level menu in the GPON Home Gateway window, as shown in Figure 76.

Figure 76 Device Information window

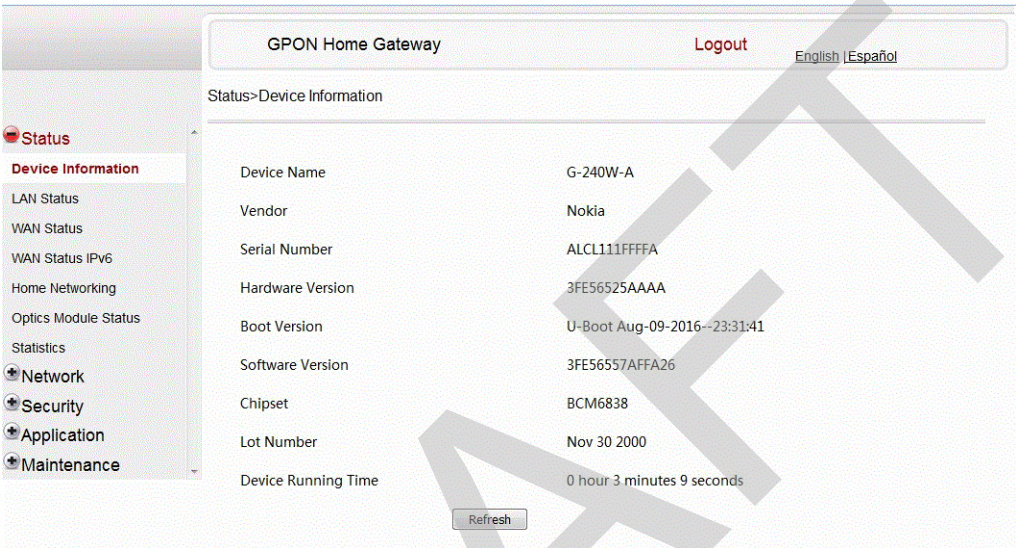


Table 53 describes the fields in the Device Information window.

Table 53 Device Information parameters

Field	Description
Device Name	Name on the ONT
Vendor	Name of the vendor
Serial Number	Serial number of the ONT
Hardware version	Hardware version of the ONT
Boot version	Boot version of the ONT
Software version	Software version of the ONT
Chipset	Chipset of the ONT
Device Running Time	Amount of time the device has run since last reset in hours, minutes, and seconds

- 2
- Click Refresh to update the displayed information.
- 3
- STOP. This procedure is complete.

### 8.3.3 Maintenance

G-240W-F ONT also supports maintenance tasks, including:

- password change
- LOID configuration
- SLID configuration

#### Procedure 52 Password configuration

- 1 Select Maintain > Password from the top-level menu in the GPON Home Gateway window, as shown in Figure 77.

Figure 77 Password window

The screenshot shows the 'GPON Home Gateway' web interface. On the left is a sidebar menu with options: Status, Maintain (highlighted with a red icon), Password, LOID Config, and SLID Configuration. The main content area is titled 'Maintain>Password'. It contains three text input fields: 'New Password', 'Re-enter Password', and 'Prompt Message'. Below these fields are two buttons: 'Save' and 'Refresh'. At the top right of the main area, there are links for 'Logout', 'English', 'Español', and '中文'.

Table 54 describes the fields in the password window.

Table 54 Password parameters


Field	Description
New Password	New password
Re-enter password	Password must match password entered above
Prompt message	Password prompt message

- 2 Configure the new password.
- 3 Click Save.
- 4 STOP. This procedure is complete.

Procedure 53    LOID configuration

- 1    Select Maintain > LOID Config from the top-level menu in the GPON Home Gateway window, as shown in Figure 78.

Figure 78    LOID configuration window

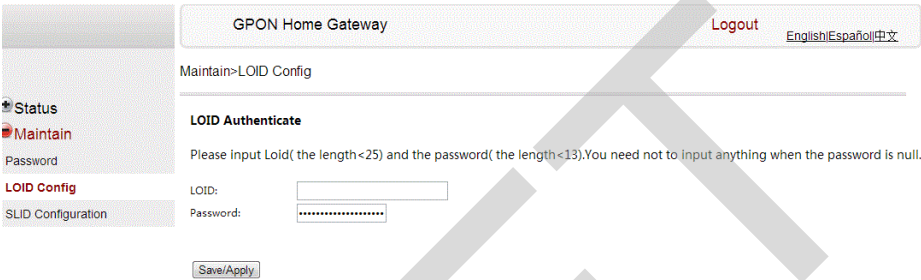

- 2    Enter the LOID.
- 3    Enter the password, if applicable.
- 4    Click Save/Apply.
- 5    STOP. This procedure is complete.

Procedure 54 SLID configuration

- 1
- Select Maintain > SLID Configuration from the top-level menu in the GPON Home Gateway window, as shown in Figure 79.

Figure 79 SLID configuration window

Status

Maintain

Password

LOID Config

SLID Configuration

GPON Home Gateway

LogoutEnglishEspañol中文

Maintain>SLID Configuration

Current SLID

61626364666667313233

Input New SLID

SLID Mode

ASCII Mode

Note

ASCII Mode: max to 10 ASCII characters, e.g. abcdefg123

HEX Mode: max to 20 HEX numbers, 0~9/A~F/a~f, e.g. 0x1234567890ABCDEF1234

Save

Refresh

Table 55 describes the fields in the SLID configuration window.

Table 55 SLID configuration parameters

Field	Description
Current SLID	Displays current SLID
Input new SLID	Enter new SLID
SLID Mode	Choose a SLID mode from the drop-down menu.

- 2
- Configure the new SLID.
- 3
- Click Save.
- 4
- STOP. This procedure is complete.

8.4 Operator ID

Use the procedure below to modify the operator ID for the G-240W-F.

## Procedure 55 Modifying the operator ID

1 Register the ONT with the OLT.

2 Check the original OPID.

3 Update the OntConfig.xml file by adding-the following content:

```
<OperatorObject version="1.0">
  <OperatorID="XXXX">
</OperatorObject>
```

where: xxxx is the correct operator ID, for example ALCL for HGU mode, or XXXX for SFU mode.

4 Use a TFTP client tool to transfer the OntConf.xml file to the OLT's ONT directory and change the filename to the software version number, for example, 3FE123456789.xml.

5 Use a TL1 command to configure ONUSWCRTL:

```
ENT-ONTSWCTRL::1:::HWVER=hwver,VARNT=,PLNSWVER=UNPLANNED,
PLNSWVERCONF=UNPLANNED,DLDSWVER=swver;
```

where:

hwver is the EQPTVERNUM, for example EQPTVERNUM=3FE54945ABAA.

swver is the software version number used as the filename in step 2, for example 3FE123456789.xml.

6 Download the .xml file to update the operator ID:

```
ED-ONT::ONT-1/1/3/1/19:::DLSW=AUTO;
```

7 Restart the ONT, then connect to the LAN and access the web-based GUI to check the operator ID default setting.

8 Use a TL1 command to disable further downloads:

```
ED-ONT::ONT-1/1/3/1/19:::DLSW=DISABLED;
```

9 STOP. This procedure is complete.

DRAFT



## 9 ONT configuration file over OMCI

### 9.1 Purpose

### 9.2 Supported configuration file types

### 9.3 ONT configuration file over OMCI

## 9.1 Purpose

This procedure describes how to use configuration files over OMCI to configure ONTs. Some advantages include:

- flexibility to change the ONT default behavior by downloading configuration file
- flexibility to update a deployed ONT by downloading updated parameters
- ability to securely download any configuration file to an ONT
- ability to avoid using embedded configuration files in ONT software



**Note** — This feature is supported for use with the 7360 ISAM FX and the 7342 ISAM FTTU.

## 9.2 Supported configuration file types

Table 56 describes the configuration file types that are supported from 7368 ISAM ONT R05.02.00 and later.

**Table 56** Supported configuration files

File Index	Description	Details	Supported ONTs/DPU
PRE	ONT pre-configuration file	<p>The XML-based PRECONFIG file controls the working mechanics of the ONT for various services. The default behavior of different ONTs may vary based on the factory settings.</p> <p>The pre-configuration file includes the factory default value for the residential gateway.</p> <p>Note: the pre-configuration file does not work with SFU ONTs; therefore, this feature applies only to Residential Gateway ONTs.</p> <p>The pre-configuration file can be used as is, but Nokia provides its customers with the flexibility to customize the pre-configuration file.</p> <p>This pre-configuration file enables operators to change the default behavior by downloading a customized pre-configuration based on customer inputs.</p> <p>This PRE XML file includes a custom OPERID.</p> <p>The Nokia defined index for the PRECONFIG file is: "PRE"</p>	HGU ONTs: G-240G-C, G-240W-F, G-240W-B, G-240W-C I-240W-A
CFG	ONT configuration delta file	<p>The XML-based CFG file updates the configurable parameters (the PRE settings) in the existing PRE file of a deployed ONT, where required.</p> <p>This configuration file enables operators to change the deployed behavior by downloading customized updates in the CFG file.</p> <p>This file is used only to modify the parameters in the PRE file; it is not used for service provisioning.</p> <p>No OPERID is required, because the update is based on the OPERID used for the PRE file.</p> <p>The Nokia defined index for the PRECONFIG DELTA file is: "CFG"</p>	
XML	Voice XML file	<p>The Voice XML file provides an alternate method for securely downloading voice parameters from the OLT, rather than using FTP (OMCIv1/OMCIv2) or HTTPS (TR-069). Downloading this file makes the applicable changes in the voice parameters.</p> <p>This file enables operators to change the voice behavior by downloading the updated voice XML file.</p> <p>Nokia recommends using this procedure, rather than embedded voice XML files.</p> <p>The Nokia defined index for the Voice XML file is: "XML"</p>	

(1 of 2)

File Index	Description	Details	Supported ONTs/DPU
GFT	G.fast-related configuration file	<p>This text-based json script file controls the default behavior of the G.Fast ONT.</p> <p>This file includes the provisioning parameters of the G.fast transports layer; it does not include VLAN or QoS provisioning.</p> <p>While the ONT functions well with the default values; they can optionally be customized.</p> <p>While default values can work in VDSL mode, a download file is required for the device to function as a G.fast ONT.</p> <p>The Nokia defined index for the G.fast file is: "GFT"</p>	HGU ONTs: G-240G-C, G-240W-F, G-240W-B, G-240W-C I-240W-A

(2 of 2)

## 9.2.1 Filename conventions

Nokia provides the raw configuration files, which must be saved by the operator in a TAR file to be uploaded. TAR file names must be unique.

The filenames of the raw configuration files may not adhere to the naming conventions outlined below. In this case, the files must be renamed to adhere to the naming conventions before the operator generates the TAR file. Filenames are not case-sensitive.

ABCXXXXVER

where

ABC is the file index type (PRE, CFG, XML, GFT)

XXXX is the operator ID

For PRE and CFG, a valid operator ID is required

For XML and GFT, any characters may be used

VER is the file version (from 001 to 999)

Note: you cannot update the configuration using two files with the same name.

## 9.3 ONT configuration file over OMCI



**Warning** — Executing the following procedure will trigger the ONT to reboot, which will impact ongoing services.

Use this procedure to configure ONTs using configuration files via OMCI.

## Procedure 56 Configuring an ONT using a configuration file via OMCI

- 1 Generate the TAR file to be uploaded to the OLT.

Using the raw configuration file(s) provided by Nokia, generate the TAR file as follows:

- i On a Linux platform, rename the raw configuration file to adhere to the naming convention, as described in section 9.2.

- ii Tar the *ABCXXXXVER* raw configuration file:

```
tar -cf ABCXXXXVER.tar ABCXXXXVER
```

Where

*ABCXXXXVER*

Is the name of the file created in step i.

This creates two files: *ABCXXXXVER* and *ABCXXXXVER.tar*.

- iii Rename *ABCXXXXVER* to *ABCXXXXVER.org*

- iv Remove the ".tar" extension from *ABCXXXXVER.tar* file.

- 2 Upload the *ABCXXXXVER* TAR file to the /ONT/ directory in the OLT.

A maximum of 250 files can be kept in the OLT file system.

- 3 Using OLT commands, download the TAR file to the ONT.

For OLT commands, refer to the *7360 ISAM FX CLI Command Guide for 100\_320Gbps FD NT and FX NT*, or the *7342 ISAM FTTU Operation and Maintenance Using TL1 and CLI*.

Please note:

- *pri-cfgfile-pland/dnload* or *sec-cfgfile-pland/dnload* can be 1 to 14 characters.
- *pri-cfgfile-pland* and *pri-cfgfile-dnload* should be the same name.

### Examples

Note: X can be 1 or 2 unless specified:

- i If *p1and-cfgfileX= Disabled* and *dnload-cfgfileX= Disabled*,  
no file will be downloaded to the ONT.

- ii If *p1and-cfgfileX=FILENAME1* and *dnload-cfgfileX= Disabled*,  
FILENAME1 will be downloaded and FILENAME1 will be made active. An ONT reboot is required.

- iii If *p1and-cfgfileX=Disabled* and *dnload-cfgfileX= FILENAME2*

---

FILENAME2 will be downloaded and FILENAME2 will be made passive. An ONT reboot is not required.

**iv** If `pland-cfgfileX=FILENAME3` and `dnload-cfgfileX= FILENAME 4`, the OLT reports an error because the filenames are not the same.

**v** Configure equipment interface ... `pland-cfgfile1=XMLXXXXXX1` and `dnload-cfgfile1 XMLXXXXXX1`

Configure equipment interface ... `pland-cfgfile2=XMLXXXXXX2` and `dnload-cfgfile2 XMLXXXXXX2`

Although the OLT permits the above two steps without reporting an error, Nokia does not recommend executing them, because the ONT may exhibit unexpected behavior.

**vi** If `pland-cfgfileX=Auto` and `dnload-cfgfileX= Auto`

The OLT will download the XML file from "sw-ctr-list" (configure equipment ont sw-ctrl)

---

**4** STOP. This procedure is complete.

The ONT will distribute the configuration files to the different services based on the active indication from the OLT and on the Nokia defined index.

The ONT automatically reboots to apply the configuration files. After the ONT reboots and reports the active version, the OLT completes the file download procedure.

Operators must check the committed file from the OLT to verify whether the corresponding file has been applied. If an error occurs, contact Nokia for support.

---

DRAFT

# Customer document and product support



## Customer documentation

[Customer Documentation Welcome Page](#)



## Technical Support

[Customer Documentation Technical Support](#)



## Documentation feedback

[Customer Documentation Feedback](#)

## FCC Regulations

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

## FCC RF Radiation Exposure Statement

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.

"To comply with FCC RF exposure compliance requirements, this grant is applicable to only Mobile Configurations. The antennas used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter."