
E535 User Manual

assembly diagram

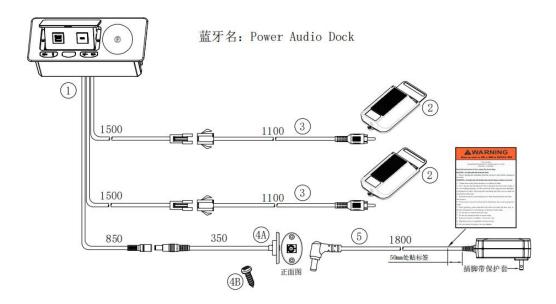


Charging Function

- 1. Connect the product according to the assembly diagram before powering it on.
- 2. All button indicator lights will turn on with a white light.
- 3. Align and place the wireless charging receiver (e.g., mobile phone) directly above the charging area for wireless charging.
- 4. USB-A : Supports charging of mobile electronic devices using a standard USB-A interface data cable.
- 5. USB-C : Supports charging of mobile electronic devices using a standard USB-C interface data cable.

Bluetooth Speaker Function

- 1. Power on automatically when connected to power, and the button indicator light will turn on with a white light. Voice prompt: "Power on". The Bluetooth indicator light slowly flash with a white light. Voice prompt: "Wait for pairing". The product enters pending pairing mode.
- 2. Turn on the Bluetooth on your mobile phone and search for the Bluetooth name: Power

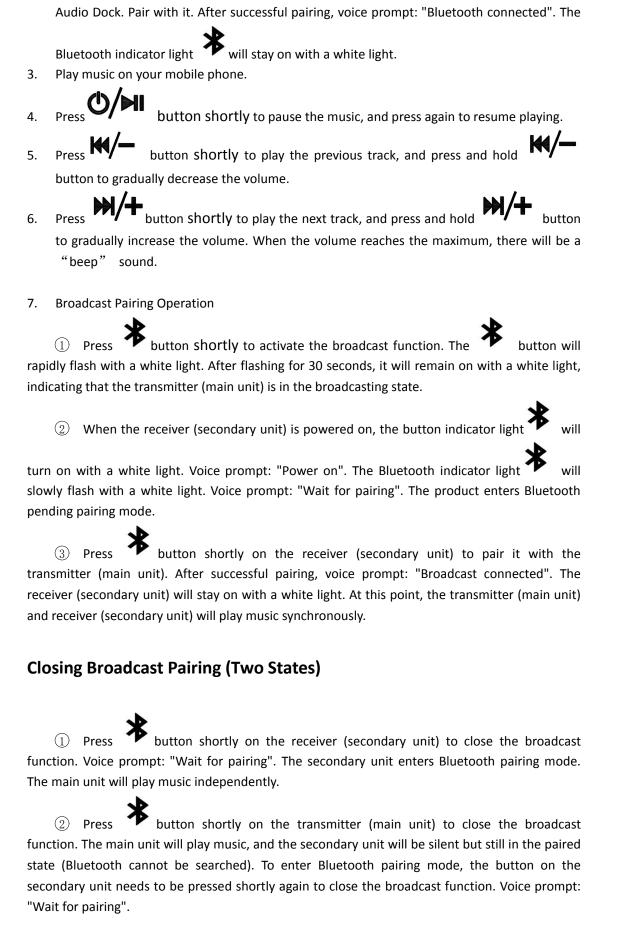

- 1) When the broadcast function is activated, the and buttons on the
- receiver (secondary unit) will be ineffective, and the button will function as mute Other buttons only control the receiver itself and have no effect on the transmitter (main unit).
- 2) The transmitter (main unit) can control the previous track, next track, play/pause for both the receiver (secondary unit) and itself. The **volume+** and **volume-** buttons only control the transmitter (main unit) itself and have no effect on the receiver (secondary unit).
- 8. Press and hold button to disconnect the Bluetooth connection and accompanied by the main unit voice prompt: "Wait for pairing". It needs to be paired and connected again from the mobile phone to play music.
- 9. Press and hold to power off the product. Music operation will be invalid, but USB charging and wireless charging will still function properly.

Product parameters

Power Input	12V5A
Sound power	7.5W*2
USB-A output	10W
USB-C output	18W
Wireless charging output	10W

Common troubleshooting

Problem/Issue	Possible causes and solutions
	1, The power supply is not connected
No Power	2ы The cable is disconnected or the plug is not properly inserted.
	3, The connected socket is faulty.
No Sound	1, Enter the pause mode. Press ▶ button to continue.
	2, The audio source does not match the playing mode. Press ★ button
	to switch to the corresponding mode.
	1, If another Bluetooth connection has been made, Disconnect power and
Bluetooth can	reconnect

not connect	2. Out of range. Please do not connect more than 25ft away from the product. Do not attempt to connect through obstacles.
	3, The product is in broadcast state.
Wireless	 Make sure your phone has wireless charging. Please ensure that there is no metal foreign matter in the back shell of
charging	the mobile phone or case.
doesn't work	3. Please place the mobile phone at the wireless charging position.
	4. The wireless charging has the function of overheating protection. When
	the internal temperature exceeds F/65 $^{\circ}\mathrm{C}$, it will stop working and continue
	charging after the temperature drops.

FCC Requirement

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.