

Precautions

1. Please fix the product on a solid and reliable wall. When hitting, please hit the area, and do not hit the corner area to avoid hand injury or equipment damage.

2. This product is suitable for adults. Children should use it under adult supervision.


3. Beginners should not be too strong to avoid hand injury. First of all, pay attention to safety during the exercise. It is strictly forbidden to hit legs and knees.

4. Do not hit the horn area.

5. The device can not be turned on or abnormal please check whether the power is too low, should be charged in time, charging time should not exceed 8 hours, long-term use is recommended to charge once 1-2 months.


6. This product is not waterproof, wipe boxing target need to use dry cloth do not touch water.

7. Please take good care of the instructions for emergency use.



Smart Music Boxing Target  
Instruction Manual

Product Description

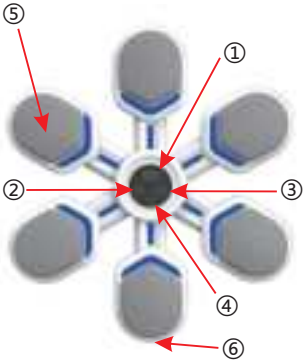

1、Display Screen

2、Speed Button

3、Mode Button

4、On/off Button

5、Hit Point

5、Type-c Charging

Installation Notes


Installation Way:

1. Stick the Velcro on the back of the product.

2. Tear off the top half of the double-sided tape.

3. Put it in a good position and stick it firmly to the wall.

Velcro



Troubleshooting

NO.	Symptoms	Cause Analysis	Method of exclusion
1	No lights and no sound	The product is not powered on	Short press the switch
2	No lights and no sound	Battery drain	Charge
3	Lights flicker	Low battery	Charge
4	Short press the switch can not turn on	The main chip capacitor is short of power due to long-term non- startup	Repeatedly short press the swith
5	Banging sound inside the device	Issued by the internal active stress structure	Normal phenomenon

Installation For Use

**Voltage:** 3.7V lithium battery

**Charging:** 888 outer ring cycle racing display

**Bluetooth name:** Device name starting with "GDBX"

**Full:** Shows FUL

**Display:** button adjustment mode, speed, volume, display corresponding interface, None The score screen is displayed after 5 seconds of operation or after striking.

**Key:** (SPEED/volume reduction) **SPEED key:**

1: Short press to adjust the speed, range H01-H09, 9 speeds.

2: Press and hold to reduce the volume. The range is U00-U30.

3: Short press to adjust the "HAU" light gear with the music rhythm.

**(Start/play/Pause) ON/OFF key:**

1: Press and hold the switch for 1 second.

2: After Bluetooth connection, short press to play/pause music.

**(MODE/Volume plus) MODE key:**

1: Tap to switch modes. Range: P01-P09, 9 modes.

2: Press and hold to increase the volume. The range is U00-U30.

**Boot without connected Bluetooth:**

1: 3 minutes automatic shutdown.

2: No connection, and a background tone is played repeatedly.

**Bluetooth connected:**

1: Can play Bluetooth music.

**Boxing:**

1: 6 boxing positions, according to the position of the light, when the light is successful, you can score.

2: Failed to hit: No score, play failed voice, there are three kinds of failed voice.

3: Hit successfully: Play successful voice, add 1 point, score 000-999, clear after more than 999 points.

PDF  
Adobe

## FCC Statement

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## FCC RF Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.