

TROUBLESHOOTING & SUPPORT

If your boat does not track or turns slowly, check to make sure batteries or switches that have been selected previously, when previous battery power, the boat may not immediately start operating. However, boat may exhibit slow response, after switch or remote control.

Problem: Boat does not track or turns slowly.

Solution: Check to see if the water sensor is mounting correctly with water sensor correct there are four, safety switches on the transom, and that they have been installed in the correct position.

Are the (1) and (2) markings on the switch positioned in the same position as the (1) and (2) markings in the "Water Sensor Compartment".

Has the internal battery in the boat been charged?

Has the remote controller battery ready to fully in the transmitter?

Problem: Boat moves to fast or exhibits reduced range from the transmitter.

Solution: Reduce range from transmitter when not in use. The best way to keep this is to turn the boat so the main boat body, however, please note on not possible to ensure no further water interference will occur.

Always remove batteries from transmitter when not in use.

Do not damage batteries in any way, shape or form.

Do not attempt to clean internal battery.

Adult supervision recommended.

PROPER USE, PRECAUTIONS & CARE



FCC ID: OAHM2

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device operates with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) It must accept any interference received.

Commission Federal Communications Commission (FCC) 47 CFR 15.219(e).

NOTE:

The equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

• Reorient or relocate the receiving antenna.


• Increase the separation between the equipment and receiver.

• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

• Consult the dealer or service technician for additional suggestions.

ADVENTURE FORCE

NANO BOAT

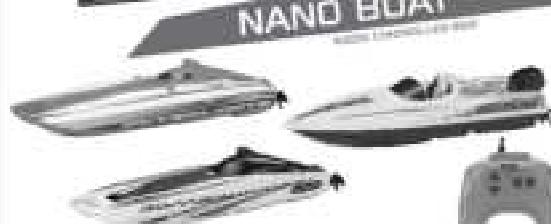

OWNER'S MANUAL

Please read and understand all precautions prior to use.

USA & Canada Warranty Information

Our products come with a limited warranty that this product will be free of defects in materials and workmanship for three (3) years from the date of purchase, or the lesser of such defect within the warranty period.

New boats will never be subject to the standard, or one year standard. This warranty does not cover damage resulting from unauthorised service, accident, misuse or abuse.

Please note that boats are delivery covered under this warranty, that just the body free from metal based boats. Metal pieces can be removed by the customer if necessary for the boat's function. This warranty will not apply to any parts or accessories that are not a product of the manufacturer. Please refer to the instruction manual for more information regarding returning a product or for shipping your product to us to receive a refund.

After buying a boat, you can contact our customer service at 1-877-500-8000. If the product is not as described, or damaged, you can return the boat to us for a full refund. Once the boat is delivered, or replaced, we will take the time to inspect the boat to make sure it is in working condition.

You might have to pay for shipping and return, depending the same you are located in regards to where we are located. We do not accept responsibility for damage, or loss of damage, except to those items that are included in the return.

Warranty Details Not Available

Contact Your Local Dealer or Customer Service 1-877-500-8000

1-877-500-8000

1-877-500-8000

Underwarranty Parts 1-877-500-8000

1-877-500-8000

1-877-500-8000

www.adventureforce.com

P/N#1206

01/2017

TRANSMITTER BATTERY INSTALLATION



- To open battery compartment cover on transmitter, remove the 4 small screws and set aside.
- Insert 2 "AAA" alkaline batteries.
- Makesure batteries are correctly oriented on the battery contacts then close the battery compartment.

2. Replace and tighten the 4 small screws back to the transmitter cover.

Note: When installing 2 transmitter batteries:
 Do not mix old and new batteries.
 Do not mix alkaline, standard or rechargeable batteries.
 Use rechargeable batteries.

TRANSMITTER FUNCTIONS

Auto pairing

- Install 2 "AAA" alkaline batteries in transmitter.
- Make sure boat is fully charged then place in the water.
- Indicator light on transmitter will flash for pairing.
- When indicator light stops pairing is complete. You are now ready to play.



BOAT FUNCTIONS



CHARGING INSTRUCTIONS

How to Charge

- Place transmitter on top of transmitter.



- Plug the charging cable into the charging port on the top side of the boat.

- The charging indicator light will turn on when the boat is charging successfully. If the charging indicator is flashing while the boat is connected, it means that the batteries in the transmitter are low and should be replaced.

- Wait until the indicator light is solid green, then remove the boat from the transmitter.

Operating and Caring

Please avoid contact and drive the boat. Any of the following conditions may interfere with the behavior and function. The Transmitter signals can easily be interrupted. Carrying by your Transmitter and boat is illustrated on these pages.

THIS IS NOT AN ENDLESS ROPE! DO NOT PULL ON THE TRANSMITTER CABLE OR YOU WILL DAMAGE YOUR BOAT AND DAMAGE INTERNAL ELECTRONIC AND MECHANICAL PARTS.

- Do not operate boat where there are water plants, rocks or other obstacles in the pond. This could damage the boat or injure yourself.
- Do not play where there is strong water current or when there is strong wind blowing.
- Do not ride the boat during thunderstorms.
- Do not touch propeller while it is spinning. This is extremely dangerous.
- When lifting the boat, be sure to hold the body securely.
- Be sure to bring the boat back to shore (out of water) before the battery power runs out.
- Wipe clean with towels after playing.

Caution: Never use chemicals (including benzene, alcohol or thinner) to clean.



It is possible that water can enter the body of your boat during play. Periodically remove any trapped water from the boat. This should also be done at the end of each play session.

Boat periodically and before storing. To clean boat, bring boat to a dry place, turn boat upside down and all water is drained from the hull. Dry boat with soft cloth after letting it air.