


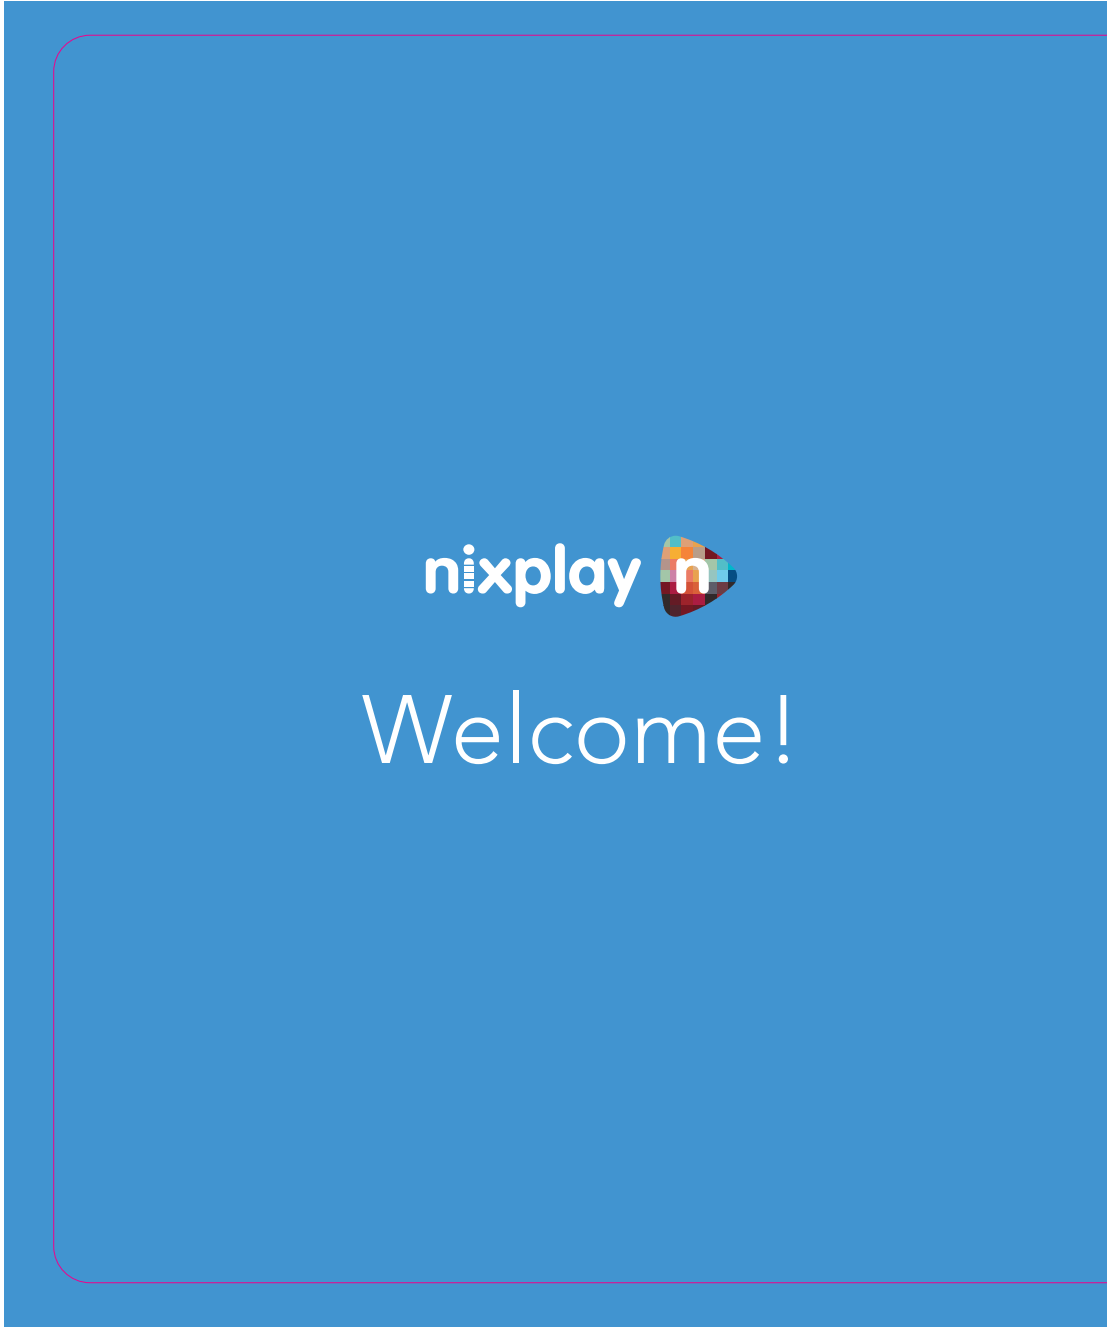

[Back](#)

- B Infra-red Sensor**
Receives signals from the remote control


A diagram of a media player interface. It features a central diamond-shaped play button with four arrows pointing towards the center. Surrounding this central element are eight circular icons: a power button (top-left), a document with a plus sign (top-right), a circular arrow (bottom-left), a gear (bottom-right), and four directional arrows (left, right, up, down) positioned between the outer icons. Labels A through I are connected to these elements by lines: A points to the top-left power icon, B points to the top-right document icon, C points to the bottom-left circular arrow icon, D points to the bottom-right gear icon, E points to the left directional arrow, F points to the right directional arrow, G points to the up directional arrow, H points to the down directional arrow, and I points to the central play button.

- D Playlist**
Display playlists
- E UP / DOWN / LEFT / RIGHT**
Menu navigation / video playback control
- F Play**
Select / Play / Pause
- G Back**
Go back a step
- H Settings**
Go to settings menu

- ▶ Bend the power cable to stand and support the frame.
- ▶ **IMPORTANT:** Place the frame next to a computer / tablet for the set up process.



- ▶ Once plugged in, the frame will automatically start up.
- ▶ When you reach the 'Welcome Screen', please use the **remote** to navigate your frame set up.
- ▶ **IMPORTANT:** The USB cable can only be powered from the supplied power adaptor (5V, 2A). It cannot be plugged into a computer or tablet device.

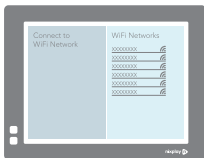

- ▶ Using the remote, select the WiFi network you wish to connect to and press Play. If required, please enter the WiFi password and select **CONNECT**.
- ▶ **Note:** An automatic software update may take place. Please wait a few minutes and do not switch off or unplug your frame during this process.



- ▶ Once your frame is connected to a WiFi network, please follow the instructions on your frame's display.
- ▶ Please visit www.nixplay.com to create an account and follow the instructions in your browser to complete the set up process (if you are an existing Nixplay user, simply log in to pair your frame).
- ▶ **IMPORTANT:** Please ensure that your computer is using the latest browser version.

Congratulations, you have now successfully activated your frame. Start your Nixplay experience!

For warranty information, please visit our website: www.nixplay.com If you need help, please contact our support team at: <http://support.nixplay.com>

Note: Please find the FCC ID information from "Frame information" under "Setting" menu