



RGB LED • DUAL MOUNT WIRFIESS **SPEAKER**


Please read user manual carefully and keep it for referrence.

Package includes:

- 1 Wireless Speaker
- 1 Charging cable
- 1 User Manual

Charge and operate only as indicated in this manual, as improper use may result in damage to the product or injury.

- To avoid risk of shock or injury, do not dismantle the device or insert any objects into the speaker.
- To avoid electronic interference and/or compatible conflicts, turn off the product in any facilities where posted notices instruct you to do so.
- Do not pull the speaker charging cable. Damage may result to the cable.
- Keep out of reach of children. This is not a toy.
- Avoid exposure to moisture, liquids, heat, flame and hiah voltage equipment. Do not short circuit the input terminals of the
- speaker. • Do not drop, place heavy weight or allow heavy
- impact to the speaker • the internal battery should not be crushed, bent, or twisted.
- Do not disassemble and Do not dispose of in fire.

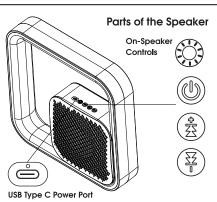

How to Use:

Power/Charging:

Connect the type-C charging cable to port that is to the left of the on-speaker control buttons and to an available USB the power adaptor. Please use a power adaptor with 10W or above to boost the speaker.

Turn ON/OFF: (1)

Press and hold to turn ON/OFF the unit.

Switch between Bluetooth and FM Mode:

with strong signals. The first scanned station will then be played.

3. Press >+ button to play the next station;

Specifications

FM Radio Mode:

- Bluetooth Version: 5.4
- Sound Output: 3inches speaker, 2Ω 5W
- Charge Time: 3-4 hr
- Play Time: 50% volume LED off: 5-6 hr
- Charging Cable length: USBA to TYPE C 3 ft
- Standby Time: Speaker will power down
- Music playing time: 3-4H

- 1. Switch to FM radio mode by pressing the 💥 button Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and
- 2. Press (1) button to scan and save the radio stations


Press - button to play the previous station.

- Battery type: 2000 mAh 3.7V Li-ion Battery

- after 5 min without wireless connection. • Operating Range: 33 ft

- Input Power: 5V 1A 5W

How to Use the Remote Control:

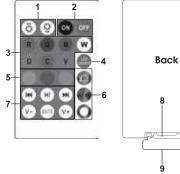

- 1 LED Brightness section
- 2 ON/OFF buttons
- 3 Color Modes section
- 4 LED square ON/OFF button
- 5 LED square color modes section
- 6 LED square color mode
- 7 Music Control section
- 8 Battery Tray
- 9 Battery Preservation plastic tab

Note: To activate the remote control, remove the Battery Preservation plastic tab (9) by gently pulling it down, out of the battery compartment.

LED Brightness Section (1)

Control the brightness of the LED square frame with the buttons in the LED Brightness section, left button raises and right button lowers.

ON and OFF buttons (2)

By pressing the ON button, the LEDs in the LED square starts rotating.

By pressing the OFF button, the device will power OFF. The LEDs will no longer light up and a voice will sound. indicating the device is powered off.

Color Modes (3-6)

Select the designated color by pressing the corresponding button in the color modes section (3). The color LED can be deactivated by pressing the LED sauare ON/OFF button (4), LED Sauare color modes section By pressing the LED square color modes section (5), you can select the desired color mode for the LED sauare, LED Sauare color modes section By pressing the LED dome color modes section

(6), you can select the desired

color mode for the LED dome.

Music Control (7)

You can control the music from your connected device once it is paired (see the Connect to Bluetooth section on the reverse side of this manual.)

- To play/pause music, press the button.
- To increase the volume, press the V+ button. • To decrease the volume, press the V- button.
- To go to the next track, press the button.
- To go to the previous track, press the 🖊 button.
- To mute the sound, press the MUTE button.

Inserting or Replacing the Batteries (8-9)

- Push in the security lock to the right and pull out the battery tray according to the diagram imprinted on the back of the remote (8).
- Remove the old battery and insert a new CR2025 battery into the battery tray, respecting the polarity of the previous battery.
- Place battery tray back in the slot being sure that the security lock pops back into place, securing the

Note: Even if the remote control is operated within the effective range (< 16 ft), remote control operation may be impossible if there are obstacles between the device and the remote control. The device may operate incorrectly if the remote control is operated near other products that generate infrared rays.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Press : C: twice to switch between Bluetooth

Switch to Bluetooth® mode if in FM mode.

vour mobile device when the LED indicator light

3, You will hear a prompt sound when they are

4. The speaker will automatically turn off without

- Press (1) once to play / pause the music,

- Press - once to play the previous song.

Press and hold - to reduce the volume.

- Press and hold >>+ to increase the volume.

- Press >+ once to play the next song.

connection after 5 minutes. To reconnect, you can

turn on the speaker and it will automatically connect

back to your device once they have been previously

2. Search for Bluetooth® device named "BC-BS-128" on

and FM mode.

flashes in blue.

paired.

successfully paired.

Bluetooth® Music Playback:

Connect to Bluetooth®:

- -Regrient or relocate the receiving antenna
- -Increase the senaration between the equipment and receiver
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- -Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Any changes or modifications not expressly approved could void the user's authority to operate the equipment

WARRANTY- 12 MONTH

Please visit our website Bytechintl.com/warranty

©2025 BYTECH NY INC. B Iconic™ is a registered trademark of Bytech NY INC. Bluetooth® is a registered trademark of SIG.Inc MADE IN CHINA

*All Trademarks and copyrights are the property of the respective companies. *Photos are for illustration purposes only

BICONIC WWW.BYTECHINTL.COM

Bytech NY Inc. 2585 West 13 stree Brooklyn NY 11223 (718) 449-3700



MARNING

This device complies with Part 15 of the FCC Rules.

(2) this device must accept any interference received.

including interference that may cause undesired operation.

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause Internal Chemical Burns in as little as 2 hours.



A WARNING

- KEEP new and used batteries OUT OF REACH of CHILDREN
- Seek immediate medical attention if a battery is suspected to be swallowed or inserted inside any part of the body.

