

SIZE: 70x158mm

MAGNAVOX

## BLUETOOTH SPEAKER

### OWNER'S MANUAL

PLEASE READ BEFORE OPERATING THIS EQUIPMENT.

MODEL: MMA4013

#### FCC NOTICE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to locate the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

#### FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
  - (1) This device may not cause harmful interference, and
  - (2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

#### FCC WARNING:

To assure continued operation, follow the attached installation instructions and use only shield cables when connecting to other devices. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure condition without restriction.

#### LOCATION OF CONTROLS



1. **M** Button / Light adjusting button
2. **+** Button/Volume/Skip Play Button
3. **-** Button/Volume/Skip tracks
4. **+** Button/Volume/Skip tracks
5. Type C Port/For Charge Only
6. USB port
7. TF Card Slot

#### POWER SOURCE

The unit has a built-in Li-ion rechargeable battery, charge it before first time use or when it is drained as follows:

1. Connect the small plug from the supplied USB Connection Cable to the DC 5V (Type C) Port on the unit.
2. Connect the full size USB Plug from the supplied USB Connection Cable to the USB Port on the Personal Computer or USB Charger (Computer and USB Charger not included).
3. When charging, the Red Charging Indicator on the unit will illuminate.
4. When charging is complete, the Red Charging Indicator will turn off.

#### NOTES:

1. When charging, you can also play and listen to music at the same time.
2. Your battery will last longer if you follow these simple guidelines for caring and storing:
  - A. Before first time use, recharge the unit approximately 3 hours until the unit is fully charged.
  - B. Charge and store the unit within the temperature range of 5°C - 35°C (40°F - 95°F).
  - C. Do not overcharge (longer than 24 hours). Excessive charging or running the unit completely flat will damage battery. Battery life will be extended if you keep the battery fully charged.
  - D. Battery life naturally shortens slowly over time.

E. The rechargeable battery incorporated in this product is not user replaceable.

#### OPERATION:

##### General Operation:

1. Recharge the built-in Li-ion battery as previously instructed.
2. Press and hold the **M** Button on the unit to power on the unit. The blue indicator at the back of unit will illuminate and blink. Press and release the **M** Button to adjust the light mode (There are 5 lighting effects).
3. Press and hold the **M** Button to switch among TF Card, USB, FM Radio and BT mode if you insert TF card or USB device.
4. During playback:
  - Press the **M** Button to pause; press again to resume to normal playback. (The blue indicator at the back of unit will illuminate and blink).
  - Press and release the **+** or **-** button repeatedly to skip tracks.
  - Press and hold the **+** or **-** button to adjust volume level as desired. (When the volume is set to the maximum level, there is a beeping alert sound).
5. When finished listening, Press and hold the **M** Button to turn off the unit.

##### BT Mode:

##### BT (Bluetooth) pairing:

- First time use or re-pairing the unit to a new BT Device, pair as follows:
1. Power on the unit as previously instructed. Press and hold the **M** Button to switch to BT mode. You will hear an audible prompt say "Bluetooth ready for connection" and the blue indicator at the back of unit will illuminate and blink.
  2. Power on the external BT Device and enter to BT search mode. Start pairing following on the screen instructions from the external BT Device. When paired, the unit will sound a prompt "Bluetooth connected" and the blue indicator at the back of unit will stop blinking.
  3. If pairing is complete, you may now play music and answer the phone with your external BT Device.
  4. During playback:
    - Press the **M** Button to pause/blue indicator at the back of unit will stay on continuously; press again to resume to normal playback. (the blue indicator at the back of unit will illuminate and blink).
    - Press and release the **+** or **-** button repeatedly to skip tracks.
    - Press and hold the **+** or **-** button to adjust volume level as desired. When the volume is set to the maximum level, there is a beeping alert sound.

5. If the unit is paired to a Cell Phone:
  - When a call is incoming during an active music session: Press and release the **M** Button then speak to the microphone to answer the call. When your call is complete, press and release the **M** Button again to disconnect or end the phone call and resume to music playback.
  - Or, press and hold the **M** Button approximately 1 second to decline the incoming phone call. Then resume to music playback.
6. When finished listening, Press and hold the **M** Button to turn off the unit.

##### Notes:

- When the external BT Device searches for the unit, our model number "MMA4013" will appear on the display of external BT Device.
- If while pairing you are asked for a code please try "0000" or "1234".

##### Normal operation after pairing:

1. Power on the external BT Device and enter to BT playback mode.
2. Power on the unit and enter to BT mode as previously instructed. You will hear an audible prompt say "Bluetooth ready for connection" and the blue indicator at the back of unit will illuminate and blink.
3. Wait a few seconds until the unit is automatically paired to the external BT Device, the unit will sound a prompt "Bluetooth connected" and the blue indicator at the back of unit will stop blinking.
4. After pairing is complete you may now play music and answer calls with your external BT Device.

##### TF Card:

##### To play the music in TF Card:

1. In power off mode, insert the TF Card (not included) into the TF Card Slot on the unit with contacts facing up as illustrated below:

##### BT Card:

2. Power on the unit, press and hold the **M** Button to switch to USB mode. You will hear an audible prompt say "USB" and the blue indicator at the back of unit will illuminate and blink.
3. During playback:
  - Press the **M** Button to pause/blue indicator at the back of unit will stay on continuously; press again to resume to normal playback/blue indicator at the back of unit will illuminate and blink.
  - Press and release the **+** or **-** button repeatedly to skip tracks.
  - Press and hold the **+** or **-** button to adjust volume level as desired. (When the volume is set to the maximum level, there is a beeping alert sound).
4. When finished listening, Press and hold the **M** Button to turn off the unit.

##### Notes:

- Use to 32 GB TF Card/USB device supported.
- When inserting the TF Card/USB device, make sure the direction you selected is correct. Never insert violently to avoid damaging the TF Card/USB device or the unit.
- You need to download the desired music in MP3 format into the TF Card/USB device before insert into the unit.

3. During playback:
  - Press the **M** Button to pause/blue indicator at the back of unit will stay on continuously; press again to resume to normal playback/blue indicator at the back of unit will illuminate and blink. The RGB light in front of the unit is not running on.
  - Press and release the **+** or **-** button repeatedly to skip tracks.
  - Press and hold the **+** or **-** button to adjust volume level as desired. (When the volume is set to the maximum level, there is a beeping alert sound).
  - When finished listening, Press and hold the **M** Button to turn off the unit.

##### USB:

1. In power off mode, connect the USB Device (not included) into the USB port on the unit as illustrated below:

##### Notes:

- This unit has a built-in FM antenna, which provides adequate reception in most areas. If reception is weak, reassemble the other direction/location to improve reception, and also can use the supplied USB Connection Cable as a External antenna to increase the radio effect.

2. Power on the unit, press and hold the **M** Button to switch to USB mode. You will hear an audible prompt say "USB" and the blue indicator at the back of unit will illuminate and blink.
3. During playback:
  - Press the **M** Button to pause/blue indicator at the back of unit will stay on continuously; press again to resume to normal playback/blue indicator at the back of unit will illuminate and blink.
  - Press and release the **+** or **-** button repeatedly to skip tracks.
  - Press and hold the **+** or **-** button to adjust volume level as desired. (When the volume is set to the maximum level, there is a beeping alert sound).
4. When finished listening, Press and hold the **M** Button to turn off the unit.

##### Notes:

- Use to 32 GB TF Card/USB device supported.
- When inserting the TF Card/USB device, make sure the direction you selected is correct. Never insert violently to avoid damaging the TF Card/USB device or the unit.
- You need to download the desired music in MP3 format into the TF Card/USB device before insert into the unit.

#### FM Radio:

1. Power on the unit, press and hold the **M** Button to switch to FM Radio mode. You will hear an audible prompt say "Radio" and the blue indicator at the back of unit will illuminate and blink. The RGB light in front of the unit is not running on.
2. In first time use (or relocated the unit to a new location), search and store the available FM stations by press the **M** Button. The unit will automatically search and store all available FM radio stations then play the first stored FM station. Press and release the **+** or **-** buttons to select and play the desired stored radio station.
3. During radio mode, press and hold the **+** or **-** button to adjust volume level as desired. (When the volume is set to the maximum level, there is a beeping alert sound).
4. When finished listening, Press and hold the **M** Button to turn off the unit.

##### Notes:

- This unit has a built-in FM antenna, which provides adequate reception in most areas. If reception is weak, reassemble the other direction/location to improve reception, and also can use the supplied USB Connection Cable as a External antenna to increase the radio effect.

TROUBLE SHOOTING:		
Check the following before requesting service:		
SYMPTOM	POSSIBLE CAUSE	POSSIBLE SOLUTION
Can't power on	Audible battery prompt	Recharge the battery as page 2-3
No sound or sound weak	Volume level of the unit was not set to minimum position	Press the <b>+</b> button to press and hold the <b>M</b> Button
	Volume level of the external connected device is 0 (Too quiet)	Increase the volume level by press and hold the <b>+</b> Button
	Volume level too high	Reduce the volume level by press and hold the <b>-</b> Button
Sound distortion	Volume level of the external connected device is too high	Reduce the volume level of the external connected device
BT not working	The external BT device has NOT paired to the unit	Recharge the external BT device to the unit as page 2-4
	The external BT device has NOT paired to the unit	Press the external BT device close to the unit

GENERAL SPECIFICATIONS:	
Power Source	Built-in DC3.7V 1200mAh (4.44Wh) rechargeable Li-ion battery (recharge by DC5.0V/1A through Type C Port)
Impedance of Speaker	8ohm 8Ω
Audio Power	1 W RMS
BT Version	4.2
BT Operating Distance	Up to 100 Feet in open area
FM Radio Frequency	87.5-108MHz
PACKAGE INCLUDES:	
1 x Owner's Manual 1 x USB Connection Cable (For Charging only)	
SPECIFICATIONS AND ACCESSORIES ARE SUBJECT TO CHANGE WITHOUT NOTICE	
LIMITED WARRANTY	
Craig Electronics Inc. PO Box 271130, Miamia, Fla. 33027-0997	
This warranty is void if the product has been: a) Used in a commercial application or rental; b) Damaged through misuse, negligence, or abuse; c) Modified or repaired by anyone other than an authorized Craig service center; d) Damaged because it is improperly connected to any other equipment. Note: This warranty does not cover: i) Ordinary adjustments as outlined in the Owner's Manual which can be performed by the customer; ii) Damage to equipment not properly connected to the product; iii) Any cost incurred in shipping the product for repair; iv) Damage to the product not used in the USA.	
This warranty is not transferable and only applies to the original purchase. Any implied warranties, including the warranty of merchantability, are limited in duration to the period of this expressed warranty and no warranty whether expressed or implied shall apply to the product thereafter.	
Under no circumstance shall Craig be liable for any loss or consequential damage arising out of the use of this product. This warranty gives specific legal rights. However, you may have other rights which may vary from state to state. Some states do not allow limitations on implied warranties or exclusion of consequential damage. Therefore, these restrictions may not apply to you.	
This product has been manufactured by and is sold under the responsibility of Craig and Craig is the warrantor in relation to this product. MAGNAVOX and SMART VEEV SMART are registered trademarks of Koninklijke Philips N.V. and are used under license from Koninklijke Philips N.V.	
To Obtain Service on your Product email: magnavox@craigelectronics.com	
Printed in China	
MMA4013_WIC_E0UF1_00US	

1

2

3

4

5