



SmartSet® Clock Radio, With Auto-Date-Time Setting System, 1.4" Cyan Jumbo Display, Dual Alarms, FM Radio, 2.1A USB Charge Out, LED Decor and Bluetooth Speaker

(SmartSet® Patent No. 6,567,344)

OWNER'S MANUAL

Model name:ER100301



Visit our website at www.emersonradio.com

To obtain a manual in Spanish, please download it from our website: <https://www.emersonradio.com/documents/>

1 WARNING

TO PREVENT ELECTRIC SHOCK HAZARD, DO NOT CONNECT TO MAINS POWER SUPPLY WHILE GRILLE IS REMOVED. TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.
POUR EVITER TOUT DANGER DE CHOC ELECTRIQUE, NE PAS RACCORDER AU SECTEUR TANT QUE LA GRILLE N'APAS ETE REMISE EN PLACE. POUR REDUIRE LE RISQUE D'INCENDIE OU DE CHOC ELECTRIQUE, NE PAS EXPOSER CET APPAREIL SOUS LA PLUIE ET L'HUMIDITE.



This is CLASS II apparatus with double insulation, and no protective earth provided.
The Caution Marking and Rating plate are located at the bottom enclosure of the apparatus.
Les marquages sont inscrits en anglais et en français. Les précautions d'emploi sont inscrites en anglais et en français.

IMPORTANT SAFETY INSTRUCTIONS

- 1.) Read these instructions. Keep these instructions. Follow all instructions. Read all warnings.
- 2.) Do not use this apparatus near water.
- 3.) Clean only with dry cloth.
- 4.) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 5.) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 6.) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade, or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 7.) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 8.) Only use attachments / accessories specified by the manufacturer.
- 9.) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 10.) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 11.) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 12.) The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.
- 13.) Mains plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
- 14.) Battery shall not be exposed to excessive heat such as sunlight, fire or the like.

CAUTION: Danger of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent type.
ATTENTION: Danger d'explosion si les piles sont remplacées de façon incorrecte. Remplacer les piles seulement par le même type de pile ou l'équivalent.

La prise du secteur ne doit pas être obstruée ou doit être facilement accessible pendant son utilisation.
Pour être complètement déconnecté de l'alimentation d'entrée, la prise doit être débranchée du secteur.
Les piles ne doivent pas être exposées à de forte chaleur, tel qu'à la lumière du soleil, au feu ou autres choses de semblable.
La prise du secteur doit être utilisée pour déconnecter le système.
La prise du secteur ne doit pas être obstruée ou doit être facilement accessible pendant son utilisation.
Pour être complètement déconnecté de l'alimentation d'entrée, la prise doit être débranchée du secteur.
L'adaptateur AC/AC de l'appareil est utilisé pour déconnecter le système.
L'adaptateur AC/AC de l'appareil ne doit pas être obstruée ou doit être facilement accessible pendant son utilisation.
Pour être complètement déconnecté de l'alimentation d'entrée, l'adaptateur AC/AC de l'appareil doit être débranché du secteur.
Minimum distances 10 cm around the apparatus for sufficient ventilation.
10cm de distance minimale autour de l'appareil pour une ventilation suffisante.
The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloth, curtains etc.
Ne pas recouvrir les entrées d'aération avec des objets tel qu'un journal, une nappe, un rideau, etc.

no naked flame sources such as lighted candles should be placed on the apparatus.
Asterne sources de flamme nue, tel qu'une bougie, ne doit être placée sur l'appareil.
Attention should be drawn to the environmental aspects of battery disposal.
Les piles usagées doivent être jetées en respectant l'environnement.
The use of apparatus in tropical and/or moderate climates.
L'utilisation de l'appareil dans un climat tropical et/ou modéré.
Maximum recommended ambient temperature is 35°C.
The ambient temperature shall be installed near the equipment and shall be easily accessible.
Le socle de prise de courant doit être installé à proximité du matériel et doit être aisément accessible.
L'appareil ne doit pas être exposé à des agissements d'eau ou des débordements et de plus qu'aucun objet rempli de liquide tel que des vases ne doit être placé sur l'appareil.
Intégrer la prise du RESEAU D'ALIMENTATION sur l'appareil est utilisée comme appareil de déconnexion, cet appareil doit demeurer aisément accessible.
Les batteries ne doivent pas être exposées à une chaleur excessive telle que celle du soleil, d'un feu ou d'objets similaires.

WARNING

DO NOT INGEST BATTERY. CHEMICAL BURN HAZARD

WARNING
Do not ingest the battery. Chemical Burn Hazard
This product contains a coin/button cell battery.
If the coin/button is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.
Keep new and used batteries away from children.
If the battery compartment does not close securely, stop using the product and keep it away from children.
If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

AVERTISSEMENT
Ne pas ingérer la pile. Danger de brûlure chimique
Ce produit contient une pile bouton. Si la pile bouton est avalée, elle peut provoquer de graves brûlures internes en 2 heures seulement et peut entraîner la mort.
Conserver les piles neuves et usées hors de portée des enfants.
Si le compartiment pile ne se ferme pas correctement, cesser d'utiliser le produit et tenir hors de portée des enfants.
En cas de doute concernant le fait que les piles pourraient avoir été avalées ou introduites dans une partie quelconque du corps, consulter immédiatement un médecin.

2 Important Notes

- Avoid installing this unit in places exposed to direct sunlight or close to heat radiating appliances such as electric heaters, on top of other stereo equipment that radiates heat, places lacking ventilation, dusty areas, places subject to constant vibration and/or humid or moist areas.
- Operate controls and switches as described in the manual.
- Before turning on the power, make certain that the AC adapter is properly installed.
- When moving the set, be sure to first disconnect the AC adapter.

FCC Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
• Repoint or relocate the receiving antenna.
• Increase the separation between the equipment and receiver.
• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
• Consult the dealer or an experienced radio/TV technician for help. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment complies with the FCC RF radiation exposure limits set forth for an uncontrolled environment.

Thank you for purchasing this Emerson SmartSet® Dual Alarm Clock Radio. This clock uses Emerson's patented SmartSet® Automatic Time Setting System. The first time you connect this clock to your AC outlet, and after every power interruption, within seconds the clock will automatically set itself to the correct Year, Month, Date, Day, and Time. In addition, all changes from Standard Time to Daylight Saving Time, and back to Standard Time, are made automatically. There are dual alarms that can be set and used independently, and both of the alarms can be programmed for everyday operation, weekdays only, or weekends only. There is a long life lithium battery installed in this clock when you buy it. This battery can maintain the time and alarm settings for 1 to 2 years, or even longer. We have taken every precaution to make sure this clock was in perfect working order when it left our factory. If you encounter any problems with the set up or operation of this item, please call the Emerson Consumer Products Corp. Customer Service Hotline, toll free, at 1-800-898-9029.

3 Preparation For Use

- Remove the clock from the carton and remove all packing material from the clock. **Save the packing material, if possible, in case the clock ever needs to be serviced or transported. The original carton and packing material is the only safe way to pack your clock to protect it from damage in transit.**
- Remove any descriptive labels, stickers or protective films on the front or top of the cabinet, if any.
Do not remove any labels or stickers from the back or bottom of the cabinet.
- Note the serial number on the bottom of your clock and write this number in the space provided on the Warranty page of this manual.
- Place your clock on a level surface such as a table, desk or shelf, convenient to an AC outlet, out of direct sunlight, and away from sources of excess heat, dirt, dust, moisture, humidity, or vibration.
- Unwind the antenna wire and extend it fully.

Protect Your Furniture

This model is equipped with non-skid rubber 'feet' to prevent the product from moving when you operate the controls. These 'feet' are made from non-migrating rubber material specially formulated to avoid leaving any marks or stains on your furniture. However certain types of oil based furniture polishes, wood preservatives, or cleaning sprays may cause the rubber 'feet' to soften, and leave marks or a rubber residue on the furniture. To prevent any damage to your furniture we strongly recommend that you purchase small self adhesive felt pads, available at hardware stores and home improvement centers everywhere, and apply these pads to the bottom of the rubber 'feet' before you place the product on fine wooden furniture.

Power Source

This clock is designed to operate on normal 120V 60Hz AC power only. Do not attempt to operate the clock on any other power source. You could cause damage to the clock that is not covered by your warranty. This clock should be connected to an AC outlet that is always 'live'. Do not connect it to an outlet that is controlled by a wall switch. When the power to the clock is interrupted, the built in lithium battery takes over to maintain the time and alarm settings. To maximize the life of the lithium battery keep the clock connected to a 'live' AC outlet at all times.

4 Important Notes

- Avoid installing this unit in places exposed to direct sunlight or close to heat radiating appliances such as electric heaters, on top of other stereo equipment that radiates heat, places lacking ventilation, dusty areas, places subject to constant vibration and/or humid or moist areas.
- Operate controls and switches as described in the manual.
- Before turning on the power, make certain that the AC adapter is properly installed.
- When moving the set, be sure to first disconnect the AC adapter.

5 Package Contents

- ER100301 Clock Radio x 1
- Owner's Manual

 


6 Location of Controls and Indicators


FRONT PANEL



TOP PANEL

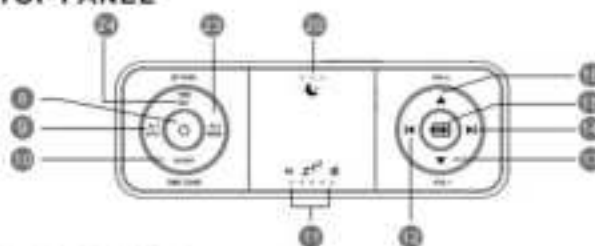

REAR PANEL

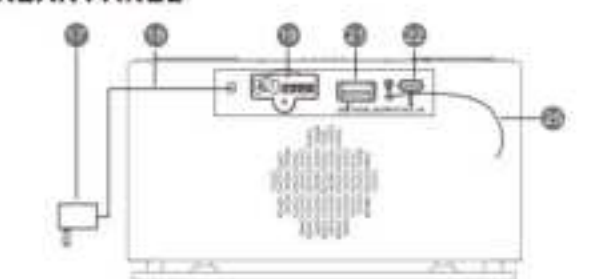 

1. ALARM 1 Radio/Buzzer Indicators
2. AM Indicator ('On'=AM, 'Off'=PM)
3. DAY of WEEK Indicators
4. LOW BATTERY Indicator
5. MHz (FM Radio) Indicator
6. BT (Bluetooth) Indicator
7. ALARM 2 Radio/Buzzer Indicators
8. POWER ('On'/Standby) Button
9. ALARM 1/STORE (FM station)/Button
10. SLEEP/TIME ZONE Button
11. PAUSE/SNOOZE/DIMMER Button
12. **M TUNE-** Button
13. VOLUME- /DOWN Button
14. **M TUNE+** Button
15. SOURCE (FM/Bluetooth/AUX) Button
16. VOLUME+ /UP Button
17. AC Adapter
18. Adapter's Cable
19. BACKUP BATTERY holder (located on back of unit)
20. Night Light On/Off Button
21. USB-A charge out
22. USB-C charge out
23. ALARM 2/MEMORY (FM station)
24. TIME SET/ BT PAIR Button
25. FM Antenna Wire

7 Setting the Time Zone

Initial Default Setting at Clock Mode

The first time you connect your new SmartSet® clock radio to the AC outlet the internal computer will automatically set the time correctly for the Eastern Time Zone, which is the initial default setting. The display will scan for a few seconds and then show the correct Day and Time in the Eastern zone. If you live in the Eastern Time zone, there's nothing else to do. Your clock is set correctly and running. If you do not live in the Eastern Time zone you must change the default zone display to your own zone. You only do this one time and the SmartSet® will remember the new default zone setting and will always return to that setting after power interruption.

There are 7 time zones programmed into your SmartSet® clock radio as follows:

- ZONE 1 - Atlantic Time
- ZONE 2 - Eastern Time (Default Setting)
- ZONE 3 - Central Time
- ZONE 4 - Mountain Time
- ZONE 5 - Pacific Time
- ZONE 6 - Yukon Time
- ZONE 7 - Hawaiian Time



Note: Time Zone and Time Setting can only be adjusted in standby mode, where the function of Radio, Bluetooth and are disabled. Indicators of "MHz", "BT" are OFF).

8 Setting the Time

Short press



Checking the Current Year-Date-Day of Week-Time Settings
Press briefly the **TIME SET** button repeatedly to see the cycle of year, date, day of week and time. To restore time display mode, leave it idle for a few seconds.

Setting the Year

 
- ⑤ Press and hold the **TIME SET** button until the Year 'Flashes', then release the button;
- ⑥ Press the **M** or **M** button to adjust Year;



Setting the Date


- ⑦ Press the **TIME SET** button again and release, the Date 'Flashes'.
- ⑧ Press the **M** or **M** button to adjust the Month;
- ⑨ Press the **M** or **M** button to adjust the Date;

For example, April 16th will appear as '4.16'.



Setting the Time

 - ⑩ Press the **TIME SET** button again and release, the Hour 'Flashes'.
- ⑪ Press the **M** or **M** button to adjust the Hour (where AM indicator 'On' is AM, 'Off' is PM);
- ⑫ Press the **M** or **M** button to adjust the Minutes;
- ⑬ Press the **TIME SET** button again to store all new settings and restore it to time display mode.



Note: To skip manual adjustments, keep it idle for 40 seconds to resume to clock display mode.



9 Daylight Saving and Leap Year Adjustment

All Daylight Saving and Leap Year adjustment are made automatically by the SmartSet[®] internal computer as follows:
Start of Daylight Saving time:
At 2:00 AM on the 2nd Sunday in March, the clock will automatically advance to 3:00 AM
End of Daylight Saving time:
At 3:00 AM on the 1st Sunday in November, the clock will automatically reset to 2:00 AM
Leap Year:
At 12:00 Midnight on February 28th, the calendar display will change to "2, 28".

10 Setting the Alarm

IMPORTANT: Alarm settings can be checked and adjusted in Standby mode or even while Bluetooth or Radio mode is On.
Your clock radio has two separate alarms Alarm1 (AL1) and Alarm2 (AL2) that can be set and used independently. You may use the alarms to wake two persons at different times, or you may use one alarm for weekdays and the other one for weekends. Please ensure that you have set the wake up time and alarm week mode correctly.

Adjusting the Wake Up Time and Alarm Volume for Buzzer/Radio Alarm

The procedure for adjusting the wake up time is the same for both Alarm1 and Alarm2.

- Press and hold either the **AL1** or **AL2** button until the display blinks and change from the current time to the Alarm1 or Alarm2 wake up time.
- Release the **AL1 (AL2)** button, press the **14** or **15** button to adjust Hour, press the **▲** or **▼** button to adjust Minutes.
- Press the **AL1 (AL2)** button again to adjust Alarm Volume VOL1-VOL6 by pressing the **VOL+** or **VOL-** button.

- Release the **AL1 (AL2)** button, Press the **TUNE+** or **TUNE-** button repeatedly to adjust Alarm Week Mode if necessary.
- Press the **AL1 (AL2)** button again to store the alarm setting.

Note: Be sure that you have set the wake up time correctly by observing the **AM** indicator. If the **AM** indicator is "On" the wake up time is "AM". If it is "OFF", the wake up time is "PM".

The procedure for setting the alarm volume for Wake-To-Radio is the same for both Alarm1 and Alarm2.

 
- Press the **FM** button to turn the FM Radio mode On.
- Tune in or recall from Memory the station that you wish hear when the alarm comes On.
- Follow the above procedure in section 9 for setting the wakeup time and alarm volume.
- Turn the unit Off. The unit will go to Standby mode.

Selecting the Alarm Week Mode

Your SmartSet[®] clock radio allows you to select from three different alarm week modes for each alarm. The Alarm Week Modes are:

- Everyday** - the alarm will turn on all 7 days
- Weekdays only** - the alarm will only turn on Monday through Friday
- Weekends only** - the alarm will only turn on Saturday and Sunday

- If all 7 indicators are "On", the Everyday mode is selected.
- If only the MON (Monday) through FRI (Friday) indicators are "On", the Weekdays only mode is selected.
- If only the SAT (Saturday) and SUN (Sunday) indicators are "On", the Weekends only mode is selected.

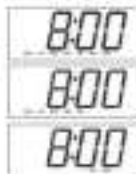

Checking the Wake Up Time and Alarm Week Mode

Press and hold the **AL1(AL2)** button until the display blinks and shows the wake up time. Release the **AL1(AL2)** button and then press it again to show the alarm volume and alarm week mode settings. Press the **AL1(AL2)** button to resume to clock mode.

Activating and Deactivating the Alarm

- Press the **AL1** or **AL2** button repeatedly to select your desired Alarm Mode: Wake to Radio, Wake to Buzzer, or Off.
- When the **15/25** indicator glows, the wake up to Radio alarm will be On.
- When the **14/24** indicator glows, the wake up to Buzzer alarm will be On.
- To completely turn Off the alarm, press the **AL1** or **AL2** button repeatedly until the Radio **15/25** indicator or the Buzzer **14/24** indicator is Off.

Snooze Alarm

When the alarm comes On, press the **SNOOZE** button to pause it for 9 minutes. Alarm indicator will flash during Snooze Alarm mode. To turn off Snooze Alarm, press either the **AL1** or **AL2** button once.

Note: If not turned off, the Snooze Alarm will only be active for one hour. After Snooze Alarm turned Off, the alarm will come On again same time next day (depends on your Alarm Week Mode setting).

 


11 Listening to FM Radio

Press the Power button **⏻** to turn ON the unit and press **SOURCE** button **⏻** to change to Radio Mode ("MHz" On)

Power on:

- A: Switch to Radio Mode** (Press **SOURCE** button)
- B: Tuning to FM Station** (Either press Tune Up or Tune Down to your desired station)

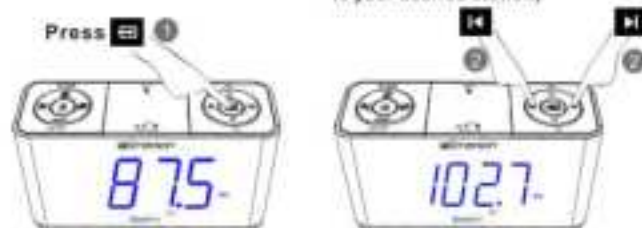


12 Pairing Bluetooth Speaker

C: Auto Searching/Scanning FM Stations (Press the Tune Up or Turn Down button for 2 seconds and release)



D: Storing Favorite Station to Memory

 (28 stations can be stored)

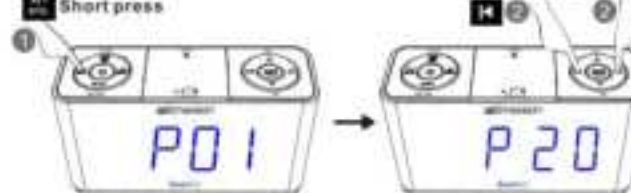

- At Radio Mode, Press Tune Down **⏮** or Tune Up **⏭** button to search your desired station.
- Press the **AL1/STO.** button, Program Number "P01" will be blinking on the display, press Tune Down **⏮** or Tune Up **⏭** to change the program number from "P01" to "P20", once you selected the desired program number, press the **AL1/STO.** again and the favorite station will be stored to the selected program number.

 
E: Recall Favorite Station to Memory



- Press the **AL2/MEM** button, Program number will be shown on the display, press Tune Down **⏮** or Tune Up **⏭** to select your stored program number and listen to your favorite station.
- Note:** Keep the clock radio away from other electronic devices to avoid radio interference. For better reception, fully extend and adjust the position of the FM antenna (cable).

12 Pairing Bluetooth Speaker

- Press the **POWER** button to turn the unit On.
- Press the **SOURCE** button to select Bluetooth mode ("BT" flashes for pairing).
- Enable your Bluetooth device and select **ER100301** from its Available/ Paired device list. If pairing successful, the unit will prompt and "BT" will become solid.
- Automatic connection with your Bluetooth devices is possible if they have been paired successfully with this unit before.
- After paired, you can play your music through this Bass Boosted Bluetooth Speaker.

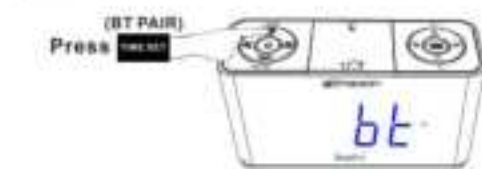

Note: If pairing unsuccessful, all previously paired Bluetooth devices around should be disconnected or turned off first, in order to avoid making any auto reconnection between them. Then, set this unit to Bluetooth mode, and tap the Bluetooth switch on your phone/device off and back on again to refresh/ search any nearby "ER100301" for pairing. If you want to disconnect this unit from your Bluetooth enabled device after pairing successful, press and hold the "BT PAIR" button for 2 seconds. To reconnect this unit, just press and hold the "BT PAIR" button for 2 seconds, or select "ER100301" again from the Available/ Paired device list.

13 Sleeping to Music Timer

Press the Power button **⏻** to turn ON the unit, and press **SOURCE** button **⏻** to select either FM Radio, Bluetooth mode to play radio or music

Sleep mode setting



- Press the **SLEEP** button. The display will show the sleep timer indicator comes On.
- Press the **SLEEP** button repeatedly to choose your desired sleep timer (10-90 minutes or OFF).
- Note:** When you change the sleep timer from the 10-minute default timing to a different setting, this new setting becomes the default timing.
- To display the sleep timer during count down process, press the **SLEEP** button.
- To cancel the sleep timer during count down process, press the corresponding **BT** or **FM ON/OFF** button to shut Off the unit.

14 Auto Dimmer and 3-Level Dimmer Control

Press the **DIMMER** button while in standby mode to select any of the three levels. To use Automatic Dimmer function, press the **DIMMER** button repeatedly until it displays "AU". It will then automatically adapt clock display brightness based on ambient lighting conditions to make display appear consistent in different environments without the need of pressing the **DIMMER** button manually. It also can be adjusted when the Bluetooth or Radio is On.



15 Bedroom/Desktop LED Decor

 
Press the **LED** button to turn the night LED ON (high/low level) or OFF when needed.



16 USB-C/USB-A Port for Charging

Output 5V up to 2.1 A for charging mobile phone or portable digital audio player via USB-C / USB-A charge out port.

Note: Charging current drawn from the unit may vary due to different USB charging cable condition, battery characteristic or power management system of your device being charged.

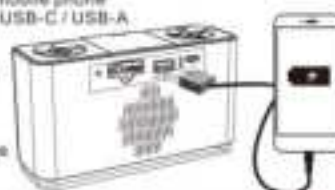

17 Changing the Lithium Battery



- The lithium backup battery needs replacement when the LOW BATTERY indicator **⚡** flashes, otherwise, the time and alarm settings will be lost/reset after a power outage.
- Leave the AC adapter connected to your AC outlet to retain memory while the original battery is removed.
- Unscrew the battery holder from the cabinet with a small screwdriver and insert a new battery with the same CR2032 (3V) or equivalent type into the holder the same way, observing the positive (+) polarity before sliding the holder back into the slot. The LOW BATTERY indicator should then be Off.

DO NOT INGEST BATTERY, CHEMICAL BURN HAZARD

WARNING
Do not ingest the battery. Chemical Burn Hazard
This product contains a coin/button cell battery.
If the coin/button is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.
Keep new and used batteries away from children.
If the battery compartment does not close securely, stop using the product and keep it away from children.
If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

AVERTISSEMENT
Ne pas ingérer la pile. Danger de brûlure chimique.
Ce produit contient une pile bouton. Si la pile bouton est avalée, elle peut provoquer de graves brûlures internes en 2 heures seulement et peut entraîner la mort.
Conserver les piles neuves et usées hors de portée des enfants.
Si le compartiment pile ne se ferme pas correctement, cesser d'utiliser le produit et tenir hors de portée des enfants.
En cas de doute concernant le fait que les piles pourraient avoir été avalées ou introduites dans une partie quelconque du corps, consulter immédiatement un médecin.

18 Care and Maintenance

Care Of Cabinets

If the cabinet becomes dusty, wipe it with a soft cloth. If the cabinet becomes smudged or dirty, clean it with a soft, slightly dampened cloth. Never allow water or any liquid to get inside the cabinet. Never use any abrasive cleaners or cleaning pads as these will damage the finish of your radio.

Lithium Battery Precautions

- Dispose of the old battery properly. Do not leave it lying around where a young child or pet could play with or swallow it. If the battery is swallowed, contact a physician immediately.
- The battery may explode if mistreated. Do not attempt to recharge it or disassemble it. Do not dispose of the old battery in a fire.

19 LIMITED WARRANTY

Emerson Radio Corp. warrants this product to be free from manufacturing defects in original material, including original parts, and workmanship under normal home use and conditions ("manufacturing defect") for a period of ninety (90) days from date of original purchase in, and if used in the United States. Should service be necessary under this warranty, Emerson will provide the following at our Return Repair Facility provided the manufacturing defect is verified along with the date of purchase:

- Repair service for ninety (90) days from date of original purchase at no charge for labor and parts.

To Receive Authorization to Return a Defective Item, please contact Emerson Customer Service at 1-800-898-9020 or at <http://www.emersonradio.com/service/return-policy>. Have your Model number, Serial Number and dated Proof of Purchase with you when you call.

In the event the product must be returned to Emerson:

- Place the unit in a well-padded heavy corrugated box. Please insure the item is well padded to avoid damage while in transit back to our facility. If the item incurs damage, it will NOT be replaced and the consumer will be responsible for return freight costs to receive their same unit back.
- Enclose your check or money order payable to Emerson Radio in the amount of \$10 to cover return shipping and handling costs.
- Enclose a note with your name, address, phone number, Return Authorization number and brief reason for returning the unit.
- Enclose a copy of your proof of purchase (warranty service will not be provided without dated proof of purchase).
- Ship the unit prepaid via UPS or parcel post (SHIP INSURED and obtain a tracking number).

NOTE: This warranty does not cover:

- (a) Damage to equipment not properly connected to the product.
- (b) Cost incurred in the shipping of the product to and from Emerson's Return Facility.
- (c) Damage or improper operation of unit caused by customer abuse, misuse, negligence or failure to follow operating instructions (including cleaning instructions) provided with the product.
- (d) Ordinary adjustments to the product which can be performed by customer as outlined in the owner's manual.
- (e) Signal reception problems caused by external antenna or cable systems.
- (f) Products not purchased in the United States.
- (g) Damage to product if used outside the United States.

THIS WARRANTY IS NON-TRANSFERABLE AND APPLIES ONLY TO THE ORIGINAL PURCHASER AND DOES NOT EXTEND TO SUBSEQUENT OWNERS OF THE PRODUCT. ANY APPLICABLE IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED IN DURATION TO A PERIOD OF THE EXPRESSED WARRANTY AS PROVIDED HEREIN BEGINNING WITH THE DATE OF ORIGINAL PURCHASE AT RETAIL AND NO WARRANTIES, WHETHER EXPRESSED OR IMPLIED, SHALL APPLY TO THE PRODUCT THEREAFTER. EMERSON MAKES NO WARRANTY AS TO THE FITNESS OF THE PRODUCT FOR ANY PARTICULAR PURPOSE OR USE. THE EXTENT OF EMERSON RADIO CORP'S LIABILITY UNDER THIS LIMITED WARRANTY IS THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL EMERSON RADIO CORP'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY THE PURCHASER OF THE PRODUCT. UNDER NO CIRCUMSTANCES SHALL EMERSON RADIO CORP. BE LIABLE FOR ANY LOSS, DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGE ARISING OUT OF OR IN CONNECTION WITH THE USE OF THIS PRODUCT. THIS WARRANTY IS VALID ONLY IN THE UNITED STATES OF AMERICA. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. HOWEVER, YOU MAY HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE. SOME STATES DO NOT ALLOW LIMITATIONS ON IMPLIED WARRANTIES OR EXCLUSION OF CONSEQUENTIAL DAMAGE. THEREFORE THESE RESTRICTIONS MAY NOT APPLY TO YOU.

10-90-1402A

The serial number can be found on the back cabinet. We suggest that you record the serial number of your unit in the space below for future reference.

Model Number: ER100301

Serial Number: _____



CALIFORNIA RESIDENTS ONLY--
WARNING: Cancer and Reproductive Harm - www.P65Warnings.ca.gov

Emerson Part No. ER100301-20230728-05

Printed in China