

# BEEBOP HEADPHONES

## USER GUIDE

### What's in the Box?

- (1) Beebop Wireless Headphones
- (1) Micro-USB Charging Cable
- (1) Drawstring Carrying Pouch

### Basics

- Hold down the PHONE button to turn the device on/off
- To pair your Beebop wirelessly, look for “OrigAudio\_HP” on your phone
- To charge your Beebop, connect your USB charging cable into a wall-adaptor as if you are charging your phone
- Wireless range up to 25 feet

### Button Features and Definitions

- Press the PHONE button to play or pause music.
- Press the DOWN button to restart your current song or to return to your previous song.
- Press the UP button to skip to the next song.
- Hold the UP button to increase volume. You will hear a beeping noise when you have reached max volume.
- Hold the DOWN button to decrease volume.

### To Use During a Phonecall:

- Use your phone to dial a number as usual. To start a call with the last dialed number, tap the PHONE button twice.
- To answer a call with the Beebop, press the PHONE button. Use the UP or DOWN button to change the volume settings.
- To end a call with the Beebop, press the PHONE button.



#### FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.