

VI. CONSUMER INFORMATION

Note to Adults: To ensure that the child's play is both safe and fun, please review all the operating instructions and safety tips with your child.

Safety Tips

Yes, the vehicle rips on the road but no, you should NEVER, EVER drive it on the street!

DO NOT pick up the vehicle while in motion. Take your fingers off the transmitter, trigger and then pick it up.

Keep fingers, hair and loose clothing away from the tires while the vehicle is switched ON.

Adult supervision is recommended when this vehicle is being used.

To avoid accidental or unwanted operation, remove all the batteries when not in use. Always turn the vehicle OFF before removing the batteries.

BATTERY SAFETY INFORMATION

In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your toy (product). To avoid battery leakage:

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged (if designed to be removable).
- Rechargeable batteries are only to be charged under adult supervision (if designed to be removable).
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Dispose of battery(ies) safely.
- Do not dispose of this toy in a fire. The batteries inside may explode or leak.

Battery Performance Note:

For best performance use regular or high-performance alkaline batteries (where disposable batteries are called for). If your vehicle is supplied with standard (carbon-zinc) batteries for initial use and/or demonstration purposes, we recommend replacing them with alkaline batteries when necessary. Battery life may vary depending on battery brand.

90-DAY LIMITED WARRANTY – TYCO® R/C PRODUCTS

Mattel, Inc. warrants to the original consumer purchaser that this product will be free of defects in material and workmanship for ninety (90) days (unless specified in alternate warranties) from the date of purchase. Mattel will replace the product in the event of such a defect within the warranty period.

In the event of a defect covered under this warranty, first call the toll-free number listed below. Many problems can be solved in this manner. If necessary, you will be instructed to return the product, postage prepaid and insured, to the address below. Enclose your name, address, dated sales receipt, and a brief explanation of the defect. Replacement and return shipment will be free of charge.

This warranty does not cover damage resulting from unauthorized modification, accident, misuse or abuse. If the product is returned without a dated sales receipt the product may be excluded from coverage under this warranty. Mattel's liability for defects in material and workmanship under this warranty shall be limited to replacement, and in no event shall we be responsible for incidental, consequential, or contingent damages (except in those states that do not allow this exclusion or limitation). This warranty is exclusive, and is made in lieu of any express or implied warranty. **Valid only in U.S.A.** This warranty gives you specific legal rights and you may have other rights, which vary from state to state. Some states do not allow the exclusion of incidental or consequential damages, so the above exclusions or limitations may not apply to you.

TOLL-FREE NUMBER: 1-888-557-TYCO (8926) **(valid only in U.S.A.)** Hours: 8:00 A.M. - 5:00 P.M. Eastern Time; Monday - Friday. Expect some delay in January following the holiday season. Please be patient and keep trying the toll-free number. **ADDRESS FOR RETURNS:** CONSUMER RELATIONS, 636 GIRARD AVENUE, EAST AURORA, NY 14052

© 2005 Mattel, Inc. 333 Corporate Blvd. El Segundo, CA 90245
U.S.A. Consumer Affairs 1 (800) 324-7075 **PRINTED IN CHINA**
All rights reserved. Mattel, TYCO and associated trademarks and trade dress are owned by Mattel, Inc. Mean this address to future reference. • Mattel U.K. Ltd., Watlington Business Park, Watlington, Oxford OX29 9JQ, U.K. • Mattel Australia Pty. Ltd., Richmond, Victoria 3172 • Consumer Advisory Service: 1300 353 317 • Mattel East Asia Ltd., Room 1106, South Tower, World Financial Centre, Harbour City, Kowloon, Hong Kong • Singapore & Southeast Asia: 1300 353 317 • Mattel S.A. Pte. Ltd. (895572) P.1 Lot 13.5, Merpati Lian Hoe, Persiaran Tropicana Golf Country Resort, 47410 P.1, Tel. 03-78803817, Fax: 03-78803867

COMPLIANCE WITH FCC REGULATIONS (VALID IN U.S. ONLY)

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This device generates and uses radio frequency energy and if not used properly may cause interference to radio and television reception. It has been tested and found to comply with the limits set by the FCC, which are designed to provide reasonable protection against such interference.

NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.



CAUTION: Surfaces may become hot and cause burns if electronics get wet. Do not operate vehicle through water or snow.

Keep these instructions for future reference; they contain important information.

I. CONTENTS/FEATURES

- Vehicle
- Transmitter with embedded lug wrench key
- 7.2 V NiCd battery pack
- 7.2 V NiCd wall charger
- 4 AA batteries for transmitter
- 1 set of drifting tires
- 1 set of street performance tires

Vehicle

- 1 Battery door
- 2 Battery latches
- 3 ON/OFF switch
- 4 Lugnut for tire switching
- 5 Slicks (front and rear)
- 6 Treads (front and rear)

 
 
 
 
Transmitter

- 1 Trigger: forward / reverse control
- 2 Tire: left / right control
- 3 Antenna
- 4 LED indicator
- 5 Trim adjuster: see section V, #11 for more info
- 6 Lug wrench for swapping tires
- 7 ON/OFF switch
- 8 Battery door

Just turn your vehicle ON. Then pull the trigger and you will be able to run and control your vehicle.

II. BASIC OPERATION

If your vehicle doesn't move when you use the transmitter there's a good chance your vehicle's battery is ready for a recharge.

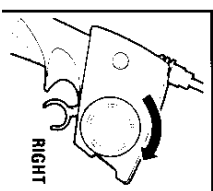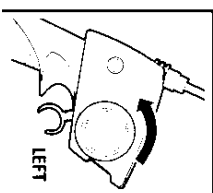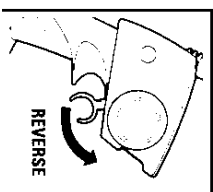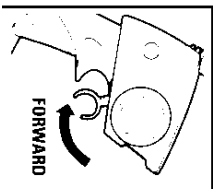

CAUTION: ELECTRIC TOY AND R/C MODEL VEHICLE. IT IS NOT TO BE USED IN THE FOLLOWING AREAS: (1) AREAS WHERE THERE IS A RISK OF FIRE OR EXPLOSION; (2) AREAS WHERE THERE IS A RISK OF COLLISION WITH OTHER VEHICLES OR PEDESTRIANS; (3) AREAS WHERE THERE IS A RISK OF DAMAGE TO PROPERTY OR ENVIRONMENT; (4) AREAS WHERE THERE IS A RISK OF INJURY TO HUMANS OR ANIMALS. ALWAYS USE COMMON SENSE AND FOLLOW THE INSTRUCTIONS OF THE MANUFACTURER.

G3451-0920

TYCO® R/C SUPPORT

 
 
 
 
Questions or problems with your product? DON'T RETURN IT TO THE STORE! Just call us for help.

U.S. consumers may also register their products at this number:

1 888 557-TYCO (8926)

tycorc.com

CAUTION: To prevent entanglement, keep all hair away from the wheels.

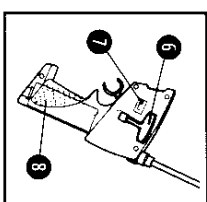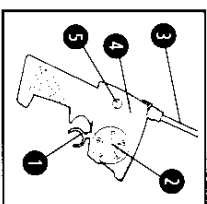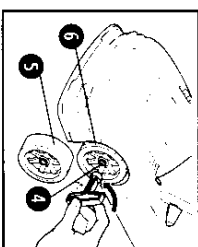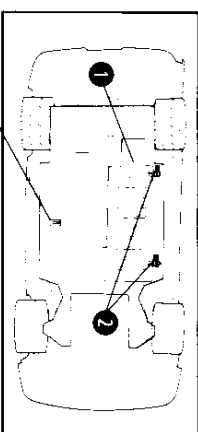

III. BATTERY INSTALLATION

For more info on rechargeable battery charging and safety, you'll want to check out Section IV, "Battery Charging/Care."

Vehicle

1. Rotate the battery latches to open position. Open the battery door.
2. Plug the wire connector into the battery compartment as shown.
3. Insert the battery pack into the battery compartment as shown.
4. Close the battery door. Rotate the battery latches to the locked position.
5. To remove the battery pack, first turn the vehicle off, turn the latches on the battery compartment, open the battery door, unplug the wire connector and lift out the battery pack.

Transmitter

1. Open the battery door as shown.
2. Install 4 "AA" batteries inside the battery compartment as shown.
3. Close the battery door.

⚠ The transmitter is designed to house and partially hide 2 batteries in its upper section. Make sure to place 2 batteries on the transmitter's sliding "tables" found in the battery compartment and then push upwards. You can now put the 2 other batteries in the bottom section of the handle.

 
 
 
IV. BATTERY CHARGING/CARE

⚠ **Caution:** Use only the charger supplied with this toy. Do not use any other charging source.

Use only Tyco® R/C 7.2V NiCd battery packs. Other batteries may leak or rupture, causing personal injury and damage.

BATTERY CHARGING/CARE


1. Plug the wall pack charger into a standard wall outlet.
2. Connect the wires leading from the battery pack to the wall pack charger connector. Make certain the two connectors are tightly snapped together.
3. To disconnect the wires, push down on the connector clip and pull apart.
4. After charging, the battery will feel warm. Have no fear, that's normal for fully charged batteries.
5. New battery packs must be charged for 5 1/2 hours the first two times. After that you're looking at 4 hours per charge. Charging the battery pack for more than 4 hours won't extend your running time but if it makes you happy, charge away.
6. Unlike alkaline batteries, which lose power gradually, a NiCd (Nickel-Cadmium) battery will operate for its normal running time and then lose most of its power at once. When that starts to happen, recharge the battery pack.

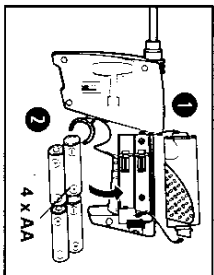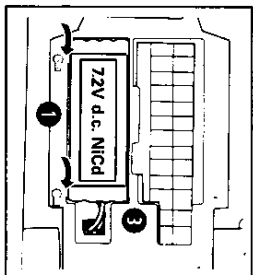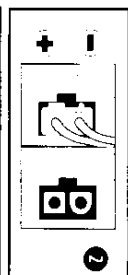

7. Okay, you're loving this toy and you want to slam that spent battery back into the charger for more racing action. Bad move. Here's why: Recharging a warm or hot battery pack will greatly reduce the number of times your battery pack can be recharged. Less run time means less fun time and we don't want that do we?

⚡ General rule of thumb: Wait at least 20 minutes until the battery pack cools before recharging.

 7.2V d.c. NiCd 1
x 6 Sub-C
1600mAh

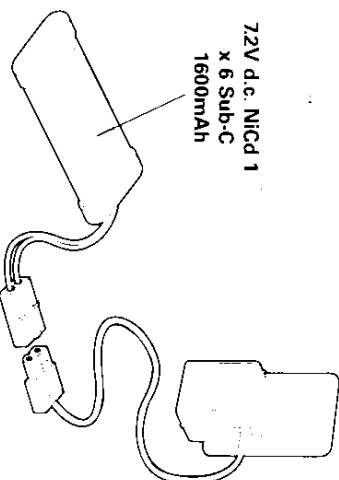

RECHARGEABLE BATTERY INFORMATION:

- ✓ DO NOT RECHARGE BATTERY PACK IF IT'S HOT.
- ✓ ALLOW IT TO COOL BEFORE RECHARGING.
- ✓ DO NOT RECHARGE A BATTERY PACK THAT SHOWS LEAKAGE OR CORROSION.
- ✓ DO NOT DISASSEMBLE THE BATTERY PACK. THE BATTERY PACK IS A SEALED RECHARGEABLE NICKEL-CADMIUM BATTERY PACK.
- ✓ EXERCISE CAUTION IN HANDLING A HOT BATTERY PACK.
- ✓ IF BATTERY PACK AND/OR CHARGER ARE WET, THOROUGHLY DRY BEFORE CHARGING.
- ✓ DO NOT RECHARGE NON-RECHARGEABLE BATTERIES.
- ✓ REMOVE RECHARGEABLE BATTERIES BEFORE RECHARGING.

V. TIPS AND HINTS

TIPS & HINTS – FOR ALL DRIVING ENVIRONMENTS

1. When your vehicle starts to lose power, you'll start to lose performance. It's time for a recharge. As a rule, you should always start with a fully-charged battery.
2. Are you the full-throttle sort or a more steady as you go type? Your vehicle's running time may change depending on your driving style.
3. Radio interference can mess up the signals you're sending to the vehicle, causing it to perform erratically. Things to look for that may be causing the interference: other R/C vehicles running on the same frequency, electrical wires, large buildings, CB radios, UFDs (kidding) or other wireless gear that can cause interference.
4. Point your transmitter antenna up -- not down toward your vehicle. If your vehicle gets too far away, you can kiss proper functioning goodbye.
5. Don't drive your vehicle in the water or sand. Not only won't you get very far, you might ruin the toy.
6. Don't store your vehicle near heat or in direct sunlight. Always turn switches OFF and, if you're not planning on taking the vehicle out for a while, remove all the batteries...really. It's amazing how one leaky 50c battery can ruin a really cool product.

 
Note to Adults:

It's probably a good idea to recharge the battery pack yourself to make sure everything's done correctly. Who wants to wait four hours only to discover the battery's been put into the charger backwards? Recharge batteries only under adult supervision.

Kids will inevitably ram, slam and kablam the toy during usage. Always check for damage to the plug, housing, or other parts that may result in the risk of fire, electric shock or injury. If the product is damaged, do not use it.

This toy is not intended for children under 3 years old. The battery charger is not a toy.

Regularly examine for damage to the cord, plug, enclosure and other parts. In the event of any damage, the toy must not be used with the battery charger until the damage has been repaired.

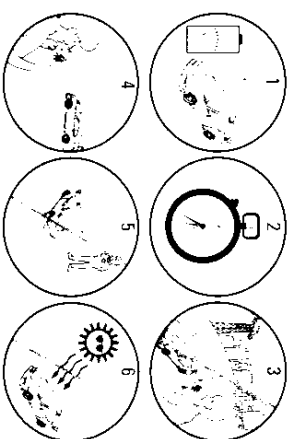

7. Put on all four slicks for pro-power drifting action, all four treads for pro-power racing action or half and half in any combination to customize your slide.
8. When adding and/or removing tires make sure to place the lugnut snugly in the lug wrench. This will give you better control and secure your lugnut in place.
9. Always make sure the wheel is properly aligned on the car's hexagonal hub (the hub is that metal thing you put the tire onto before screwing it in). You can confirm this by checking the underside of the chassis where the wheel and hub connect.
10. If you're used to operating a transmitter with your left hand, simply grab the transmitter with your right hand and tilt your hand to the left so that the steering tire is now facing in the upwards position. Press the trigger and steer the wheel with your left hand.
11. You may notice that the vehicle, even when you're steering straight ahead, veers to either the right or the left. You can correct for this with the TRIM ADJUSTER found on the transmitter. So, if your vehicle veers too much to the right, turn the trim adjuster to the left, or if it veers to the left, turn your adjuster to the right.
12. Both sets of tires (slicks and treads) are designed with wider rims on the rear pair. For better performance, make sure these are attached appropriately.
13. Should you lose either your lugwrench or wheel nut they can be easily replaced with a 9/32" socket wrench or 9/32" nut.



THIS PRODUCT USES A NICKEL-CADMIUM RECHARGEABLE BATTERY PACK. BATTERY MUST BE RECYCLED OR DISPOSED OF PROPERLY. FOR FURTHER INFORMATION REGARDING BATTERIES OR THEIR DISPOSAL PLEASE CALL 1-888-551-TYCO.