
 
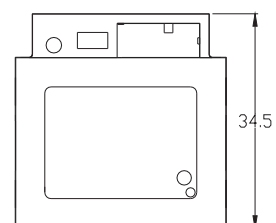

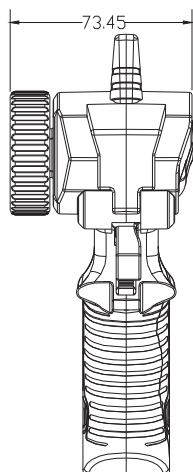
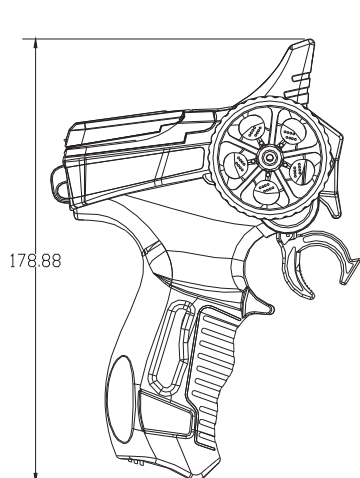


INSTRUCTION MANUAL

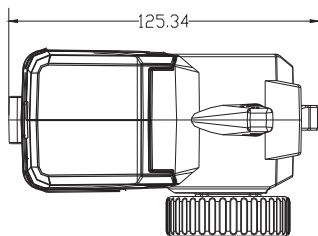

 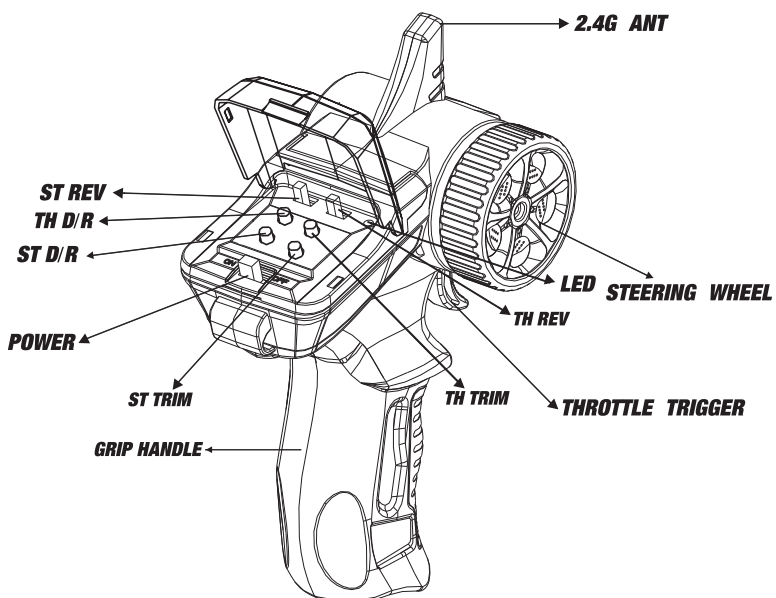


Buzzer tone warning of low voltage

When the LED flashing red light and the buzzer tone sounds at the same time is a safety warning, inform the voltage is below 4.6v. Please turn off the radio when you hear the buzzer tone warning, avoid affect the radio's performance.


Binding the transmitter and receiver

1




1. Turn on the receiver power. Press the **BIND** switch. The receiver's LED should start flashing.

2

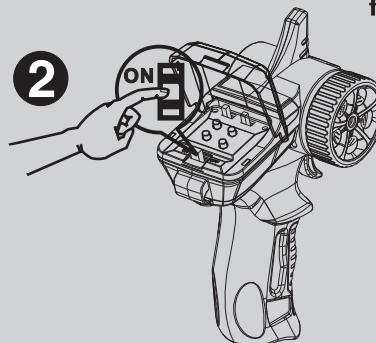

2. Turn on the transmitter.

 
3



LED

3. When the LED on the receiver becomes solid, the binding process is completed.


A. Throttle Trigger

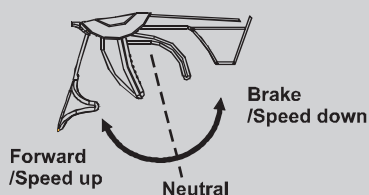


1. Push the trigger forward to slow down or brake.

2. Pull the trigger backward to accelerate.

B. Steering Wheel

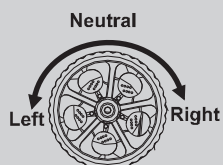

Gas powered model

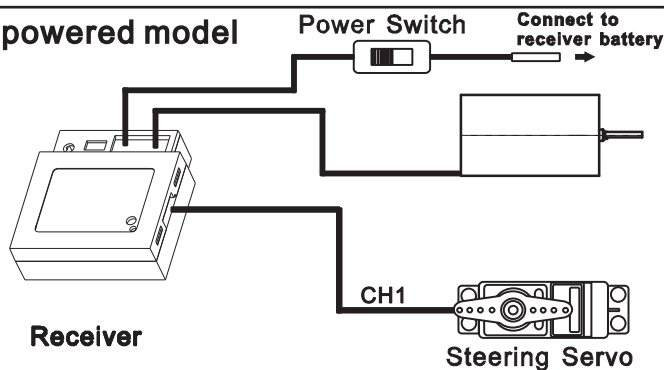

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 5mm between the radiator & your body.