

Model: MS22175

MONSTER®

HIGH POWER OUTDOOR SPEAKER

Quick Start Guide

Please read this Quick Start Guide carefully
and keep it for future use

Wireless Microphone

When the speaker is on, turn on the power switch on the wireless microphone to use the wireless microphone.

ON/OFF mute

microphone volume adjustment

display area

set button

Operating Instructions:

Power On: Press and hold "⏻" for 2 seconds, the screen will display "ON".

Power Off: Press and hold "⏻" for 2 seconds, the screen display "OFF".

Mute: Press the "⏻" button to display "--".

Volume adjustment: Press the +/- button.

Frequency switch: Press the SET button to switch between different frequency points.

Decoding: Press and hold the SET button for 5 seconds, when the screen displays "----" circulating, turn on the speaker, until the "----" icon exits, Decoding is complete.

Lock code: Press and hold the SET button for 5 seconds, when the screen displays "ID --" blinking, turn on the speaker, until the "ID --" icon exits, Lock code complete.

* Note: When operating the unlock/lock code, the speaker needs to restart (built-in receiver board) once to complete this operation.

Channel	Frequency(MHz)
1	657.30 MHz
2	658.500MHz
3	660.000MHz
4	661.500MHz
5	662.700MHz

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

• Increase the separation between the equipment and receiver.

• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

• Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

PDF
Adobe